ORDER NO. VM0509038AE

Service Manual

Digital Video Camcorder

Simplified

NV-GS20EG / NV-GS35EGX

Colours

(S)...................Silver Type

Please file and use this manual together with the service manual for Model No. NV-GS18E/ NV-GS35EG, Order No. VM0502017C8.

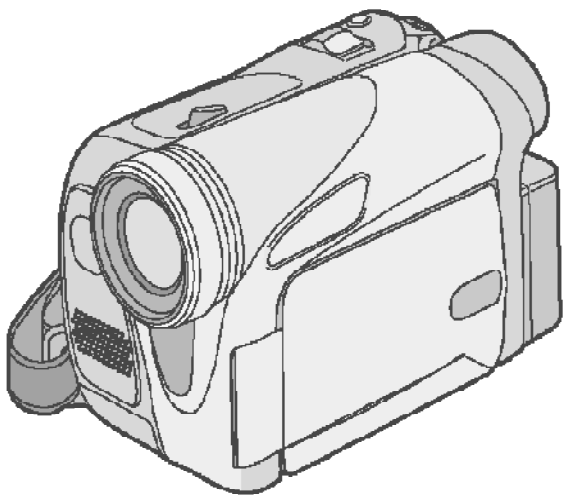

PbF
Solder Lead free

SPECIFICATIONS

PDF created with pdfFactory Pro trial version www.pdffactory.com

ITEM	SPECIFICATION	1	2
Power	Digital Video Camera: Power Source: DC 7.9/7.2 V Power Consumption (Recording): 2.6 W (When using viewfinder) 3.2 W (When using LCD monitor) AC adaptor: Power Source: AC 110-240 V, 50/60 Hz Power Consumption: 19 W DC Output: DC 7.9 V, 1.4 A (Movie camera operation) DC 8.4 V, 0.65 A (Battery charging)	○	○
Recording format	Mini DV (Consumer-use digital video SD format)	○	○
Tape used	6.35 mm digital video tape	○	○
Recording/ playback time	SP: 80 min.; LP: 120 min. (with DVM80)	○	○
Video recording system	Digital component	○	○
Television system	CCIR: 625 lines, 50 fields PAL colour signal	○	○
Audio recording system	PCM digital recording 16 bit (48 kHz/2ch), 12 bit (32 kHz/4ch)	○	○
Image sensor	1/6-inch CCD image sensor	○	○
Lens	Auto Iris, F1.8, Focal length; 2.1 mm - 50.4 mm 1.9 mm - 57 mm Macro (Full range AF)	○ ○ — ○	○ — ○ ○
Filter diameter	30.5 mm	○	○
Zoom	24:1 Power zoom 30:1 Power zoom	○ —	— ○
Monitor	2.5-inch LCD	○	○
Viewfinder	Electronic viewfinder Color electronic viewfinder	○ —	— ○
Microphone	Stereo (with a zoom function)	○	○
Speaker	1 round speaker ∅ 20 mm	○	○
Standard illumination	1,400 lx	○	○
Minimum required illumination	2 lx (Colour Night View Mode)	○	○
Output level	Video output level: 1.0 Vp-p, 75 ohm S-Video output level: Y Output: 1.0 Vp-p, 75 ohm C Output: 0.3 Vp-p, 75 ohm Audio output level (Line): 316 mV, 600 ohm	○	○
Mic input	Mic sensitivity -50 dB (0 dB=1 V/Pa, 1 kHz) (Stereo mini jack)	—	○
USB	Card reader/writer function, USB 2.0 compliant (Full-Speed) (HI-Speed) No copyright protection support	○ — ○	— ○ ○
Digital interface	DV output terminal (IEEE1394, 4-pin)	○	○
Card memory functions	Recording media: SD Memory Card (8 MB/16 MB/32 MB/64 MB/128 MB/256 MB/ 512 MB/1 GB (Maximum)) Still picture recording file format: JPEG (Design rule for Camera File system, based on Exif 2.2 standard), DPOF corresponding Still picture size: VGA recording: 640 X 480	—	○
WEB camera	Compression: Motion JPEG Image size: 320 X 240 pixels (QVGA)	○	○
Operating condition	0 °C-40 °C (Temperature) 10 %-80 % (Humidity)	○	○
Weight	Digital Video Camera: 410 g (without supplied battery, DV cassette and lens cap) 480 g (with supplied battery, DV cassette and lens cap) AC adaptor: 110 g	○	○
Dimensions	Digital Video Camera: 63.5 mm x 81 mm x 114 mm (W x H x D) AC adaptor: 61 mm x 32 mm x 91 mm (W x H x D)	○	○
Solder	**This model uses lead free solder (PbF).**	○	○

1. NV-GS20EG
2. NV-GS35EGX

Weight and dimensions shown are approximate.
Designs and specifications are subject to change without notice.

© 2005 Matsushita Electric Industrial Co., Ltd. All rights reserved.
Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

1. DIFFERENCES BETWEEN NV-GS20EG and NV-GS18E

1.1. REPLACEMENT NOTES

1.1.1. General Notes

1. Definition of Parts supplier:

A. Parts without mark in the Remarks column are supplied from PSEC.

PDF created with pdfFactory Pro trial version www.pdffactory.com

1.2. COMPARISON CHART

1.2.1. MECHANICAL REPLACEMENT PARTS LIST

Ref. No.	Section No.	Pcs/ set	NV-GS18E →	NV-GS20EG		
			Part No.	Part No.	Part Name	Remarks
33	3	1	LSYK1587	LSYK1659	LCD CASE A UNIT,ABS RESIN	
103	7	1	LSPG1993	LSPG2092	PACKING CASE,PAPER	
120	7	1	LSQT0955-A	LSQT0979-A	INSTRUCTION BOOK (GERMAN)	
129	7	1→0	VQT0N42	--------	INSTRUCTION BOOK FOR PC CONNECTION (PORTUGUESE/SPANISH/SWEDISH/DANISH)	

2. DIFFERENCES BETWEEN NV-GS35EGX and NV-GS35EG

NV-GS35EGX uses the same replacement parts as NV-GS35EG.

PDF created with pdfFactory Pro trial version www.pdffactory.com

ORDER NO. VM0502017C8

Service Manual

Digital Video Camcorder

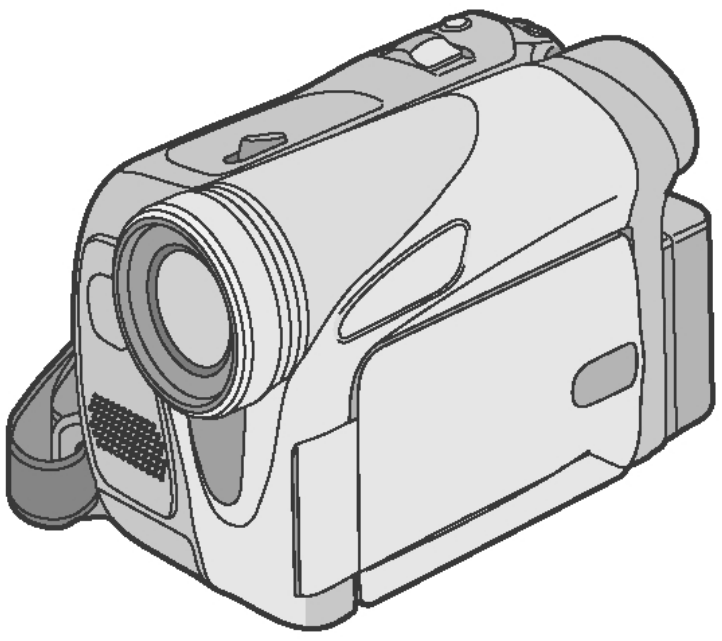

PbF
Solder Lead free

NV-GS6EE
NV-GS6GC
NV-GS17E
NV-GS17EB
NV-GS17EF
NV-GS17EG
NV-GS17EP
NV-GS18E
NV-GS21E
NV-GS21EB
NV-GS21EG
NV-GS21EK
NV-GS21EP
NV-GS25GC
NV-GS25GN
NV-GS28GK
NV-GS35E
NV-GS35EB
NV-GS35EG
NV-GS35EP
NV-GS35GC
NV-GS35GN
NV-GS38GK

Panasonic

© 2005 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

Vol. 1

Colours

(S)..................Silver Type

ITEM	SPECIFICATION	1	2	3	4	5
Power	Digital Video Camera: Power Source: DC 7.9/7.2 V Power Consumption (Recording): 2.6 W (When using viewfinder) 3.2 W (When using LCD monitor) AC adaptor: Power Source: AC 110-240 V, 50/60 Hz Power Consumption: 19 W DC Output: DC 7.9 V, 1.4 A (Movie camera operation) DC 8.4 V, 0.65 A (Battery charging)	○	○	○	○	○
Recording format	Mini DV (Consumer-use digital video SD format)	○	○	○	○	○
Tape used	6.35 mm digital video tape	○	○	○	○	○
Recording/ playback time	SP: 80 min.; LP: 120 min. (with DVM80)	○	○	○	○	○
Video recording system	Digital component	○	○	○	○	○
Television system	CCIR: 625 lines, 50 fields PAL colour signal	○	○	○	○	○
Audio recording system	PCM digital recording 16 bit (48 kHz/2ch), 12 bit (32 kHz/4ch)	○	○	○	○	○
Image sensor	1/6-inch CCD image sensor	○	○	○	○	○
Lens	Auto Iris, F1.8, Focal length; 2.1 mm - 42 mm 2.1 mm - 50.4 mm 1.9 mm - 57 mm Macro (Full range AF)	○ ○ — — ○	○ — ○ — ○	○ — ○ — ○	○ — ○ — ○	○ — — ○ ○
Filter diameter	30.5 mm	○	○	○	○	○
Zoom	20:1 Power zoom 24:1 Power zoom 30:1 Power zoom	○ — —	— ○ —	— ○ —	— ○ —	— — ○
Monitor	2.5-inch LCD	○	○	○	○	○
Viewfinder	Electronic viewfinder Color electronic viewfinder	○ —	○ —	○ —	○ —	— ○
Microphone	Stereo (with a zoom function)	○	○	○	○	○

ITEM	SPECIFICATION	1	2	3	4	5
Speaker	1 round speaker ∅ 20 mm	○	○	○	○	○
Standard illumination	1,400 lx	○	○	○	○	○
Minimum required illumination	2 lx (Colour Night View Mode)	○	○	○	○	○
Output level	Video output level: 1.0 Vp-p, 75 ohm S-Video output level: Y Output: 1.0 Vp-p, 75 ohm C Output: 0.3 Vp-p, 75 ohm Audio output level (Line): 316 mV, 600 ohm	○ — — ○	○ ○ ○ ○	○ ○ ○ ○	○ ○ ○ ○	○ ○ ○ ○
Mic input	Mic sensitivity -50 dB (0 dB=1 V/Pa, 1 kHz) (Stereo mini jack)	—	—	—	○	○
USB	Card reader/writer function, USB 2.0 compliant (Full-Speed) (HI-Speed) No copyright protection support	○ — ○	○ — ○	○ — ○	— ○ ○	— ○ ○
Digital interface	DV output terminal (IEEE1394, 4-pin)	○	○	○	○	○
Card memory functions	Recording media: SD Memory Card (8 MB/16 MB/32 MB/64 MB/128 MB/256 MB/ 512 MB/1 GB (Maximum)) Still picture recording file format: JPEG (Design rule for Camera File system, based on Exif 2.2 standard), DPOF corresponding Still picture size: VGA recording: 640 X 480	—	—	○	○	○
WEB camera	Compression: Motion JPEG Image size: 320 X 240 pixels (QVGA)	○	○	○	○	○
Operating condition	0 °C-40 °C (Temperature) 10 %-80 % (Humidity)	○	○	○	○	○
Weight	Digital Video Camera: 410 g (without supplied battery, DV cassette and lens cap) 480 g (with supplied battery, DV cassette and lens cap) AC adaptor: 110 g	○ ○ ○	○ ○ ○	○ ○ ○	○ ○ ○	○ ○ ○
Dimensions	Digital Video Camera: 63.5 mm x 81 mm x 114 mm (W x H x D) AC adaptor: 61 mm x 32 mm x 91 mm (W x H x D)	○	○	○	○	○
Solder	**This model uses lead free solder (PbF).**	○	○	○	○	○

1. NV-GS6EE/ NV-GS6GC
2. NV-GS17EG/ NV-GS17EF/ NV-GS17E/ NV-GS17EP/ NV-GS17EB NV-GS18E
3. NV-GS21EG/ NV-GS21EK/ NV-GS21E/ NV-GS21EP/ NV-GS21EB
4. NV-GS25GC/ NV-GS25GN/ NV-GS28GK
5. NV-GS35EG/ NV-GS35E/ NV-GS35EP/ NV-GS35EB/ NV-GS35GC/ NV-GS35GN/ NV-GS38GK

Weight and dimensions shown are approximate.
Designs and specifications are subject to change without notice.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

Page

1 INTRODUCTION ········· **4**
  1.1. INTRODUCTION ········· 4
  1.2. CAUTION FOR AC CORD(VJA0940 TYPE) ········· 4
  1.3. CAUTION FOR AC MAINS LEAD ········· 4
2 SAFETY PRECAUTIONS ········· **6**
3 PREVENTION OF ELECTRO STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES ········· **7**
4 ABOUT LEAD FREE SOLDER (PbF) ········· **7**
5 OPERATION GUIDE ········· **8**
6 HOW TO REPLACE THE LITHIUM BATTERY ········· **22**
7 SERVICE NOTES (PLEASE READ) ········· **23**
  7.1. SERVICE NOTES ········· 23
8 DISASSEMBLY/ASSEMBLY PROCEDURES ········· **34**
  8.1. CABINET SECTION ········· 34
  8.2. MECHANISM SECTION ········· 53
9 ADJUSTMENT PROCEDURES ········· **57**
  9.1. SERVICE FIXTURES & TOOLS ········· 57
  9.2. MECHANICAL ADJUSTMENT ········· 59
  9.3. ELECTRICAL ADJUSTMENT ········· 60
10 SCHEMATIC DIAGRAMS ········· **67**
  10.1. SCHEMATIC DIAGRAM & CIRCUIT BOARD LAYOUT NOTES ········· 67

Page

  10.2. FRONT SCHEMATIC DIAGRAM ········· 68
  10.3. JACK SCHEMATIC DIAGRAM ········· 69
  10.4. LCD BACKLIGHT SCHEMATIC DIAGRAM ········· 70
  10.5. EVF BACKLIGHT / CASSETTE COVER SCHEMATIC DIAGRAMS ········· 71
  10.6. CCD / SIDE CASE R / LCD SW SCHEMATIC DIAGRAMS ········· 72
  10.7. INTERCONNECTION SCHEMATIC DIAGRAM ········· 73
  10.8. VOLTAGE CHART ········· 74
11 CIRCUIT BOARD LAYOUT ········· **75**
  11.1. FRONT C.B.A. ········· 75
  11.2. JACK C.B.A. ········· 76
  11.3. LCD BACKLIGHT C.B.A. ········· 77
12 BLOCK DIAGRAMS ········· **79**
13 EXPLODED VIEWS ········· **93**
  13.1. MAIN PARTS SECTION ········· 93
  13.2. FRONT AND BOTTOM CASE SECTION ········· 94
  13.3. SIDE CASE R AND LCD SECTION ········· 95
  13.4. CCD AND LENS SECTION ········· 96
  13.5. EVF SECTION ········· 97
  13.6. MECHANISM SECTION ········· 98
  13.7. PACKING PARTS AND ACCESSORIES SECTION ········· 99

14 REPLACEMENT PARTS LISTS 100
14.1. MECHANICAL REPLACEMENT PARTS LIST 100
14.2. ELECTRICAL REPLACEMENT PARTS LIST 103

1 INTRODUCTION

1.1. INTRODUCTION

This service manual contains technical information which will allow service personnel´s to understand and service this model. Please place orders using the parts list and not the drawing reference numbers.

If the circuit is changed or modified, this information will be followed by supplement service manual to be filed with original service manual.

Note 1:

AC Adaptor used on these movie camera is VSK0651A or VSK0651B.

However, DE-974HA is supplied as a replacement part for VSK0651A. Also, DE-974GA is supplied for VSK0651B.

This AC Adaptor is supplied only as a unit.

Note 2:

1. This service manual does not contain the following information, because of the impossibility of servicing at component level.
    a. Schematic Diagram, Block Diagram and C.B.A. layout of Main C.B.A.
    b. Parts List for individual parts of Main C.B.A.
2. The following category is recycle module part. Please send it to Central Repair Center.
    a. *Main C.B.A. (LSEP8295P1/ LSEP8295Q1/ LSEP8295R1/ LSEP8295S1/ LSEP8295T1/ LSEP8295U1)

When a part replacement is required for repairing each Main C.B.A., replace the assembly parts.

1.2. CAUTION FOR AC CORD (VJA0940 TYPE)

1.2.1. INFORMATION FOR YOUR SAFETY

IMPORTANT

Your attention is drawn to the fact that recording of pre-recorded tapes or discs or other published or broadcast material may infringe copyright laws.

WARNING

To reduce the risk of fire or shock hazard, do not expose this equipment to rain or moisture.

CAUTION

To reduce the risk of fire or shock hazard and annoying interference, use the recommended accessories only.

FOR YOUR SAFETY

DO NOT REMOVE THE OUTER COVER

To prevent electric shock, do not remove the cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

1.3. CAUTION FOR AC MAINS LEAD

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three-pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5 amperes and it is approved by ASTA or BSI to BS1362.

Check for the ASRA mark or the BSI mark on the body of the fuse.



If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover, the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local Panasonic Dealer.

If the fitted moulded plug is unsuitable for the socket outlet in your home then the fuse should be removed and the plug cut off and disposed of safety.

There is a danger of severe electrical shock if the cut off plug is inserted into any 13-ampere socket.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

1.3.1. Important

The wires in this mains lead are coloured in accordance with the following code:

Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

Under no circumstances should either of these wires be connected to the earth terminal of the three pin plug, marked with the letter E or the Earth Symbol.

Earth Symbol	⏚

1.3.2. Before use

remove the Connector Cover as follows.

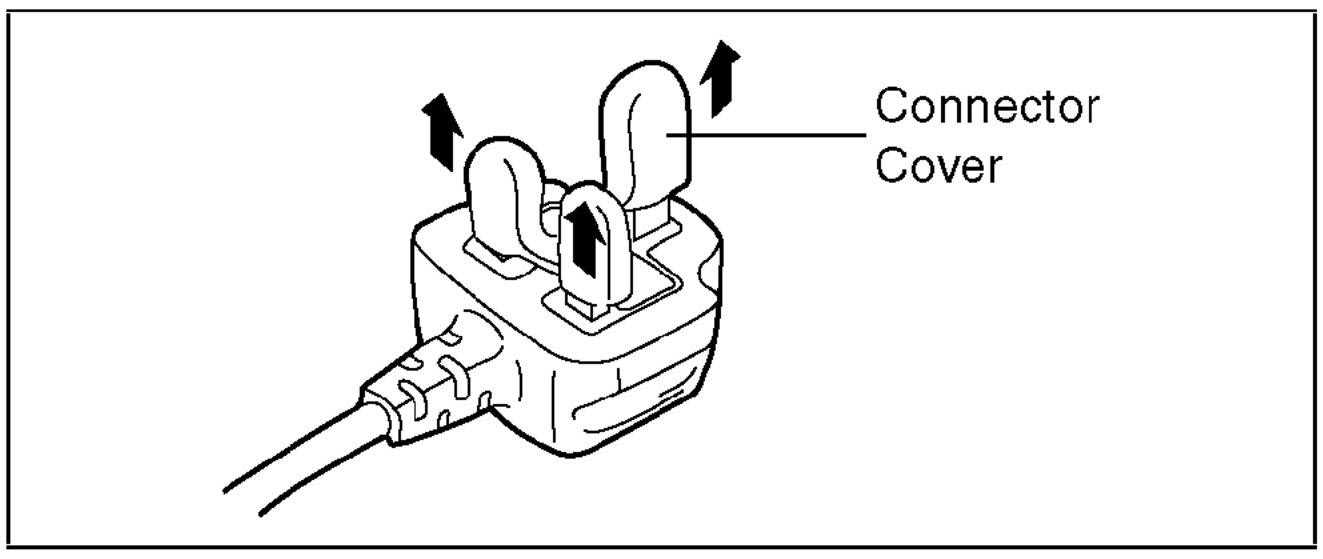

1.3.3. How to replace the Fuse

1. Remove the Fuse Cover with a screwdriver.

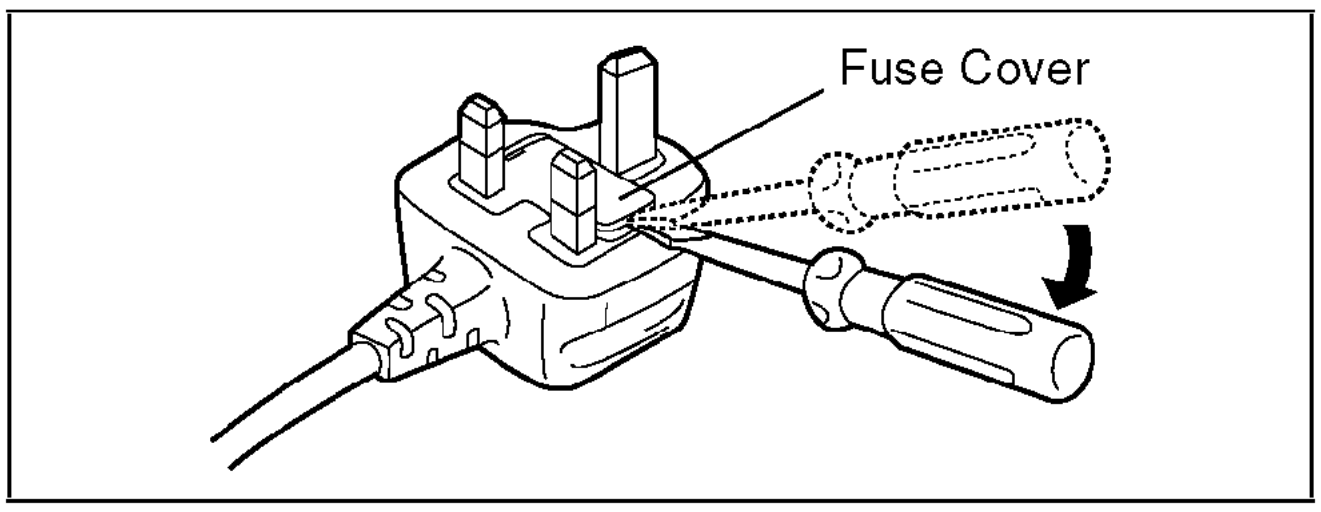

2. Replace the fuse and attach the Fuse cover.

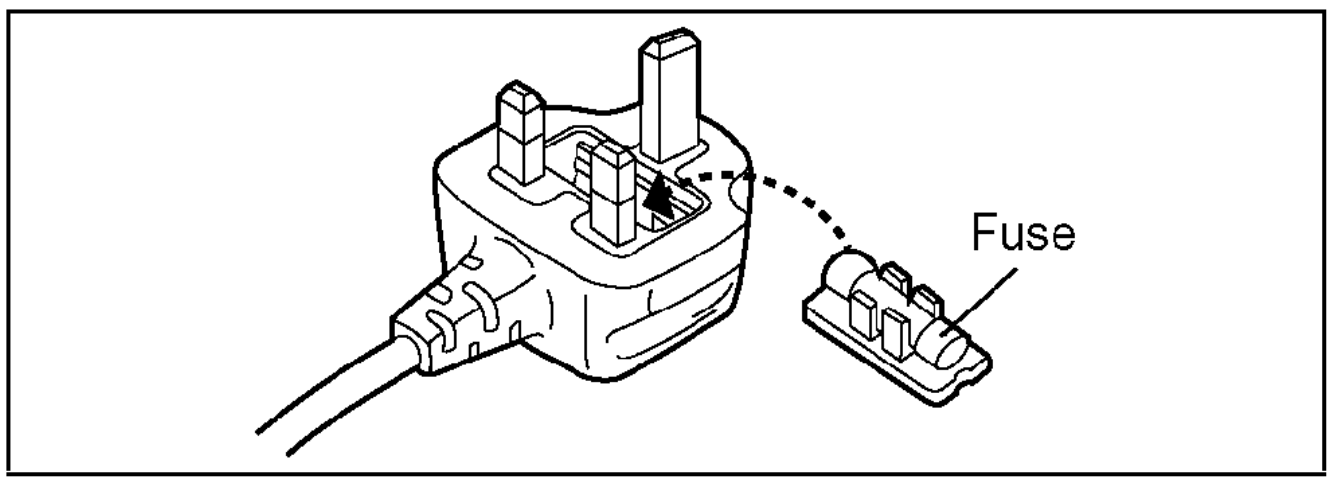

2 SAFETY PRECAUTIONS

GENERAL GUIDELINES

1. **IMPORTANT SAFETY NOTICE**

   There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Layout, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent, shock, fire, or other hazards. Do not modify the original design without permission of manufacturer.
2. An Isolation Transformer should always be used during the servicing of AC Adaptor whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks. It will also protect AC Adaptor from being damaged by accidental shorting that may occur during servicing.
3. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
4. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
5. After servicing, make the following leakage current checks to prevent the customer from being exposed to shock hazards.

LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1 MΩ and 5.2 MΩ. When the exposed metal does not have a return path to the chassis, the reading must be infinity.

LEAKAGE CURRENT HOT CHECK

(See Figure 1.)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect "A" to exposed metallic part on the set. And connect "B" to a good earth ground, as shown in Figure 1.
3. Use an AC voltmeter, with 1 kΩ/V or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.25 V RMS.

A leakage current tester (Simpson Model 228 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 mA. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

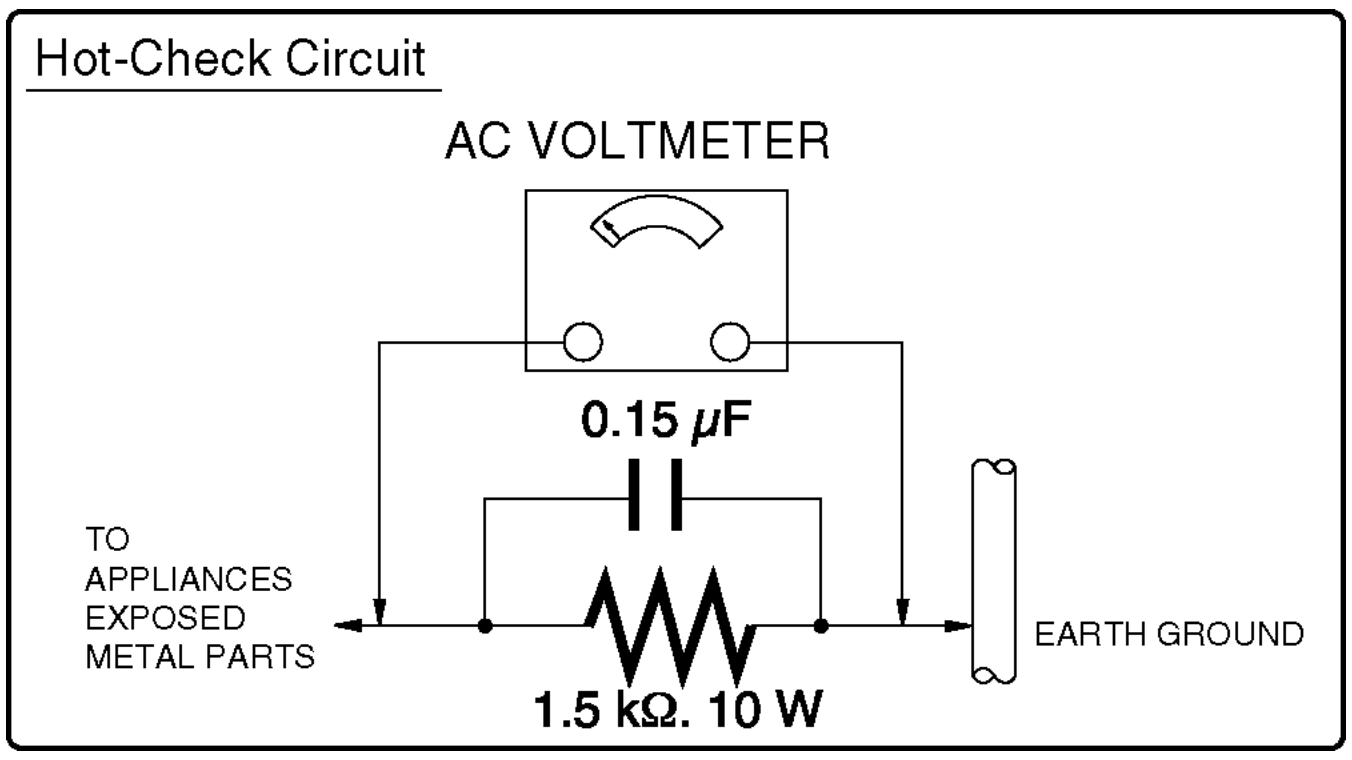

Figure. 1

3 PREVENTION OF ELECTRO STATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an antistatic solder removal device. Some solder removal devices not classified as "antistatic (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

   CAUTION :

   Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

4 ABOUT LEAD FREE SOLDER (PbF)

Distinction of PbF PCB:

PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution:

- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50-70°F (30-40°C) higher.

  Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700±20°F (370±10°C).
- Pb free solder will tend to splash when heated too high (about 1100°F/600°C).

When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.

5 OPERATION GUIDE

Followings are the Operation Guide for NV-GS35EB/21EB/17EB as a sample.

For other models, refer to each original Operation Guide.

Before using

Sales and Support Information

Customer Care Centre
- For UK customers: 08705 357357
- For Republic of Ireland customers: 01 289 8333
- Visit our website for product information
- E-mail: customer.care@panasonic.co.uk

Technical Support for AV Software
- For callers in UK: 08701 505610
- For callers in ROI: 0044 8701 505610

Direct Sales at Panasonic UK
- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Care Centre Monday–Friday 9:00am– 5:30pm. (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.panasonic.co.uk.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.

Accessories

The followings are the accessories supplied with this product.

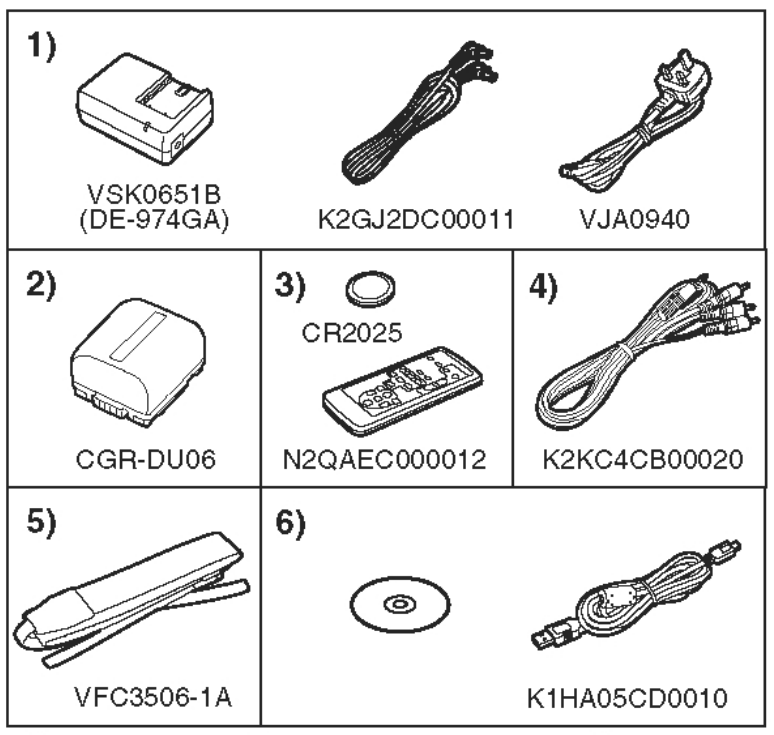

1) **AC adaptor, DC input lead, AC mains lead** *-9-*
2) **Battery pack** *-9-*
3) **Remote control, button-type battery (supplied with NV-GS35)** *-16-*
4) **AV cable** *-37-*
5) **Shoulder strap (supplied with NV-GS35)** *-7-*
6) **USB cable supplied with NV-GS35 and NV-GS21, CD-ROM supplied with NV-GS35**

Optional

1) AC adaptor (VW-AD11EB)
2) Battery pack (lithium/CGR-DU06/640mAh)
3) Battery pack (lithium/CGA-DU07/680mAh)
4) Battery pack (lithium/CGA-DU12/1150mAh)
5) Battery pack (lithium/CGA-DU14/1360mAh)
6) Battery pack (lithium/CGA-DU21/2040mAh)
7) Wide conversion lens (VW-LW3007E)
8) Tele conversion lens (VW-LT3014E)
9) ND filter (VW-LND30E)
10) MC protector (VW-LMC30E)
11) Tripod (VW-CT45E)
12) DV cable (VW-CD1E)
13) Jacket pouch (VW-SJ05E)

- Some optional accessories may not be available in some countries.

Parts identification and handling

Camera

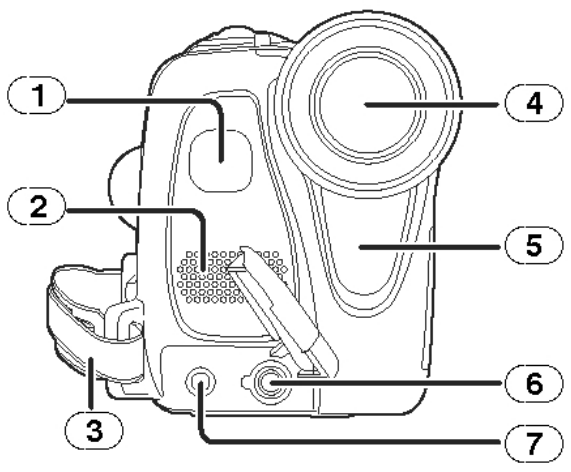

① **Built-in LED video light (NV-GS35 and NV-GS21 only)** *-18-*
② **Microphone (built-in, stereo)** *-23-*, *-25-*
③ **Grip belt** *-7-*
④ **Lens**
- Fit the MC protector (VW-LMC30E; optional), the ND filter (VW-LND30E; optional), the tele conversion lens (VW-LT3014E; optional) or the wide conversion lens (VW-LW3007E; optional) in front of the lens. Do not fit the other accessories. (except for the lens cap)

⑤ **White balance sensor** *-28-*
Remote control sensor (NV-GS35 only) *-17-*
⑥ **Audio-video output terminal [A/V]** *-37-*
⑦ **Microphone terminal [MIC] (NV-GS35 only)**
- When connecting an external microphone or audio equipment to this jack, the built-in microphone does not operate.

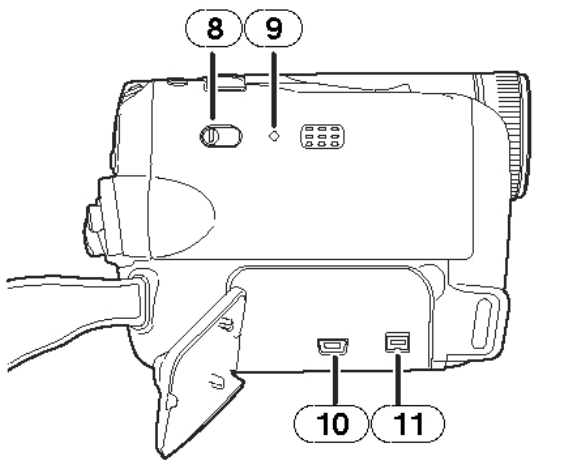

⑧ **Mode select switch [AUTO/MANUAL/FOCUS]** *-19-*, *-27-*, *-29-*
⑨ **Reset button [RESET]** *-44-*
⑩ **USB terminal [ψ]**
⑪ **DV terminal [DV]** *-38-*

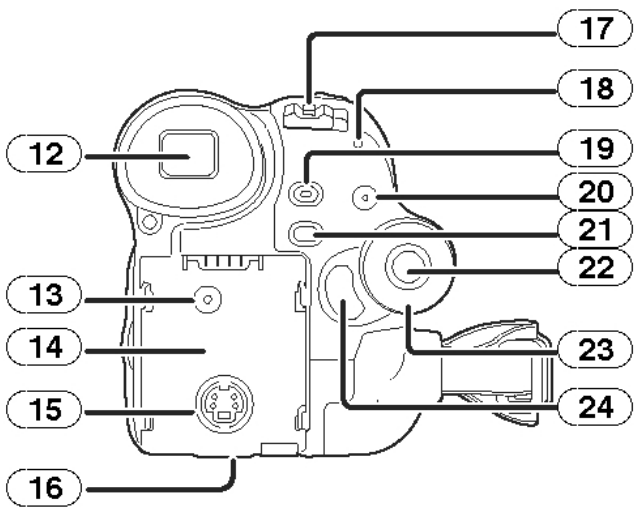

⑫ **Viewfinder** *-8-*, *-52-*

Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the Viewfinder screen. However, this is not a malfunction and does not affect the recorded picture.

⑬ **DC input terminal [DC/C.C.IN]** *-9-*
⑭ **Battery holder**
⑮ **S-Video output terminal [S-VIDEO]** *-33-*
⑯ **Battery release lever [BATTERY RELEASE]** *-9-*
⑰ **Power switch [OFF/ON]** *-12-*
⑱ **Power lamp** *-12-*
⑲ **Quick start recording button [QUICK START]** *-23-*
Quick start recording lamp *-23-*
⑳ **Light button [LIGHT] (NV-GS35 and NV-GS21 only)** *-18-*
㉑ **Menu button [MENU]** *-14-*
㉒ **Joystick** *-13-*
㉓ **Mode dial** *-12-*
㉔ **Recording start/stop button** *-20-*

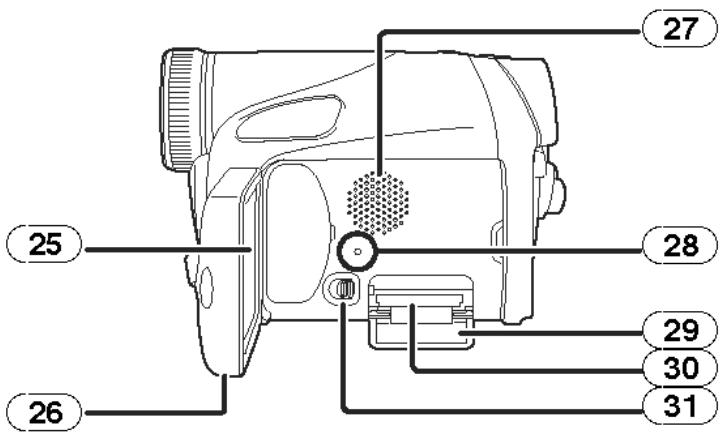

㉕ **LCD monitor** *-8-*, *-52-*

Due to limitations in LCD production technology, there may be some tiny bright or dark spots on the LCD monitor screen. However, this is not a malfunction and does not affect the recorded picture.

㉖ **LCD monitor open part [OPEN]** *-8-*
㉗ **Speaker** *-31-*
㉘ **Card access lamp (NV-GS35 and NV-GS21 only)** *-11-*
㉙ **Card slot cover (NV-GS35 and NV-GS21 only)** *-11-*
㉚ **Card slot (NV-GS35 and NV-GS21 only)** *-11-*
㉛ **Card slot cover open lever (NV-GS35 and NV-GS21 only)** *-11-*

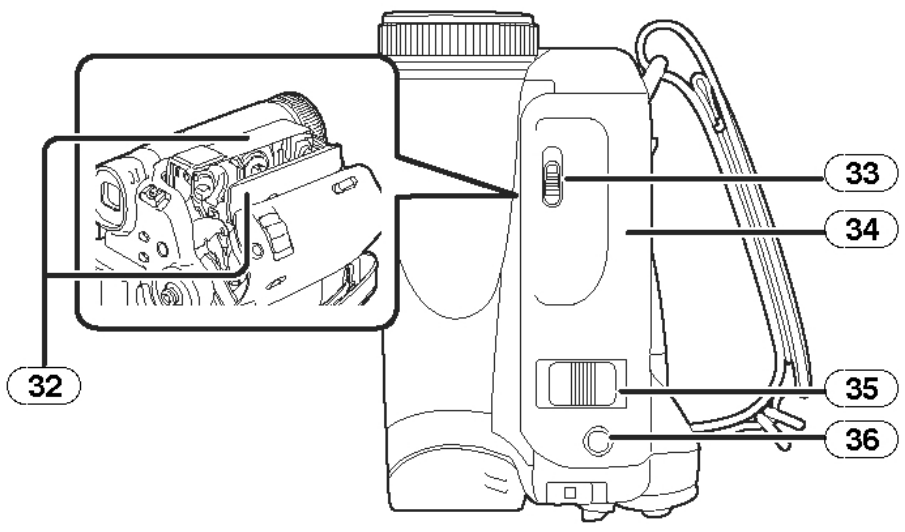

㉜ **Cassette holder** *-10-*
㉝ **Cassette eject lever [OPEN/EJECT]** *-10-*
㉞ **Cassette cover** *-10-*
㉟ **Zoom lever [W/T]** *-22-*
Volume lever [−▦/VOL+] *-31-*
㊱ **Photoshot button [PHOTO SHOT]** *-21-*

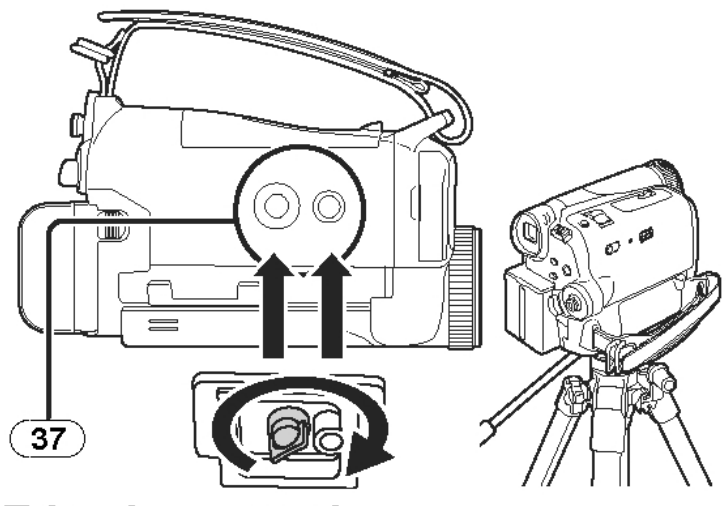

㊲ **Tripod receptacle**

This is a hole for attaching the camera to optional tripod/VW-CT45E. (Please carefully read the operating instructions for how to attach the tripod to the camera.)

- You cannot open the card slot cover when the tripod is used. Insert the card first and then attach the tripod.

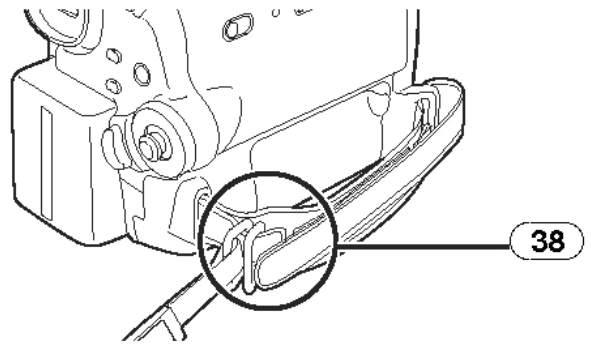

(38) **Shoulder strap fixture**

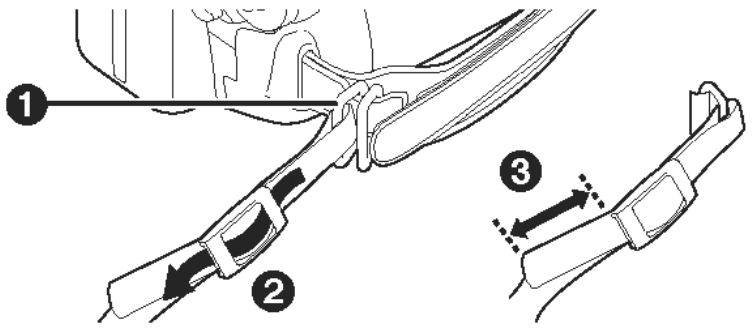

- Put the strap (NV-GS35 only) through the fixture ❶ and through the stopper ❷ so it will not come off. Extend part ❸ by at least 2 cm.
- Fit the other end of the belt similarly.

Fitting the lens cap

Fit the lens cap to protect the surface of the lens.

1 The lens cap and lens cap cord comes preattached to the grip belt. Pass the end of the lens cap cord through the attached eye on the lens cap. Then pass the lens cap through the loop made by itself and pull tight.

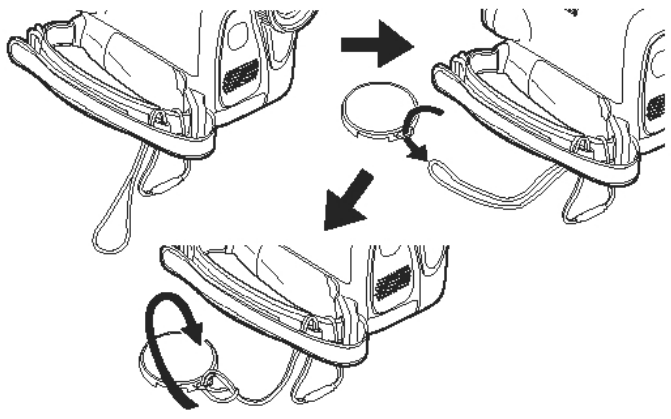

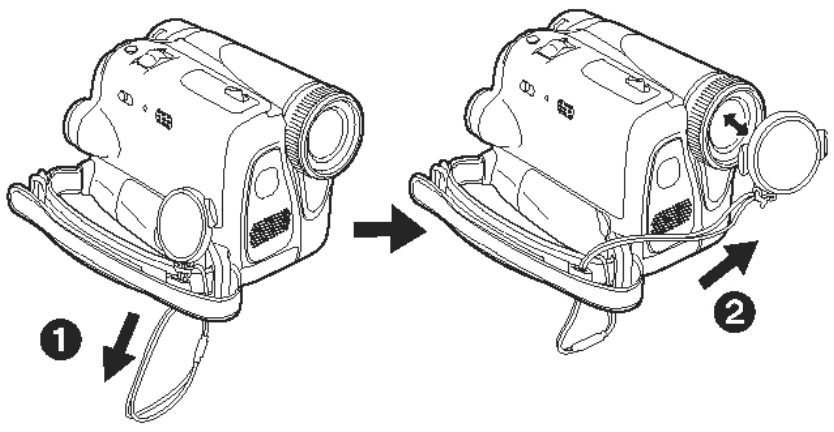

- When not using the Lens Cap, pull the Lens Cap Cord in the direction of the arrow. ❶
- When you are not recording, be sure to cover the Lens with the Lens Cap for protection. ❷
- When you remove the lens cap, press the knobs firmly.



The grip belt

Adjust the belt length so it fits your hand.

1 Adjust the belt length.

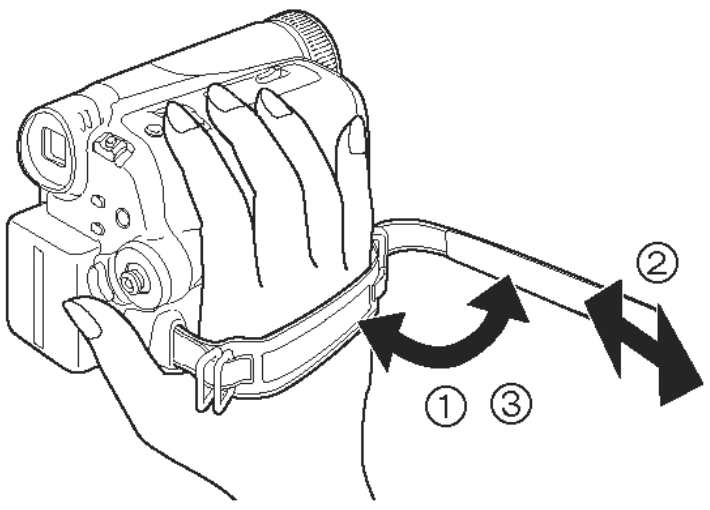

① Flip the belt.
② Adjust the length.
③ Fix the belt.

Using the LCD monitor

You can record the image while viewing it on the LCD monitor opened.

1 **Put a finger on the LCD monitor open part and pull the LCD monitor out in the direction of the arrow.**

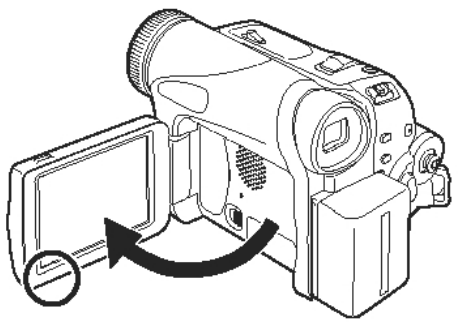

- The viewfinder will go off.
- It can open up to 90°.

2 **Adjust the angle of the LCD monitor as you prefer.**

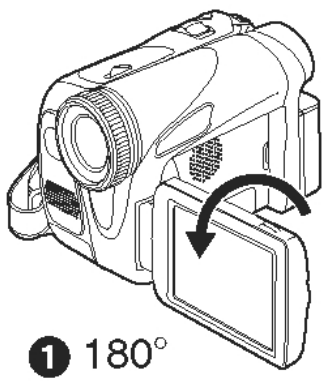

❶ 180°

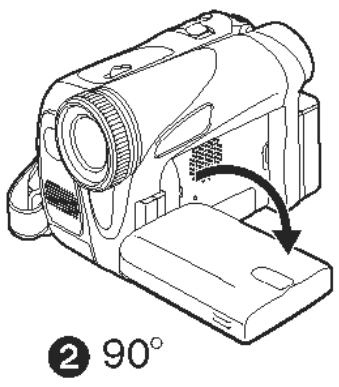

❷ 90°

- It can rotate up to 180° ❶ towards the lens or 90° ❷ towards the viewfinder.

- The brightness and colour level of the LCD monitor can be adjusted from the menu.
- If it is forcibly opened or rotated, the camera may be damaged or fail.
- Check that the card slot cover is closed.
- When the LCD monitor is rotated by 180° towards the lens (when recording yourself), the LCD monitor and the viewfinder will be simultaneously activated.

Using the viewfinder

■ Extending the viewfinder

1 **Pull out the viewfinder and extend it by pinching the extension knob.**

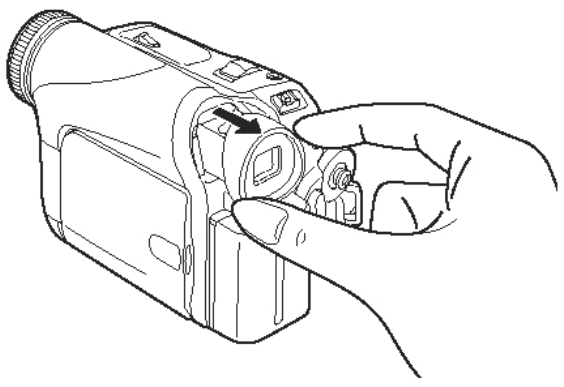

■ Adjusting the field of view

1 **Adjust the focus by sliding the eyepiece corrector knob.**

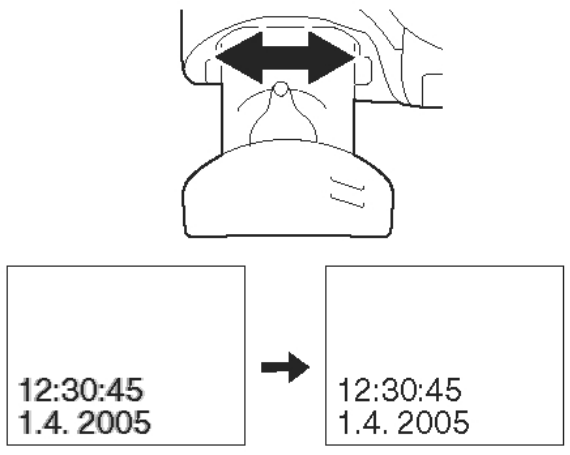

- You can adjust the brightness of the viewfinder from the menu.

Power supply

■ Charging the battery

When this product is purchased, the battery is not charged. Charge the battery before using this product.

- Battery charging time (*-10-*)
- We recommend using Panasonic batteries.
- If you use other batteries, we cannot guarantee the quality of this product.
- If the DC input lead is connected to the AC adaptor, then the battery will not get charged. Remove the DC input lead from the AC adaptor.

1. **Connect the AC mains lead to the AC adaptor and the AC mains socket.**
2. **Put the battery on the battery mount by aligning the mark, and then securely plug it in.**

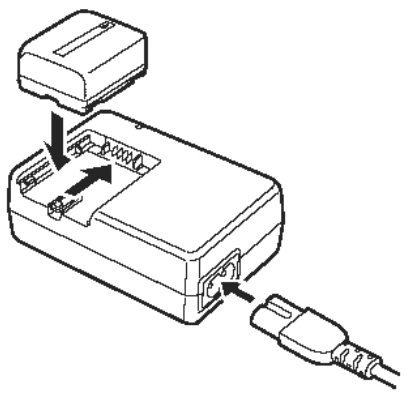

■ Charging lamp

Lights up: Charging
Goes off: Charging completed
Flashing: The battery is over discharged (discharged excessively). In a while, the lamp will light up and normal charging will start.
When the battery temperature is excessively high or low, the [CHARGE] lamp flashes and the charging time will be longer than normal.

■ Connecting to the AC outlet

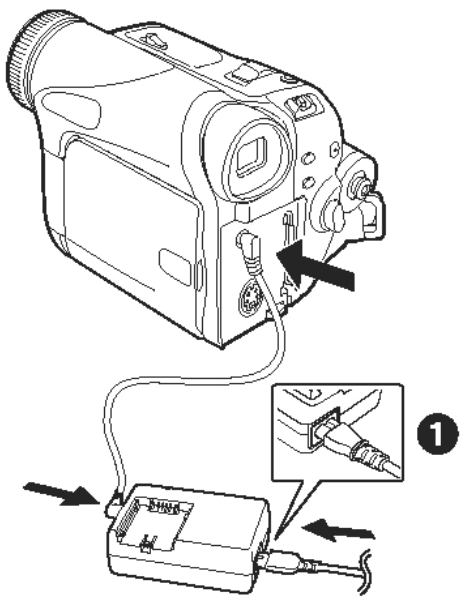

1. **Connect the AC mains lead to the AC adaptor and the AC mains socket.**
2. **Connect the DC input lead to the AC adaptor.**
3. **Connect the DC input lead to this product.**
   - The output plug of the AC mains lead is not completely connected to the AC adaptor socket. As shown in ❶, there is a gap.
   - Do not use the power cord for other equipment since the power cord is exclusively designed for the movie camera. Or do not use the power cord of other equipment for the movie camera.

■ Fitting the battery

Push the battery against the battery holder and slide it until it clicks.

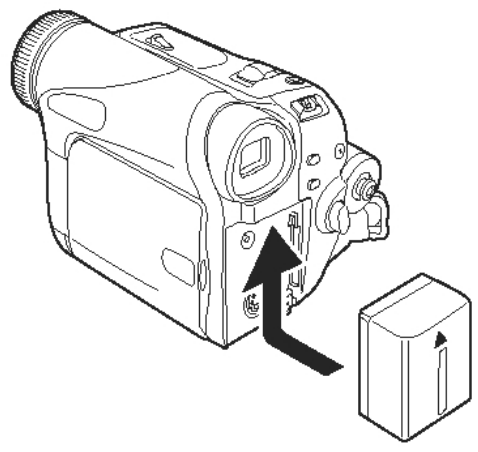

■ Removing the battery

While sliding the [BATTERY RELEASE] lever, slide the battery to remove it.

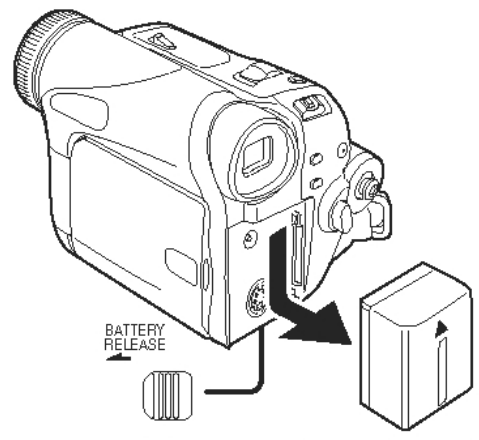

- Hold the battery with your hand so it does not fall.

Charging time and recordable time

The times shown in the table below show the times at a temperature of 25°C and a humidity of 60%. This is just a guide. If the temperature is higher or lower than the specified value, the charging time will become longer.

Supplied battery/ CGR-DU06 (7.2 V/ 640 mAh)	Ⓐ	1 h. 40 min.
	Ⓑ	1 h. 45 min. (1 h. 25 min.)
	Ⓒ	55 min. (45 min.)
CGA-DU12 (7.2 V/ 1150 mAh)	Ⓐ	2 h. 25 min.
	Ⓑ	3 h. 10 min. (2 h. 35 min.)
	Ⓒ	1 h. 35 min. (1 h. 20 min.)
CGA-DU14 (7.2 V/ 1360 mAh)	Ⓐ	2 h. 45 min.
	Ⓑ	3 h. 40 min. (3 h.)
	Ⓒ	1 h. 50 min. (1 h. 30 min.)
CGA-DU21 (7.2 V/ 2040 mAh)	Ⓐ	3 h. 55 min.
	Ⓑ	5 h. 30 min. (4 h. 30 min.)
	Ⓒ	2 h. 45 min. (2 h. 15 min.)
CGA-DU07 (7.2 V/ 680 mAh)	Ⓐ	1 h. 30 min.
	Ⓑ	1 h. 50 min. (1 h. 30 min.)
	Ⓒ	55 min. (45 min.)

Ⓐ Charging time
Ⓑ Maximum continuously recordable time
Ⓒ Intermittent recordable time

(The intermittent recordable time refers to recordable time when the recording and stopping operations are repeated.)

“1 h. 10 min.” indicates 1 hour 10 minutes.

- The battery CGR-DU06 is supplied.
- The times shown in the table are rough estimates. The times indicate the recordable times when the viewfinder is used. The times in parentheses indicate the recordable times when the LCD monitor is used.
- We recommend the Battery Pack CGA-DU12, CGA-DU14 and CGA-DU21 for long time recording (2 hours or more for continuous recording, 1 hour or more for intermittent recording).
- The recordable time will become shorter in the following cases:
  - When you use both the viewfinder and the LCD monitor simultaneously while rotating the LCD monitor frontward to record yourself etc.
- The batteries heat up after use or charging. The main unit of the movie camera being used will also heat up. This is normal.
- Along with the reduction of the battery capacity, the display will change: ▰▰▰▰ → ▰▰▰ → ▰▰ → ▰ → ▱. If the battery discharges, then ▰ (▱) will flash.

Inserting/removing a cassette

1 Slide the [OPEN/EJECT] lever and open the cassette cover.

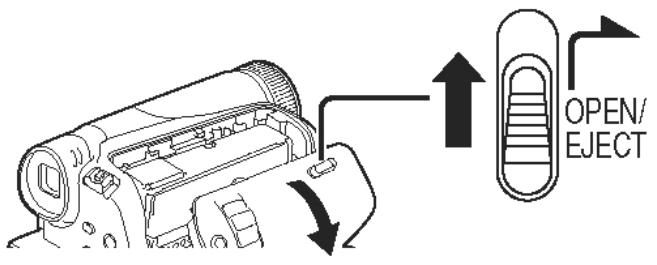

- When the cover is fully opened, the cassette holder will come out.

2 After the cassette holder is opened, insert/ remove the cassette.

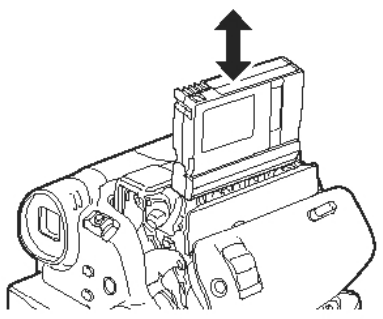

- When inserting a cassette, orient it as shown in the figure, and then securely insert it as far as it goes.
- When removing, pull it straight out.

3 Push the [PUSH] mark ❶ in order to close the cassette holder.



4 Only after the cassette holder is completely housed, close the cassette cover by pressing the mark ❷.

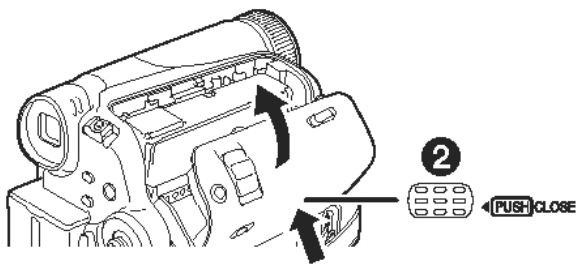

- After using, make sure to rewind the cassette completely, remove it, and put it in a case. Store the case in an upright position. (*-52-*)
- When condensation is formed on the lens or the main unit of the movie camera, even if no condensation alarm is indicated, condensation may have formed on the heads or the cassette tape. Do not open the cassette cover. (*-49-*)

■ When the cassette holder does not come out

- Close the cassette cover completely, and then open it again completely.
- Check if the battery has run down.
- Check if the cassette compartment cover is in contact with grip belt as shown below. If so, be sure the grip belt stays clear of the cover when opening.

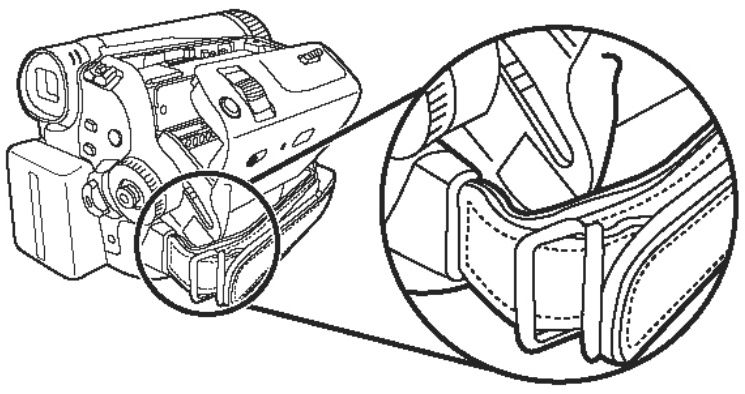

■ When the cassette holder cannot be housed

- Set the [OFF/ON] switch to [OFF], then to [ON] again.
- Check if the battery has run down.

■ Inserting/removing the cassette

- When the cassette holder is in action, do not touch anything except the [PUSH] mark.
- When inserting a previously recorded cassette, use the blank search function to find the position where you want to continue recording. If you overwrite-record on a previously recorded cassette, be sure to find the position where you continue recording.
- Close the cassette cover tightly.
- When closing the cassette cover, do not get anything, such as a cable, caught in the cover.

■ Accidental erasure prevention

If the accidental erasure prevention slider ❶ of a cassette is opened (slide in the direction of the [SAVE] arrow), the cassette cannot be recorded. When recording, close the accidental erasure prevention slider of the cassette (slide in the direction of the [REC] arrow).



Inserting/removing a card

Before inserting/removing a card, be sure to turn the power [OFF].

- If the card is inserted or removed with the power turned on, this camera may malfunction or the data recorded on the card may be lost.

1 **Open the LCD monitor and then slide the [◄OPEN] Lever to open the card slot cover.**

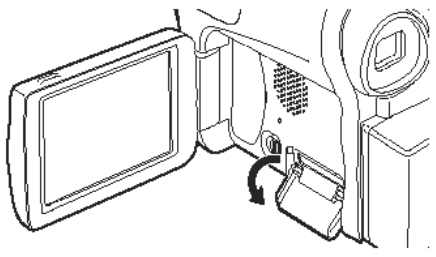

2 **Insert/remove the card into/from the card slot.**

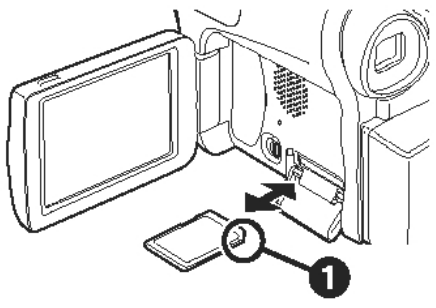

- When inserting a card, face the label side ❶ towards you and push it straight in with one stroke as far as it goes.
- When removing the card, open the card slot cover and press the centre of the card and then pull it straight out.

3 **Securely close the card slot cover.**

■ Concerning the card

- Do not touch the terminals on the back of the card.
- Do not format the card with another movie camera or any personal computer. This operation may make the card unusable.
- Electrical noise, static electricity, or failure of the movie camera or the card may damage or erase the data stored on the card. We recommend saving important data on a personal computer by using a USB cable, PC card adaptor, and USB reader/writer.

■ Card access lamp

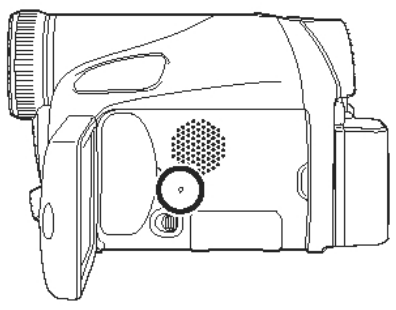

- When the camera accesses the card (reading, recording, playback, erasing, etc.), the access lamp lights up.

- If the following operations are performed when the access lamp is lit, then the card or the recorded data may be damaged or the camera may malfunction.
  - Opening the card slot cover and inserting or removing the card
  - Operating the [OFF/ON] switch or the mode dial

■ SD Memory Card

- The memory capacity indicated on the SD Memory Card label corresponds to the total amount of capacity to protect and manage the copyright and the capacity available as conventional memory for a movie camera, personal computer or other equipment.

■ Concerning the write protection switch on the SD Memory Card

- The SD Memory Card has a write protection switch on it. If the switch is moved to [LOCK], you cannot write to the card, erase the data on it, or format it. If it is moved back, you can.

Turning the camera on

When the camera is turned on with the lens cap fitted, the automatic white balance adjustment may not function properly. Please turn the camera on after removing the lens cap.

■ How to turn on the power

1 **While pressing the button ①, set the [OFF/ON] switch to [ON].**
   - The power lamp lights up.

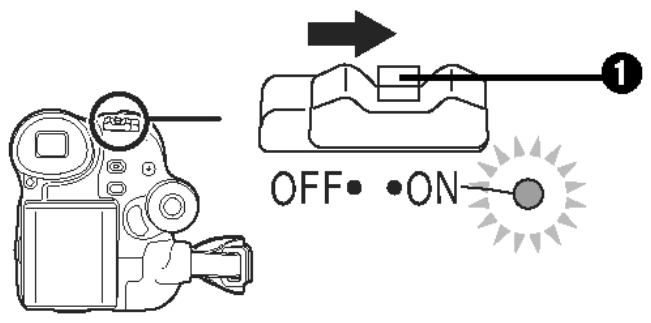

■ How to turn off the power

1 **While pressing the button ①, set the [OFF/ON] switch to [OFF].**
   - The power lamp goes off.

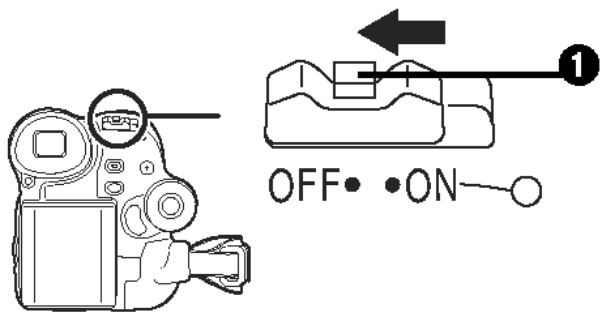

Selecting a mode

Rotate the mode dial to select the desired mode.

1 **Rotate the mode dial.**
- Set your desired mode to ①.

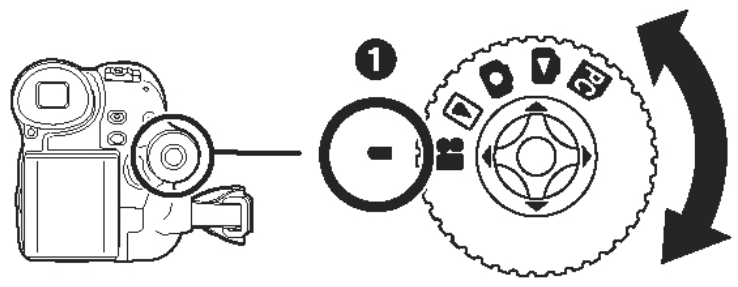

🎥: Tape recording mode
Use this when you record the image on a tape. (Also, you can simultaneously record still pictures on a card while recording images on a tape.)

▶: Tape playback mode
Use this to play back a tape.

📷: Card recording mode
Use this to record still pictures on a card.

▶: Picture playback mode
Use this to play back the still pictures recorded on a card.

PC: PC mode
You can view or edit the images recorded on a card on your personal computer.
(Refer to the operating instructions for PC connection.)

How to use the joystick

■ Basic joystick operations

Operations on the menu screen and selection of files to be played back on the multi-image display

Move the joystick up, down, left, or right to select an item or file, and then push in the centre to set it.

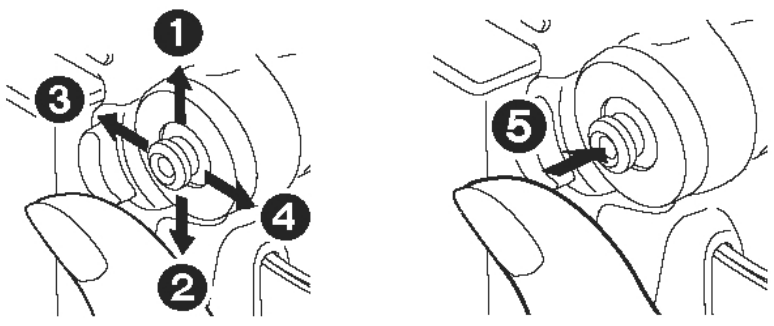

❶	Select by moving up.
❷	Select by moving down.
❸	Select by moving left.
❹	Select by moving right.
❺	Determine by pushing the centre.

■ Joystick and screen display

Push the centre of the joystick, and icons will be displayed on the screen. Each push switches the display as follows depending on the mode.

(In the Tape playback mode or the Picture playback mode, the icons will be automatically displayed on the screen.)

1) **Tape recording mode ([AUTO/MANUAL/FOCUS] switch is set to [AUTO])**

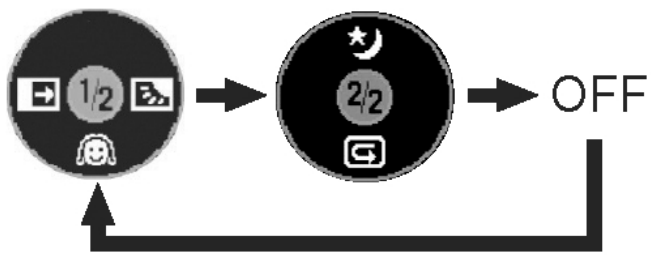

▼		Soft skin mode	*-24-*
◀		Fade	*-25-*
▶		Backlight compensation	*-24-*
▲		Night view	*-24-*
▼		Recording check	*-21-*

2) **Tape recording mode ([AUTO/MANUAL/FOCUS] switch is set to [MANUAL])**

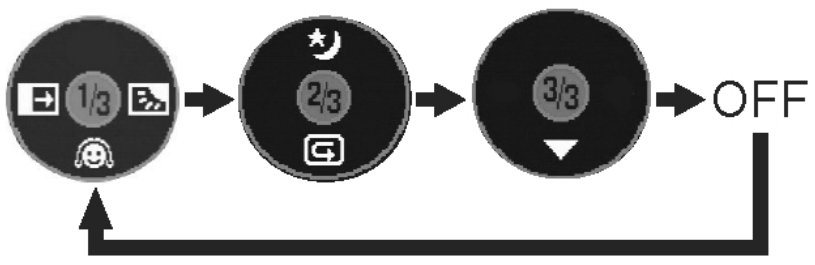

▼	▼	White balance Shutter speed Iris or gain value	*-28-*
▶	+	Select/Adjust	*-28-*
◀	−	Select/Adjust	*-28-*

3) **Tape playback mode**

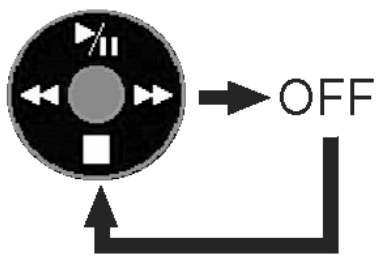

▲	▶/❚❚	Playback/pause	*-31-*
▼	■	Stop	*-31-*
◀	◀◀	Rewind (review playback)	*-31-*
▶	▶▶	Fast forward (cue playback)	*-31-*

4) **Card recording mode ([AUTO/MANUAL/FOCUS] switch is set to [AUTO])**

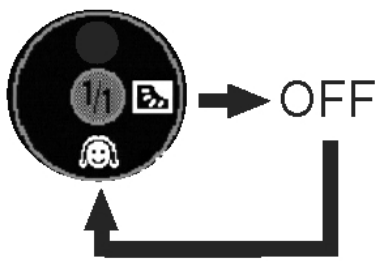

▼		Soft skin mode	*-24-*
▶		Backlight compensation	*-24-*

5) **Card recording mode ([AUTO/MANUAL/FOCUS] switch is set to [MANUAL])**

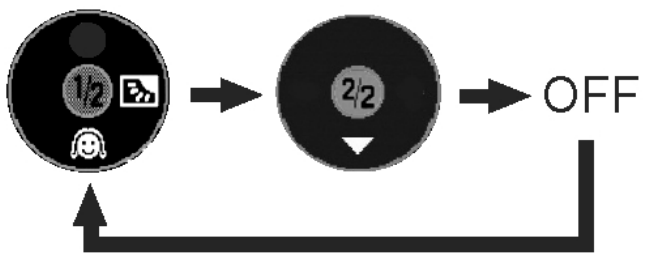

▼	▼	White balance Shutter speed Iris or gain value	*-28-*
▶	+	Select/Adjust	*-28-*
◀	−	Select/Adjust	*-28-*

6) Picture playback mode

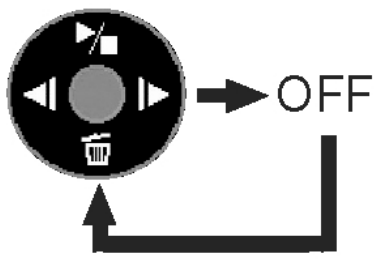

▲	▶/■	Playback/stop	*-33-*
▼	🗑	Erase	*-34-*
◀	◀‖	Playback previous picture	*-33-*
▶	‖▶	Playback next picture	*-33-*

Switching the language

You can switch the language on the screen display or the menu screen.

1 Set [LANGUAGE] >> select the desired language.

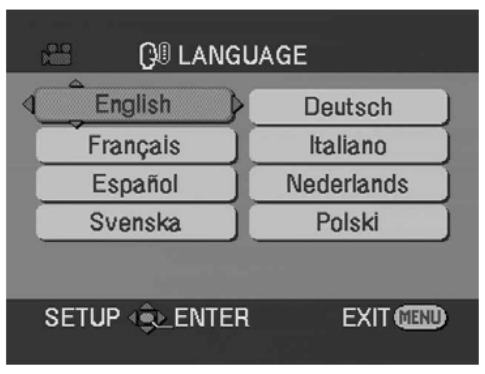
LANGUAGE
English
Deutsch
Français
Italiano
Español
Nederlands
Svenska
Polski
SETUP
ENTER
EXIT
MENU

Using the menu screen

For each individual menu, please refer to *-40-*.

1 Press the [MENU] button.

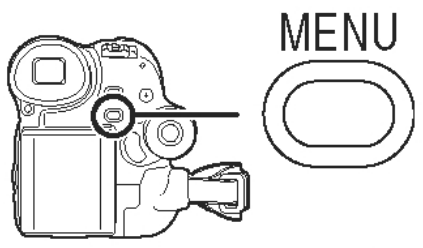

- The menu corresponding to the mode selected by the mode dial is displayed.
- Do not switch the mode dial when the menu is displayed.

2 Move the joystick up or down in order to select the top menu.

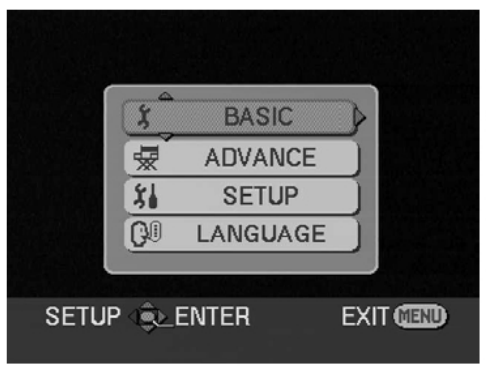
BASIC
ADVANCE
SETUP
LANGUAGE
SETUP
ENTER
EXIT
MENU

3 Move the joystick right or press it to set the selection.



4 Move the joystick up or down in order to select the sub-menu.

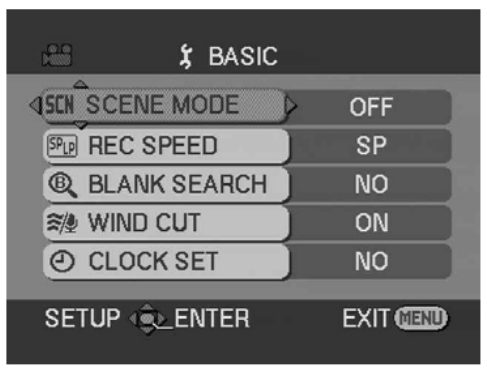
BASIC
SCENE MODE
OFF
REC SPEED
SP
BLANK SEARCH
NO
WIND CUT
ON
CLOCK SET
NO
SETUP
ENTER
EXIT
MENU

5 Move the joystick right or press it to set the selection.



6 Move the joystick up or down in order to select the item to be set.

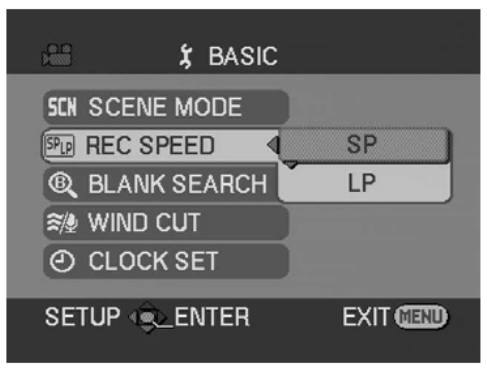
BASIC
SCENE MODE
REC SPEED
SP
BLANK SEARCH
LP
WIND CUT
CLOCK SET
SETUP
ENTER
EXIT
MENU

7 Press the joystick to determine the setting.

■ To exit the menu screen

Press the [MENU] button.

■ To get back to the previous screen

Move the joystick left.

■ About the menu setting

- The menu screen does not appear during recording. And you cannot record when the menu screen appears.

■ Operating with remote control (NV-GS35 only)

The menu screen transition is the same as when the buttons on the main unit are used.

1 Press the [MENU] button.

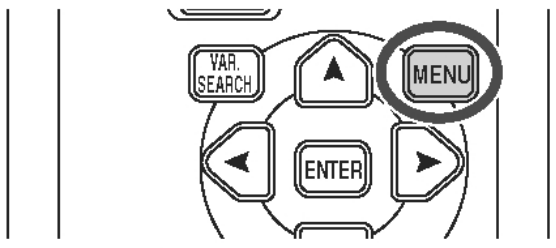

2 Select a menu item.

- Use the direction buttons (▲, ◄, ►, ▼) and [ENTER] button in place of the joystick on the main unit.

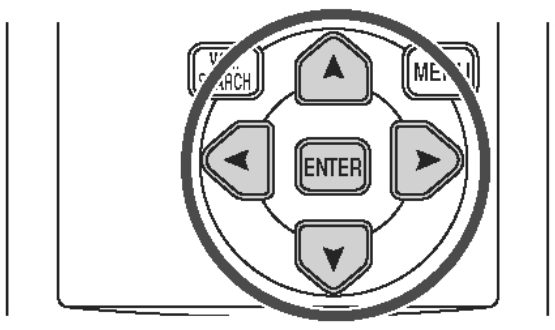

3 Press the [MENU] button to exit the menu screen.

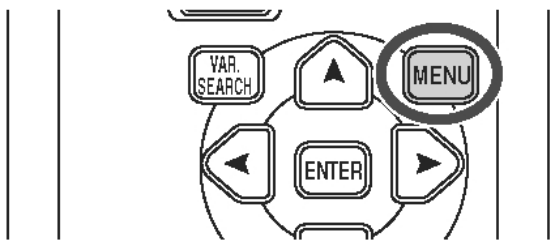

Setting date and time

If the screen shows the incorrect date/time, then adjust it.

- **Set to Tape Recording Mode or Card Recording Mode.**

1 Set [BASIC] >> [CLOCK SET] >> [YES].

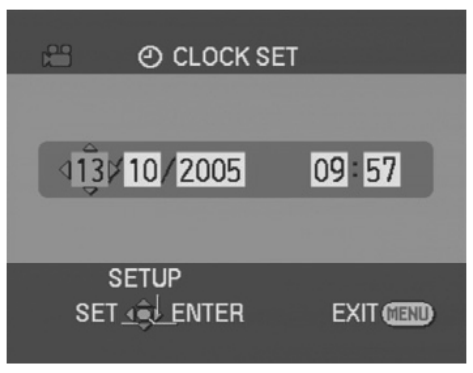

2 Move the joystick left or right in order to select the item to be set. Then move the joystick up or down to set the desired value.

- The year will change as follows:
  2000, 2001, ..., 2089, 2000, ...
- The 24-hour clock is used.

3 Press the joystick to determine the setting.

- The clock function starts at [00] seconds.

■ About date/time

- The date and time function are driven by a built-in lithium battery.
- Make sure to check the time before recording because the built-in clock is not very accurate.

■ Recharging the built-in lithium battery

- If [⊘] or [--] is indicated when the camera is turned on, then the built-in lithium battery runs down. Connect the AC adaptor to the camera or place the battery on the camera, and the built-in lithium battery will be recharged. Leave the camera as is for approx. 24 hours, and the battery will drive the date and time for approx. 6 months. (Even if the [OFF/ON] switch is set to [OFF], the battery is still being recharged.)

WARNING
THE LITHIUM BATTERY IN THIS EQUIPMENT MUST ONLY BE REPLACED BY QUALIFIED PERSONNEL. WHEN NECESSARY, CONTACT YOUR LOCAL PANASONIC SUPPLIER.

Adjusting LCD monitor/viewfinder

■ Adjusting the brightness and colour level

1 Set [SETUP] >> [LCD SET] or [EVF SET] >> [YES].

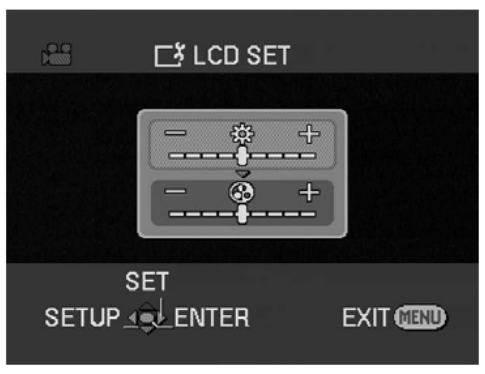
LCD SET
SET
SETUP ENTER
EXIT MENU

2 Move the joystick up or down in order to select the item to be adjusted.

[LCD SET]

☼ **:Brightness of the LCD monitor**

◎ **:Colour level of the LCD monitor**

[EVF SET]

EVF☼ **:Brightness of the viewfinder**

3 Move the joystick left or right to move the bar indication representing the brightness.

4 Press the [MENU] button or the joystick to complete the settings.

- In order to adjust the brightness of the viewfinder, close the LCD monitor, and the viewfinder will be activated.
- When the LCD monitor is rotated by 180° towards the lens, the brightness of the LCD monitor cannot be adjusted.
- These settings will not affect the images actually recorded.

Using the remote control (NV-GS35 only)

■ Remote control

Using the remote control supplied will enable controlling almost all the functions of this camera to be controlled.

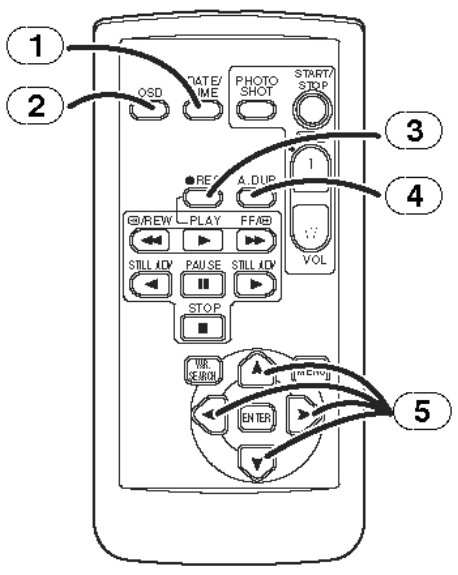
1
2
3
4
5
OSD
DATE/TIME
PHOTO SHOT
START/STOP
●REC
A.DUB
REW
PLAY
FF
STILL ADV
PAUSE
STILL ADV
STOP
VOL
ENTER

① **Date/time button [DATE/TIME]** *-40-*
② **On-screen display button [OSD]** *-33-*
③ **Record button [●REC] (not available)**
④ **Audio dubbing button [A.DUB]** *-38-*
⑤ **Direction buttons [▲, ◀, ▶, ▼]** *-15-*

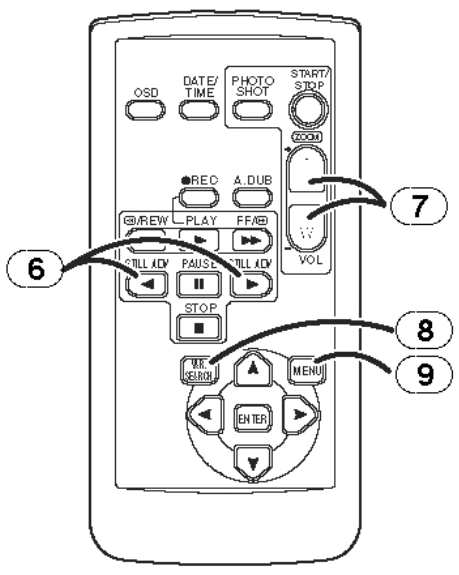
6
7
8
9
OSD
DATE/TIME
PHOTO SHOT
START/STOP
●REC
A.DUB
REW
PLAY
FF
STILL ADV
PAUSE
STILL ADV
STOP
VOL
MENU
ENTER

⑥ **Slow/frame-by-frame forward button [◂I, I▸] (◂I: reverse, I▸: forward)** *-31-*
⑦ **Zoom/volume button [ZOOM/VOL]** ✳
⑧ **Search button [VAR. SEARCH]** *-32-*
⑨ **Menu button [MENU]** *-15-*

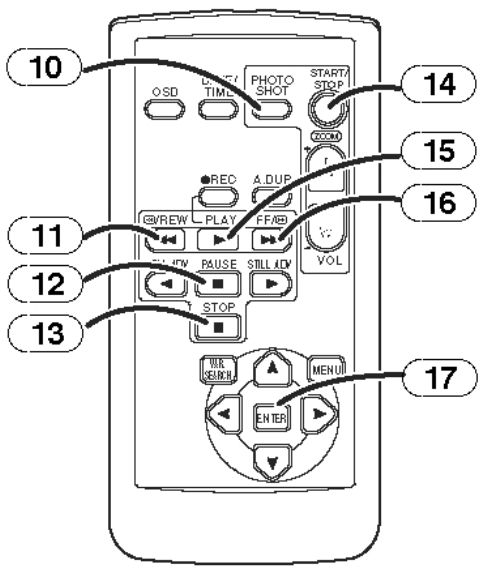
10
11
12
13
14
15
16
17
OSD
PHOTO SHOT
START/STOP
●REC
A.DUB
REW
PLAY
FF
PAUSE
STILL ADV
STOP
VOL
MENU
ENTER

⑩ **Photoshot button [PHOTO SHOT]** ✳
⑪ **Rewind/review button [◀◀]**

⑫ **Pause button [❚❚]**
⑬ **Stop button [■]**
⑭ **Recording start/stop button [START/STOP]** ✻
⑮ **Playback button [▶]**
⑯ **Fast forward/cue button [▶▶]**
⑰ **Enter button [ENTER]** *-15-*

✻ means that these buttons function in the same manner as the corresponding buttons on the movie camera.

■ Install a button-type battery

Install the button-type battery supplied in the remote control before using it.

1. **While pressing the stopper ❶, pull out the battery holder.**



2. **Set the button-type battery with its (+) mark facing upward and get the battery holder back in place.**



> ***WARNING***
>
> "THE LITHIUM BATTERY IS A CRITICAL COMPONENT (TYPE NUMBER CR2025 MANUFACTURED BY PANASONIC).
> IT MUST NEVER BE SUBJECTED TO EXCESSIVE HEAT OR DISCHARGE. IT MUST THEREFORE ONLY BE FITTED IN EQUIPMENT DESIGNED SPECIFICALLY FOR ITS USE.
> REPLACEMENT BATTERIES MUST BE OF THE SAME TYPE AND MANUFACTURER. THEY MUST BE FITTED IN THE SAME MANNER AND LOCATION AS THE ORIGINAL BATTERY, WITH THE CORRECT POLARITY CONNECTIONS OBSERVED.
> DO NOT ATTEMPT TO RE-CHARGE THE OLD BATTERY OR RE-USE IT FOR ANY OTHER PURPOSE. IT SHOULD BE DISPOSED OF IN WASTE PRODUCTS DESTINED FOR BURIAL RATHER THAN INCINERATION."

■ Remote control usable range

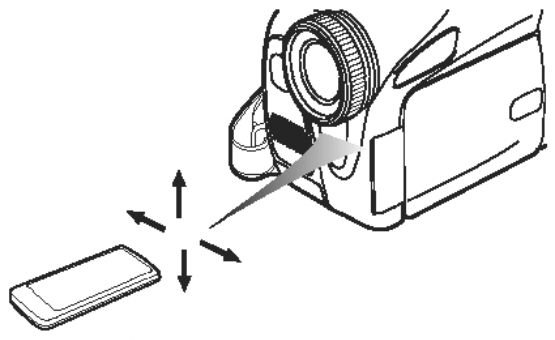

- The distance between the remote control and the camera: Within approx. 5 m
  Angle: Approx. 15° up, down, left, and right

■ Selecting the remote control mode

If 2 cameras are used simultaneously, set the mode for one pair of movie camera and remote control to [VCR1] and that of the other pair to [VCR2]. This will prevent interference between the 2 pairs. (The default setting is [VCR1]. When the button-type battery is replaced, the setting will revert to the default [VCR1].)

1. **Setting on the camera:**
   Set [SETUP] >> [REMOTE] >> [VCR1] or [VCR2].
2. **Setting on the remote control:**



[VCR1]:
Press [❙▶] and [■] simultaneously. ❶
[VCR2]:
Press [◀❙] and [■] simultaneously. ❷

■ Concerning the button-type battery

- When the button-type battery runs down, replace it with a new battery (part number: CR2025). The battery is normally expected to last about 1 year, but it depends on operation frequency.
- Keep the button-type battery out of the reach of children.

- If the remote control mode of the camera and that of the remote control do not match with each other, "REMOTE" will appear. When the remote control is operated for the first time after the camera is turned on, "CHECK REMOTE MODE" (*-44-*) will appear and operation is impossible. Set the same remote control mode.
- The remote control is intended for indoor operation. Outdoors or under strong light, the movie camera may not operate properly even within the usable ranges.

Recording with the built-in LED video light (NV-GS35 and NV-GS21 only)

Gain up mode works with the built-in LED video light to enhance the light's brightness and brighten the natural colours in a scene.

1 **Press the [LIGHT] button. ❶**

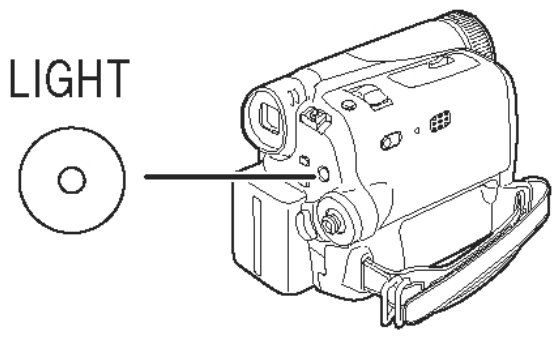

- The built-in LED video light lights up and the gain up mode is set to on.
- The gain up mode will be brighter than when only the LED video light is on, but ghost images will appear.

2 **Press the [LIGHT] button. ❷**

- The gain up mode is set to off.
- To eliminate ghost images, use this mode.

3 **Press the [LIGHT] button. ❸**

- The LED video light turns off.
- Pressing the [LIGHT] button again returns to ❶.

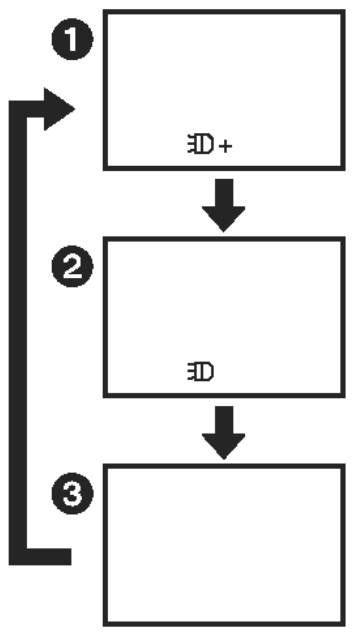

- The subject should be within 1.5 metres of the movie camera.
- Using the LED video light reduces battery time.
- Set the LED video light to off when not in use.
- Do not look directly into the light.
- If the LED video light is used with a conversion lens attached, a slight vignetting (darkening around edges) effect occurs on the screen.
- Using the night view function at the same time will make conditions even brighter.
- The LED video light enables simply lightening the images taken in a dimly-lit place. We also recommend using it in a bright place to obtain high quality images.

6 HOW TO REPLACE THE LITHIUM BATTERY

Remove the Jack C.B.A. (Refer to “DISASSEMBLY/ASSEMBLY PROCEDURES.”)

Unsolder the Lithium Battery “ML-621SF9DE” and then replace the new one.

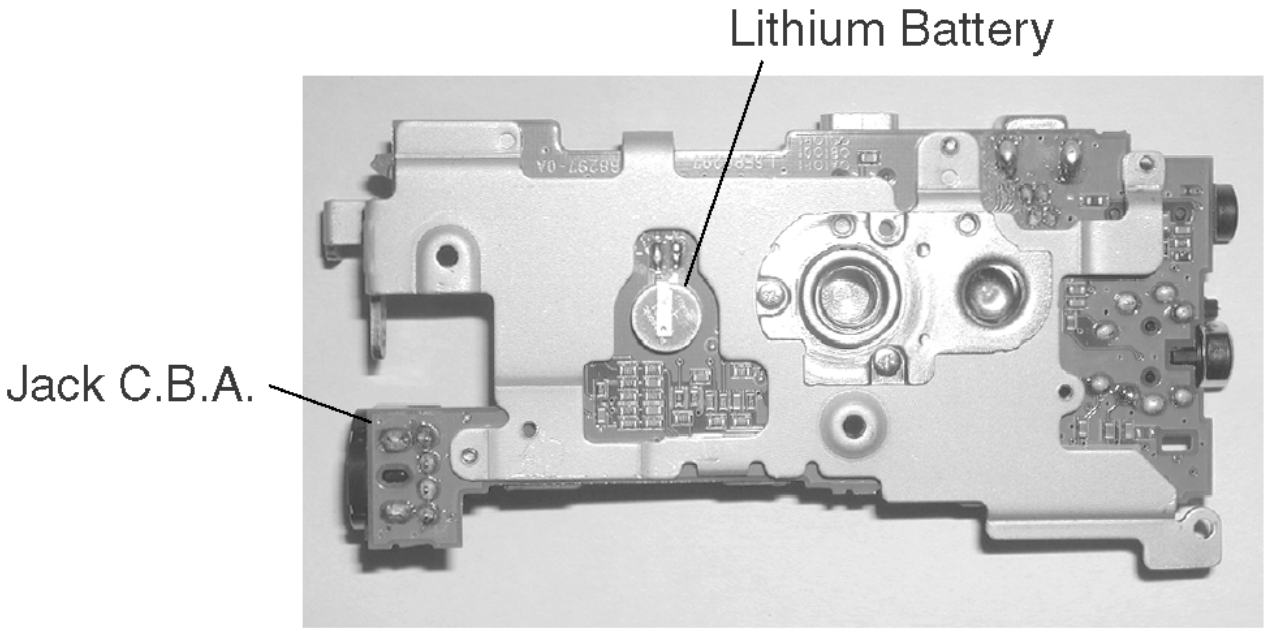

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

CAUTION - The battery used in this device may present a risk of fire or chemical burn if mistreated.
Do not recharge, disassemble, heat above 100 °C (212 °F), or incinerate.
Replace battery with Panasonic part number ML-621SF9DE only.
Use of another battery may present a risk of fire or explosion.
Dispose of used battery promptly. Keep away from children.
Do not disassemble and do not dispose of in fire.

NOTE:

This Lithium battery is a critical component. (Type No.: ML-621SF9DE)

It must never be subjected to excessive heat or discharge.

It must therefore only be fitted in epuipment designed specifically for its use.

Replacement batteries must be of the same type and manufacture.

They must be fitted in the same manner and location as the original battery, with the correct polarity contacts observed.

Do not attempt to re-charge the old battery or re-use it for any other purpose.

It should be disposed of in waste products destined for burial rather than incineration.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type recommended by the equipment manufacturer.
Discard used batteries according to manufacturer's instructions.

PRECAUTION

Le fait de remplacer incorrectement la pile peut présenter des risques d'explosion.
Remplacer la pile uniquement par une pile identique ou de type équivalent recommandée par le fabricant. Se débarrasser des piles usagées conformément aux instructions du fabricant.

VORSICHT

Bei einer falsch eingesetzten Batterie besteht Explosionsgefahr. Nur mit einer vom Hersteller empfohlenen Batterie vom gleichen Typ ersetzen.
Verbrauchte Batterien beim Fachhändler oder einer Sammelstelle für Sonderstoffe abliefern.

VARNING

Explosionsfara vid felaktigt batteribyte.
Använd samma batterityp eller en ekvivalent typ som rekommenderas av apparattillverkaren.
Kassera använt batteri enligt fabrikantens instruktion.

ADVARSEL!

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.
Udskiftning må kun ske med batteri af samme fabrikat og type.
Levér det brugte batteri tilbage til leverandøren.

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan tyyppiin.
Hävitä käytetty paristo valmistajan ohjeiden mukaisesti.

7 SERVICE NOTES (PLEASE READ)

7.1. SERVICE NOTES

7.1.1. EXTENSION CABLES FOR SERVICE POSITION

Using the following Extension Cables, place the unit as shown for check and service.

NO.	PART NUMBER	PART NAME	CONNECTION
①	VUVS0012	22Pin Extension Cable	FP10 on Main C.B.A. ~ Zoom Switch F.P.C. of Cassette Cover Unit
②	VUVS0012	22Pin Extension Cable	FP701 on Main C.B.A. ~ Lens F.P.C. on Lens Unit
③	VFKW0124A	14Pin Extension Cable	FP301 on Main C.B.A. ~ CCD F.P.C. on Lens Unit
④	LSUA0017	18Pin Extension Cable	FP4 on Main C.B.A. ~ Capstan F.P.C. on Mechanism Chassis Ass'y
⑤	LSUA0016	10Pin Extension Cable	FP3 on Main C.B.A. ~ Cylinder F.P.C. on Mechanism Chassis Ass'y
⑥	LSUA0019	8Pin Extension Cable	FP5 on Main C.B.A. ~ Head Amp F.P.C. on Mechanism Chassis Ass'y
⑦	LSUA0019	8Pin Extension Cable	FP1 on Main C.B.A. ~ Mechanism F.P.C. on Mechanism Chassis Ass'y
⑧	LSUA0017	18Pin Extension Cable	FP2 on Main C.B.A. ~ Sub Mechanism F.P.C. on Mechanism Chassis Ass'y
⑨	VUVS0007	12Pin Extension Cable	FP6 on Main C.B.A. ~ Front F.P.C. of Front C.B.A.

Note :

1. The LCD open/close SW. is for changing between LCD Display or EVF Display. When turning on EVF Display, place some paper or tape, etc. on LCD open/close SW. so that this SW. stays ON.
2. To eject the Mechanism, hold down the Eject Switch on the Jack C.B.A. for a short time.
3. Use a grounded ESD wrist strap while disassembling the Lens portion.
4. Connect the F.P.C.s to the connectors, verifying the direction of F.P.C as shown.
5. Use extreme care when unplugging or plugging in connectors.

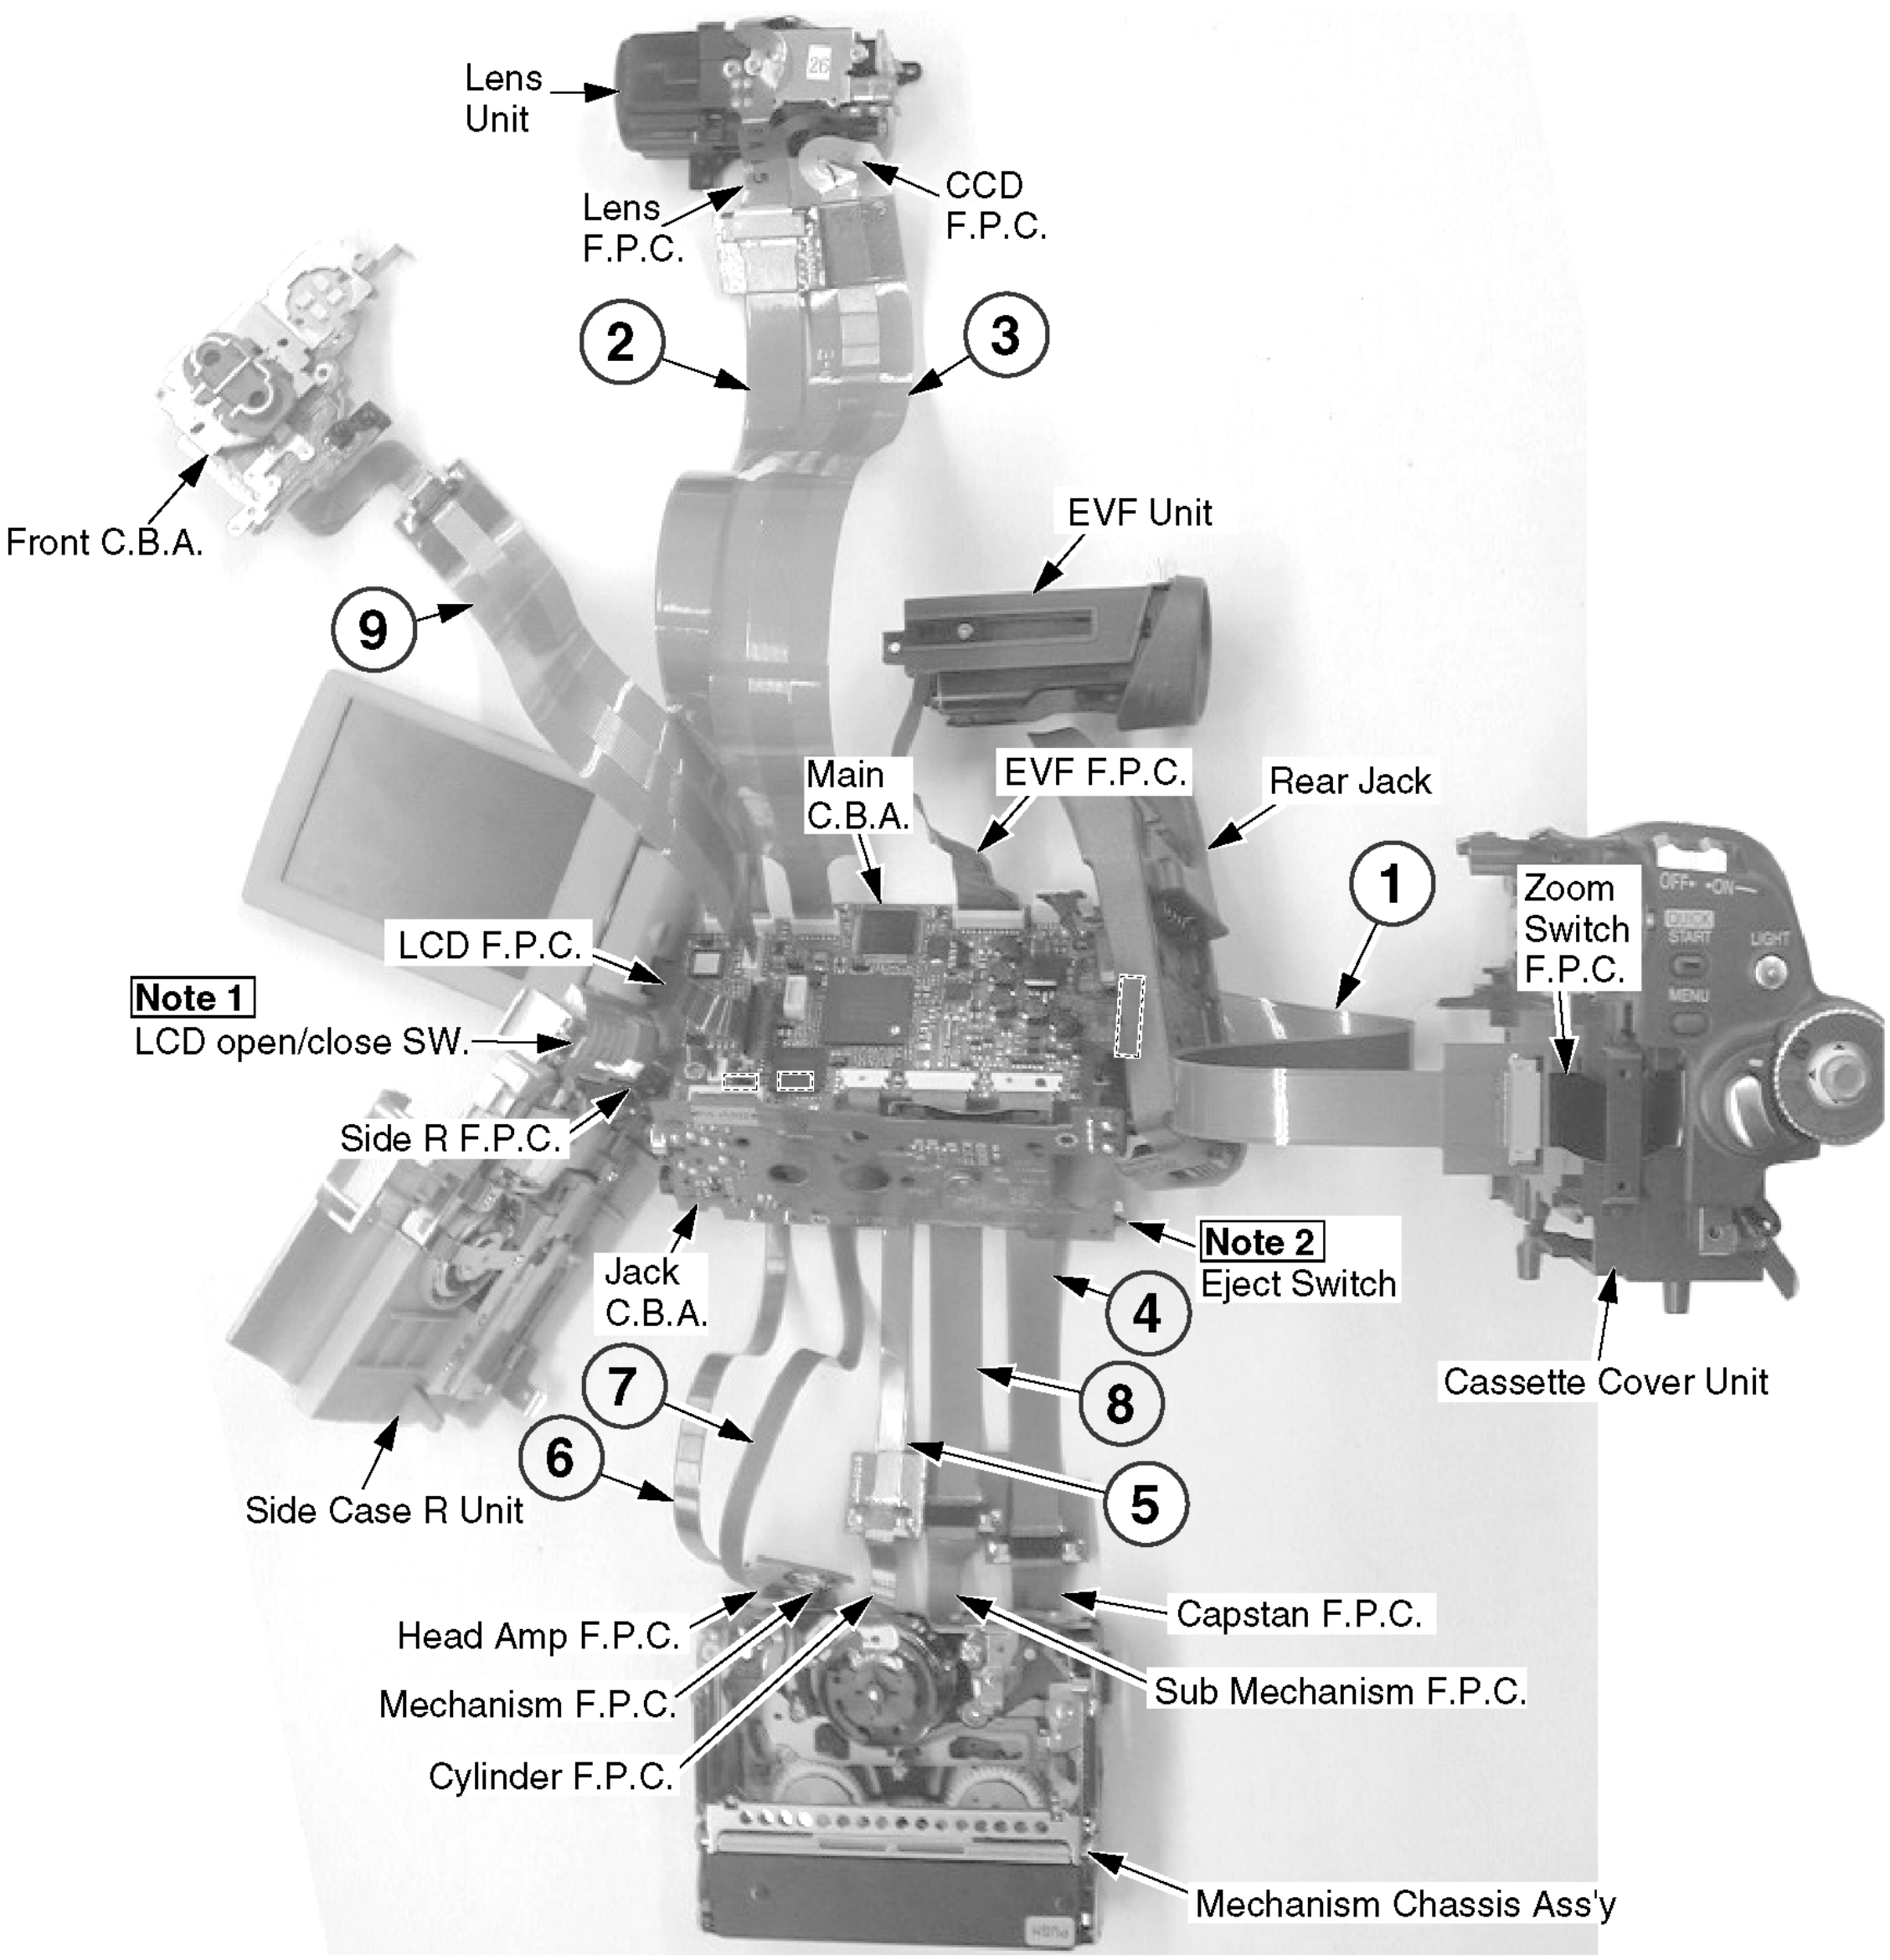
Lens Unit
Lens F.P.C.
CCD F.P.C.
②
③
Front C.B.A.
EVF Unit
⑨
Main C.B.A.
EVF F.P.C.
Rear Jack
①
Zoom Switch F.P.C.
LCD F.P.C.
Note 1
LCD open/close SW.
Side R F.P.C.
Jack C.B.A.
Note 2
Eject Switch
④
⑧
Cassette Cover Unit
⑦
⑥
⑤
Side Case R Unit
Head Amp F.P.C.
Mechanism F.P.C.
Cylinder F.P.C.
Capstan F.P.C.
Sub Mechanism F.P.C.
Mechanism Chassis Ass'y

Non ZIF connectors are on the Main C.B.A. as shown in gray.

Direction of F.P.C.s connection

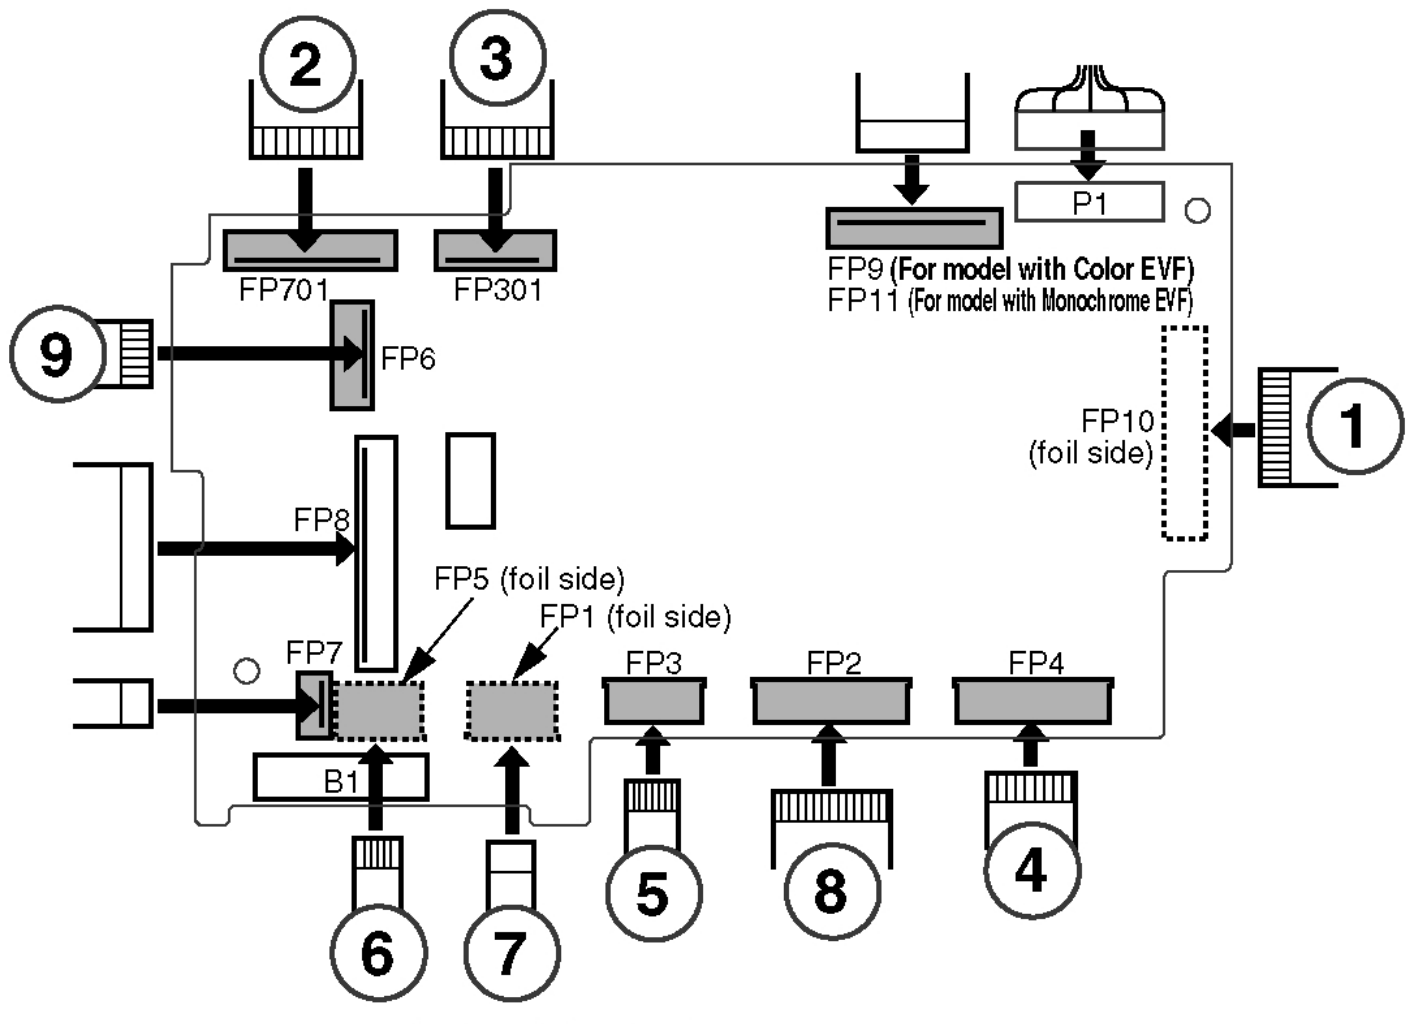
②
③
P1
FP701
FP301
FP9 (For model with Color EVF)
FP11 (For model with Monochrome EVF)
⑨
FP6
FP10 (foil side)
①
FP8
FP5 (foil side)
FP1 (foil side)
FP7
FP3
FP2
FP4
B1
⑤
⑧
④
⑥
⑦

Main C.B.A. (component side)

Fig. 1

7.1.2. SERVICE MODE

7.1.2.1. ERROR DISPLAY

"PUSH THE RESET SWITCH" is displayed automatically on the EVF or the LCD Monitor when an undesirable condition has occurred.

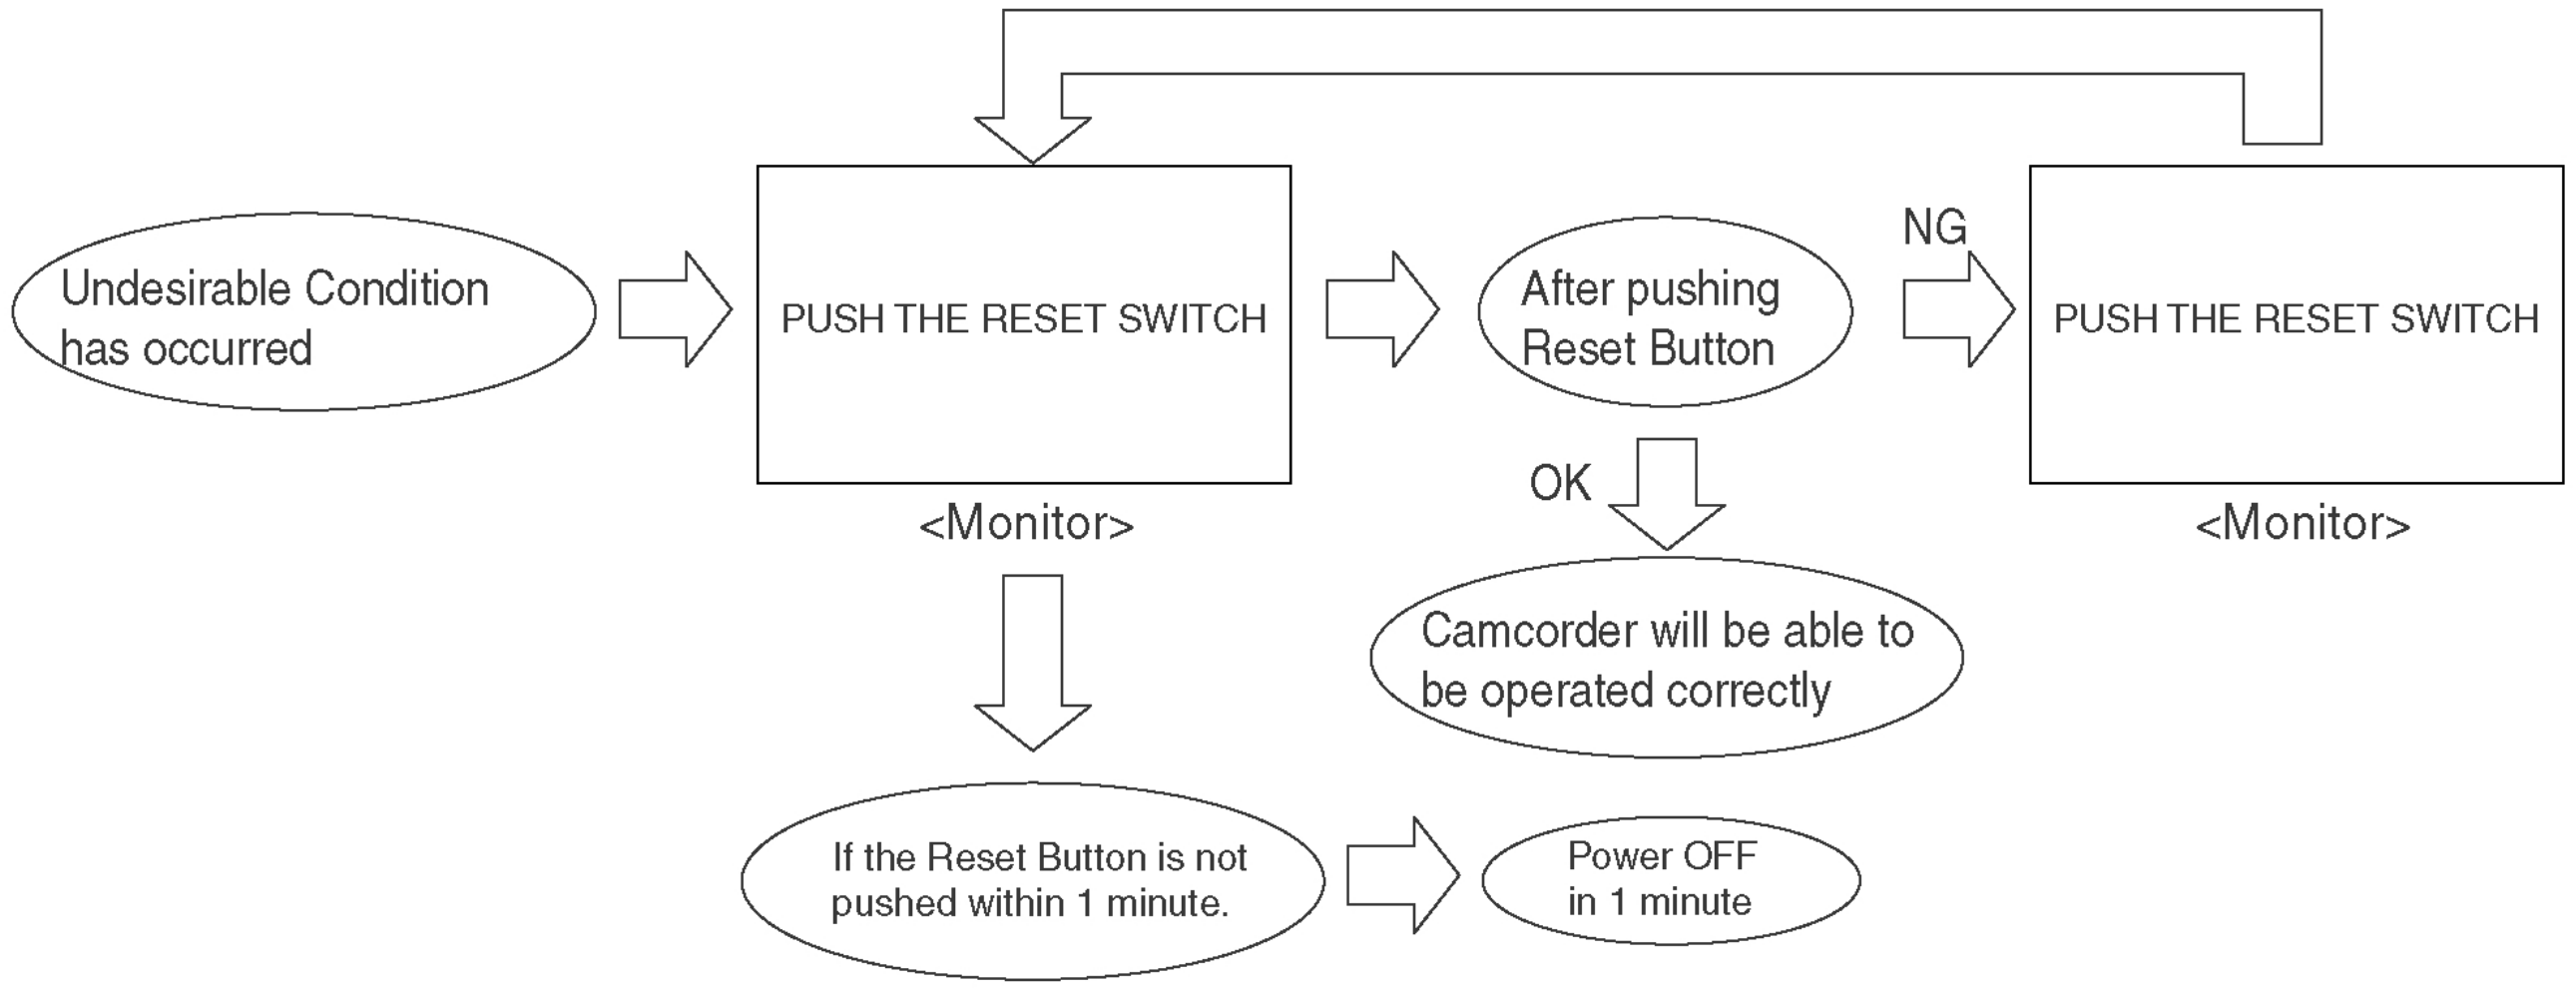
Undesirable Condition has occurred
PUSH THE RESET SWITCH
<Monitor>
After pushing Reset Button
NG
PUSH THE RESET SWITCH
<Monitor>
OK
Camcorder will be able to be operated correctly
If the Reset Button is not pushed within 1 minute.
Power OFF in 1 minute

Note:

When "PUSH THE RESET SWITCH" is displayed repeatedly, service is required. Check the Error Code which is listed in the Service Menu.

7.1.2.2. SERVICE MENU

When abnormal detection contents are confirmed, do the following operation. Automatic diagnosis cord will be displayed. (Service menu)

To enter the Service Menu

Push the [QUICK START], [JOYSTICK CONTROL LEFT] and [PHOTO SHOT] simultaneously for 3 seconds (with no SD Card inserted).

Note:

If a tape or SD Card is inserted, the above operation will not work.

This operation displays the following Service Menu items.

- *1 ... Cylinder elapsed time clear.

  After replacing the Cylinder Unit, clear the Cylinder elapsed time to 0.

  Set to Service Menu.

  Press the [JOYSTICK CONTROL UP/DOWN] to select item [8].

  Press the [JOYSTICK CONTROL RIGHT] to display [NO/YES] screen.

  Press the [JOYSTICK CONTROL UP/DOWN] to select [YES].

  Press the [JOYSTICK CONTROL CENTER] button.

- *2 ... Cylinder elapsed time

  This item displays the Cylinder elapsed time (in Base 16).

  Set to Service Menu.

  Press the [JOYSTICK CONTROL UP/DOWN] to select item [3].

  Press the [JOYSTICK CONTROL RIGHT] to display [OFF/ON] screen.

  Press the [JOYSTICK CONTROL UP/DOWN] to select [ON].

  Press the [JOYSTICK CONTROL CENTER] button.

Calculation method of the Cylinder elapsed time:

(For example) If "0001234F" is displayed, 0001234F (in Base 16) = 74574 (in Base 10)

$$74574 \times \underbrace{5.1\ (\text{seconds})}_{\textbf{fixed value}} = 380327.4\ (\text{seconds})$$

320672.5 / 3600 (seconds) = 105.6 (hours)

- *3 ... Mechanism lock code record

  The current lock code, the last lock code and the lock code before last are displayed in the Item [3] screen.
- *4 ... Lens motor lock code record

  The current lock code, the last lock code and the lock code before last are displayed in the Item [3] screen.

Cylinder elapsed time and lock code (Item [3] screen)

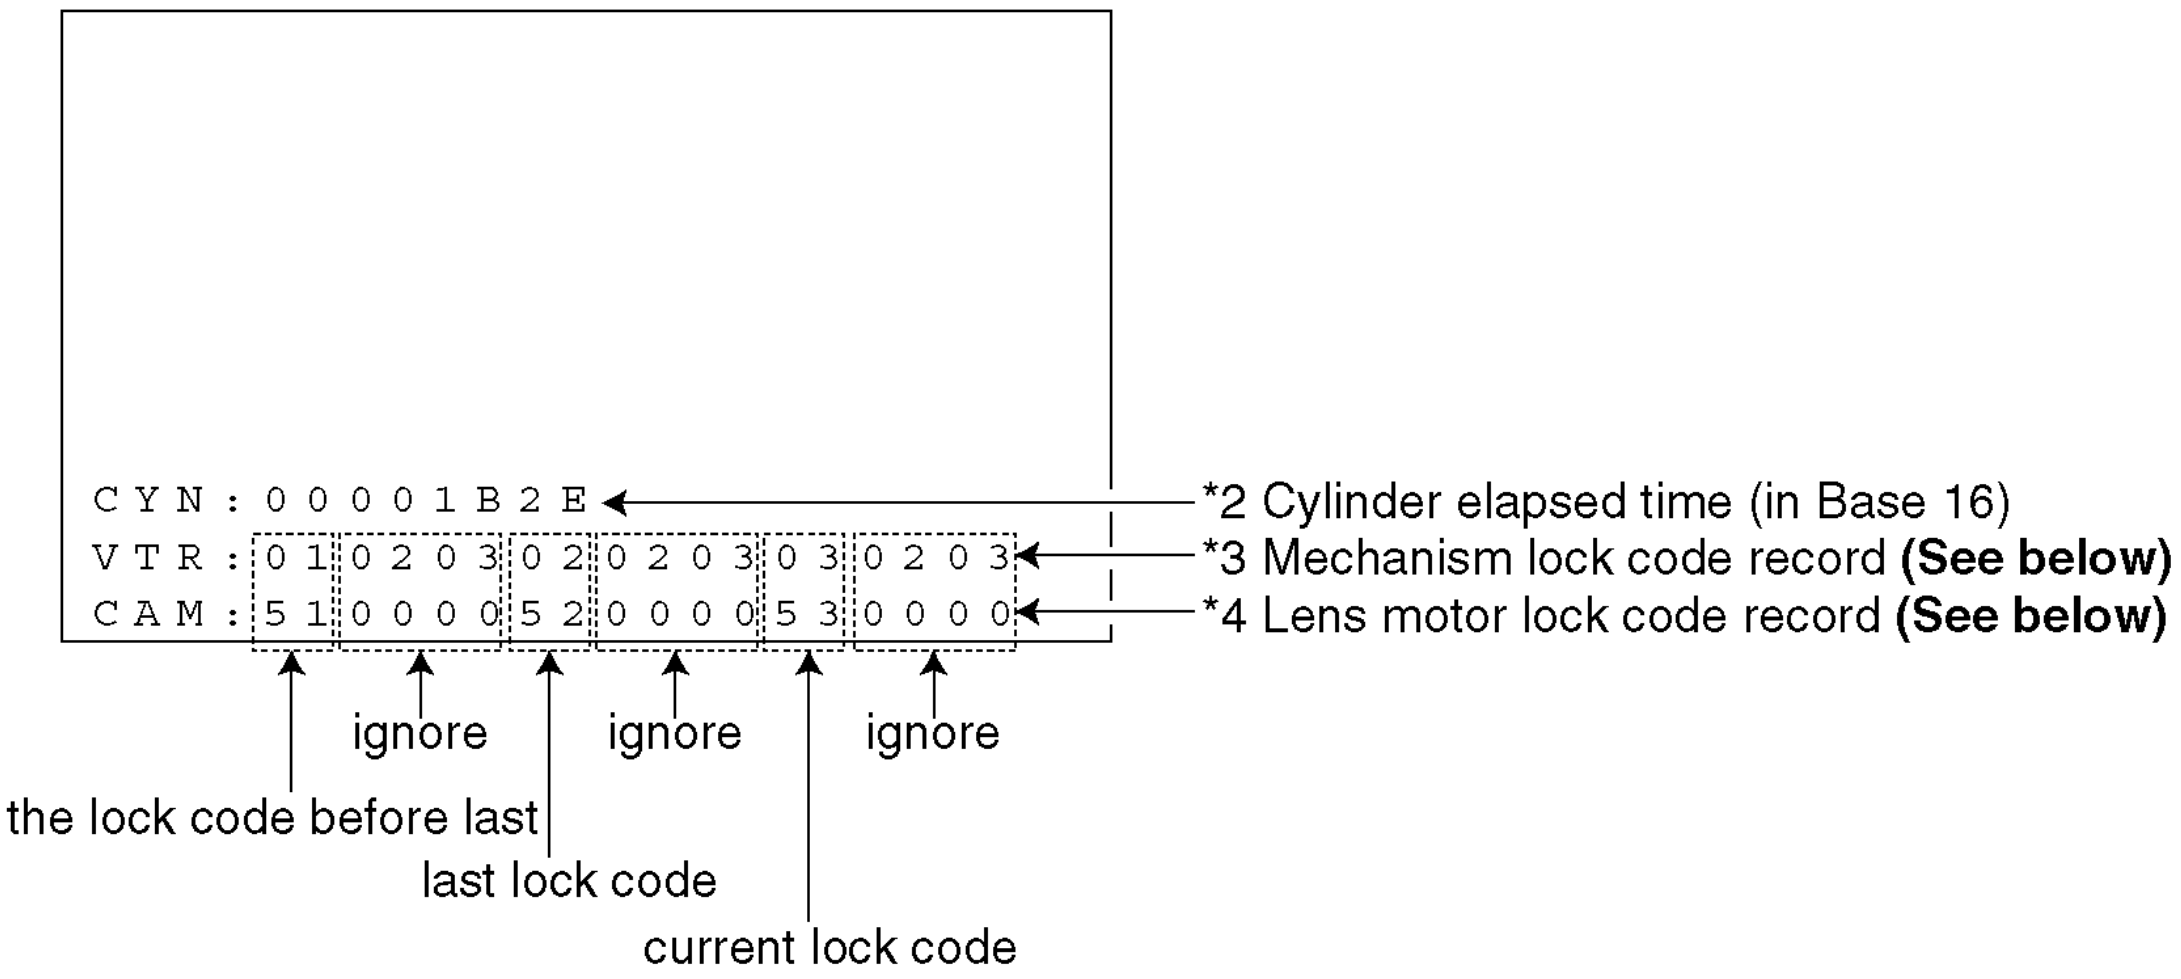
CYN: 00001B2E
VTR: 01 0203 02 0203 03 0203
CAM: 51 0000 52 0000 53 0000
*2 Cylinder elapsed time (in Base 16)
*3 Mechanism lock code record (See below)
*4 Lens motor lock code record (See below)
ignore
ignore
ignore
the lock code before last
last lock code
current lock code

Mechanism & Lens motor lock code

DISPLAY	Explanation of cause
01	T Reel Lock
02	S Reel Lock
03	Unloading Lock
04	Loading Lock
05	Cylinder Lock
51	Zoom Motor Lock
52	Focus Motor Lock

To exit the Service Menu

Unplug the AC Cord.

CLEAR METHOD

If a Card or Tape is inserted, remove before Service Mode operation.

To place the mode dial of this machine into PC connection mode, push the [QUICK START], [JOYSTICK CONTROL LEFT] and [RECORDING START/STOP] simultaneously for 3 seconds.

Note:

Only perform items 3 and 8 of items 1~8 in the Service Menu.

7.1.3. REMOVAL/INSTALLATION OF F.P.C. FROM NON ZIF (Zero Insertion Force) CONNECTOR

Removal/Installation of F.P.C. from the Non ZIF (Zero Insertion Force) connector:

1. The Non ZIF connectors and the ZIF connectors are used on the unit. And there are 2 types (Type A, Type B) of Non ZIF connectors.
2. To remove the F.P.C. from the Non ZIF connector, use the Plier for Non ZIF Connector (LSVQ0028) to pull out the F.P.C. as shown. The same Plier for Non ZIF Connector (LSVQ0028) should also be used to install the F.P.C. to the Non ZIF Connector.

Type A

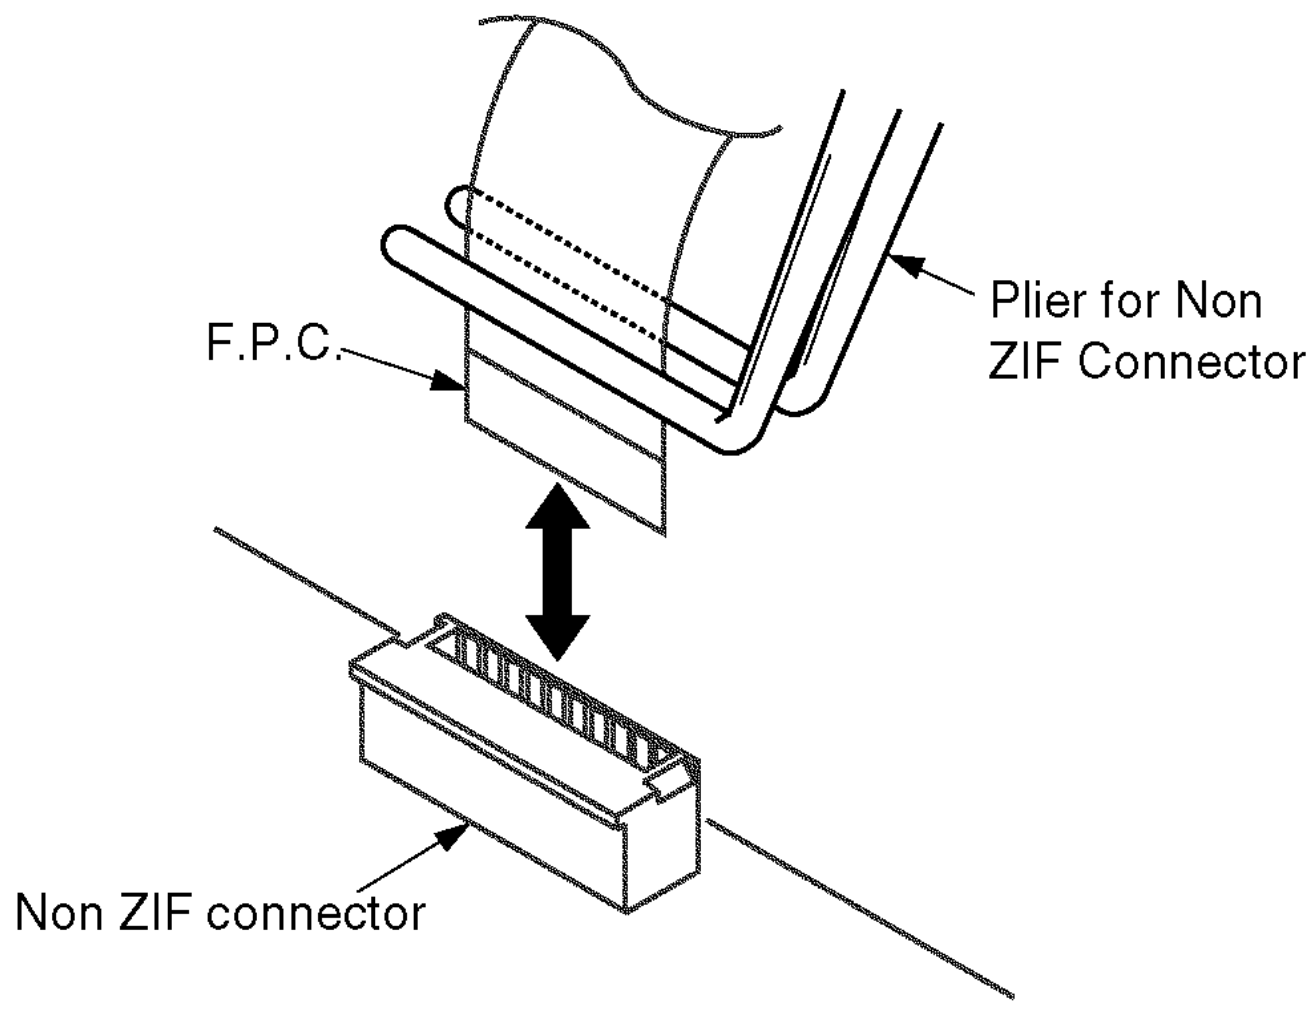
F.P.C.
Plier for Non ZIF Connector
Non ZIF connector

Type B

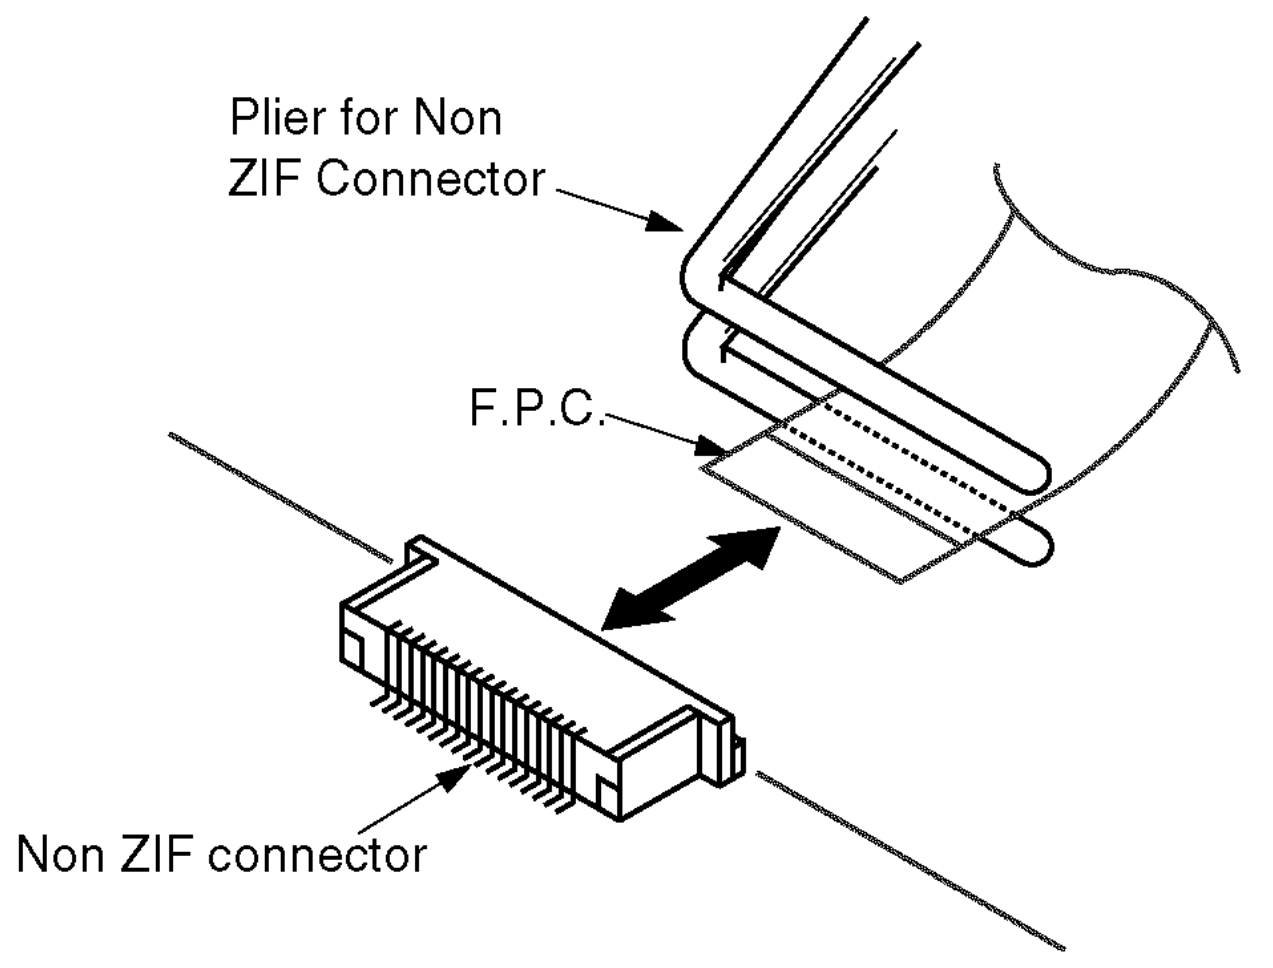
Plier for Non ZIF Connector
F.P.C.
Non ZIF connector

Fig. 4-1

3. Connect the F.P.C.s to the Non ZIF connectors, verifying the direction of F.P.C as shown.

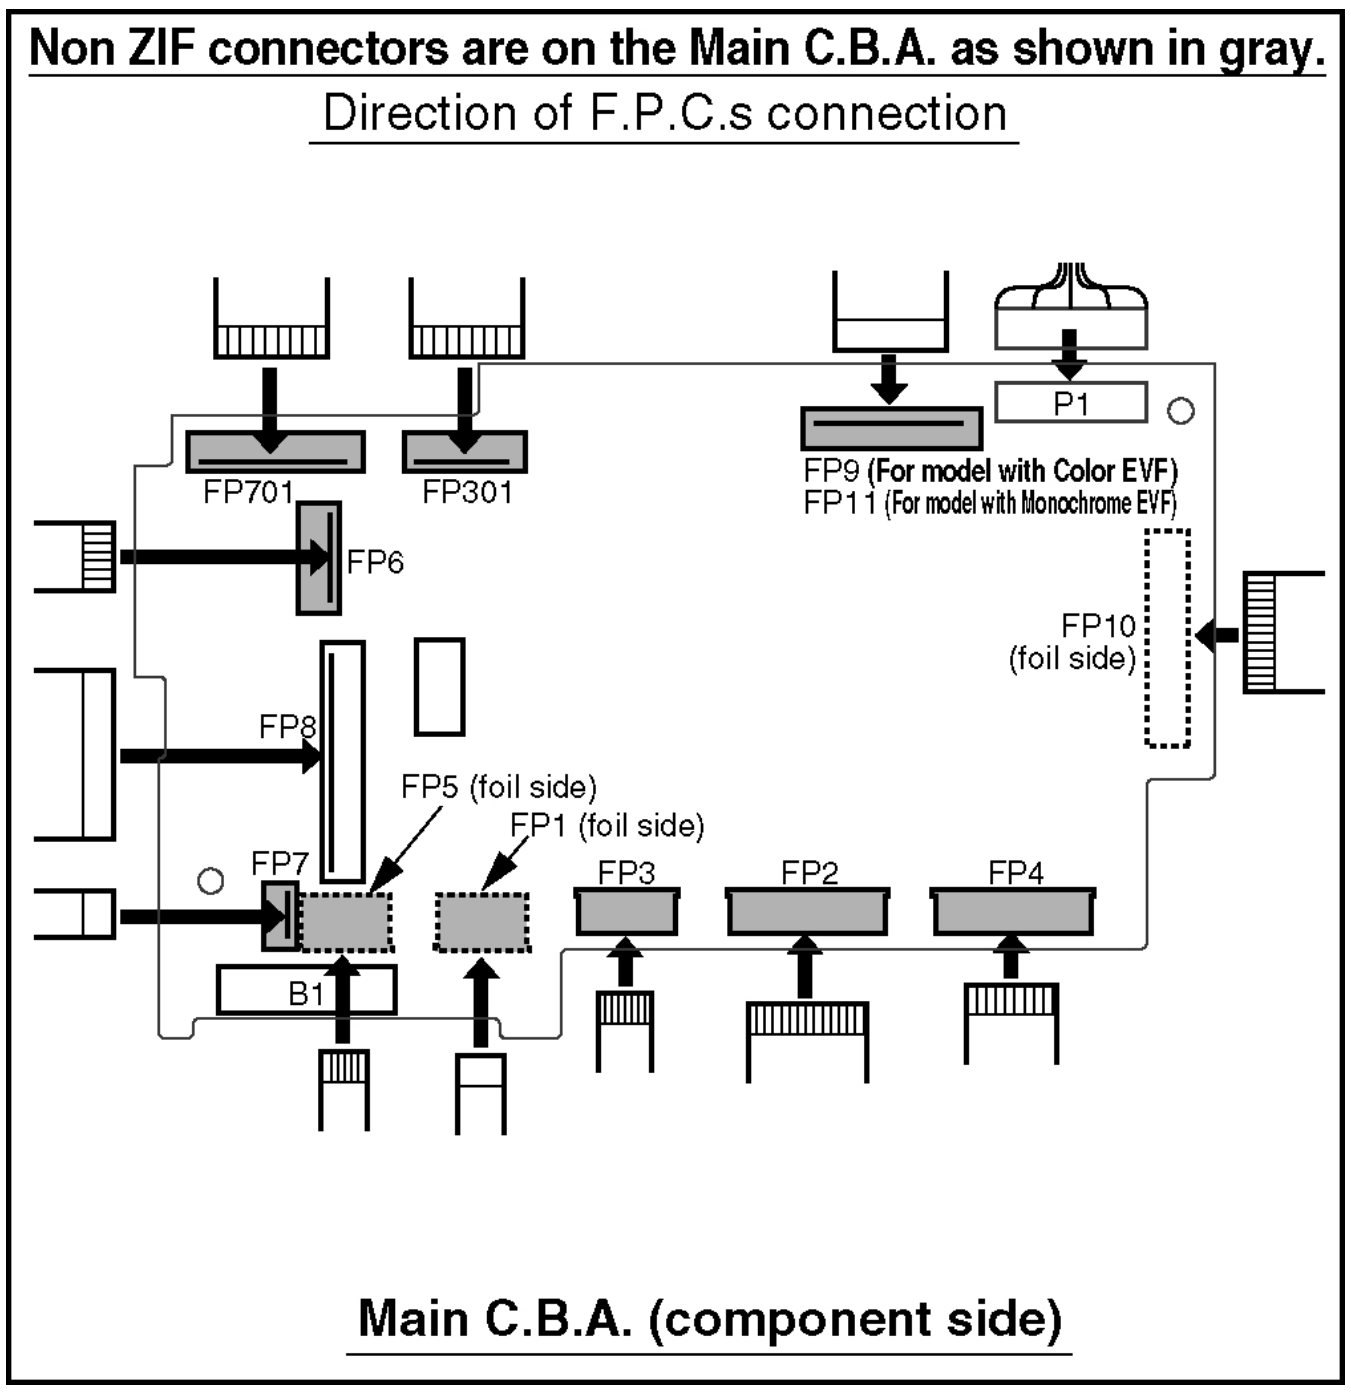
Non ZIF connectors are on the Main C.B.A. as shown in gray.
Direction of F.P.C.s connection
P1
FP701
FP301
FP9 (For model with Color EVF)
FP11 (For model with Monochrome EVF)
FP6
FP10 (foil side)
FP8
FP5 (foil side)
FP1 (foil side)
FP7
FP3
FP2
FP4
B1
Main C.B.A. (component side)

Fig. 4-2

7.1.4. METHOD FOR LOADING/UNLOADING OF MECHANISM

CAUTION:

If loading does not start after DC Power Supply is applied, DO NOT continue to apply DC Power.

Apply +3 VDC Power Supply to the Loading Motor terminals.

Loading:

DC (-) to Portion "a," DC (+) to Portion "b"

Unloading:

DC (+) to Portion "a," DC (-) to Portion "b"

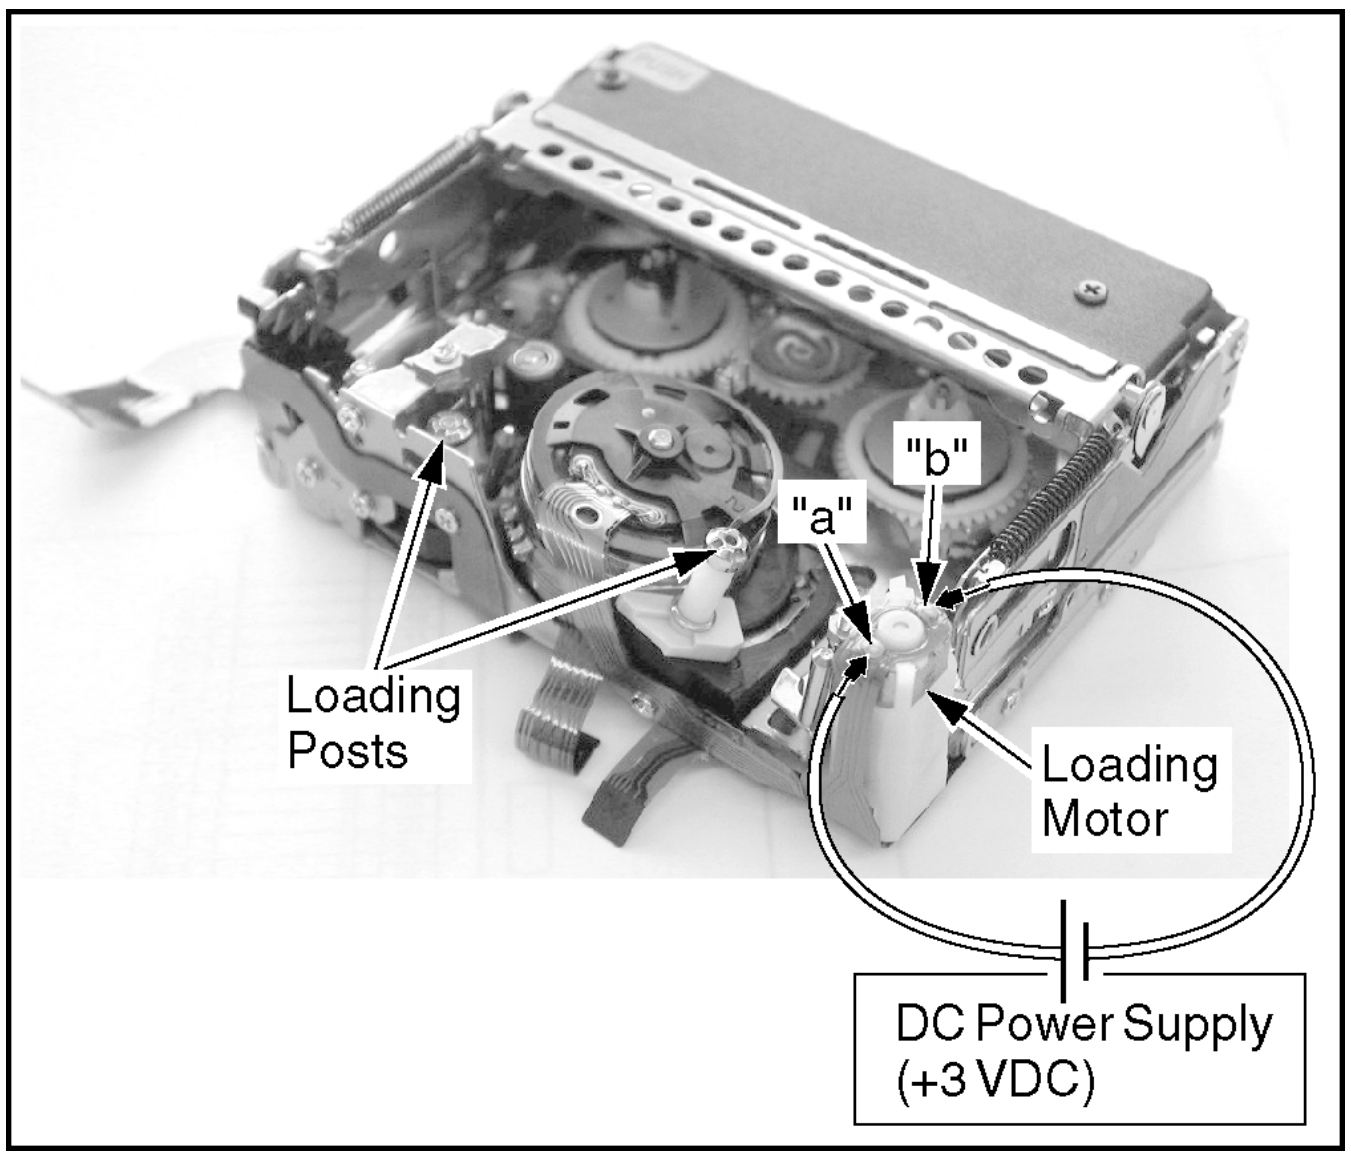
"a"
"b"
Loading Posts
Loading Motor
DC Power Supply (+3 VDC)

Fig. 5

7.1.5. EEPROM DATA

CAUTION:

Be sure to save the EEPROM data using PC-EVR Adjustment Program before service and adjustment in order to make sure to avoid an accidental data loss, etc. using PC-EVR Adjustment Program by first.

EEPROM IC

C.B.A.	EEPROM IC Ref. No.
Main C.B.A.	IC6002

7.1.6. SIGNAL DESCRIPTION ON MEASURING BOARD FOR ELECTRICAL ADJUSTMENT (VFK1308E)

A signal check can be performed using the Measuring Board.

Signal Name (on board)	Description	Waveforms
E2DATA	Not used	---------------
CAM_TEST	Not used	---------------
E2CLK	Not used	---------------
EVR3V	Not used	---------------
VD	Not used	---------------
SBO	To monitor LCD red signal at Pin 9 of IC8001 on LCD C.B.A. This test point is used for "LCD Sub Bright adjustment."	2.75 V (1st step - 1st step) 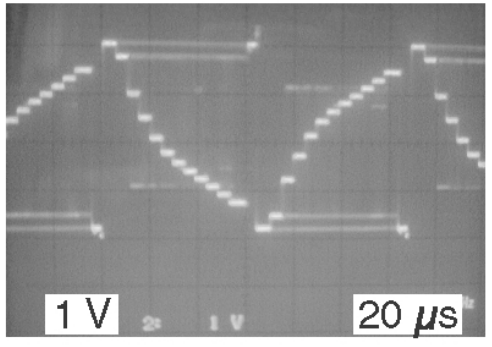 Camera Mode (Built in 10 step)
SBI	To monitor LCD blue signal at Pin 5 of IC8001 on LCD C.B.A. This test point is used for "LCD Sub Bright adjustment."	2.85 V (1st step - 1st step) 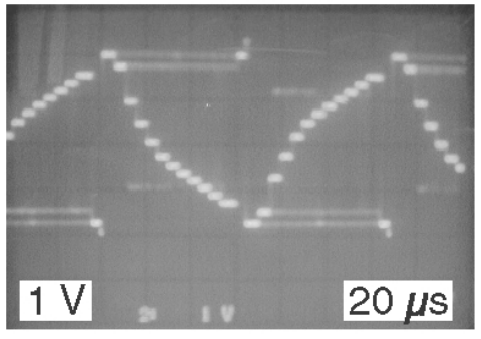 Camera Mode (Built in 10 step)
E2CS	Not used	---------------
MREF/VREF-T	Not used	---------------
AFST	Not used	---------------
UARTI	To monitor RS232C received data	---------------
UARTO	To monitor RS-232C transmitted data	---------------
VTR_RESET	Power microcontroller reset: low	---------------
BST_TEST	Not used	---------------
TCK	Not used	---------------
TMS	Not used	---------------
TDO	Not used	---------------
TDI	Not used	---------------
MIC_CLK	MIC serial clock output from camcorder to PC	---------------
MIC_DT	MIC serial data output from camcorder to PC	---------------
MON_PLL	Not used	---------------
MON_VCOM	To monitor LCD VCOM signal at Pin 10 of IC8001 on LCD C.B.A. This test point is used for "EVF Horizontal free running adjustment" and "LCD VCOM level adjustment."	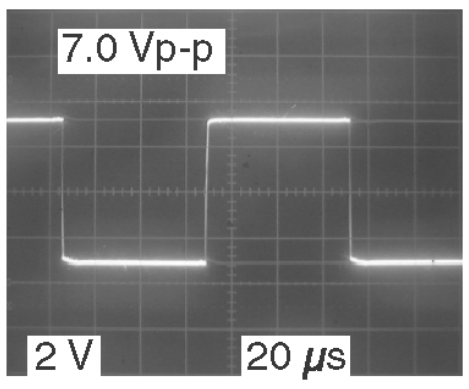 Camera Mode (Built in 10 step)
F_VSS	Not used	---------------
F_SDA	Not used	---------------
F_SCLK	Not used	---------------
F_MODE	Not used	---------------
F_VEE	Not used	---------------

Fig. 6-1

Signal Name (on board)	Description	Waveforms
SCK	Not used	---------------
SIO	Not used	---------------
MB	Not used	---------------
D_GND	Not used	---------------
VCC41*	To monitor EVF red signal at Pin 22 of IC8001 on Main C.B.A. This test point is used for "EVF Sub Bright adjustment."	2.15 V (1st step - 1st step) 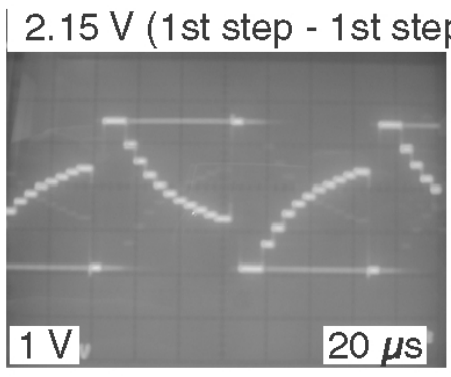 Camera Mode (Built in 10 step)
VCC9*	**(For model with Color EVF)** To monitor EVF green signal at Pin 20 of IC8001 on Main C.B.A. **(For model with Monochrome EVF)** To monitor EVF luminance at Pin 20 of IC8001 on the Main C.B.A. This test point is used for "EVF Sub Bright adjustment" and "EVF Contrast/Bright adjustment."	**(Color EVF)** 2.2 V (1st step - 1st step) 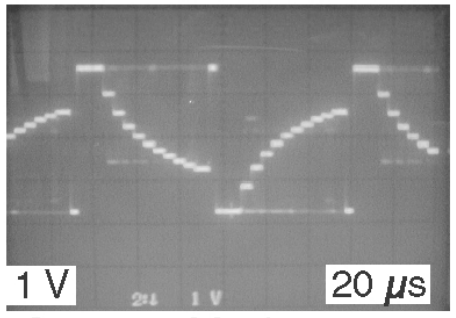 Camera Mode (Built in 10 step) **(Monochrome EVF)** 2.9 V (1st step - 1st step) 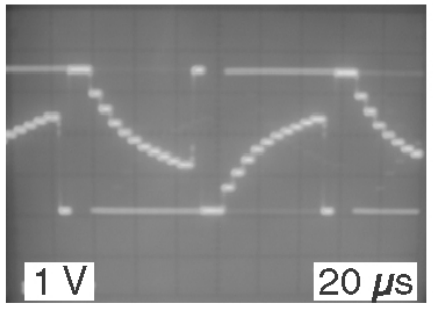 Camera Mode (Built in 10 step)
F_VCC*	To monitor EVF blue signal at Pin 18 of IC8001 on Main C.B.A. This test point is used for "EVF Sub Bright adjustment."	2.3 V (1st step - 1st step) 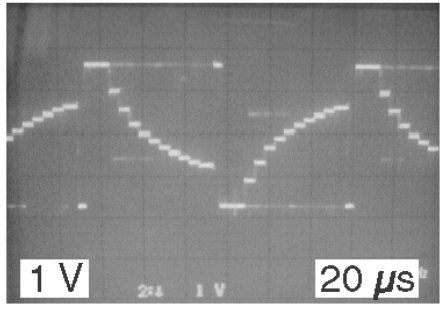 Camera Mode (Built in 10 step)
F_OE*	To monitor EVF VCOM signal at Pin 16 of IC8001 on Main C.B.A. This test point is used for "EVF VCOM level adjustment."	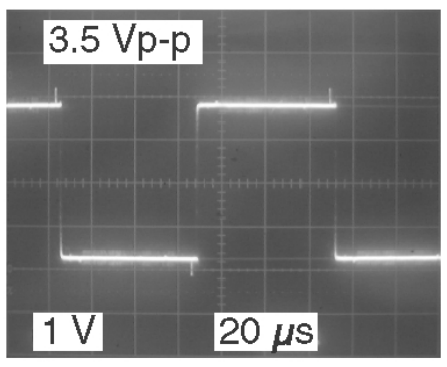 Camera Mode (Color Bar Chart)
F_BUSY	Not used	---------------
MON_CR	Not used	---------------
MON_CB	Not used	---------------
MON_B	Not used	---------------
MON_G	To monitor LCD green signal at Pin 7 of IC8001 on LCD C.B.A. This test point is used for "LCD Contrast/Bright adjustment" and "LCD Sub Bright adjustment."	2.8 V (1st step - 1st step) 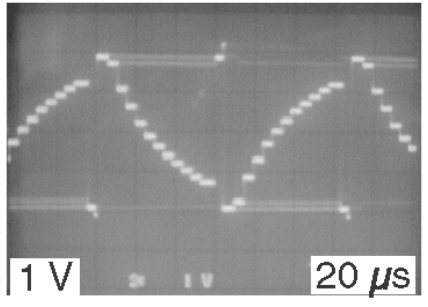 Camera Mode (Built in 10 step)
HID	To monitor HID signal at Pin 44 of IC3201 on Main C.B.A. This test point is used for "VCR PG shifter adjustment."	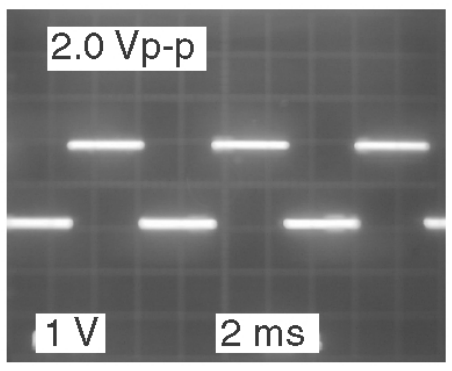 Rec/PB Mode
ENVELOPE	To monitor Envelope signal at Pin 41 of IC5001 on Main C.B.A.	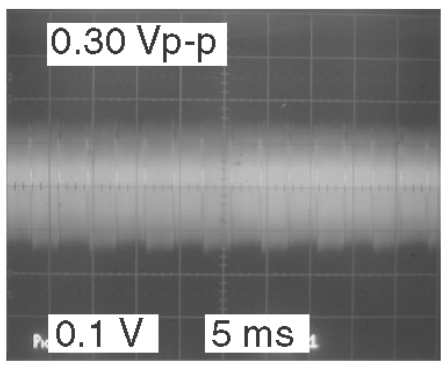 PB Mode

***Note:**
To check for "VCC41," "VCC9," "F_VCC" or "F_OE," rotate the LCD Monitor 180 degrees so it faces the same direction as the lens. (EVF display is ON.)

Fig. 6-2

Signal Name (on board)	Description	Waveforms
RF GND	Not used	---------------
RECI	Not used	---------------
SPA	Not used	---------------
ATFI	To monitor ATF signal at Pin 23 of IC3201 on Main C.B.A.	---------------
VCO	Not used	---------------
TP1	Not used	---------------
VREF_+/-	Not used	---------------
MA	Not used	---------------
CPOB	Not used	---------------
FNO	Not used	---------------
VREF_H/L	Not used	---------------
CAM-A_GND	Grounding terminal	---------------
CDS	Not used	---------------
CDS/AGC	Not used	---------------
ADIN	Not used	---------------

Fig. 6-3

7.1.7. HOW TO USE THE DVC HEAD CLEANING TAPE / VFK1451

Please use the cleaning tape as described below.

Note: This cleaning tape has a total playback time of 2 minutes 30 seconds. it can be used 30 times.

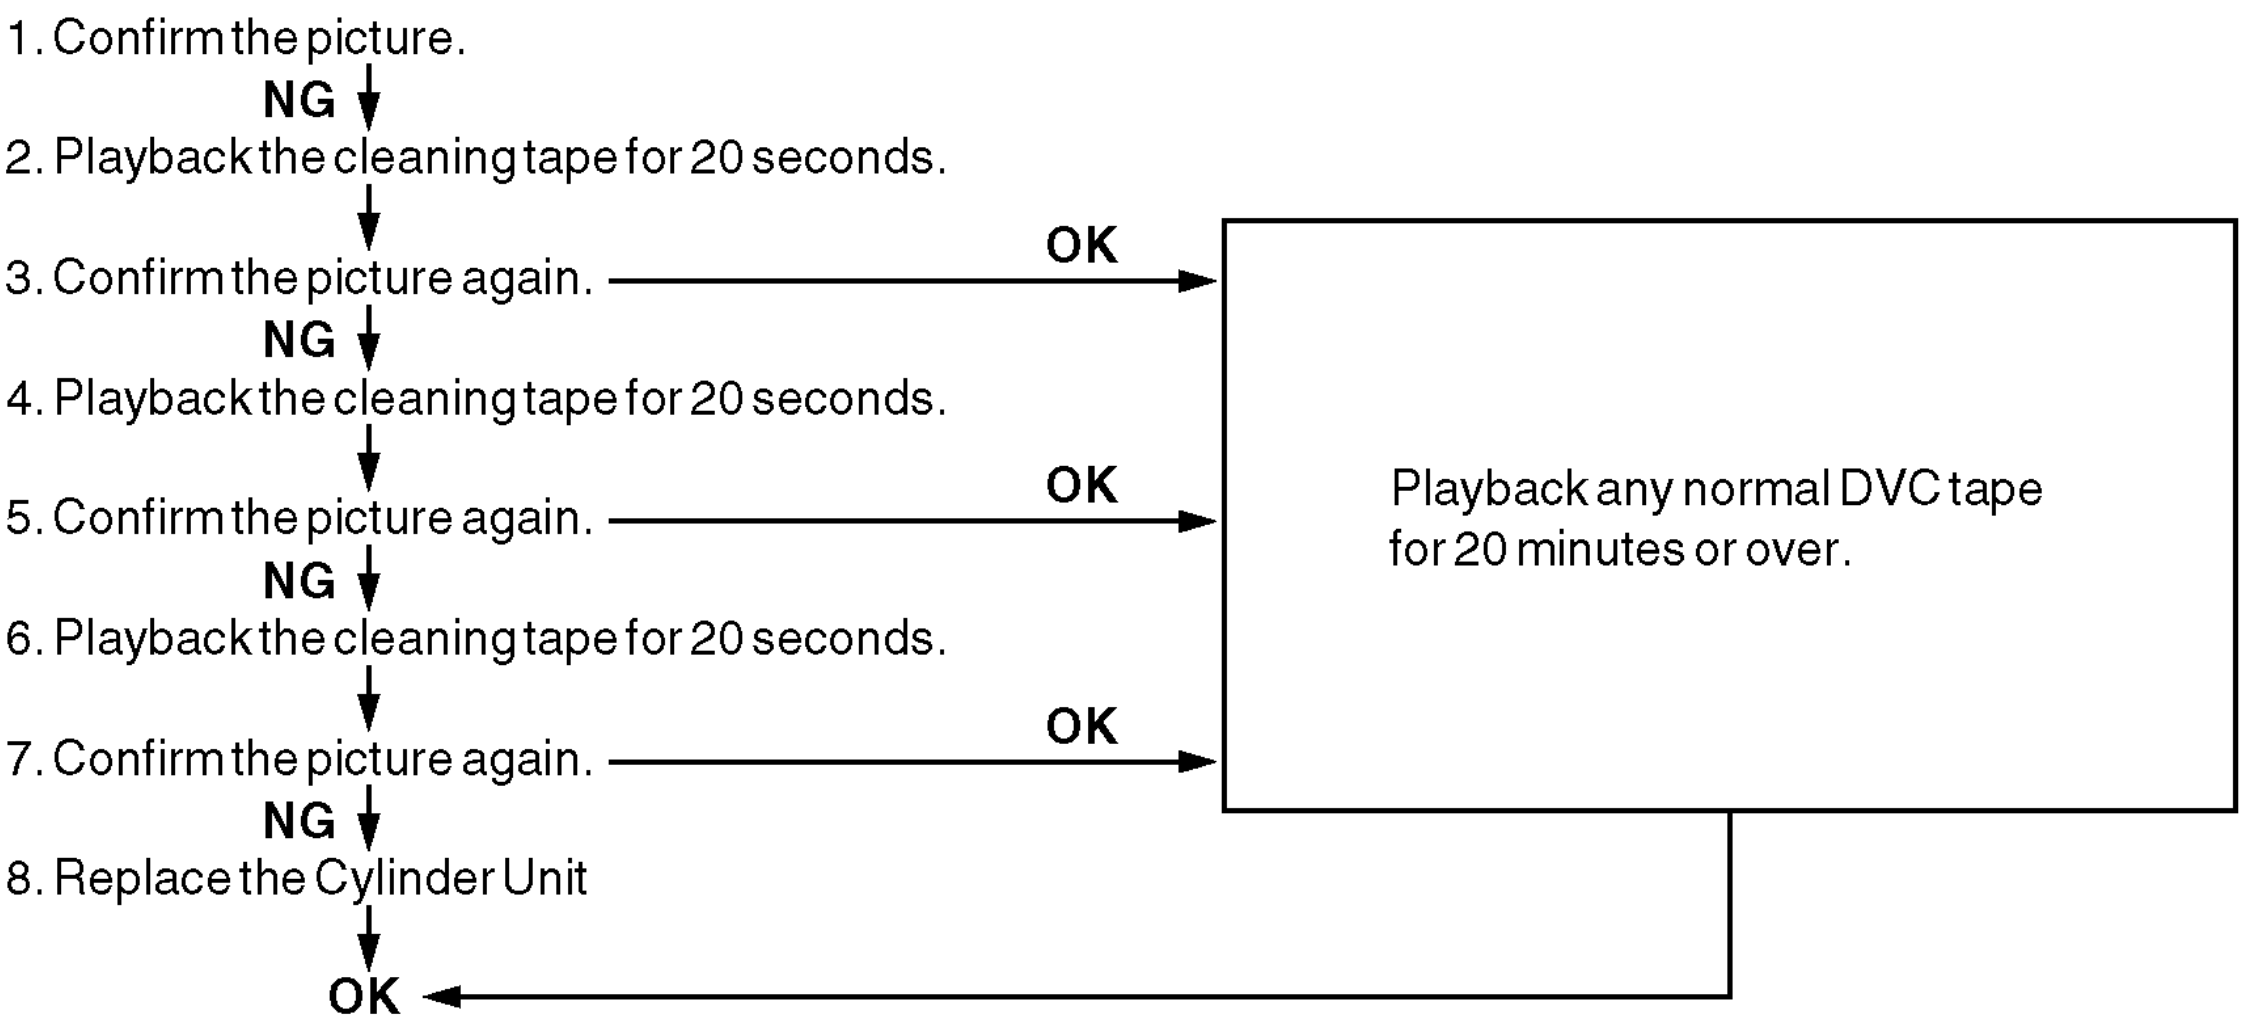

1. Confirm the picture.
2. Playback the cleaning tape for 20 seconds.
3. Confirm the picture again.
4. Playback the cleaning tape for 20 seconds.
5. Confirm the picture again.
6. Playback the cleaning tape for 20 seconds.
7. Confirm the picture again.
8. Replace the Cylinder Unit

The picture will look like this in case of clogged video head.

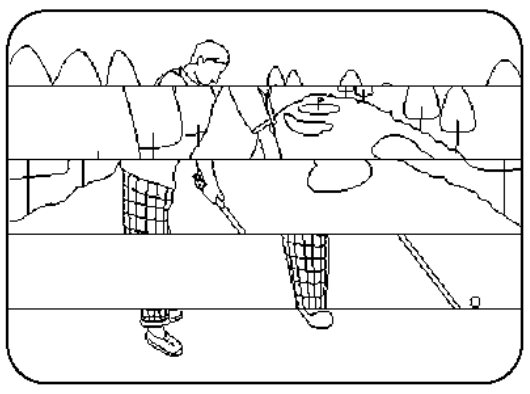

Fig. 7

7.1.8. SPECIAL NOTE

All integrated circuits and many other semiconductor devices are electrostatically sensitive and therefore require the special handlings techniques described under the "ELECTROSTATICALLY SENSITIVE (ES) DEVICES" section of this service manual.

8 DISASSEMBLY/ASSEMBLY PROCEDURES

8.1. CABINET SECTION

8.1.1. DISASSEMBLY FLOWCHART

This flow chart indicates the disassembly steps of the cabinet parts and the P.C.Boards in order to gain access to item (s) to be serviced. When reassembling, perform the step (s) in the reverse order. Bend, route and dress the wires as they were originally.

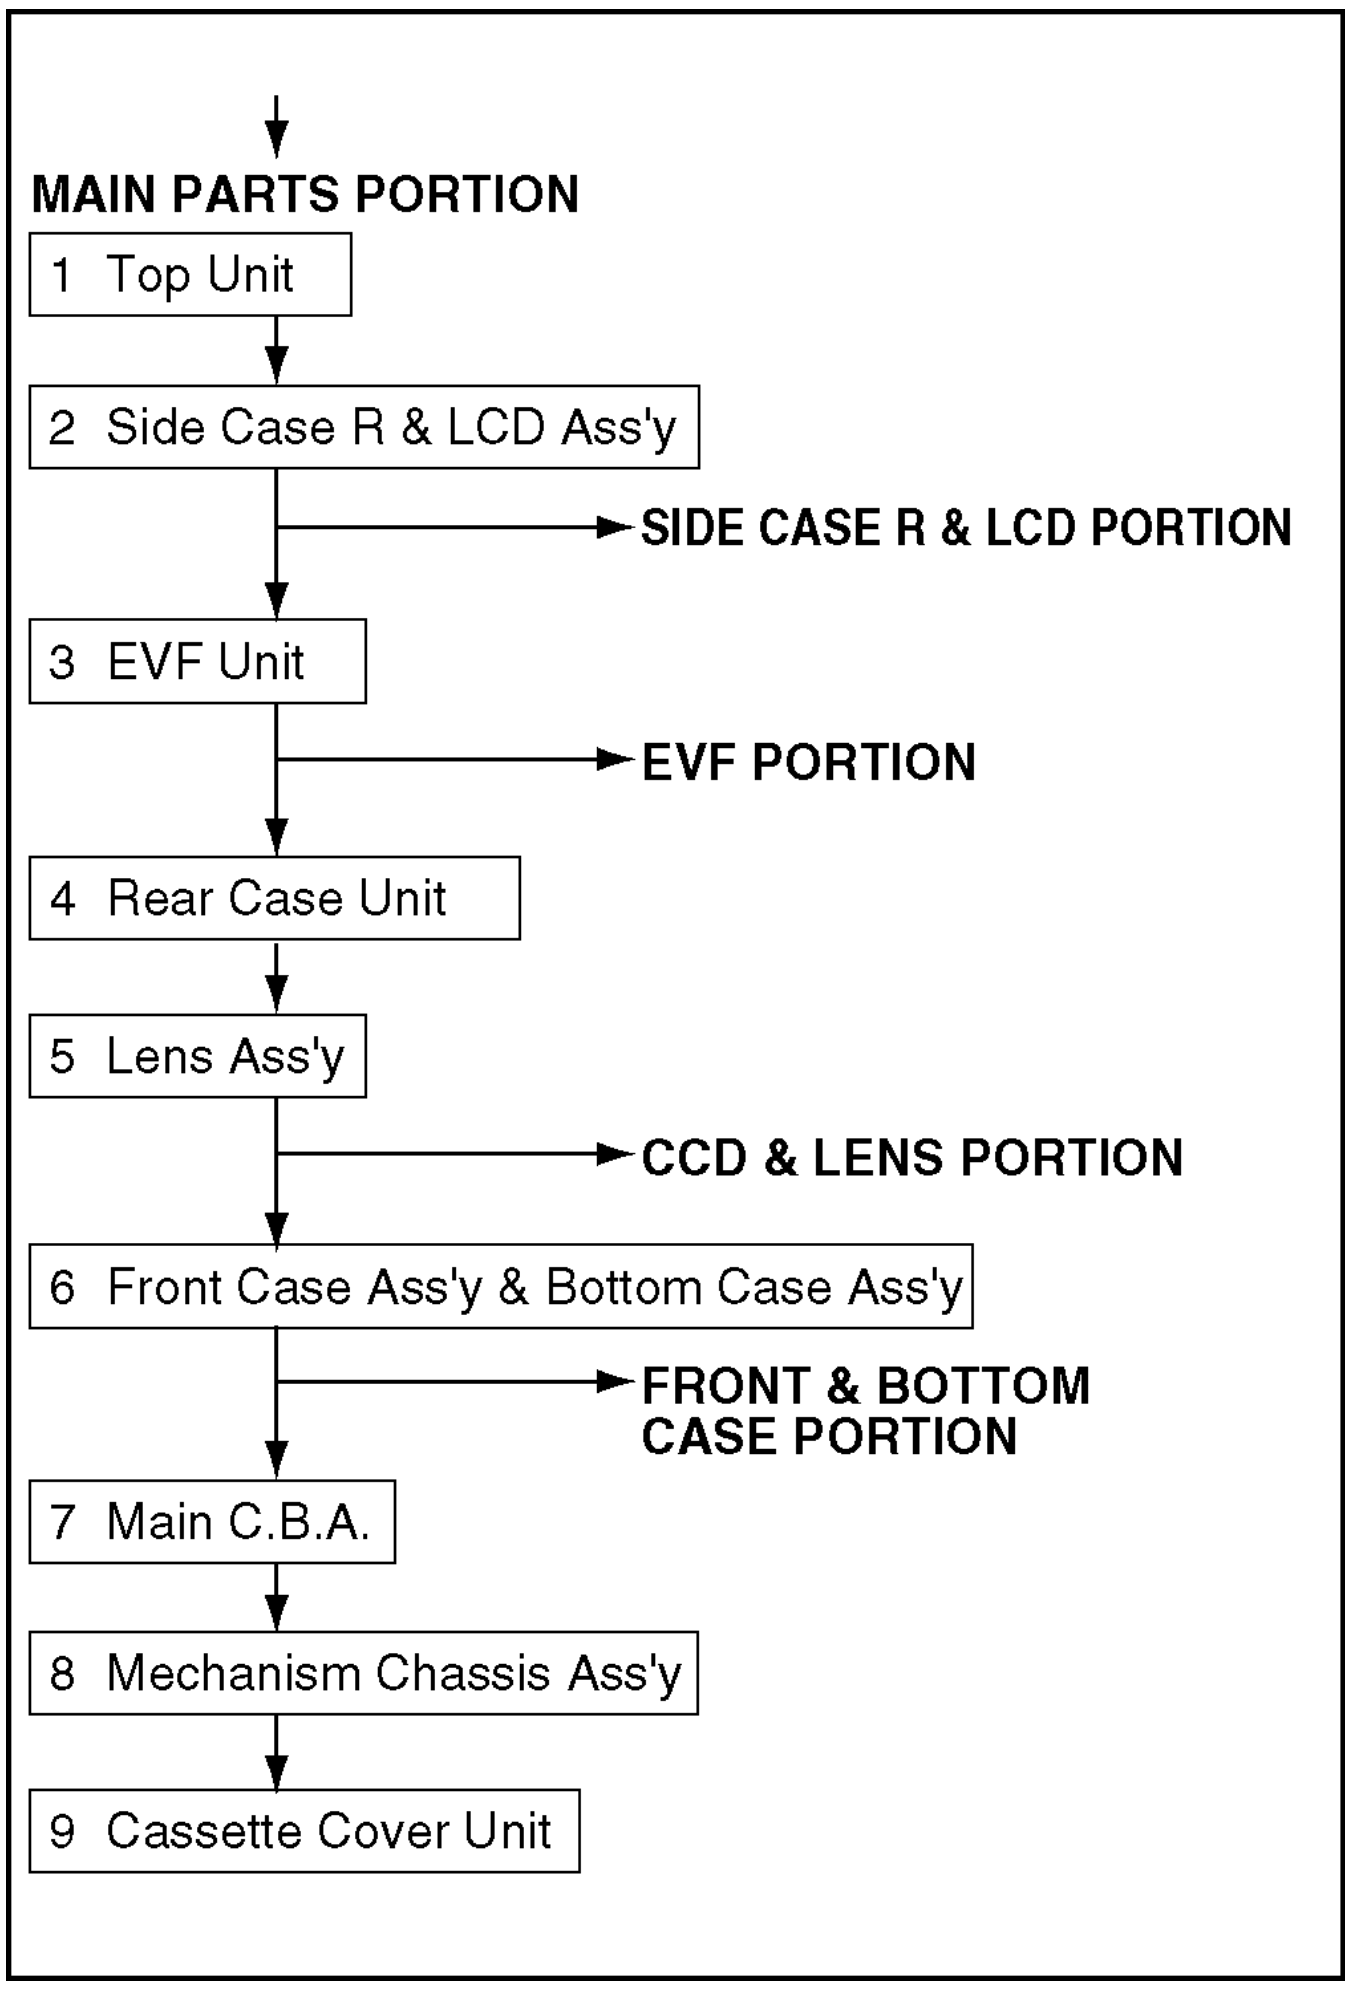
MAIN PARTS PORTION
1 Top Unit
2 Side Case R & LCD Ass'y
SIDE CASE R & LCD PORTION
3 EVF Unit
EVF PORTION
4 Rear Case Unit
5 Lens Ass'y
CCD & LENS PORTION
6 Front Case Ass'y & Bottom Case Ass'y
FRONT & BOTTOM CASE PORTION
7 Main C.B.A.
8 Mechanism Chassis Ass'y
9 Cassette Cover Unit

Note :

1. When removing the cabinet, work with care so as not to break the Locking Tabs.
2. Place a cloth or some other soft material under the P.C. Boards or Unit to prevent damage.
3. When reinstalling, ensure that the connectors are connected and electrical components have not been damaged.
4. Do not supply power to the unit during disassembly and reassembly.

8.1.2. Disassembly Method

MAIN PARTS PORTION

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	(52)	Top Unit	❶	4(433), (541)	1
2	-	Side Case R & LCD Ass'y	❶	2(450), 4(533), FP7, FP8	2
3	⑫	EVF Unit	❶	(533), FP11 or FP9 (For model with Color EVF)	3
4	⑪	Rear Case Unit	❶	2(433), (450), (533), (533) (For model with S-VIDEO) P1, (L-1)	4
5	-	Lens Ass'y	❶	2(533), FP301, FP701	5
6	-	Front Case Ass'y & Bottom Case Ass'y	❶	3(433), FP6, B1	6
7	(E10)	Main C.B.A.	❶	2(450), FP1,FP2, FP3, FP4, FP5, FP10	7
8	-	Mechanism Chassis Ass'y	❶	3(413)	8
9	②	Cassette Cover Unit	❶	-----	-

↑ A ↑ B ↑ C ↑ D ↑ E ↑ F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
B: Ref No.
C: Part to be removed or installed.
D: Section No.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or unsoldered.
3(404) = 3 Screws (404), 2(L-1) = 2 Looking Tabs (L-1)
F: Refer to "Notes in chart."

❶ MAIN PARTS SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⁞⁞ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

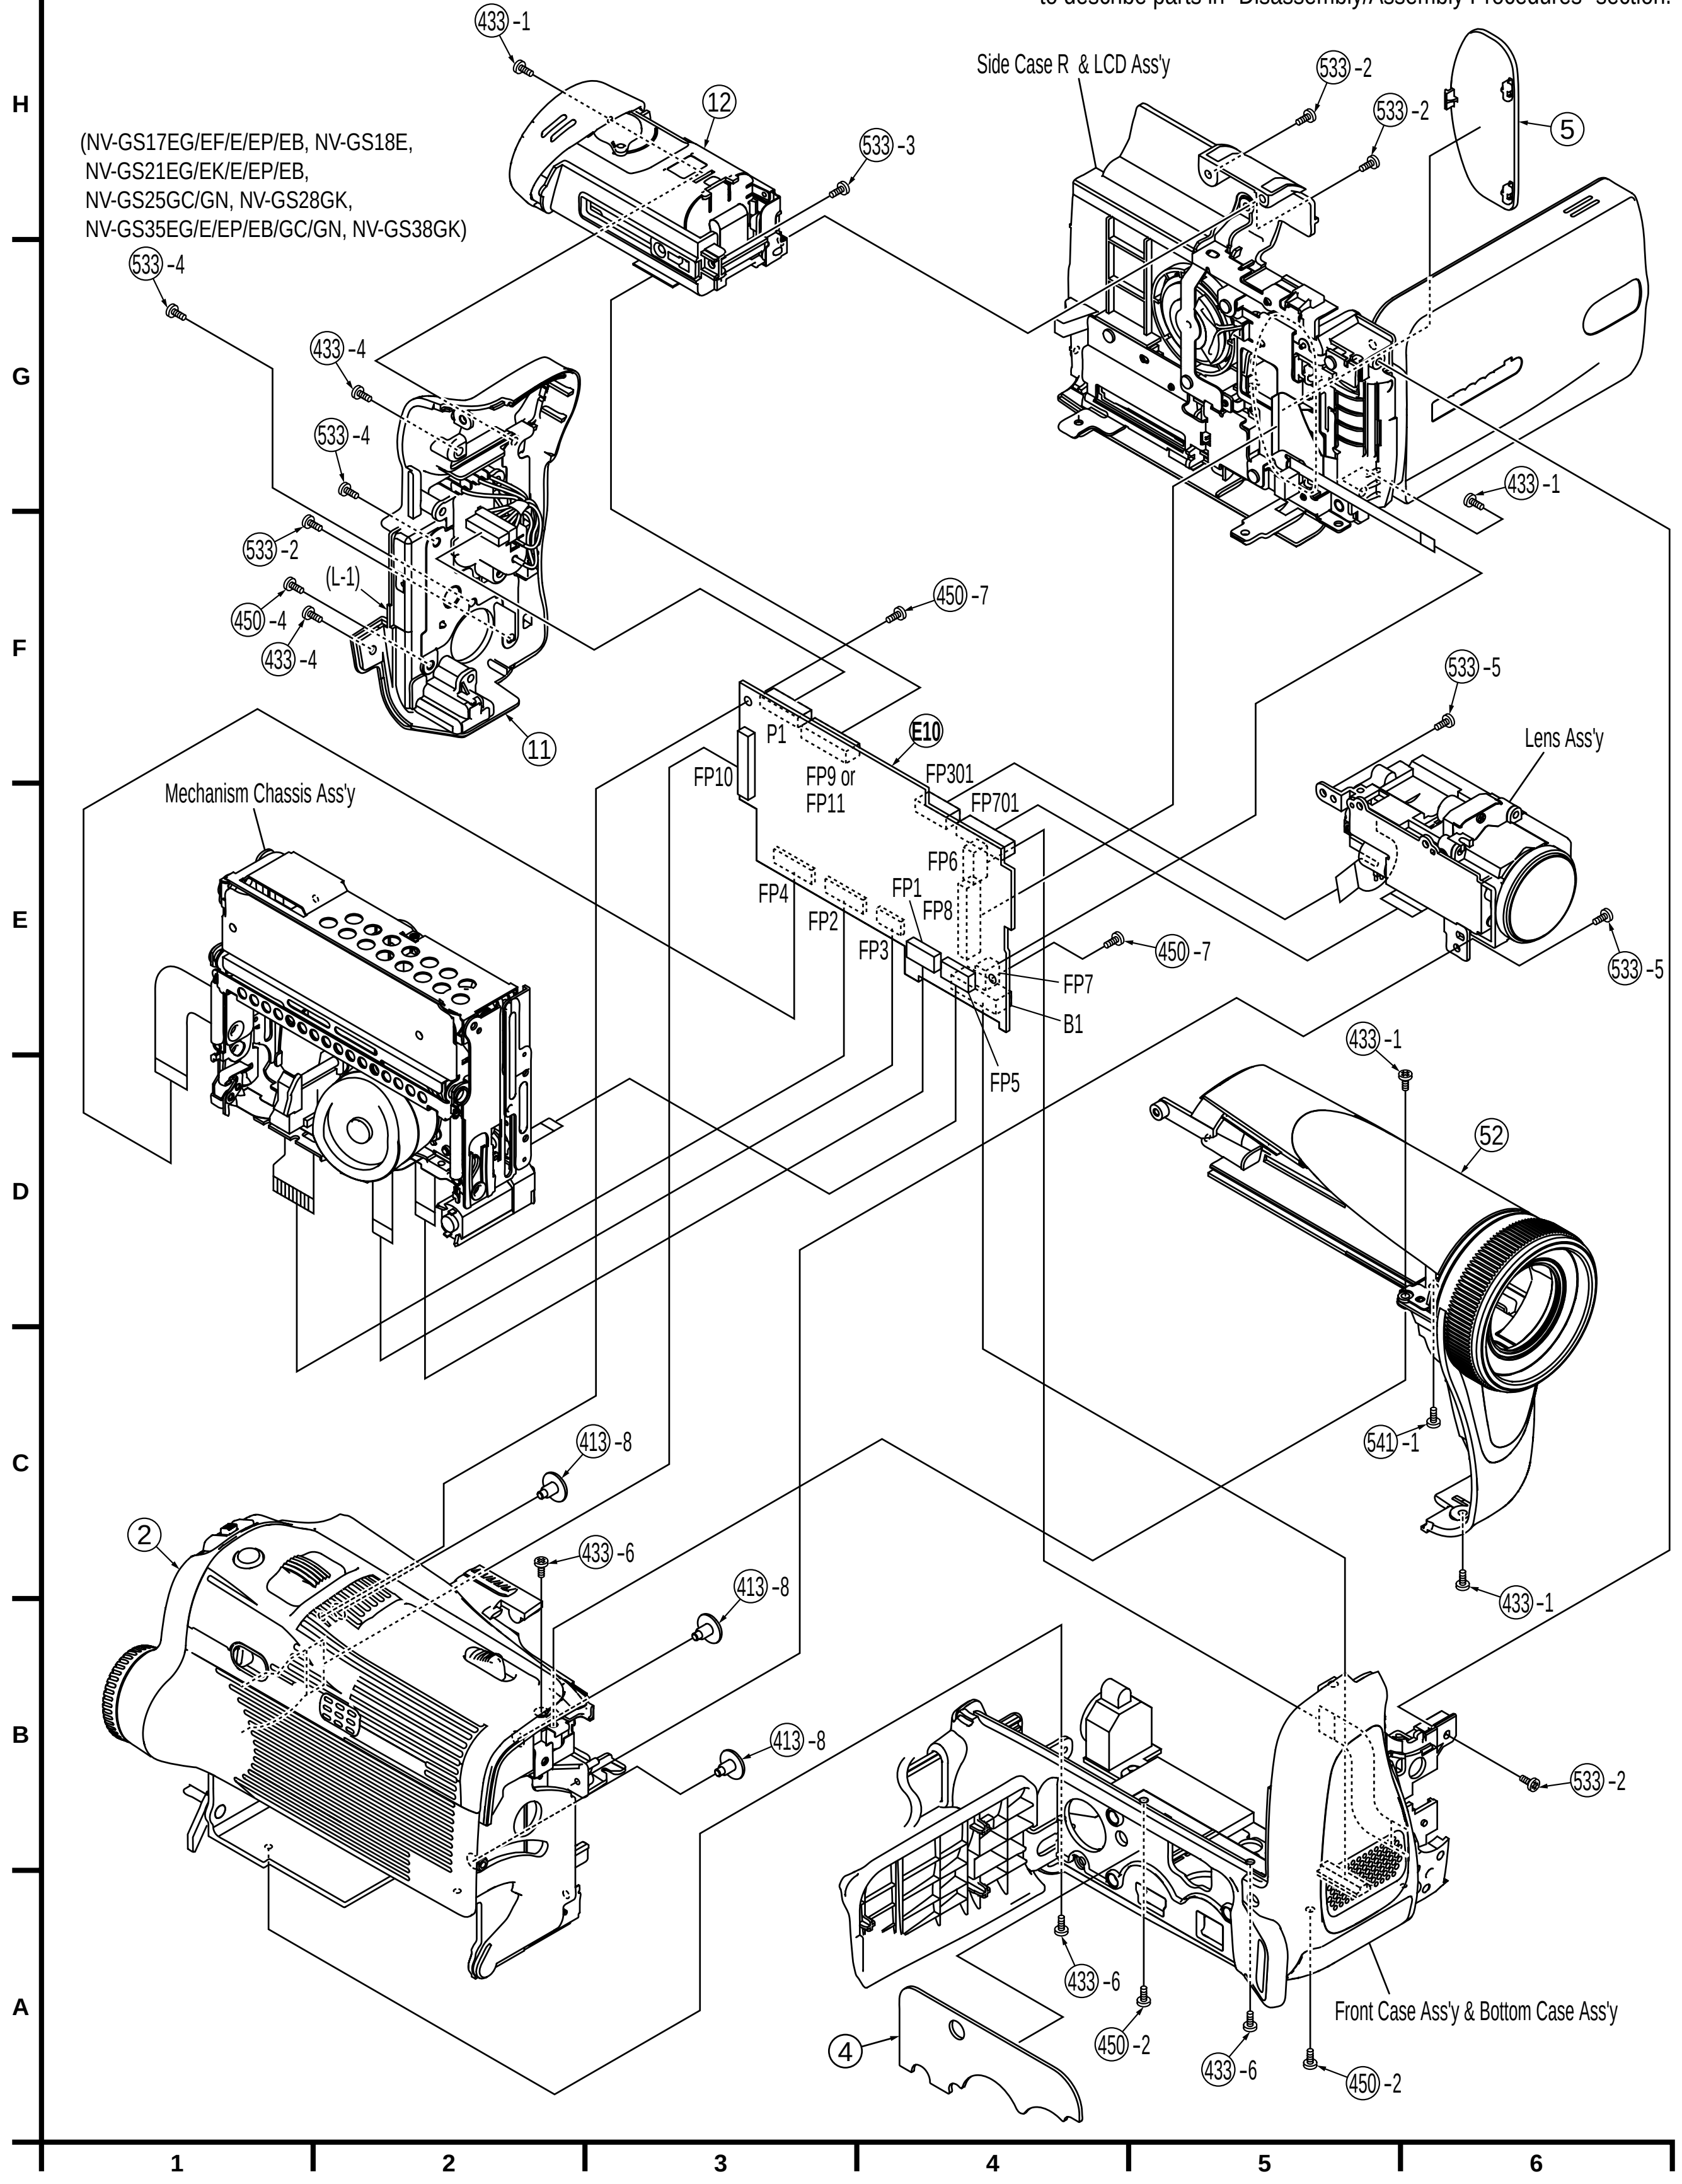
433 -1
12
533 -3
Side Case R & LCD Ass'y
533 -2
533 -2
5
H
(NV-GS17EG/EF/E/EP/EB, NV-GS18E,
NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK)
533 -4
433 -4
G
533 -4
433 -1
533 -2
(L-1)
450 -4
433 -4
F
450 -7
11
533 -5
Lens Ass'y
P1
E10
FP10
FP9 or
FP11
FP301
FP701
Mechanism Chassis Ass'y
FP6
FP4
FP1
FP8
FP2
E
FP3
450 -7
533 -5
FP7
B1
433 -1
FP5
52
D
C
413 -8
541 -1
2
433 -6
413 -8
433 -1
B
413 -8
533 -2
433 -6
Front Case Ass'y & Bottom Case Ass'y
A
450 -2
4
433 -6
450 -2
1
2
3
4
5
6

FRONT & BOTTOM CASE PORTION

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	-	Bottom Case Ass'y	❷	(433), (450)	-
2	(E30) -	Jack C.B.A. Bottom Angle Ass'y	❷	(450), 2(541) 2(541)	9
A	B	C	D	E	F

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	(E20)	Front C.B.A.	❷	4(533), Light Shield Sheet	10
2	(56)	**(For model with Light)** Four Eyes Lens	❷	-----	10
3	(51)	Front Case	❷	-----	-
A	B	C	D	E	F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
B: Ref No.
C: Part to be removed or installed.
D: Section No.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or unsoldered.
3(404) = 3 Screws (404), 2(L-1) = 2 Looking Tabs (L-1)
F: Refer to "Notes in chart."

❷ FRONT AND BOTTOM CASE SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⬚ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

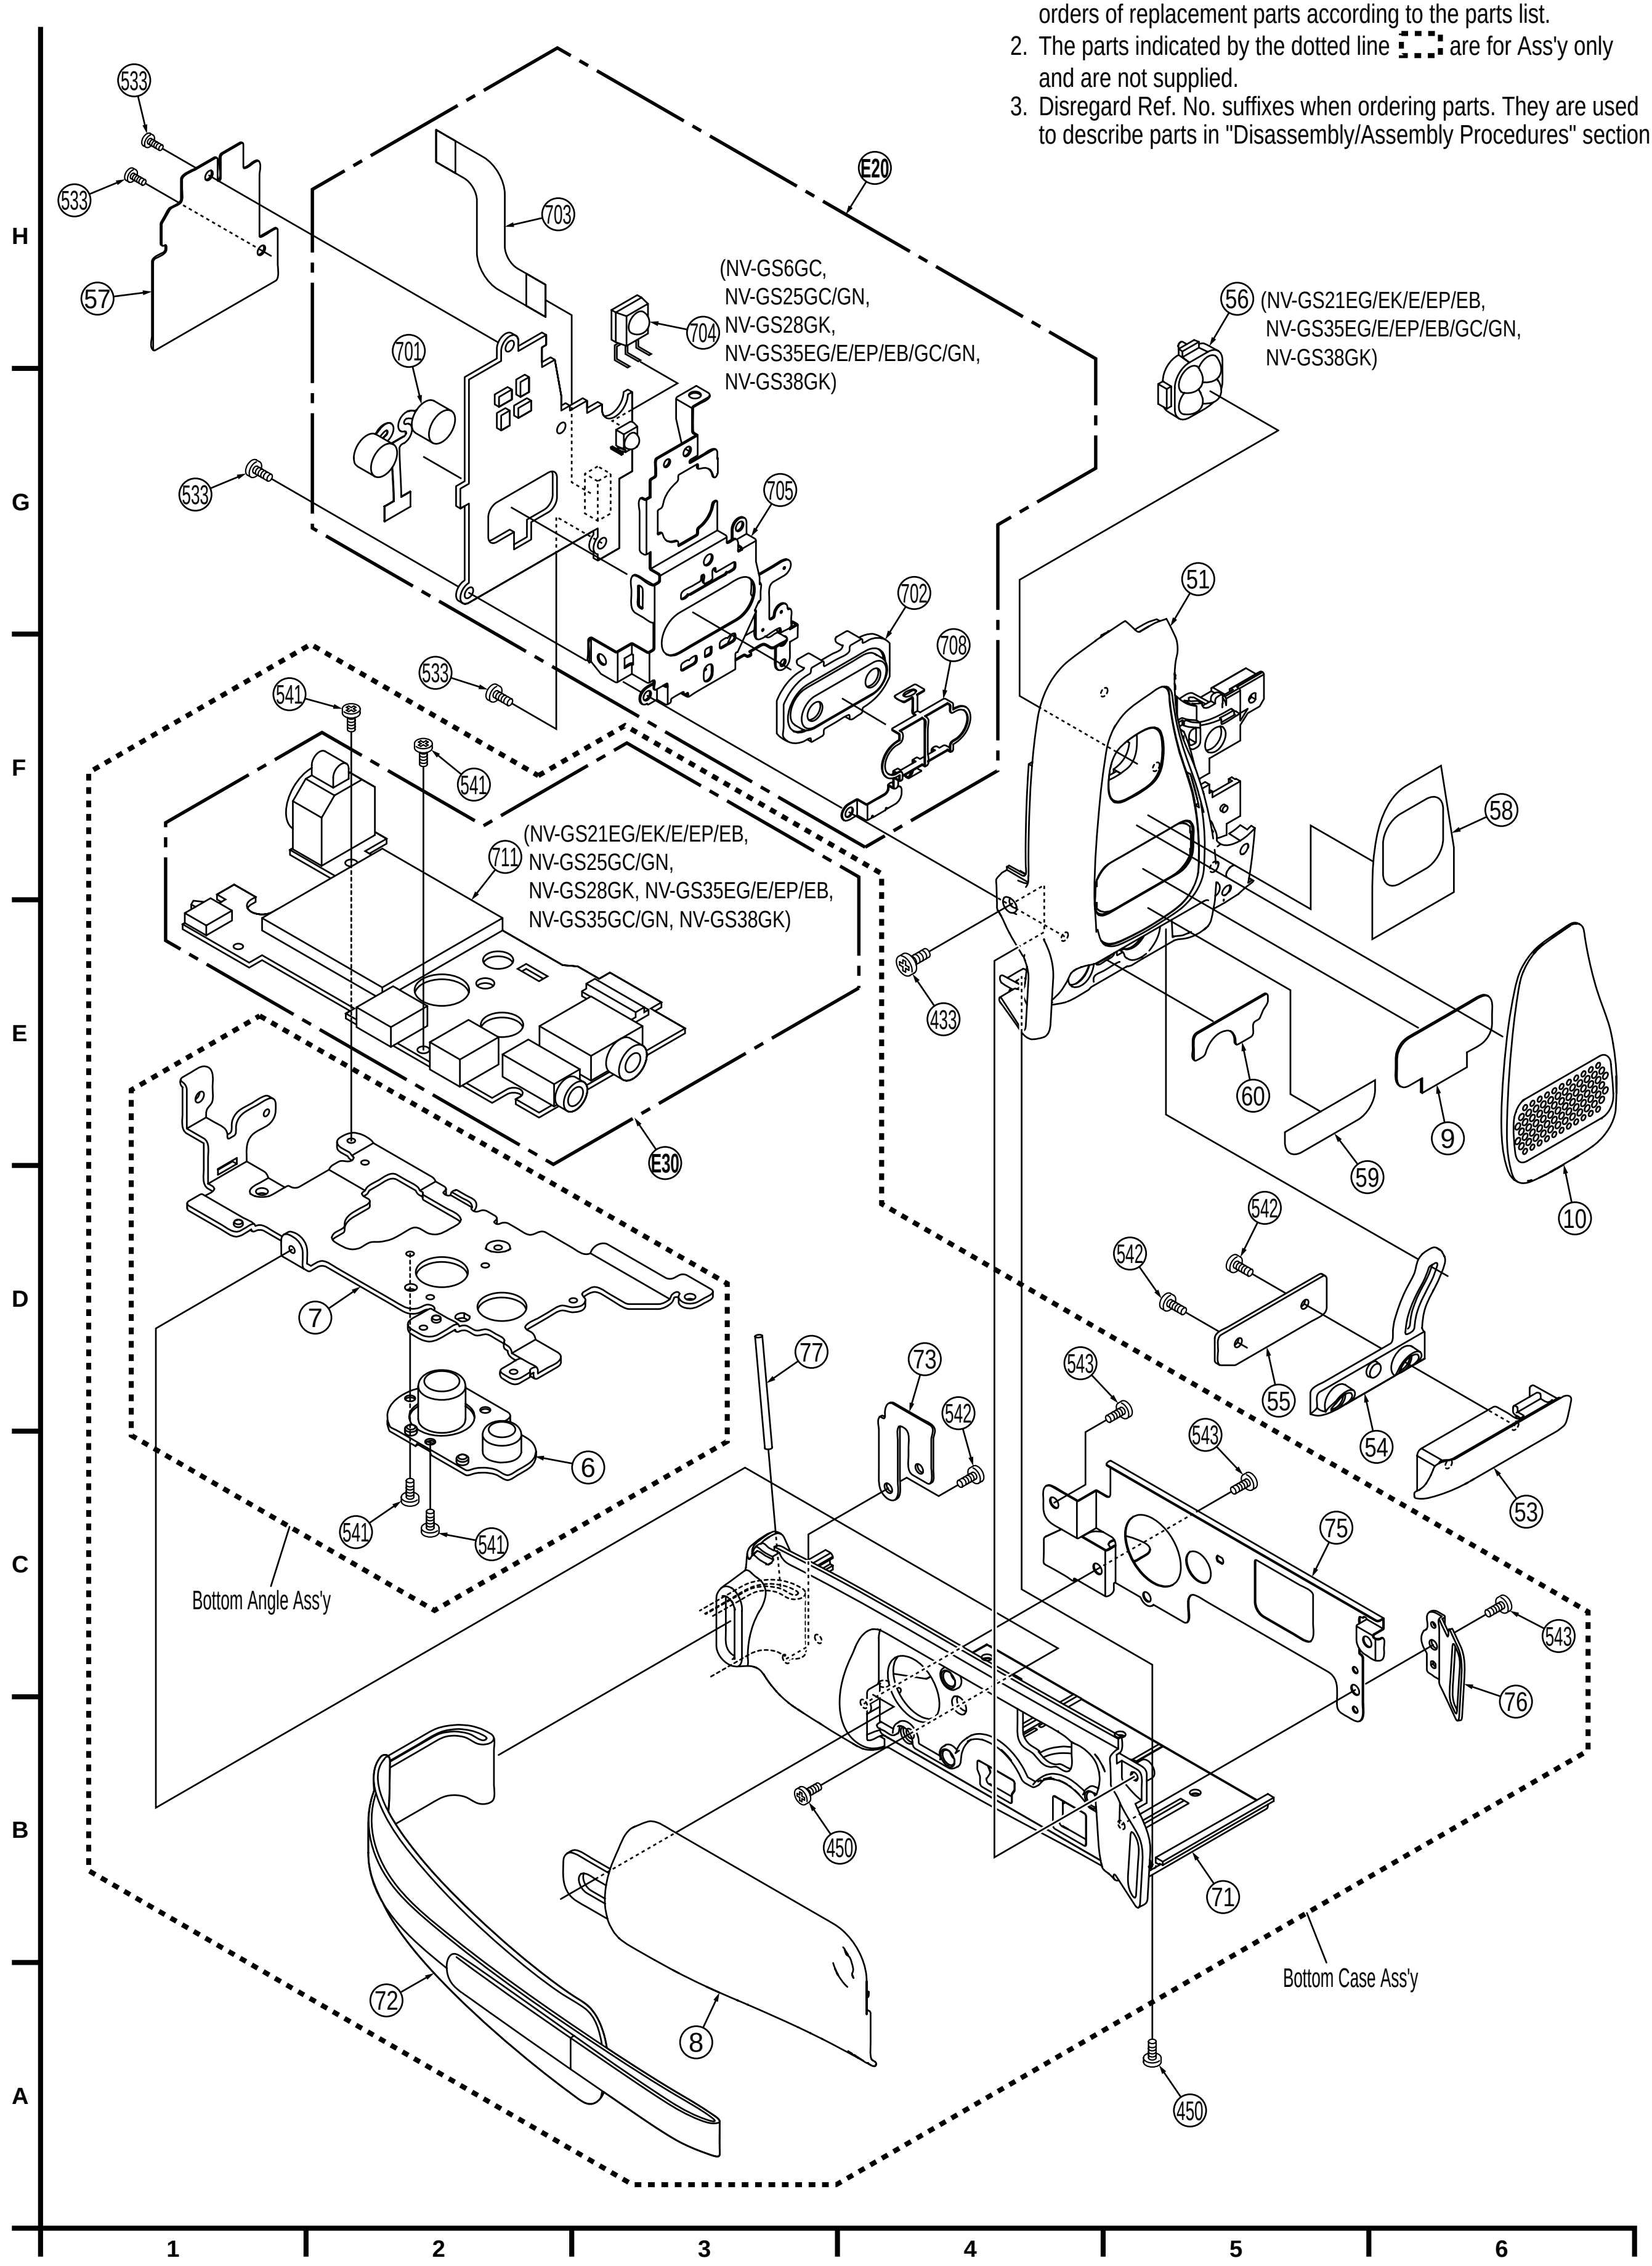
533
533
57
H
703
E20
(NV-GS6GC,
NV-GS25GC/GN,
NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN,
NV-GS38GK)
704
701
56 (NV-GS21EG/EK/E/EP/EB,
NV-GS35EG/E/EP/EB/GC/GN,
NV-GS38GK)
533
G
705
51
702
708
533
541
F
541
58
(NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN,
NV-GS28GK, NV-GS35EG/E/EP/EB,
NV-GS35GC/GN, NV-GS38GK)
711
433
E
60
9
59
E30
10
542
542
D
7
77
73
543
55
542
543
54
6
53
C
541
541
75
Bottom Angle Ass'y
543
76
450
B
71
Bottom Case Ass'y
72
8
A
450
1
2
3
4
5
6

SIDE CASE R & LCD PORTION

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	㉛	Side Case R Unit	❸	(419), (457)	11
2	㉝	LCD Case A Unit	❸	2(455), 8(L-1)	-
3	㉜	Shaft Case Unit	❸	FP8101	11
4	(E40)	LCD Backlight C.B.A.	❸	(542), (L-2), FP8102	12
5	㉞	LCD Case B	❸	4(L-3)	12
6	- ㉟	LCD Panel Ass'y LCD Shield Case Unit	❸	3(L-4)	12

↑ A ↑ B ↑ C ↑ D ↑ E ↑ F

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	㊷	LCD Panel	❸	-----	13
2	㊴	Reflect Sheet	❸	(L-5)	13
3	㊲	Lead Light Panel	❸	-----	13
4	㊳	Diffusion Sheet	❸	-----	13
5	㊵	BEF Sheet	❸	-----	13
6	㊶	BEF Sheet A	❸	-----	13
7	㊱	Panel Holder Unit	❸	-----	13

↑ A ↑ B ↑ C ↑ D ↑ E ↑ F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
B: Ref No.
C: Part to be removed or installed.
D: Section No.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or unsoldered.
3(404) = 3 Screws (404), 2(L-1) = 2 Looking Tabs (L-1)
F: Refer to "Notes in chart."

❸ SIDE CASE R AND LCD SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⬚ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

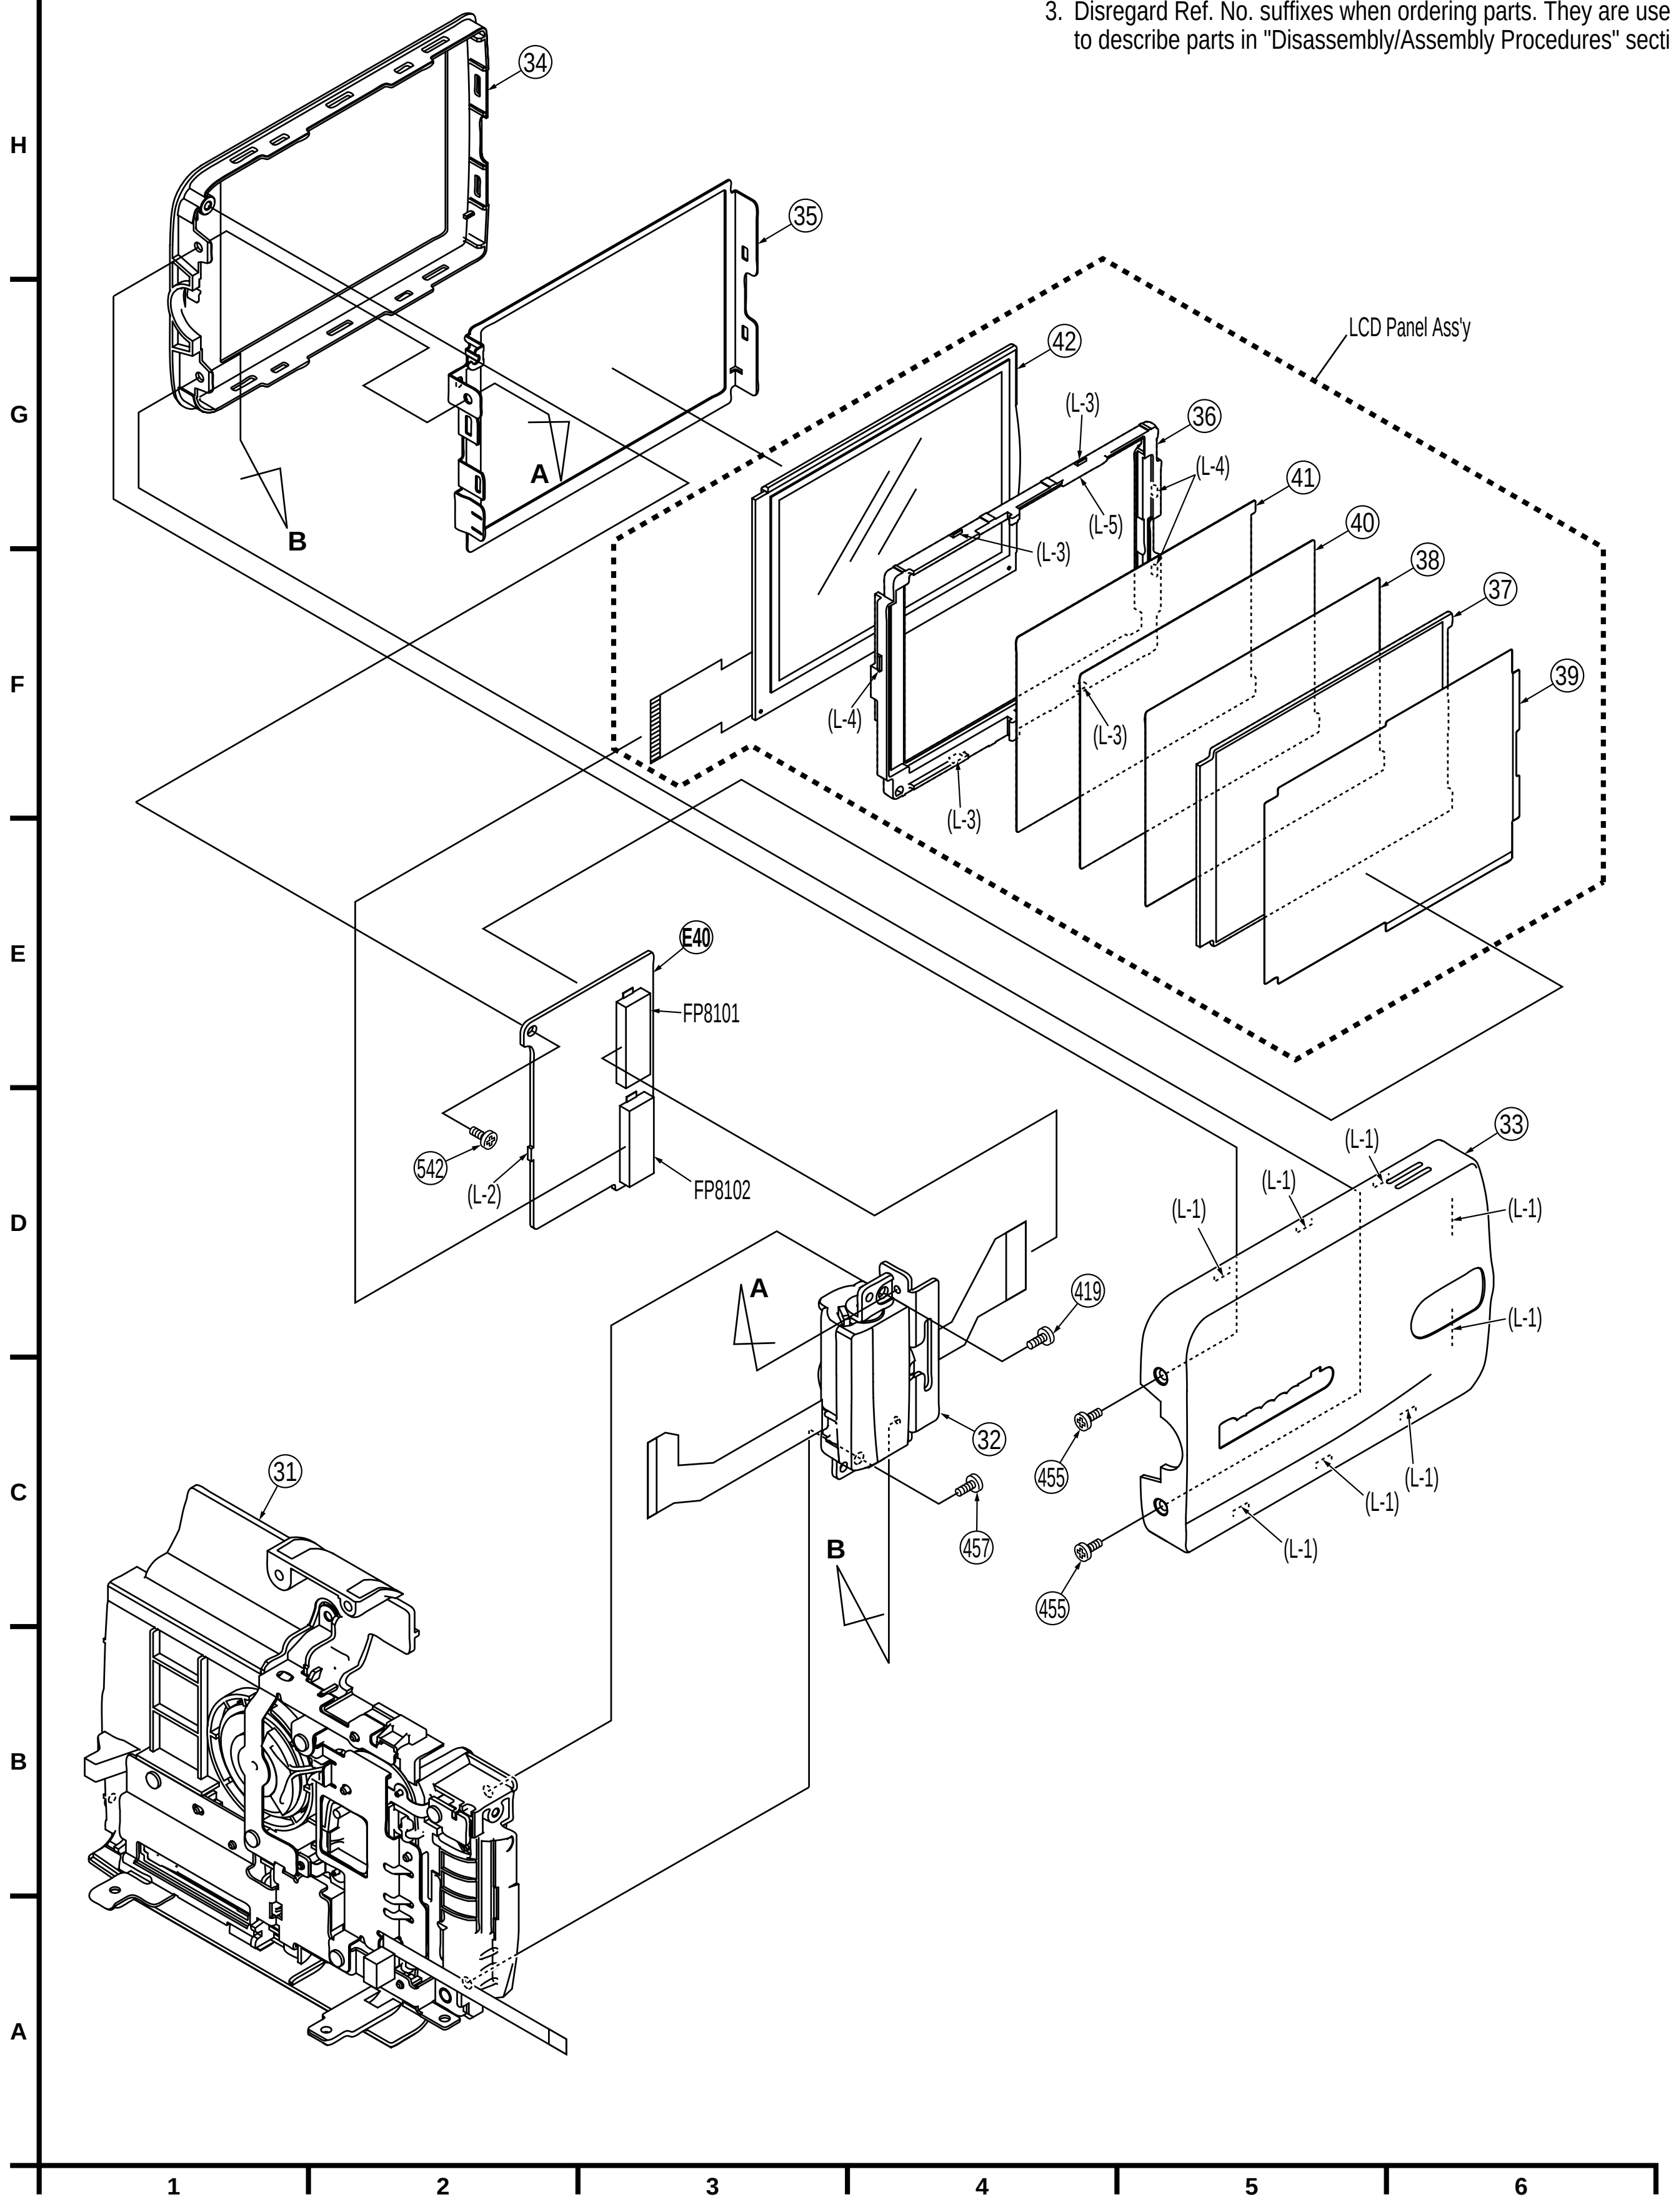
34
35
42
LCD Panel Ass'y
(L-3)
36
(L-4)
41
(L-5)
(L-3)
40
38
37
39
A
B
(L-4)
(L-3)
(L-3)
E40
FP8101
542
(L-2)
FP8102
(L-1)
33
(L-1)
(L-1)
(L-1)
A
419
(L-1)
32
455
457
(L-1)
(L-1)
(L-1)
B
31
455
H
G
F
E
D
C
B
A
1
2
3
4
5
6

CCD & LENS PORTION

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	(E50)	CCD C.B.A.	❹	2(536)	14
2	(64)	Filter Rubber	❹	-----	14
3	(63)	Optical Filter	❹	-----	14
4	(62)	(For model with 20,24X zoom) Filter Holder	❹	-----	14

↑ ↑ ↑ ↑ ↑ ↑

A B C D E F

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	(65)	Zoom Motor Unit	❹	2(538), Unsolder	15
2	(66)	Focus Motor Unit	❹	2(538), (533) (For model with 30X zoom), Unsolder	15

↑ ↑ ↑ ↑ ↑ ↑

A B C D E F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
B: Ref No.
C: Part to be removed or installed.
D: Section No.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or unsoldered.
3(404) = 3 Screws (404), 2(L-1) = 2 Looking Tabs (L-1)
F: Refer to "Notes in chart."

❹ CCD AND LENS SECTION

Note:
1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⬚ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
□□□	Grease	Available from Factroy	LSUQ0050

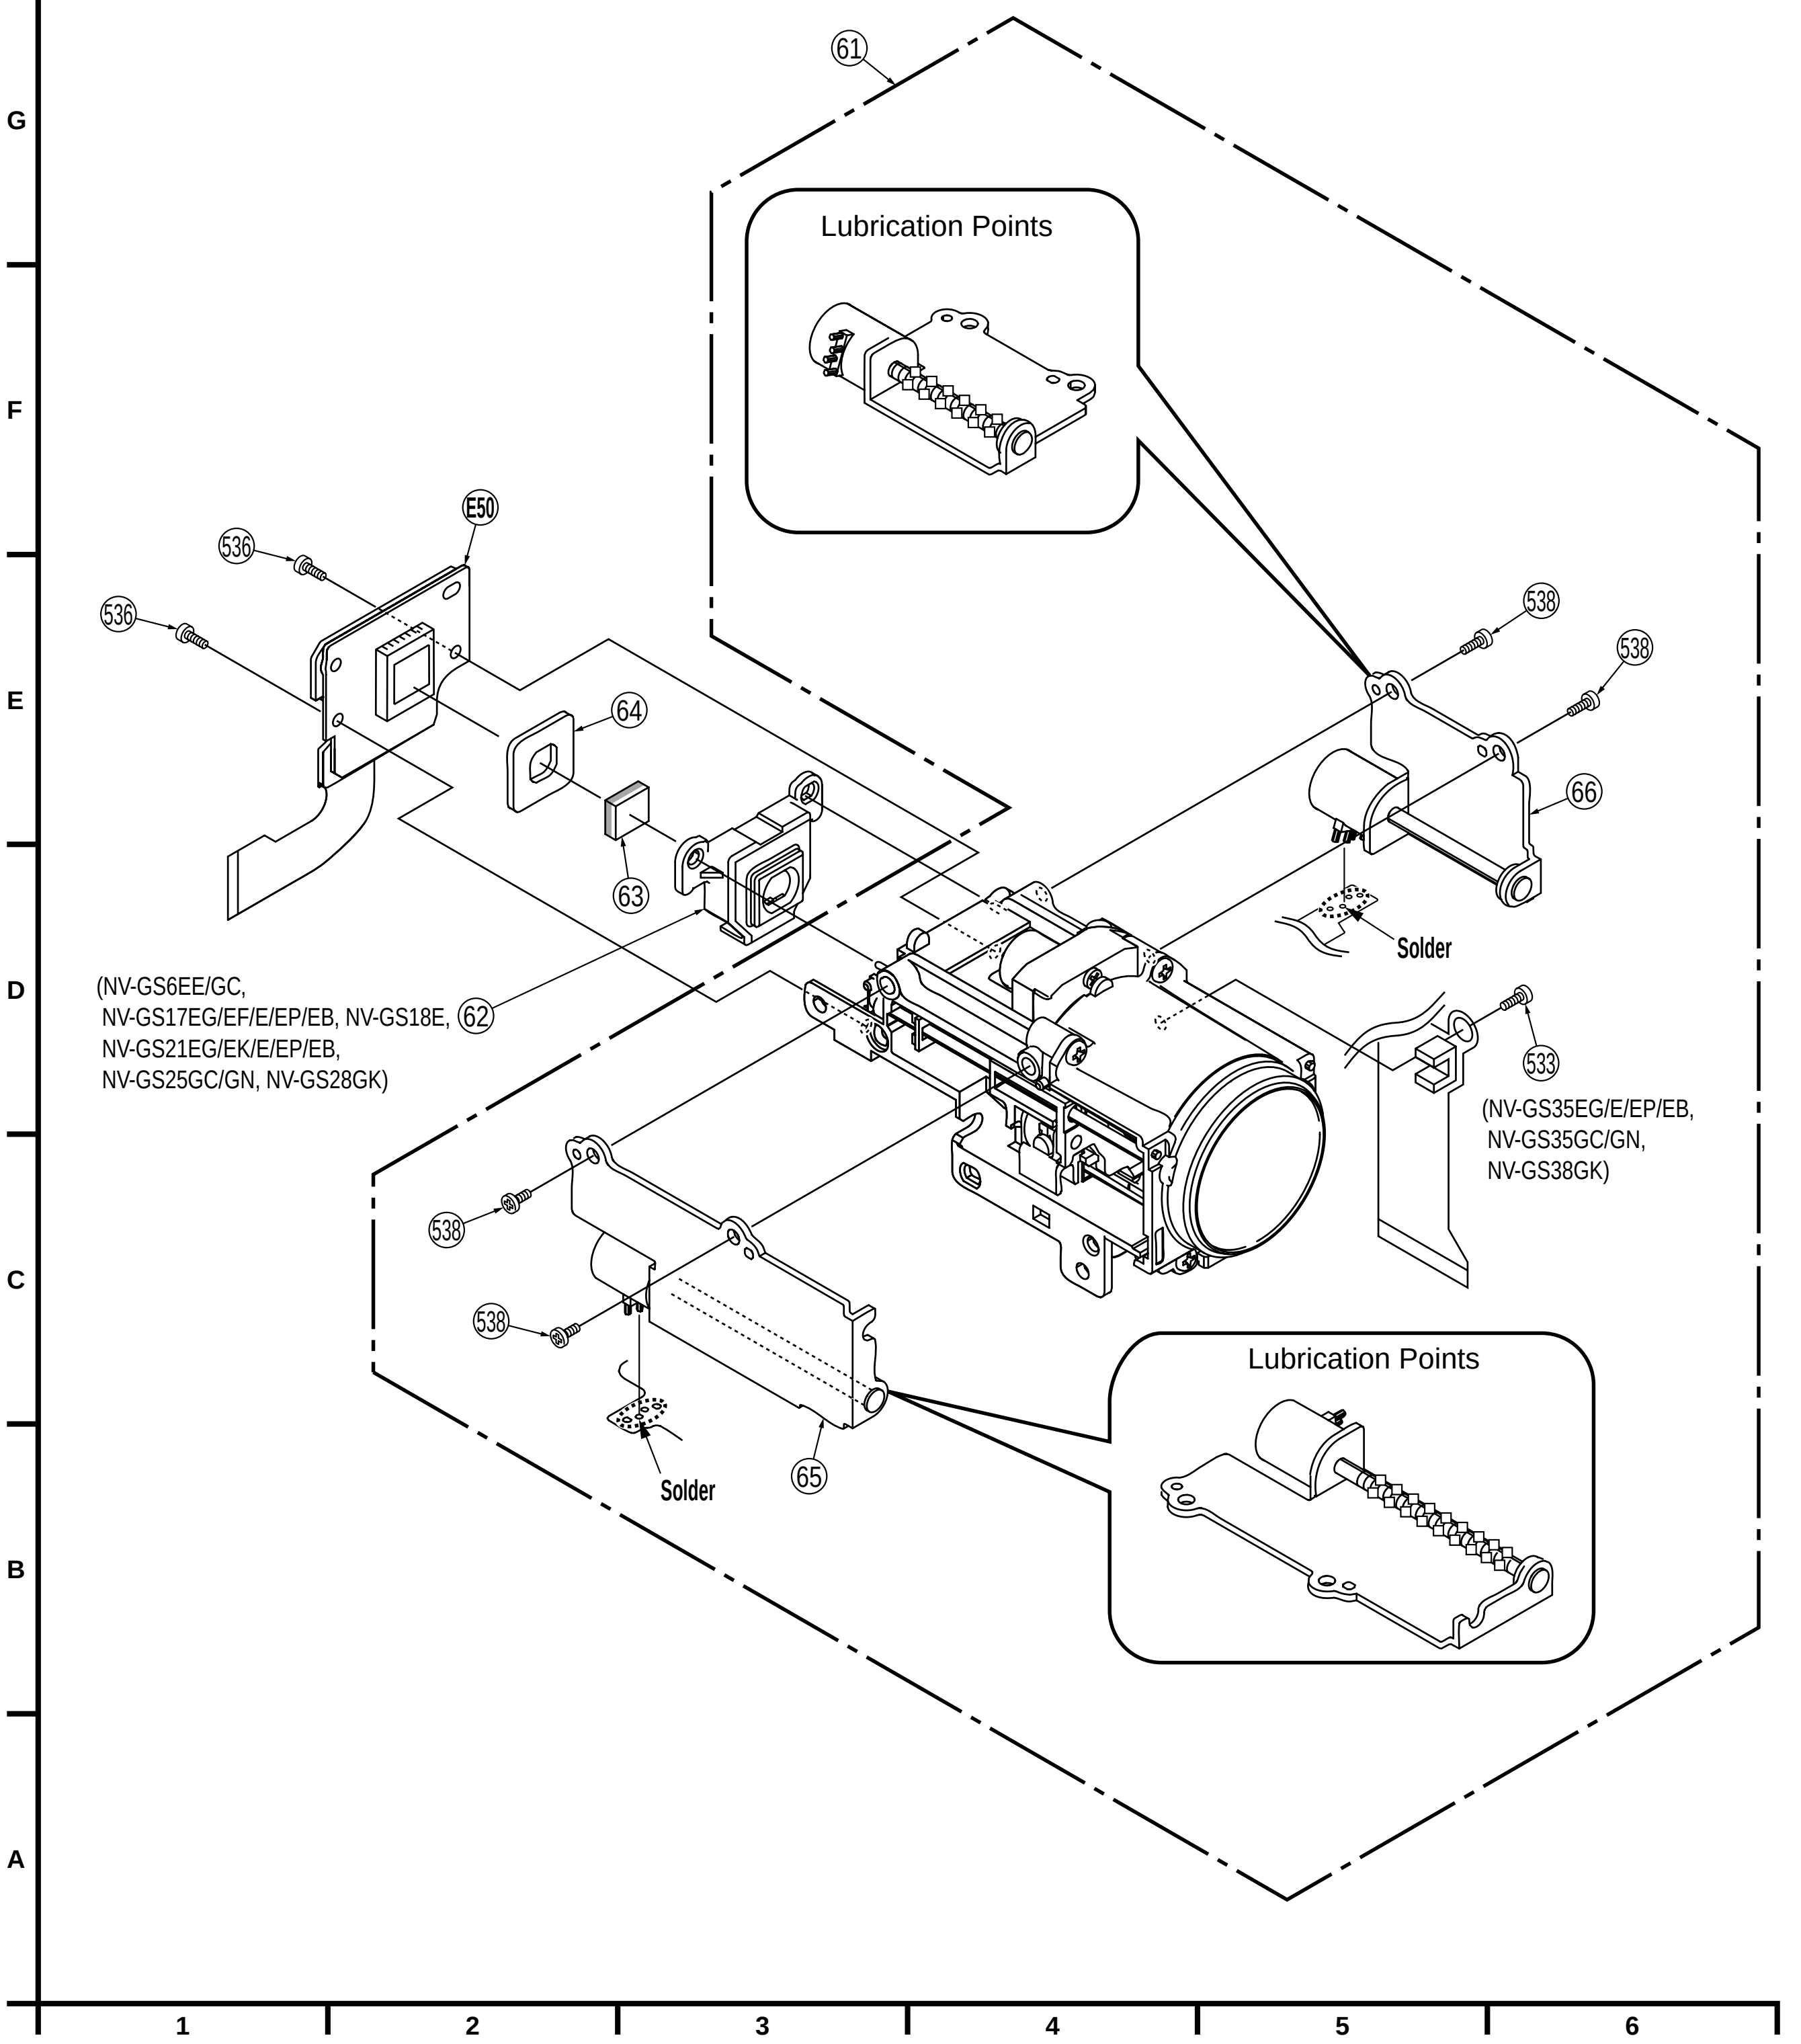
H
G
F
E
D
C
B
A
1
2
3
4
5
6
61
Lubrication Points
E50
536
536
64
63
62
538
538
66
Solder
533
538
538
65
Solder
Lubrication Points

(NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB, NV-GS25GC/GN, NV-GS28GK)

(NV-GS35EG/E/EP/EB, NV-GS35GC/GN, NV-GS38GK)

EVF PORTION

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	⑯	EVF Slide Piece	❺	2(450)	16
2	⑬ ⑮	EVF Base Frame EVF Earth Plate	❺	2(L-1)	16
3	⑭	EVF Spring	❺	(450), (L-2)	17
4	⑰	EVF F.P.C.	❺	FP951	17

A B C D E F

STEP No.	Ref. No.	PART	Section No.	REMOVE	NOTE
1	⑱	Eye Cap	❺	2(524)	18
2	㉓	EVF Lens Unit	❺	-----	19
3	㉒	Eye Sight Lever	❺	-----	19

A B C D E F

How to read chart shown above:

A: Order of Procedure steps.
When reassembling, perform steps(s) in reverse order.
B: Ref No.
C: Part to be removed or installed.
D: Section No.
E: Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or unsoldered.
3(404) = 3 Screws (404), 2(L-1) = 2 Looking Tabs (L-1)
F: Refer to "Notes in chart."

❺ EVF SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⬚ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

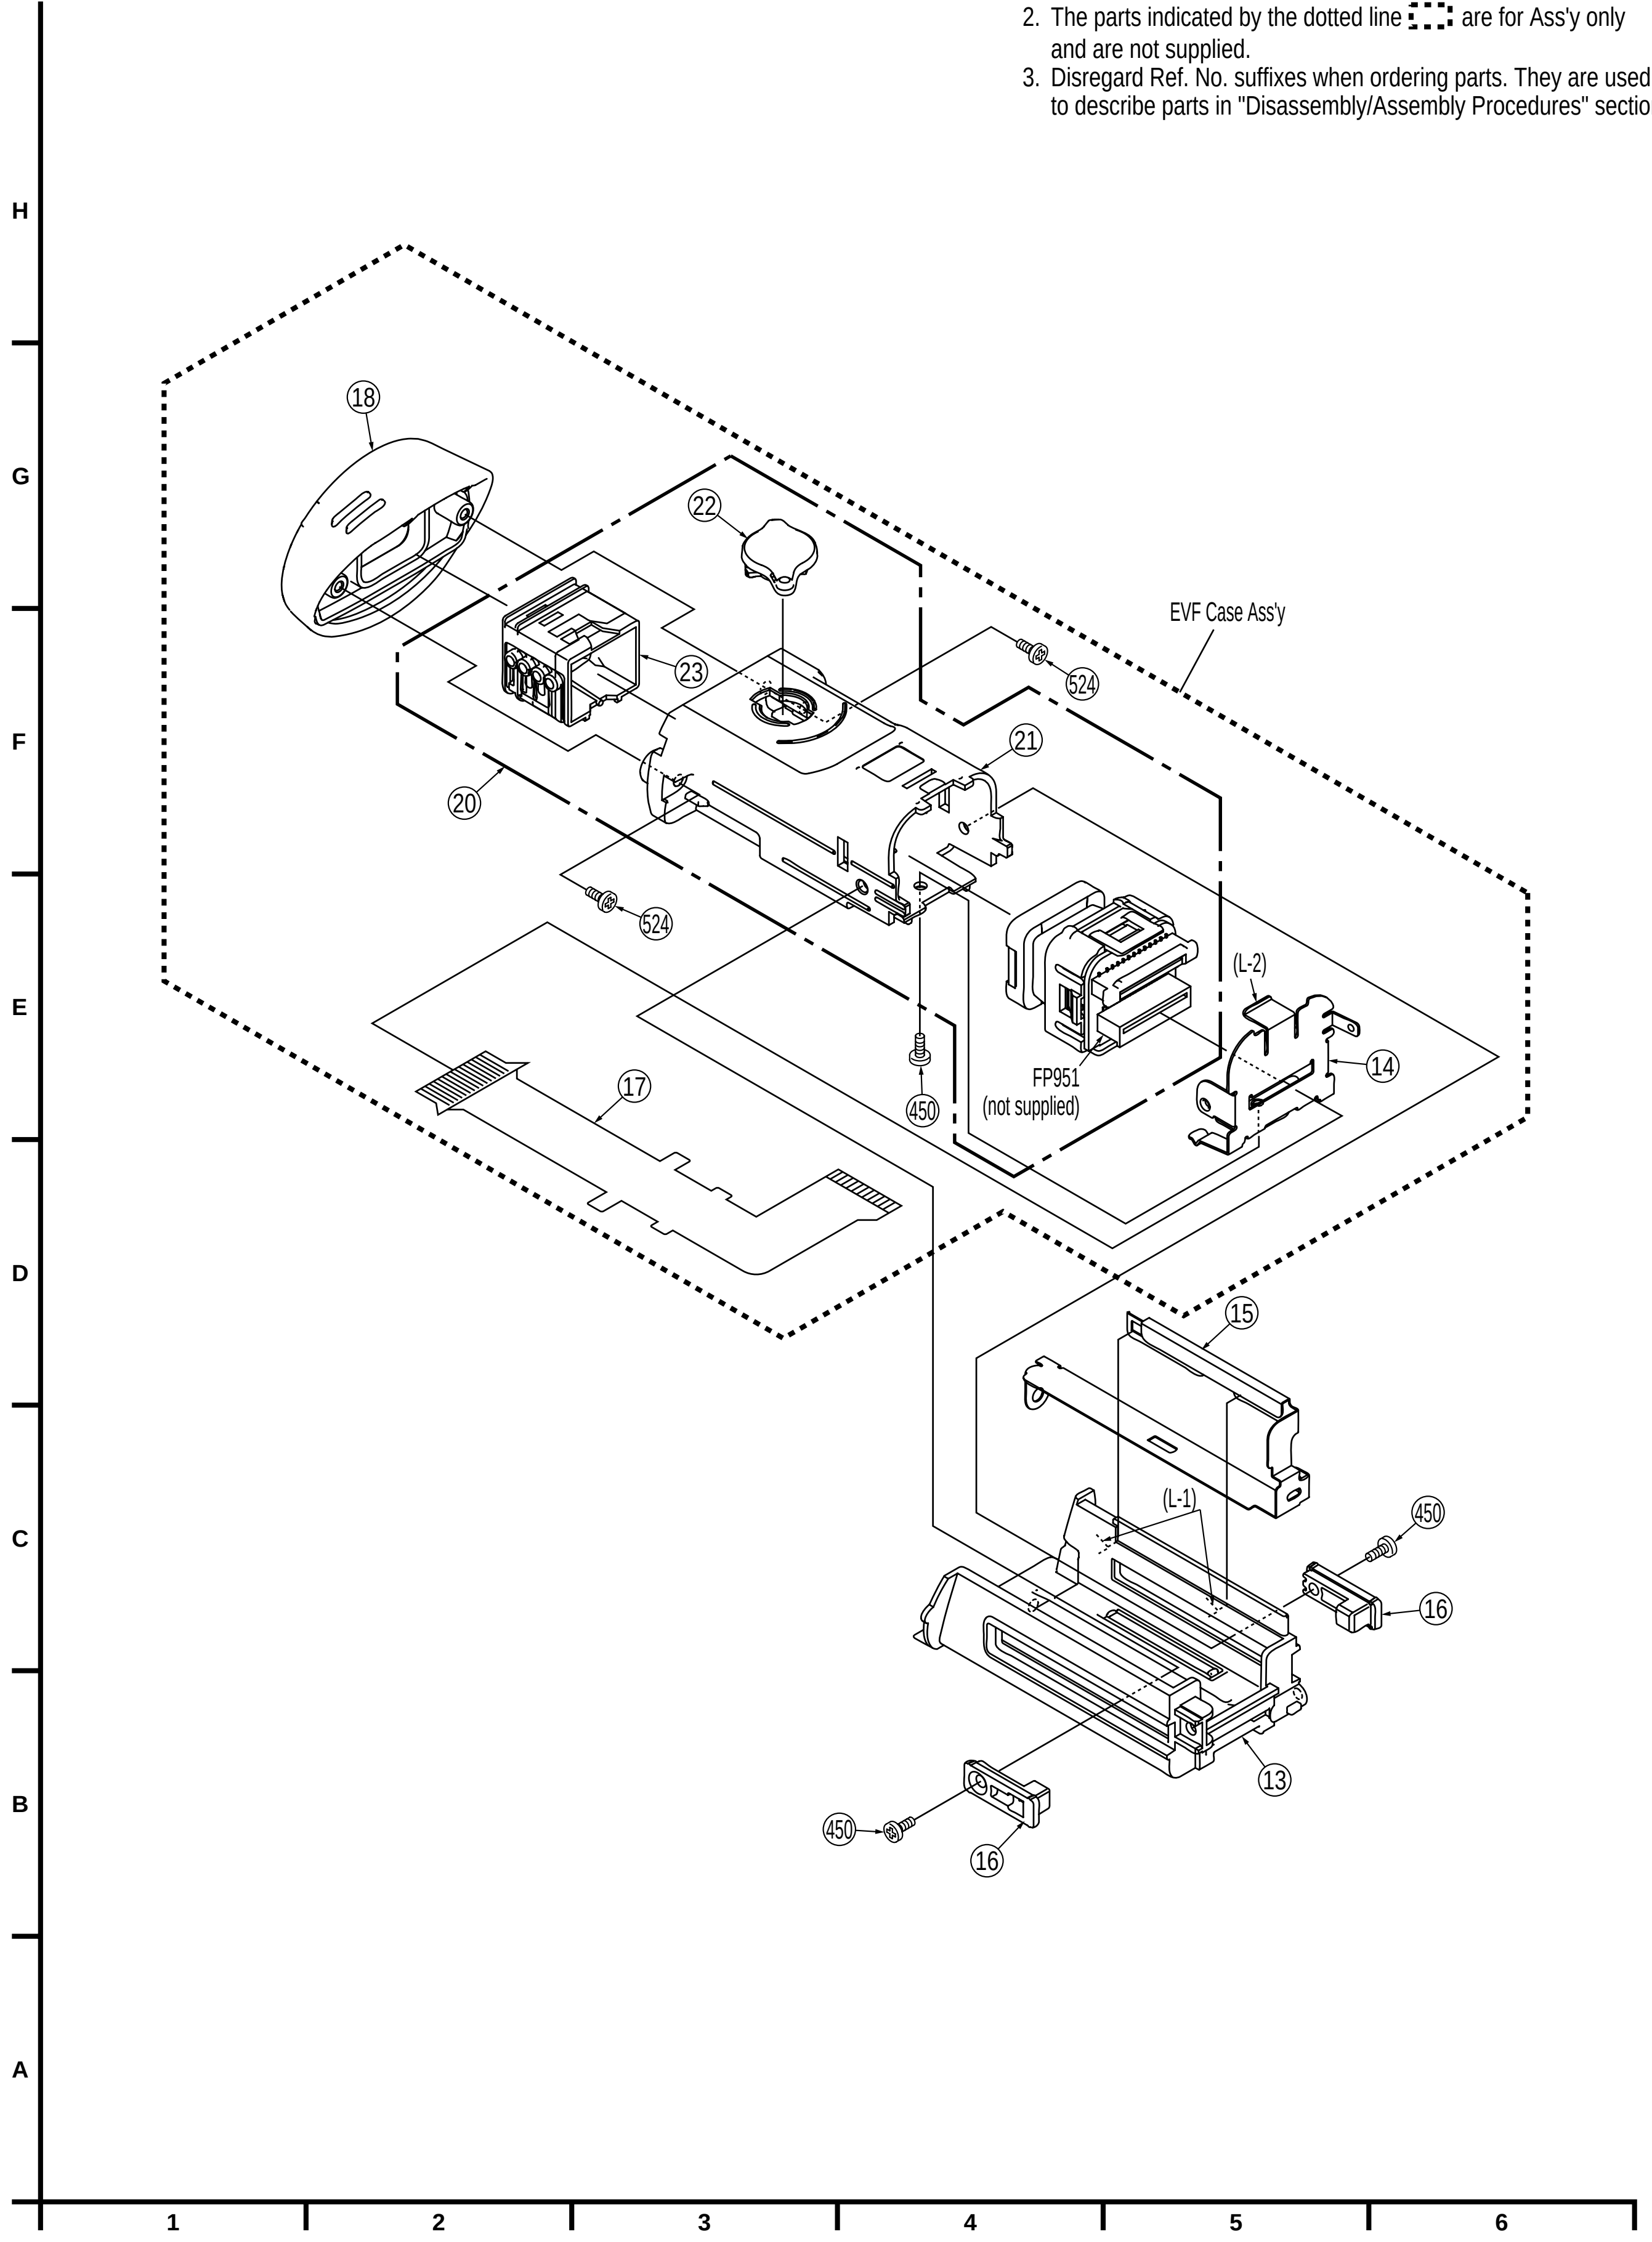
H
G
F
E
D
C
B
A
18
22
23
EVF Case Ass'y
524
21
20
524
(L-2)
14
17
FP951
(not supplied)
450
15
(L-1)
450
16
13
450
16
1
2
3
4
5
6

Notes in chart

1. **Removal of Top Unit**
    1) Open the LCD and the Cassette Cover, then remove the 5 Screws (433, 541).
    2) Slide to extend the EVF.
    3) Pull and slide the Top Unit carefully.

Installation of Top Unit

1) Slide to extend the EVF.
2) Insert Portion A of the Top Unit, and slide firmly to install.

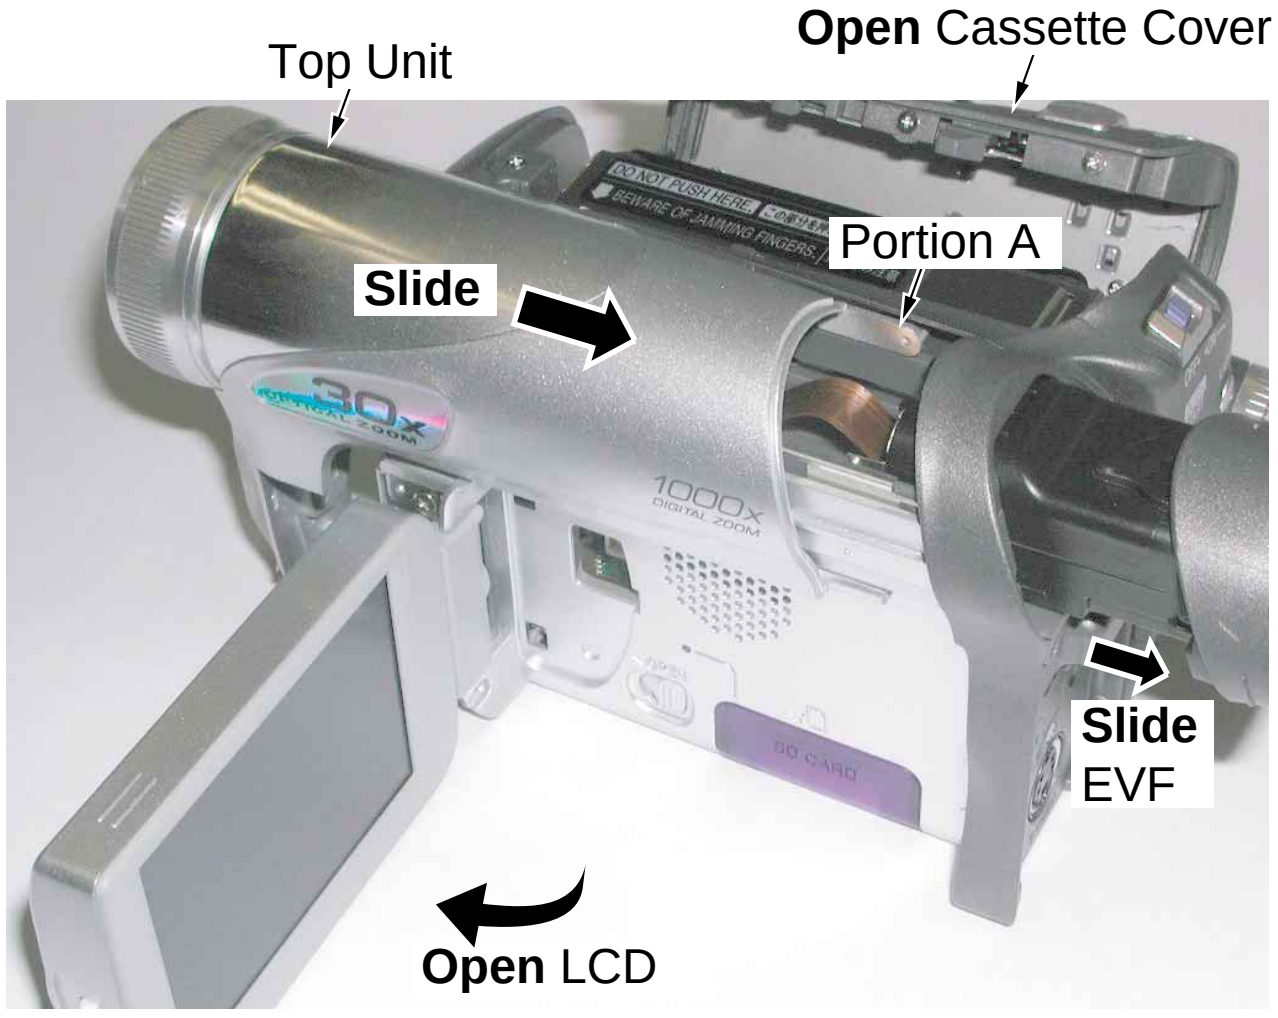
Top Unit
Open Cassette Cover
Slide
Portion A
Slide
EVF
Open LCD

Fig. D1

2. **Installation of Side Case R & LCD Ass'y**
    1) Connect the LCD F.P.C. and Side R F.P.C. to the Connectors FP7 and FP8 so as not to damage the F.P.C.s.
    2) Secure Front Portion and Rear Portion, and tighten 6 Screws (450, 533)

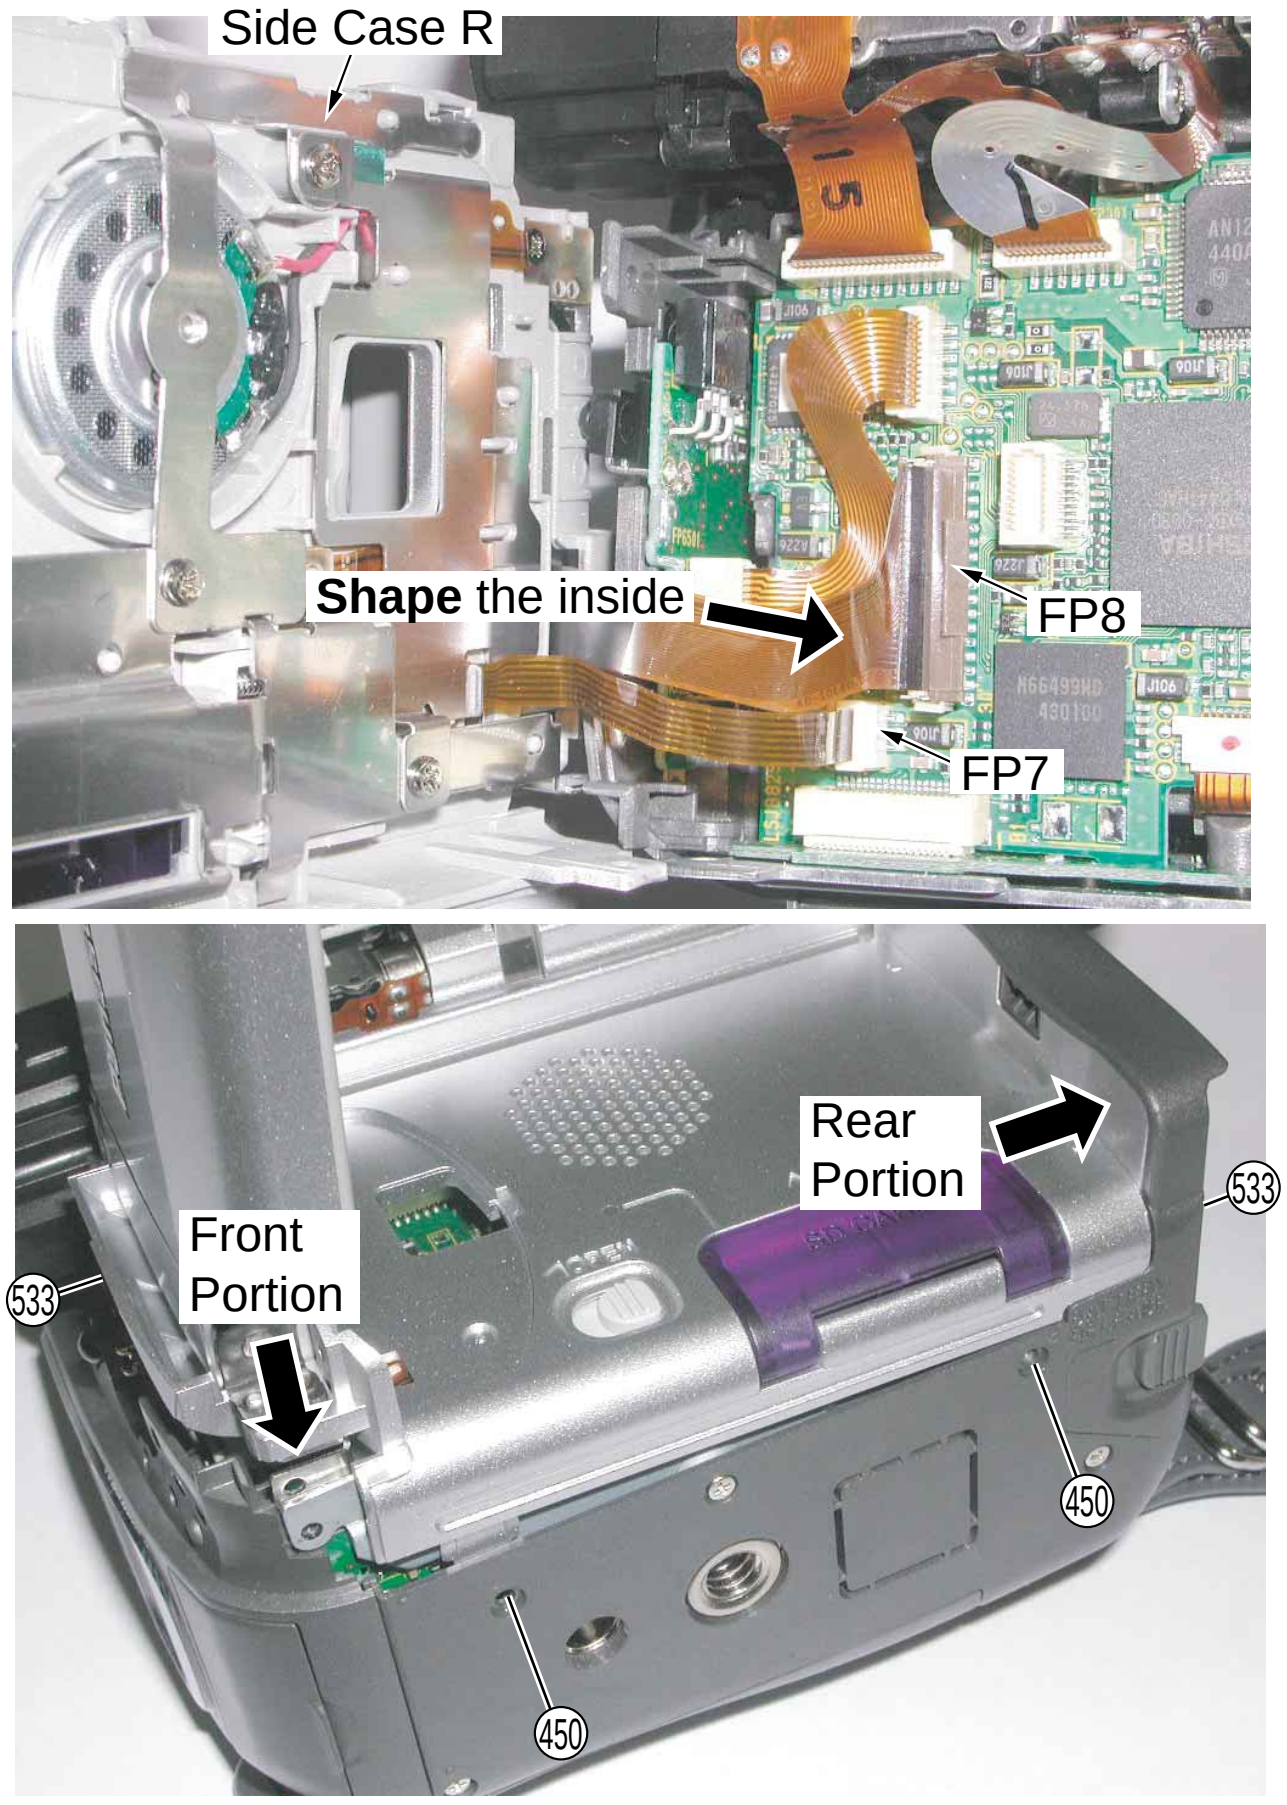
Side Case R
Shape the inside
FP8
FP7
Rear
Portion
533
Front
Portion
533
450
450

<Bottom View>

Fig. D2

3. **Installation of EVF Unit**
    1) Confirm that the EVF F.P.C. is hooked to the Hooking Portions on the Bottom.
    2) Install the EVF Unit while holding the EVF F.P.C. to avoid damage of the EVF F.P.C.

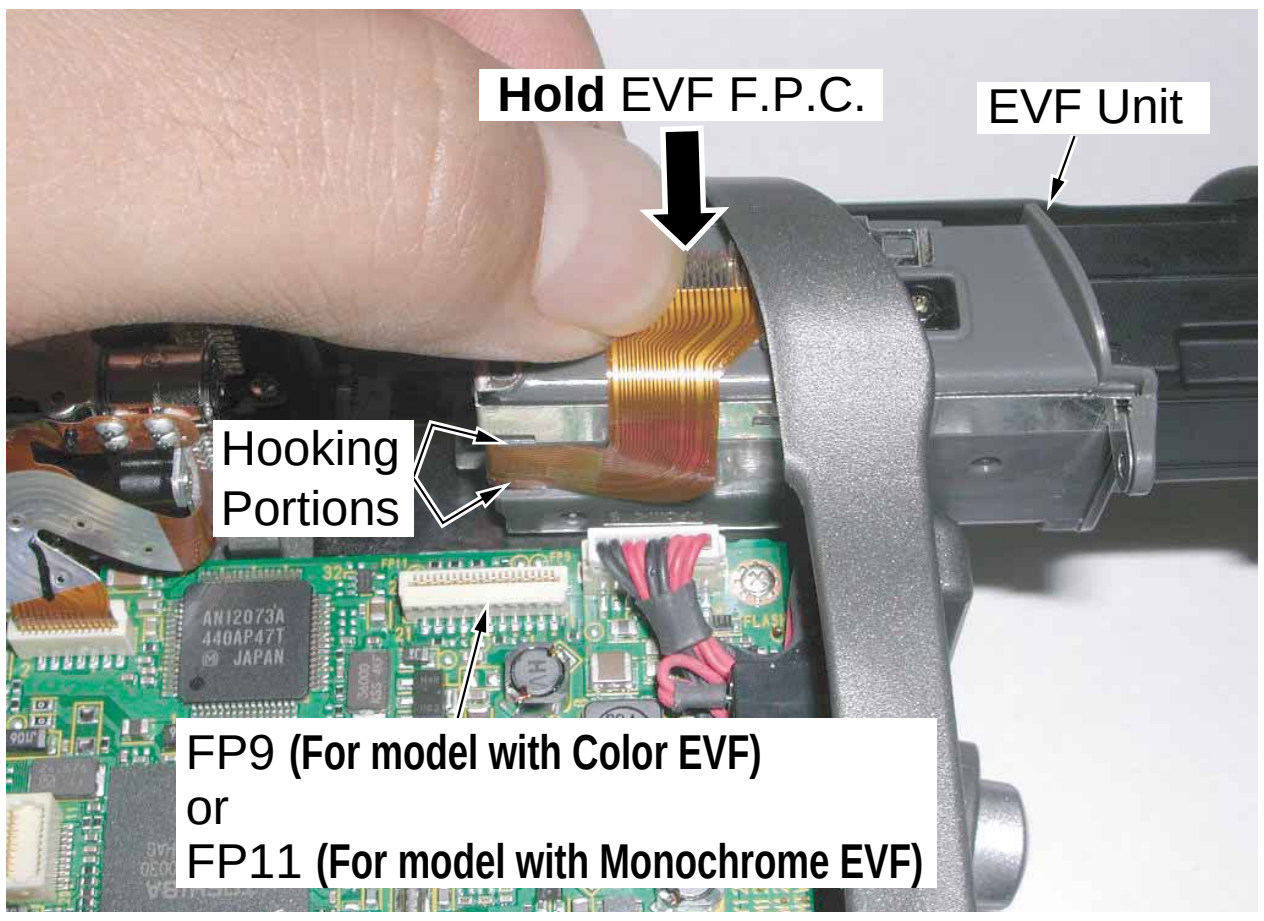
Hold EVF F.P.C.
EVF Unit
Hooking Portions
FP9 **(For model with Color EVF)**
or
FP11 **(For model with Monochrome EVF)**

Fig. D3

4. **Installation of Rear Case Unit**
    1) Position connector leads so as not to cover Portion A.

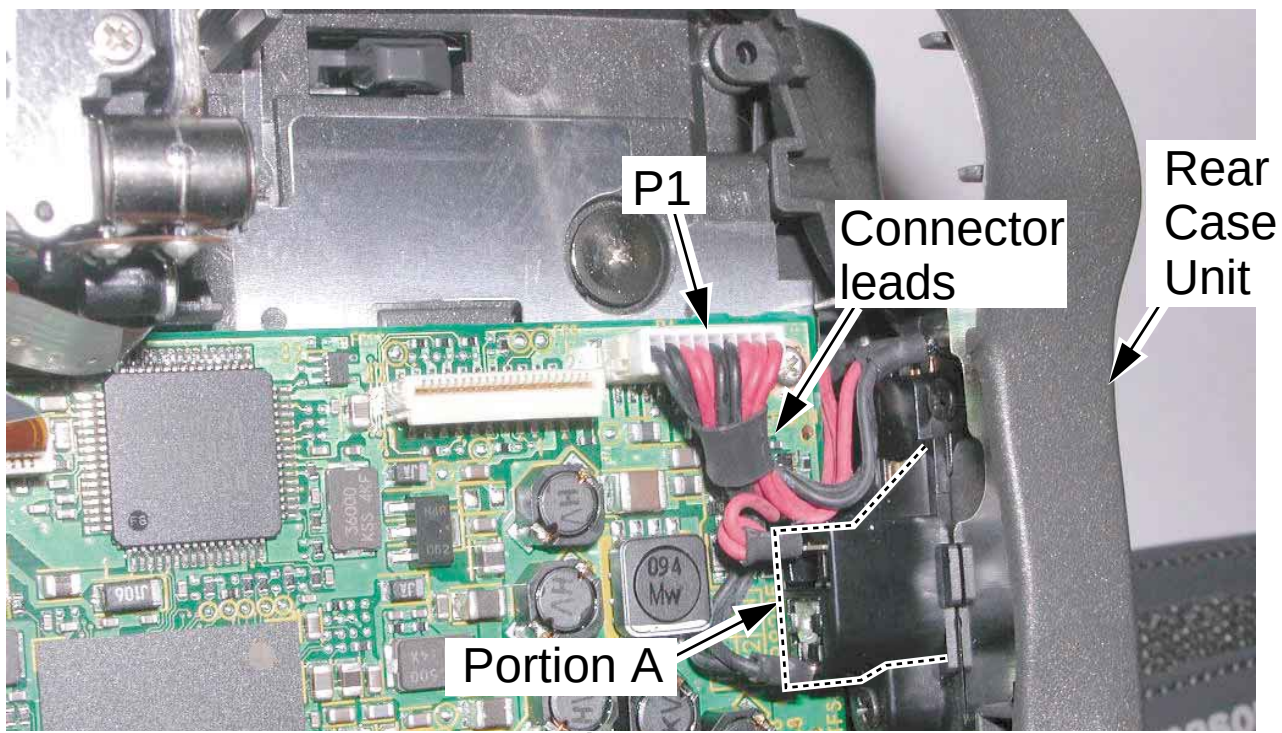
P1
Connector leads
Rear Case Unit
Portion A

Fig. D4-1

    2) Secure the Locking Tab (L-1) of the Rear Case Unit to install it.

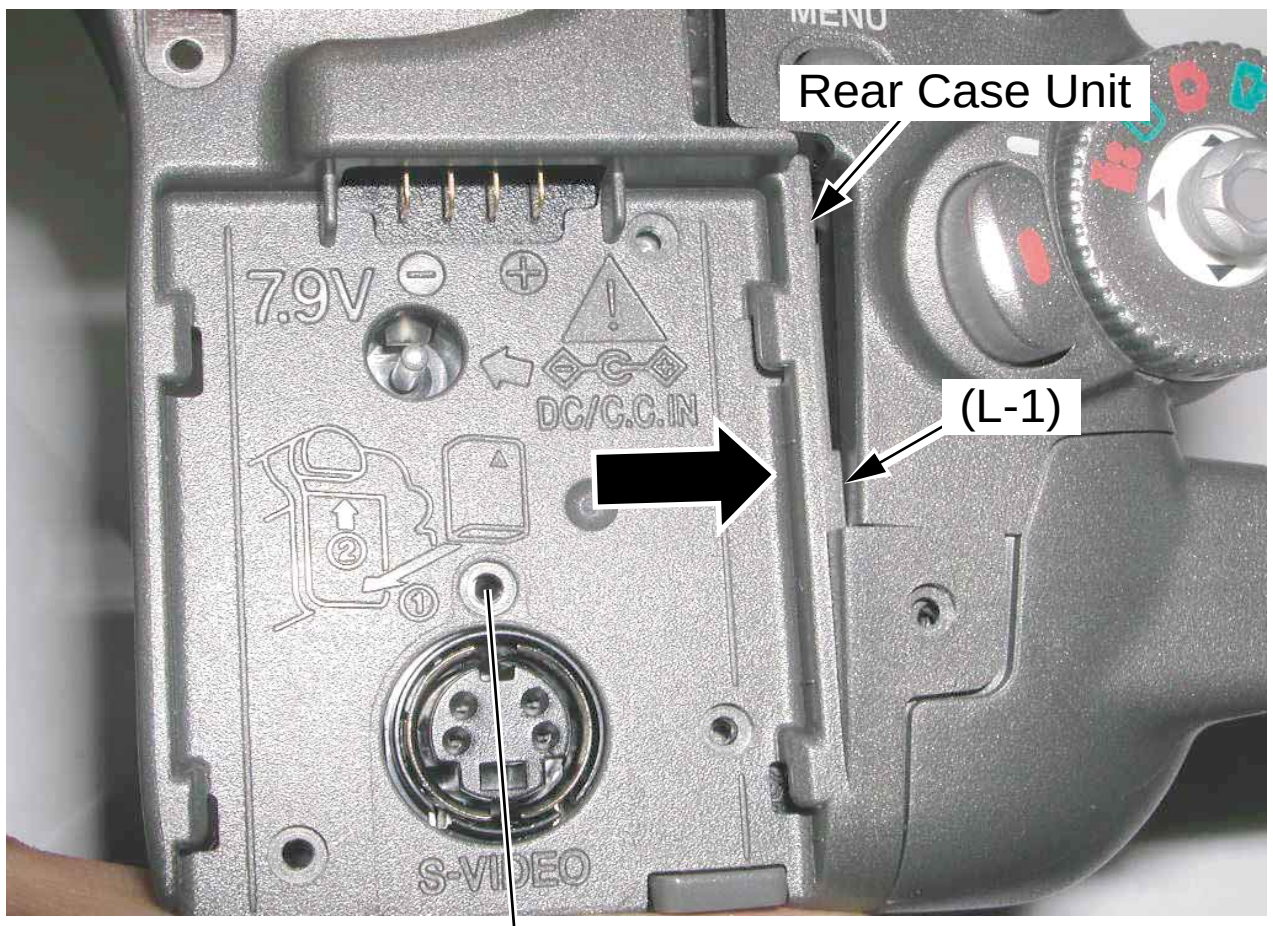
Rear Case Unit
(L-1)

(533) **(For model with S-VIDEO)**

Fig. D4-2

5. **Installation of Lens Ass'y**
    Take care not to damage the motor leads.
    Install the Lens Ass'y with the 2 Bosses and 2 Screws (533).

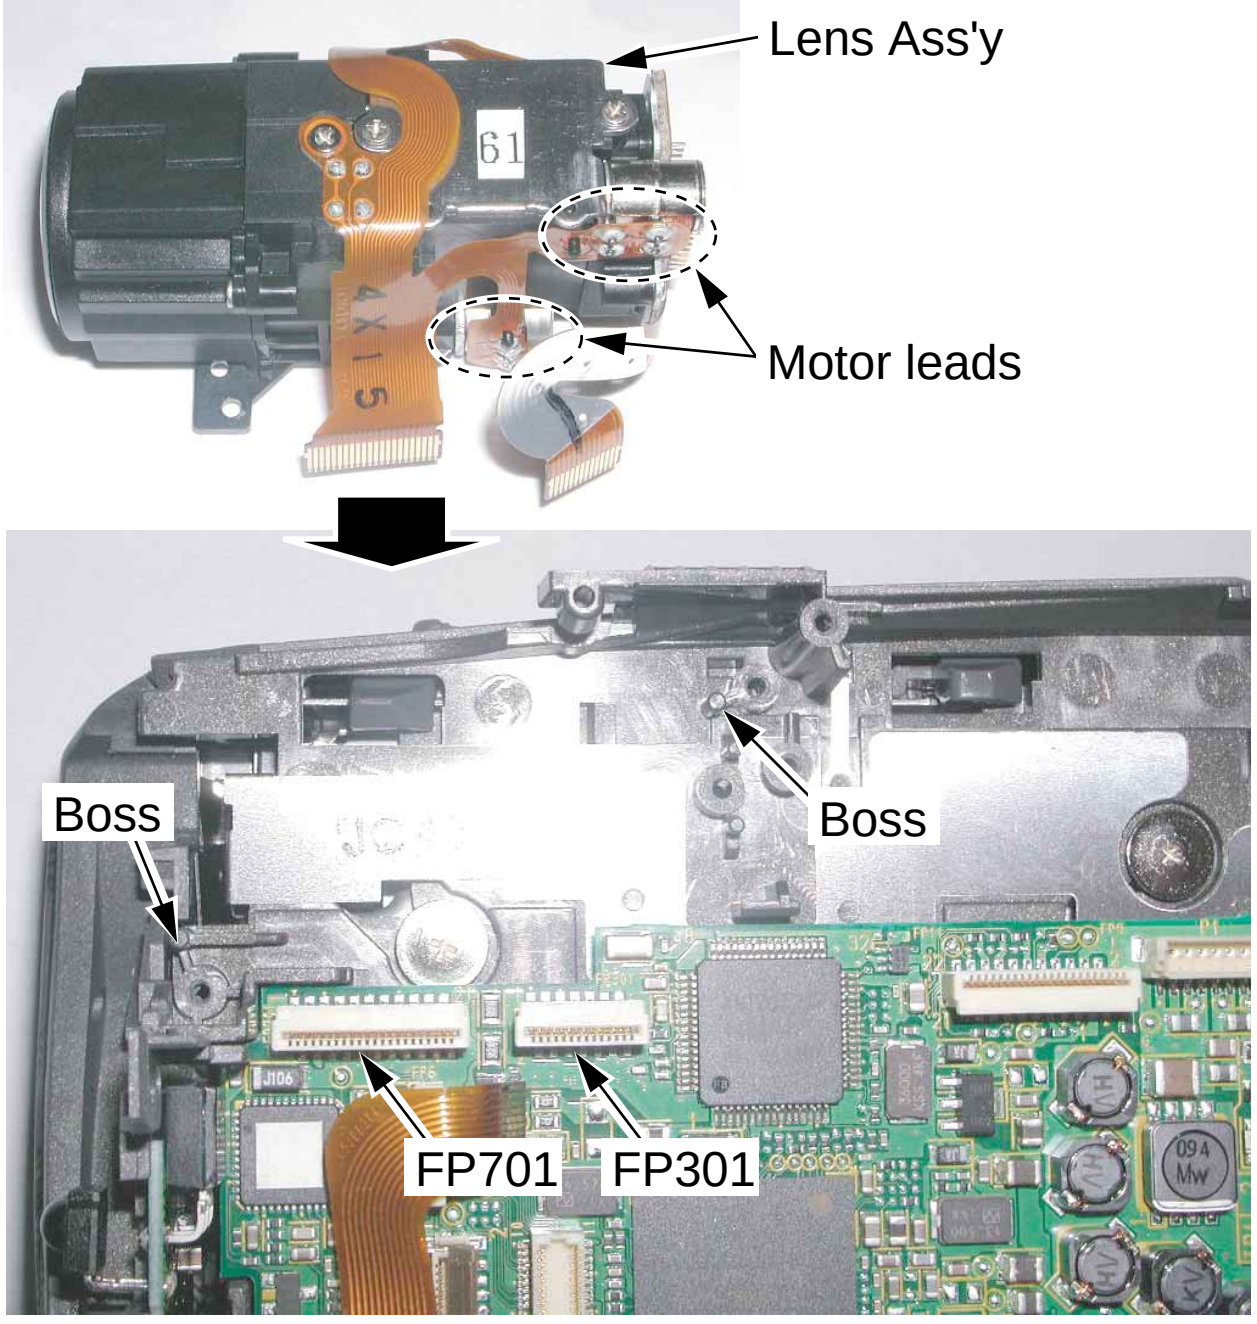
Lens Ass'y
Motor leads
Boss
Boss
FP701
FP301

Fig. D5

6. **Removal of Front Case Ass'y & Bottom Ass'y**
    1) Disconnect the Front F.P.C. from the Connector FP6.
    2) Open the Cassette Cover and remove the 3 Screws (433).
    3) Remove both the Front Case Ass'y & Bottom Case Ass'y and continue to grasp them, while disconnecting the Connector B1.

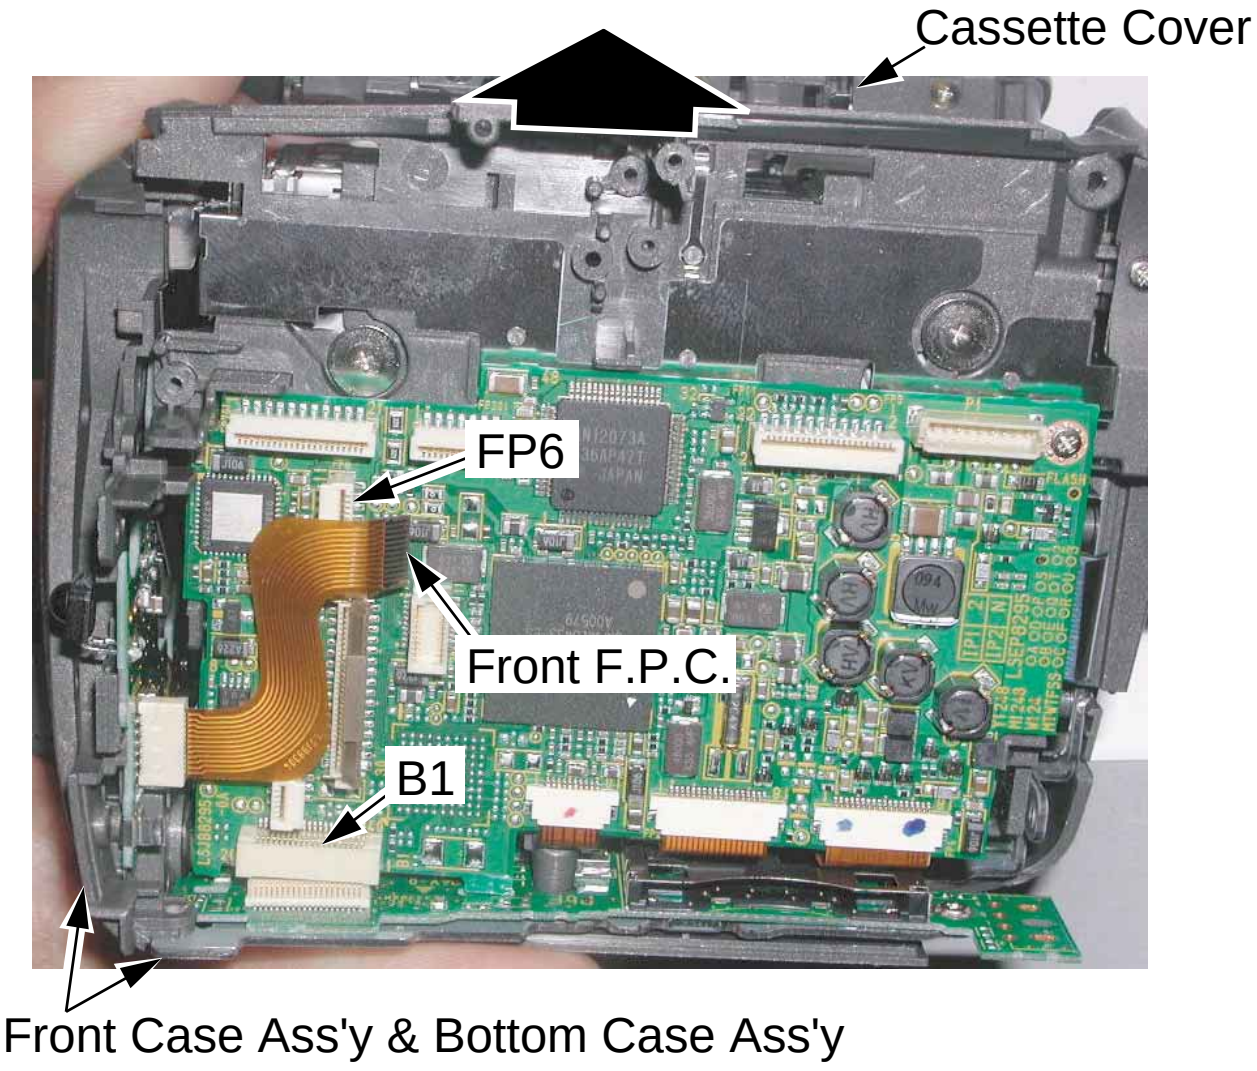
Cassette Cover
FP6
Front F.P.C.
B1
Front Case Ass'y & Bottom Case Ass'y

Fig. D6

Alternative method:
If necessary, the Front Case Ass'y can be removed at first.

7. **Installation of Main C.B.A.**
   Take care not to damage the F.P.C.s.
   1) Connect the Zoom Switch F.P.C. to the Connector FP10 on the Main C.B.A.
   2) Connect the F.P.C.s to the connectors on the Main C.B.A, verifying that the direction of the Flexible Cables is correct. Refer to "REMOVAL/INSTALLATION OF F.P.C. FROM NON ZIF (Zero Insertion Force) CONNECTOR."
   3) After installing the Main C.B.A., confirm the F.P.C.s are positioned as shown.

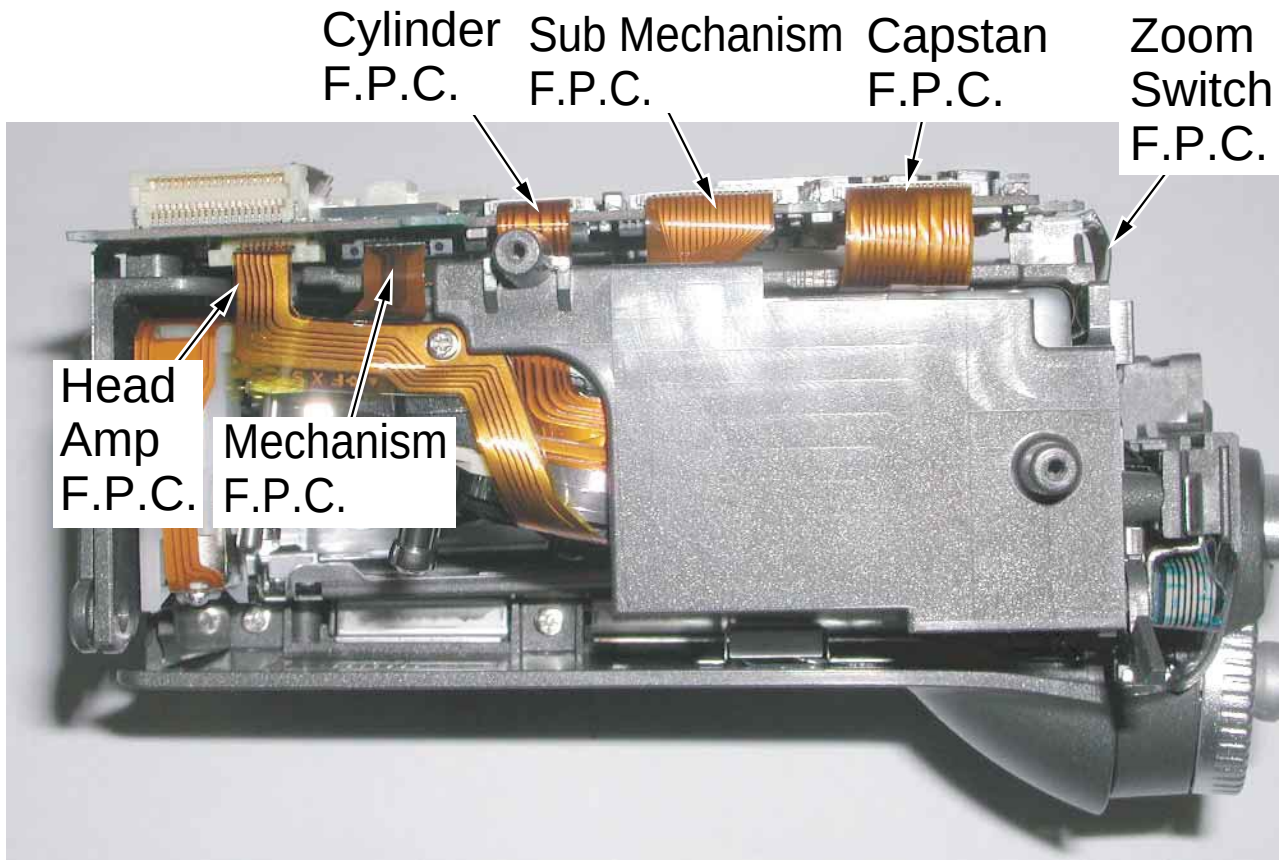
Cylinder F.P.C.
Sub Mechanism F.P.C.
Capstan F.P.C.
Zoom Switch F.P.C.
Head Amp F.P.C.
Mechanism F.P.C.

Fig. D7

8. **Installation of Mechanism Chassis Ass'y**
   Take care not to damage the F.P.C.s.
   1) After installing the Mechanism Chassis Ass'y, confirm the F.P.C.s are positioned as shown.

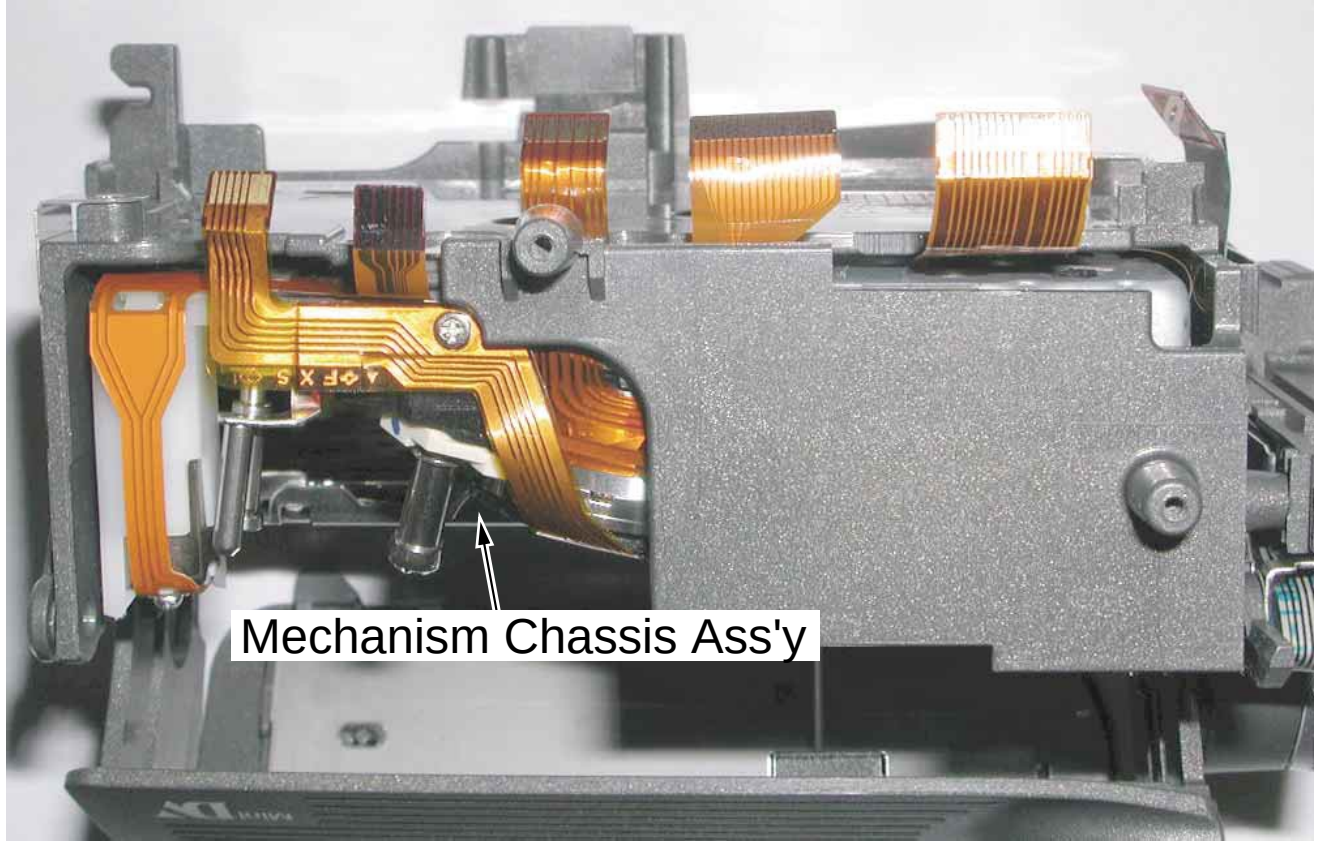
Mechanism Chassis Ass'y

Fig. D8-1

Replacement of Mechanism Chassis Ass'y
When replacing the Main Chassis Ass'y or the Cylinder Unit, be sure to perform the Envelope Output Adjustment. Refer to "ENVELOPE OUTPUT ADJUSTMENT" in MECHANICAL ADJUSTMENT.

Handling Caution of Mechanism Chassis Ass'y
When servicing the Mechanism Chassis Ass'y without the Cassette Up Unit, do not handle the Sub Chassis of the Mechanism Chassis Ass'y.

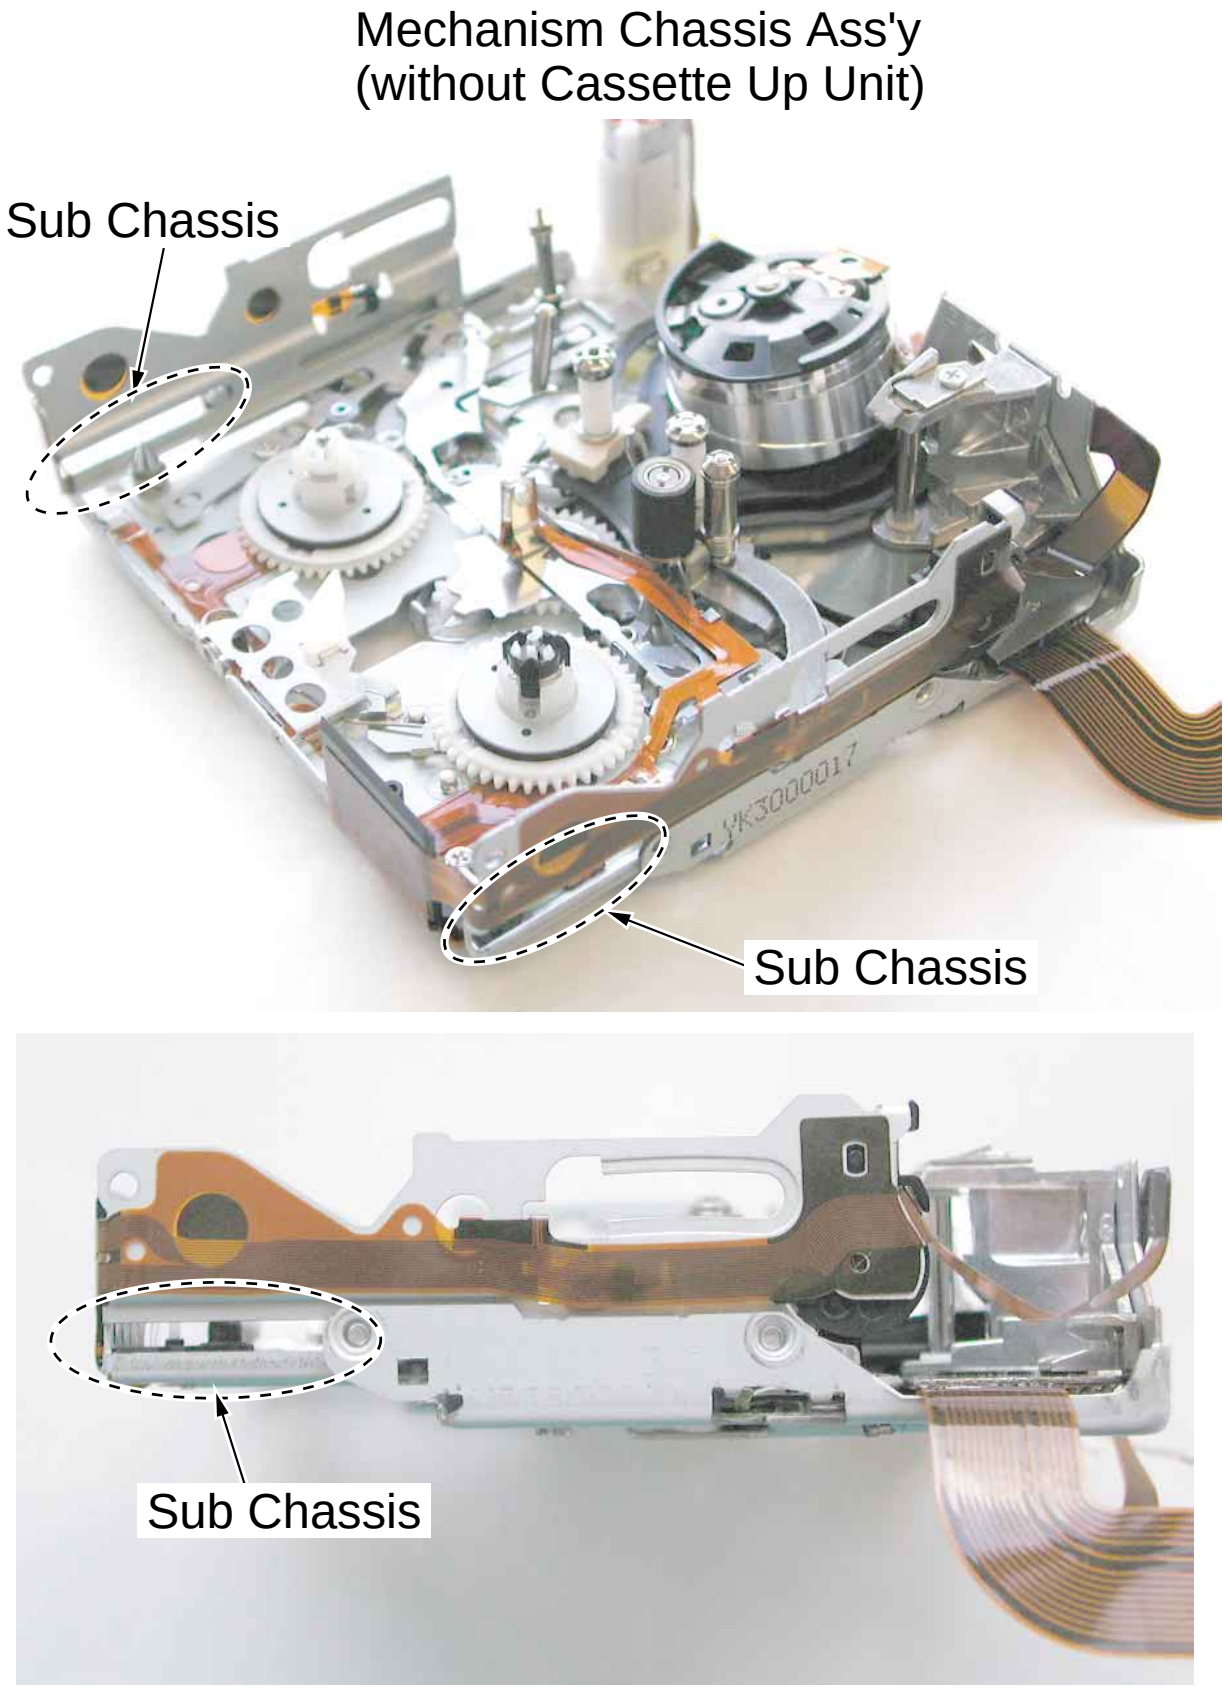
Mechanism Chassis Ass'y
(without Cassette Up Unit)
Sub Chassis
Sub Chassis
Sub Chassis

<Side View>
Fig. D8-2

9. Removal of Jack C.B.A. & Bottom Angle Ass'y

1) Open the L Cover.
2) Remove the Screw (450) and release the Tripod Portion from the hole.

Installation of Jack C.B.A. & Bottom Angle Ass'y

Insert both the Jack C.B.A. & Bottom Angle Ass'y into the 2 slots and secure the Tripod into the hole.

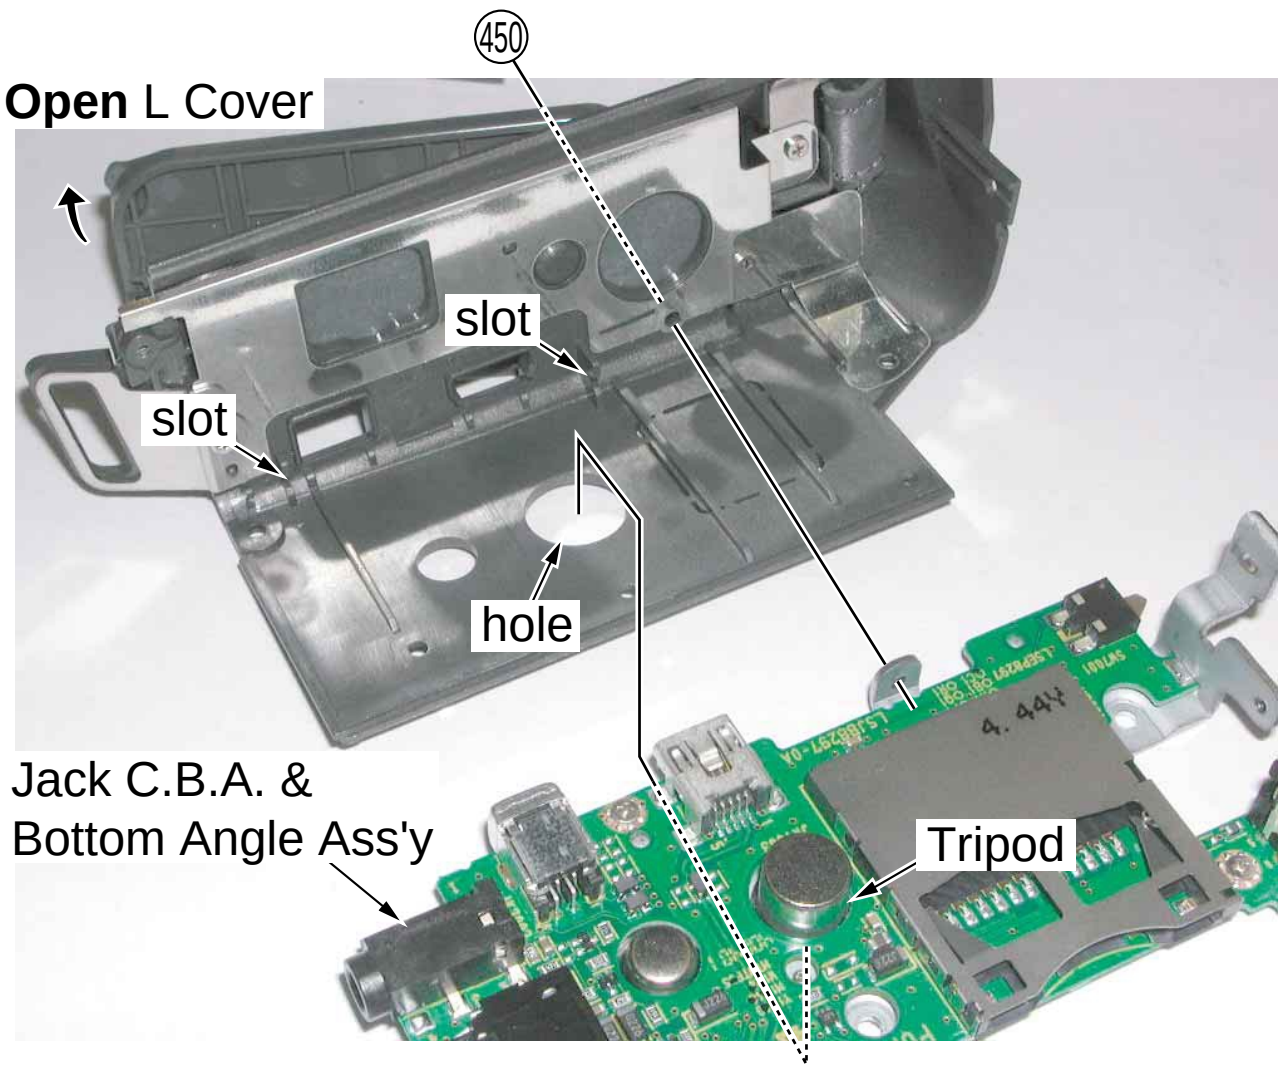
450
Open L Cover
slot
slot
hole
Jack C.B.A. &
Bottom Angle Ass'y
Tripod

Fig. D9

10. Installation of Front C.B.A.

1) Install the Four Eyes Lens **(For model with Light)** into the Front Case. Then, install the Front C.B.A. with 2 bosses of the Four Eyes Lens and 2 Screws (533).
2) Install the Light Shield Sheet with 2 Screws (533).

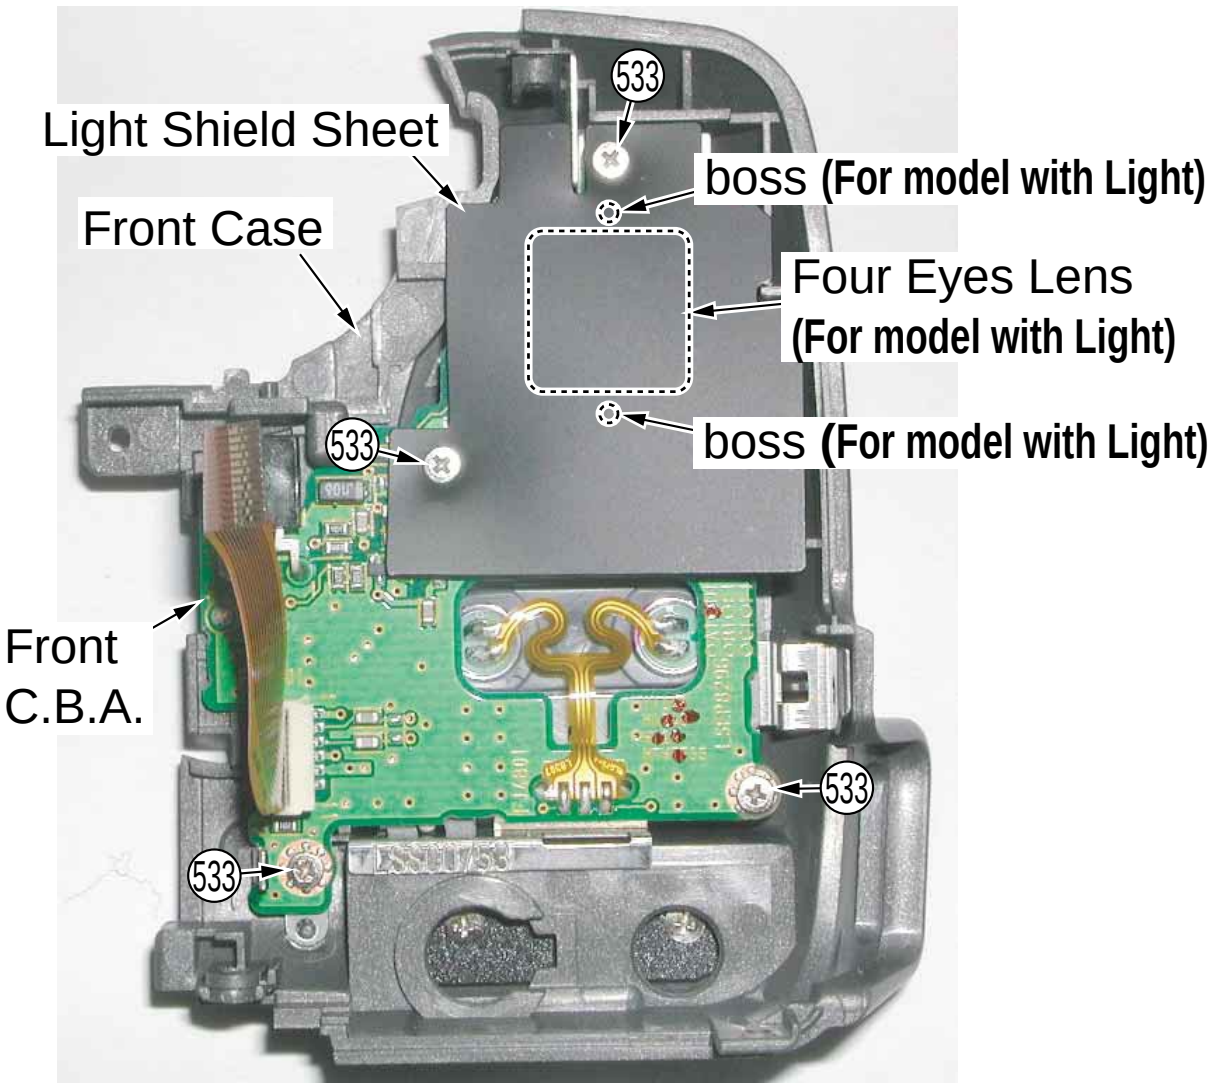
Light Shield Sheet
533
boss **(For model with Light)**
Front Case
Four Eyes Lens
(For model with Light)
533
boss **(For model with Light)**
Front
C.B.A.
533
533

Fig. D10

11. Removal of Side Case R Unit

Open and rotate the LCD to access the 2 Screws (419, 457) as shown below, then remove it.

Installation of Side Case R Unit

When installing, note to the direction of the Shaft Case Unit. Be sure to install the LCD (Ass'y) into the Side Case R Unit with the LCD rotated as shown. Otherwise, the LCD open/close switch on the Side Case R Unit will be damaged.

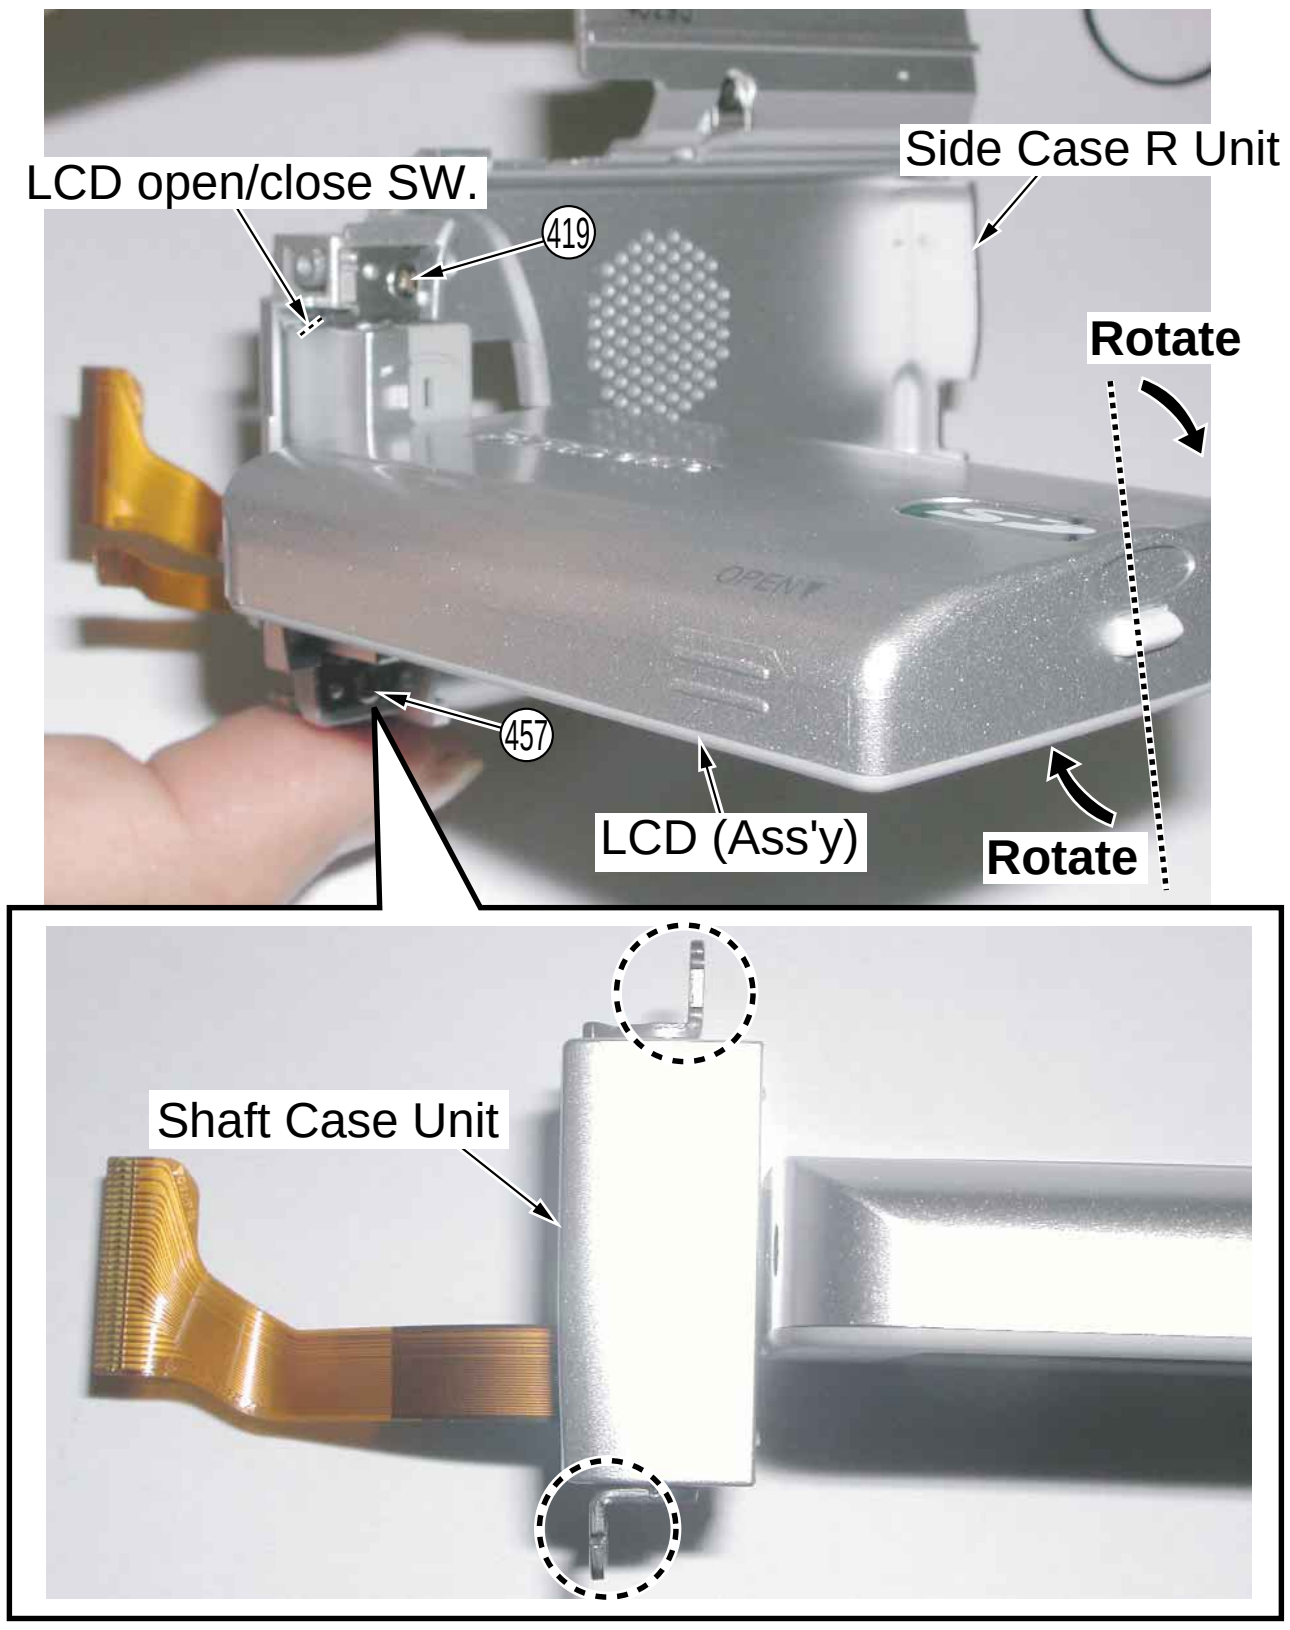
LCD open/close SW.
419
Side Case R Unit
Rotate
457
LCD (Ass'y)
Rotate
Shaft Case Unit

Fig. D11

12. Installation of LCD Backlight C.B.A., LCD Panel Ass'y, LCD Shield Case Unit, LCD Case B

Use extreme care regarding LEDs when handling the LCD Backlight C.B.A.

Install in order shown below.

1) Install the LCD Panel Ass'y onto the LCD Shield Case Unit with the 3 Locking Tabs (L-4) while carefully bending the LCD F.P.C. at it's base so as not to damage it.
2) Install the LCD Shield Case into the LCD Case B with the 4 Locking Tabs (L-3).
3) Install the LCD Backlight C.B.A. onto the LCD Panel Ass'y with the Locking Tab (L-2).
4) Tighten the Screw (542) while keeping the LCD Backlight C.B.A. pressed toward the right. Then, connect the Connector FP8102.

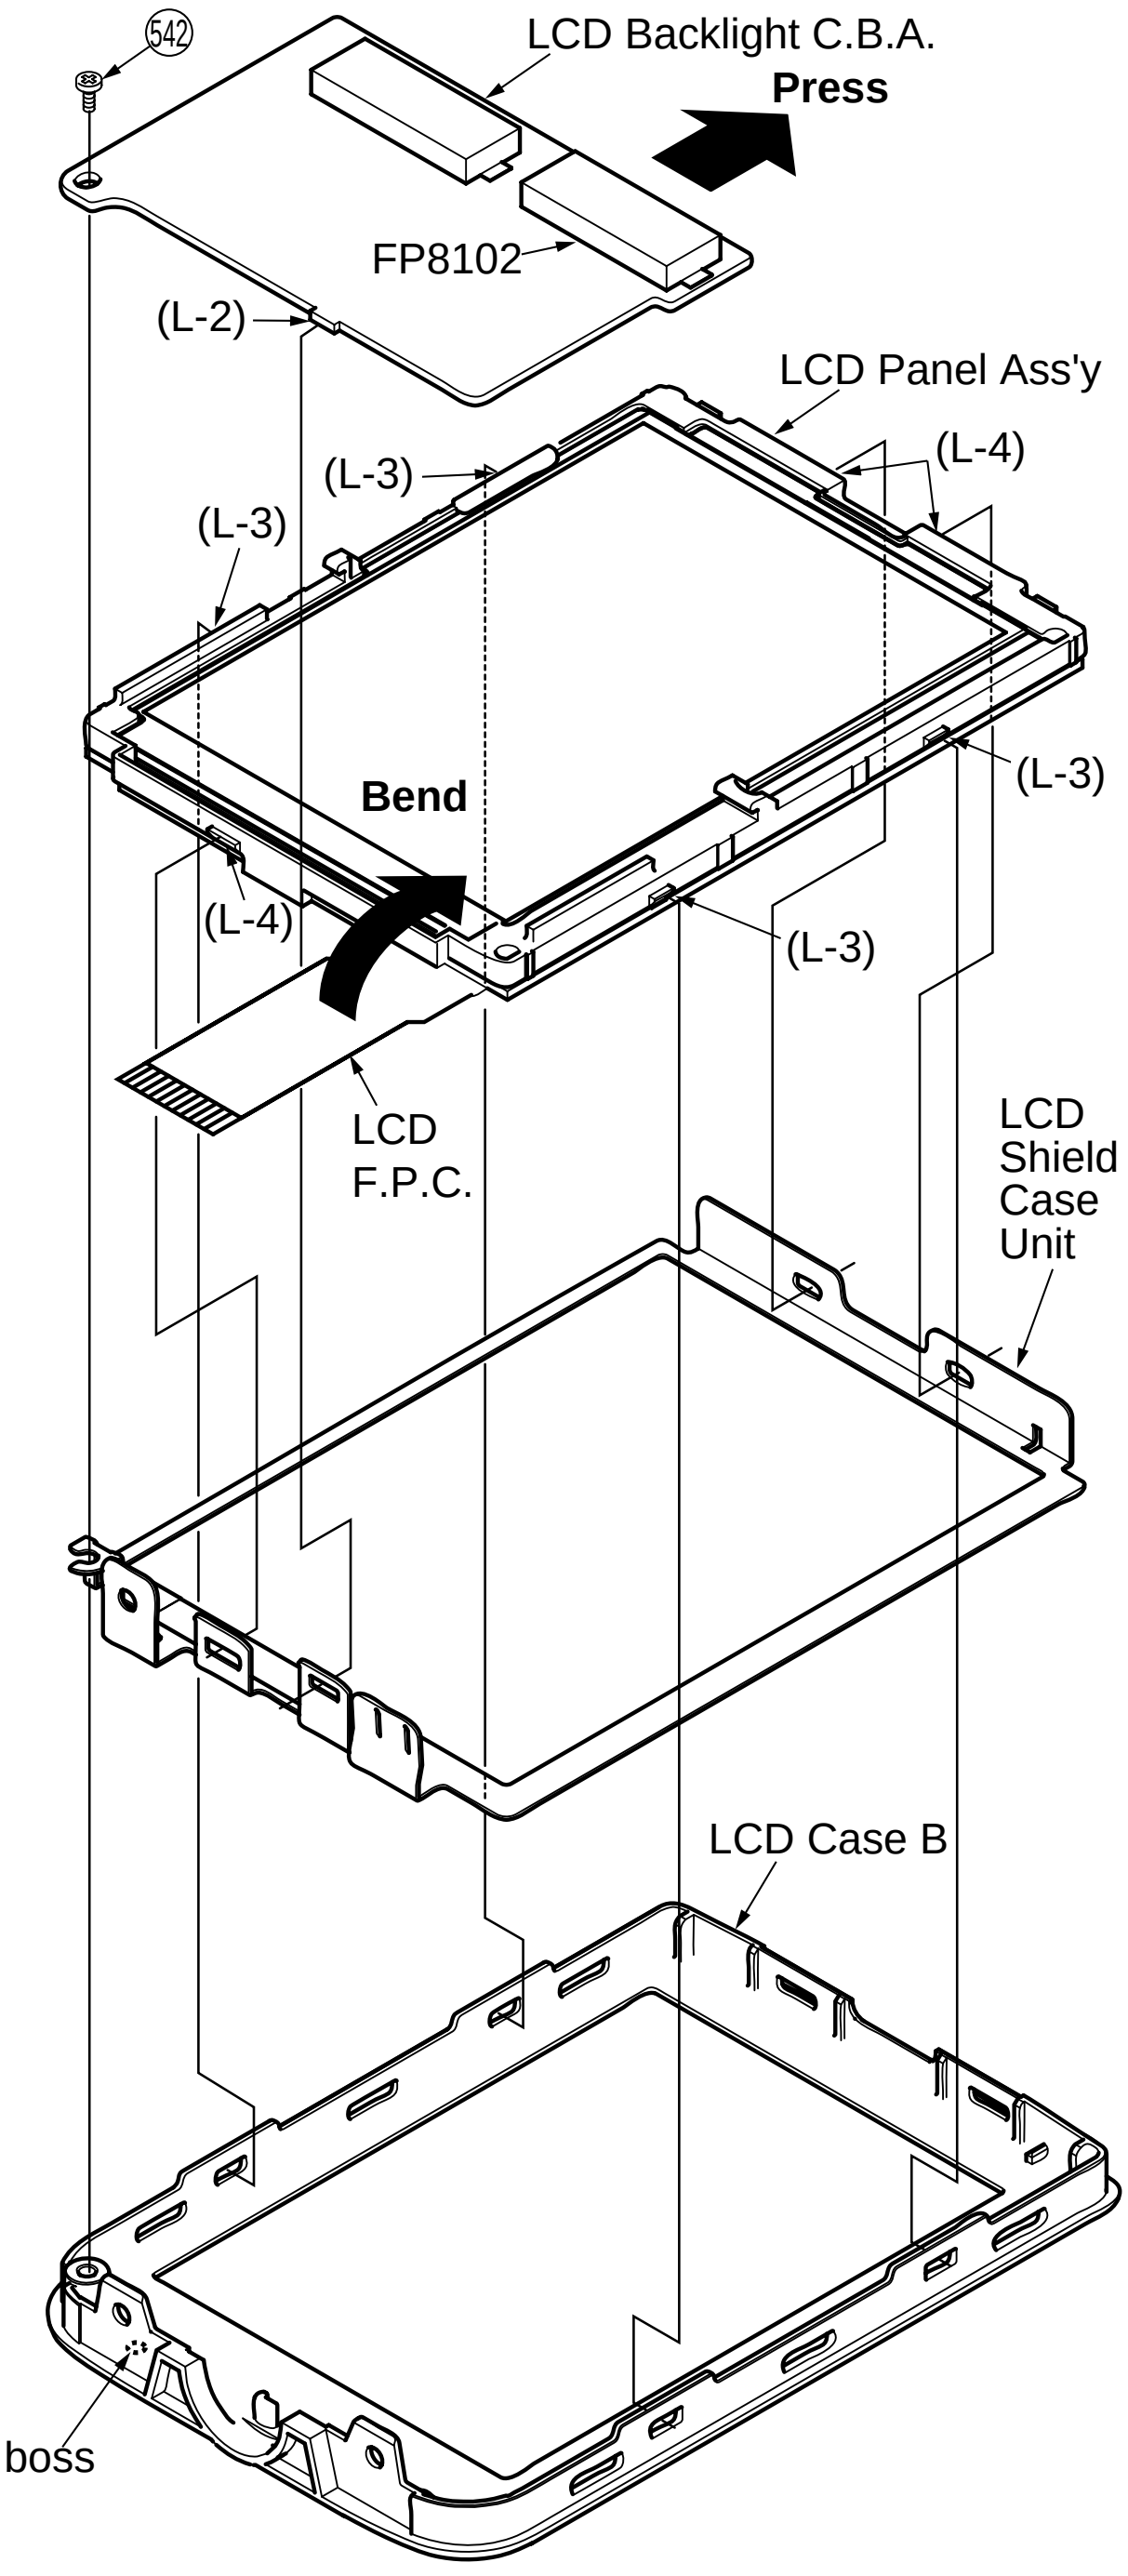
542
LCD Backlight C.B.A.
Press
FP8102
(L-2)
LCD Panel Ass'y
(L-4)
(L-3)
(L-3)
(L-3)
Bend
(L-4)
(L-3)
LCD
F.P.C.
LCD
Shield
Case
Unit
LCD Case B
boss

Fig. D12

13. Installation of LCD Panel, Reflect Sheet, Lead Light Panel, Diffusion Sheet, BEF Sheet, BEF Sheet A, Panel Holder Unit

a. When replacing the LCD Panel, the Diffusion Sheet, the BEF Sheet and the BEF Sheet A, make sure to remove the Protection Sheets.

To distinguish Sheets from attached Protection Sheet:

- A blue Protection Sheet is affixed to both faces of the Diffusion Sheet.
- A yellow Protection Sheet is affixed to both faces of the BEF Sheet.
- A transparent Protection Sheet is affixed to both faces of the BEF Sheet A.

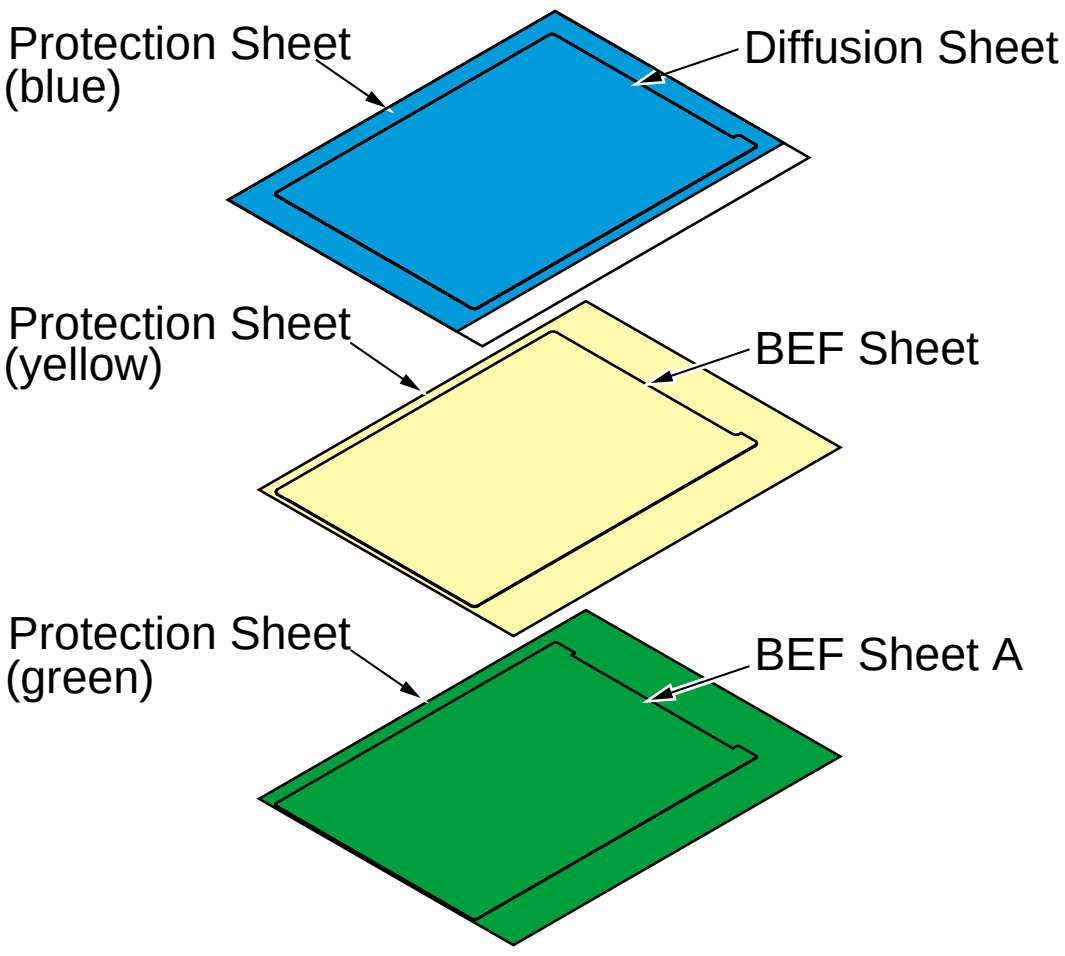
Protection Sheet
(blue)
Diffusion Sheet
Protection Sheet
(yellow)
BEF Sheet
Protection Sheet
(green)
BEF Sheet A

b. Use extreme care when handling the LCD Panel, the Reflect Sheet, the Lead Light Panel, the Diffusion Sheet, the BEF Sheet and the BEF Sheet A to avoid damage, dust, and spots (especially fingerprints, etc.)

Install in order shown below.

1) Install in order the BEF Sheet A, BEF Sheet and Diffusion Sheet while inserting the corners of each sheets into the slots of the Panel Holder Unit.
2) Install the Lead Light Panel while inserting the corners into the slots of the Panel Holder Unit.
3) Align the Reflect Sheet with the edge of the Panel Holder Unit, and install it using adhesive tape on the Reflect Sheet.

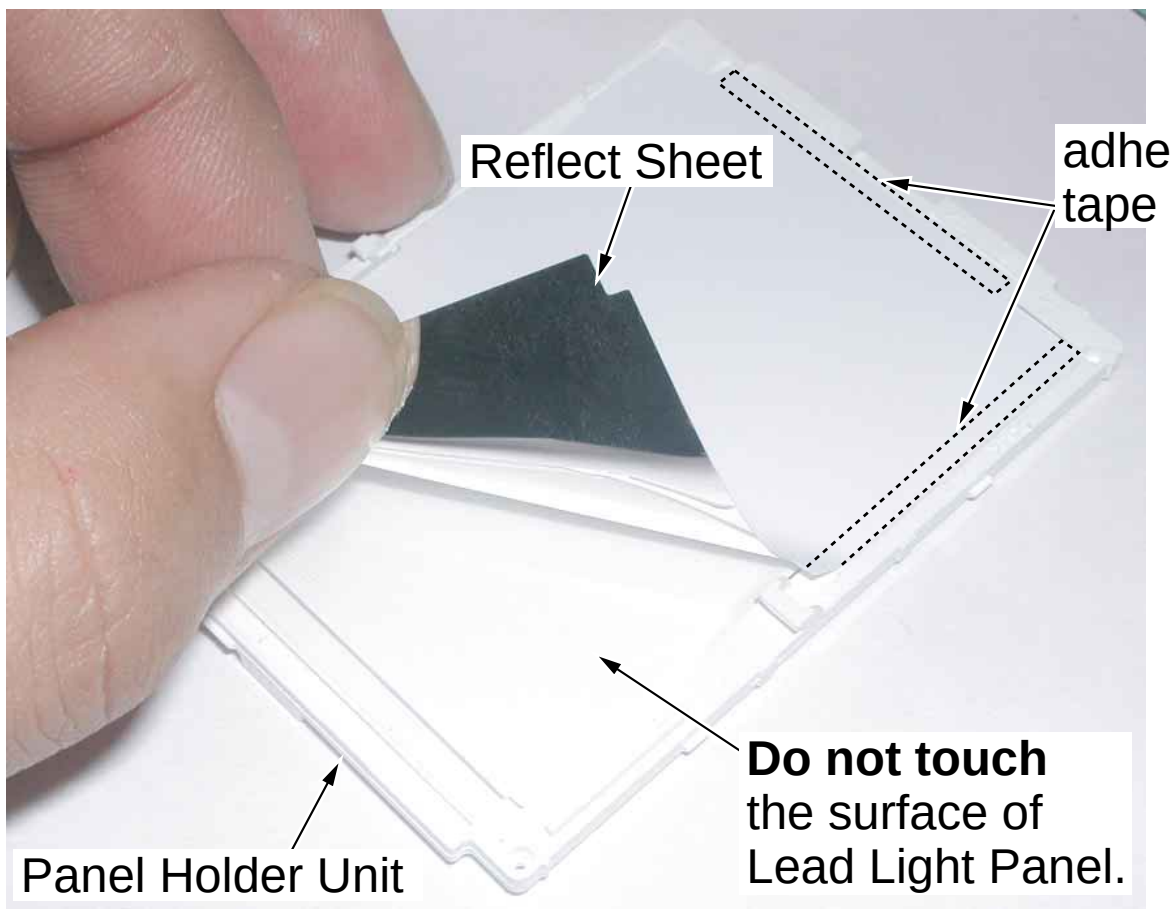
Reflect Sheet
adhesive
tape
Panel Holder Unit
Do not touch
the surface of
Lead Light Panel.

Fig. D13-1

4) Install the LCD Panel with adhesive tape so that the cross marks are positioned in the center of the holes in the Panel Holder Unit.

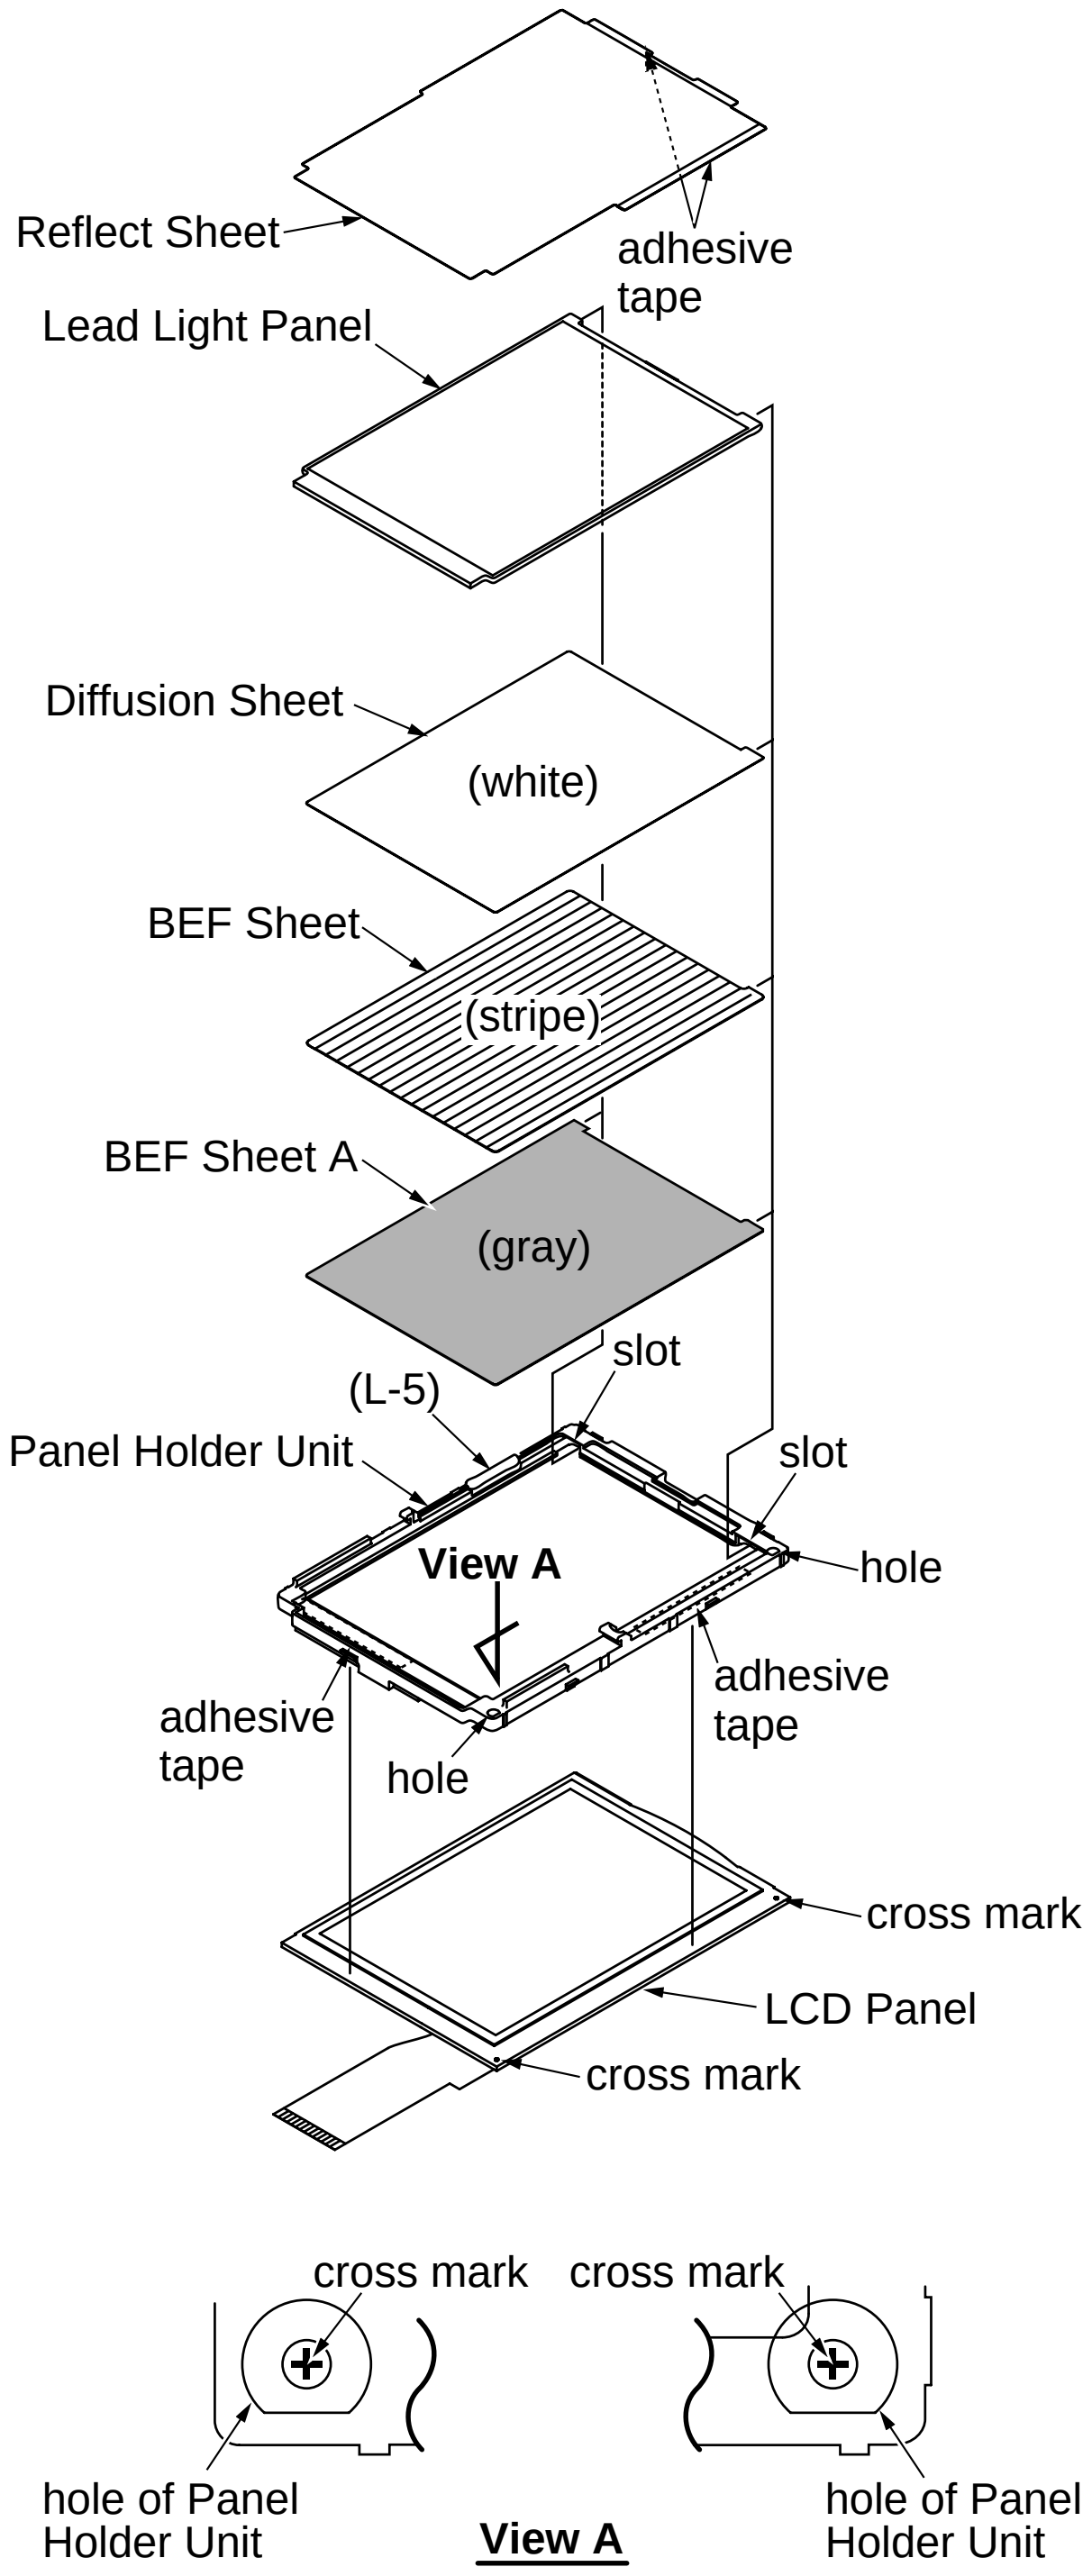
Reflect Sheet
adhesive
tape
Lead Light Panel
Diffusion Sheet
(white)
BEF Sheet
(stripe)
BEF Sheet A
(gray)
slot
(L-5)
Panel Holder Unit
slot
View A
hole
adhesive
tape
adhesive
tape
hole
cross mark
LCD Panel
cross mark
cross mark
cross mark
hole of Panel
Holder Unit
View A
hole of Panel
Holder Unit

Fig. D13-2

14. Removal of CCD C.B.A., Filter Rubber, Optical Filter, Filter Holder

CAUTION:

1) When removing the CCD C.B.A., take care that the Optical Filter does not fall out.
2) Use extreme caution when removing the CCD C.B.A. as it is easily damaged by static electricity. Use a Wrist Strap while removing and installing.
3) Do not touch the CCD window surface.

Installation of CCD C.B.A., Filter Rubber, Optical Filter, Filter Holder

Install in order shown below.

1) Install the Filter Holder **(For model with 30X zoom)** correctly.
2) Install the Optical Filter correctly.
   Note: Make sure that no dust gets on the Optical Filter or in the Lens Unit. Clean the Optical Filter with lens cleaning paper dampened with lens cleaner if necessary.
3) Install the Filter Rubber on the Optical Filter correctly as shown below.
   Note: Make sure that no dust gets on the Filter Rubber.
4) Install the CCD C.B.A. into the Lens Unit. Then, tighten the 2 Screws (536).
   Note: Do not touch the Lens Surface. Clean the surface with lens cleaning paper dampened with lens cleaner if necessary.

15. Installation of Zoom Motor Unit/Focus Motor Unit

Install the Zoom Motor Unit/Focus Motor Unit so that the Shaft of the Zoom Motor Unit/Focus Motor Unit is set in the Holder.

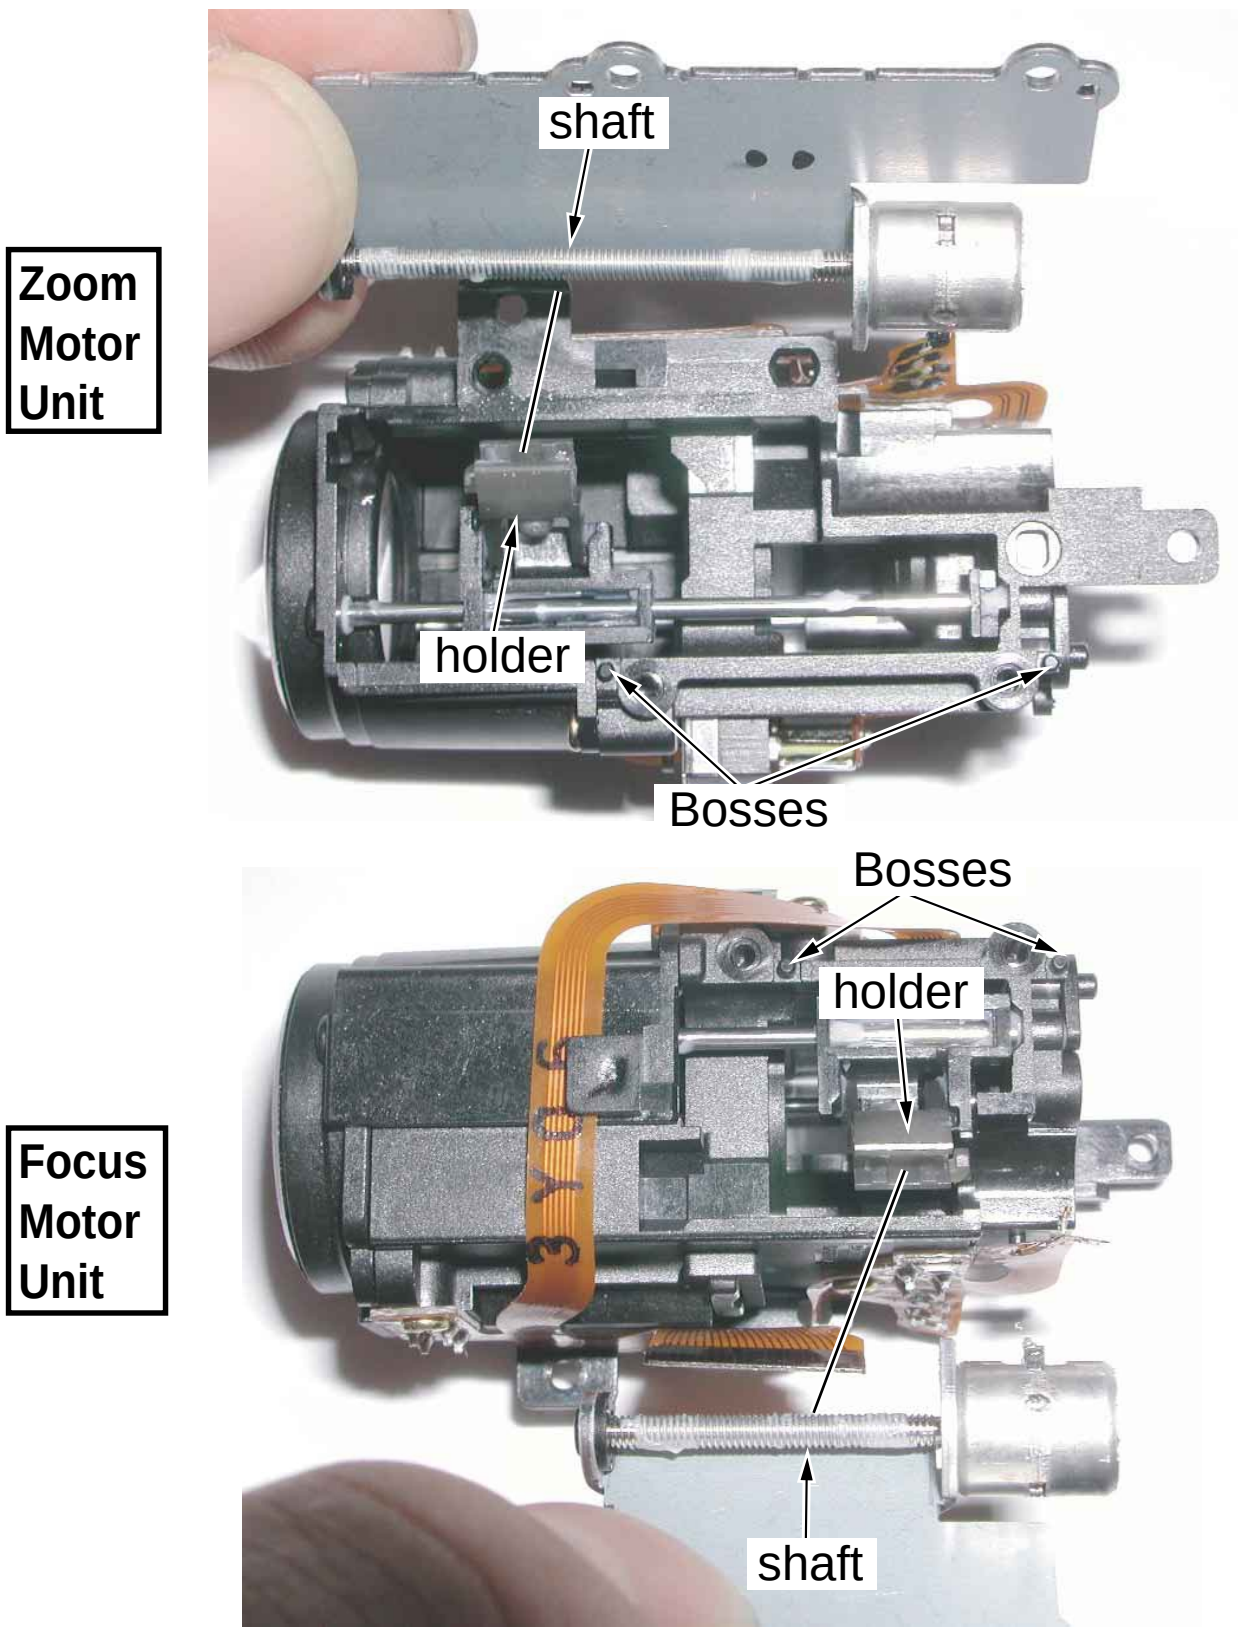
Zoom Motor Unit
shaft
holder
Bosses
Focus Motor Unit
Bosses
holder
shaft

Fig. D15

16. Installation of EVF Slide Piece, EVF Base Frame

1) Pass the EVF F.P.C. through the EVF Base Frame hole.
2) Install the EVF Slide Pieces into the EVF Base Frame from both sides.
3) Slide the EVF Case Ass'y to the end so that the ribs are inserted into the holes of the EVF Slide Pieces.
4) Locate the threaded holes, and tighten the 2 Screws (450).
5) After installing, confirm the EVF moves correctly.

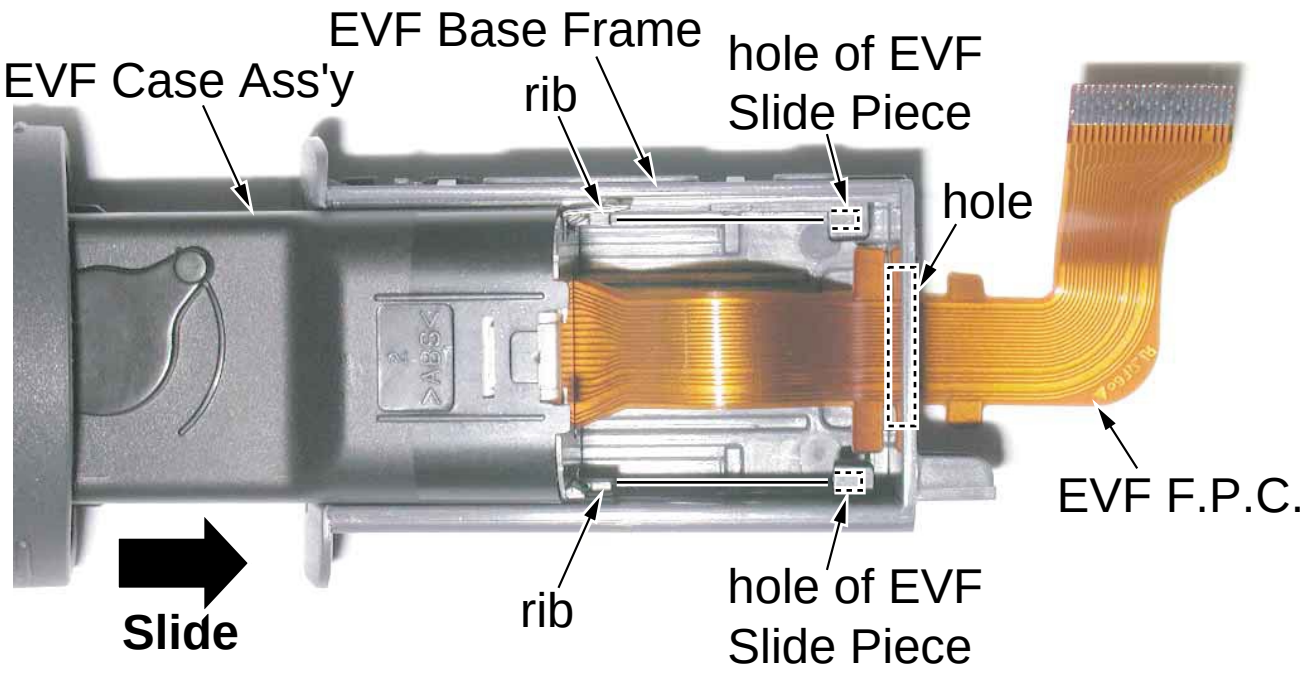
EVF Base Frame
EVF Case Ass'y
rib
hole of EVF Slide Piece
hole
EVF F.P.C.
Slide
rib
hole of EVF Slide Piece

<Top View>

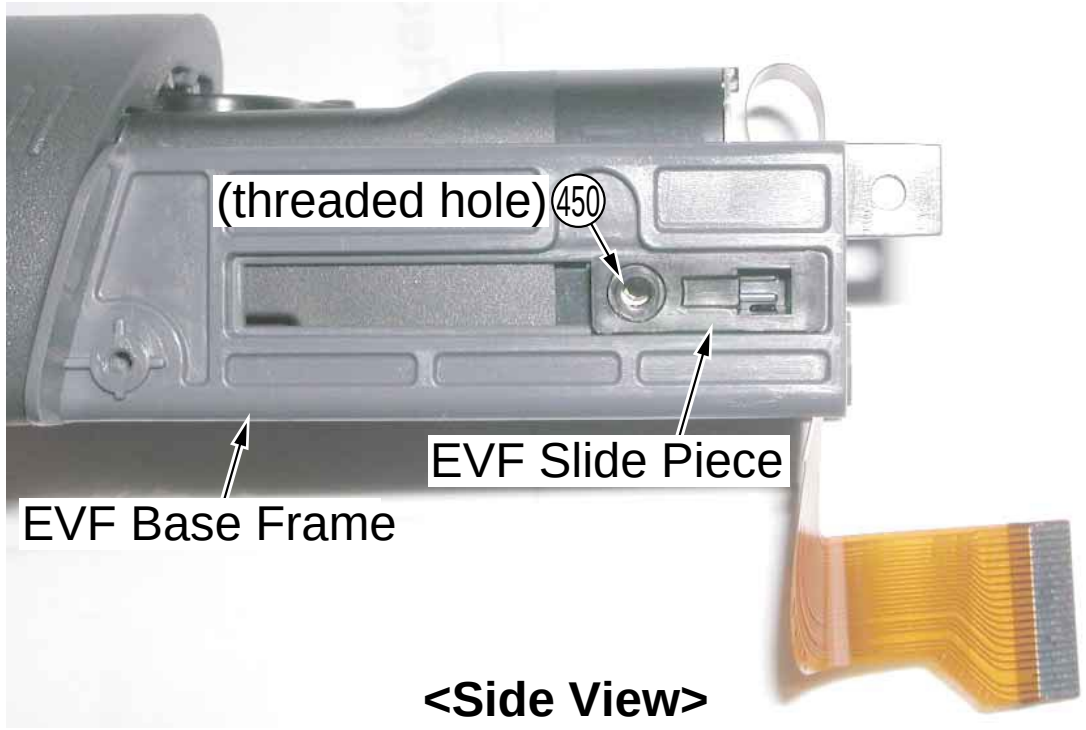
(threaded hole) (450)
EVF Slide Piece
EVF Base Frame

<Side View>

Fig. D16

17. **Installation of EVF Spring, EVF F.P.C.**
    1) Insert the EVF F.P.C. into the EVF Spring hole paying particular attention to the direction.
    2) Connect the EVF F.P.C. to Connector FP951.
    3) Insert the Locking Tab (L-2) at first, then fit the EVF Spring in the EVF Case and tighten the Screw (450).

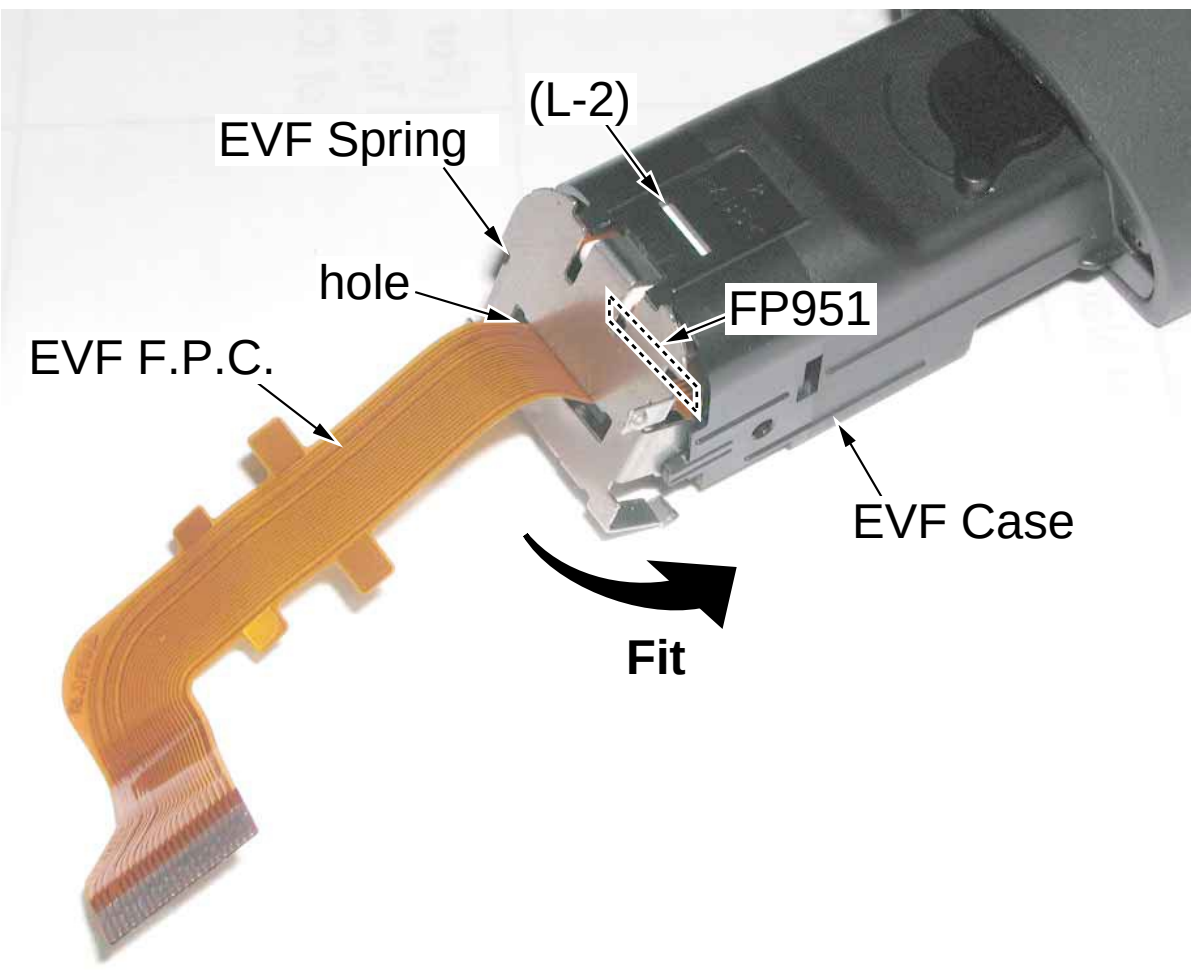
(L-2)
EVF Spring
hole
FP951
EVF F.P.C.
EVF Case
Fit

Fig. D17

18. **Removal of Eye Cap**
    Remove the Eye Cap after removing the 2 Screws (524).

19. **Handling cautions of EVF Lens Unit**
    Use extreme care when handling the EVF Lens Unit to avoid damage, dust, and spots (especially fingerprints, etc.)

    Installation of EVF Lens Unit, Eye Sight Lever
    1) Install the Eye Sight Lever into the EVF Case hole in the direction shown.
    2) Install the EVF Lens Unit into the EVF Case while grasping both sides of the springs with tweezers, etc.
    3) After installing, confirm the Eye Sight Lever and the EVF Lens Unit work together correctly.

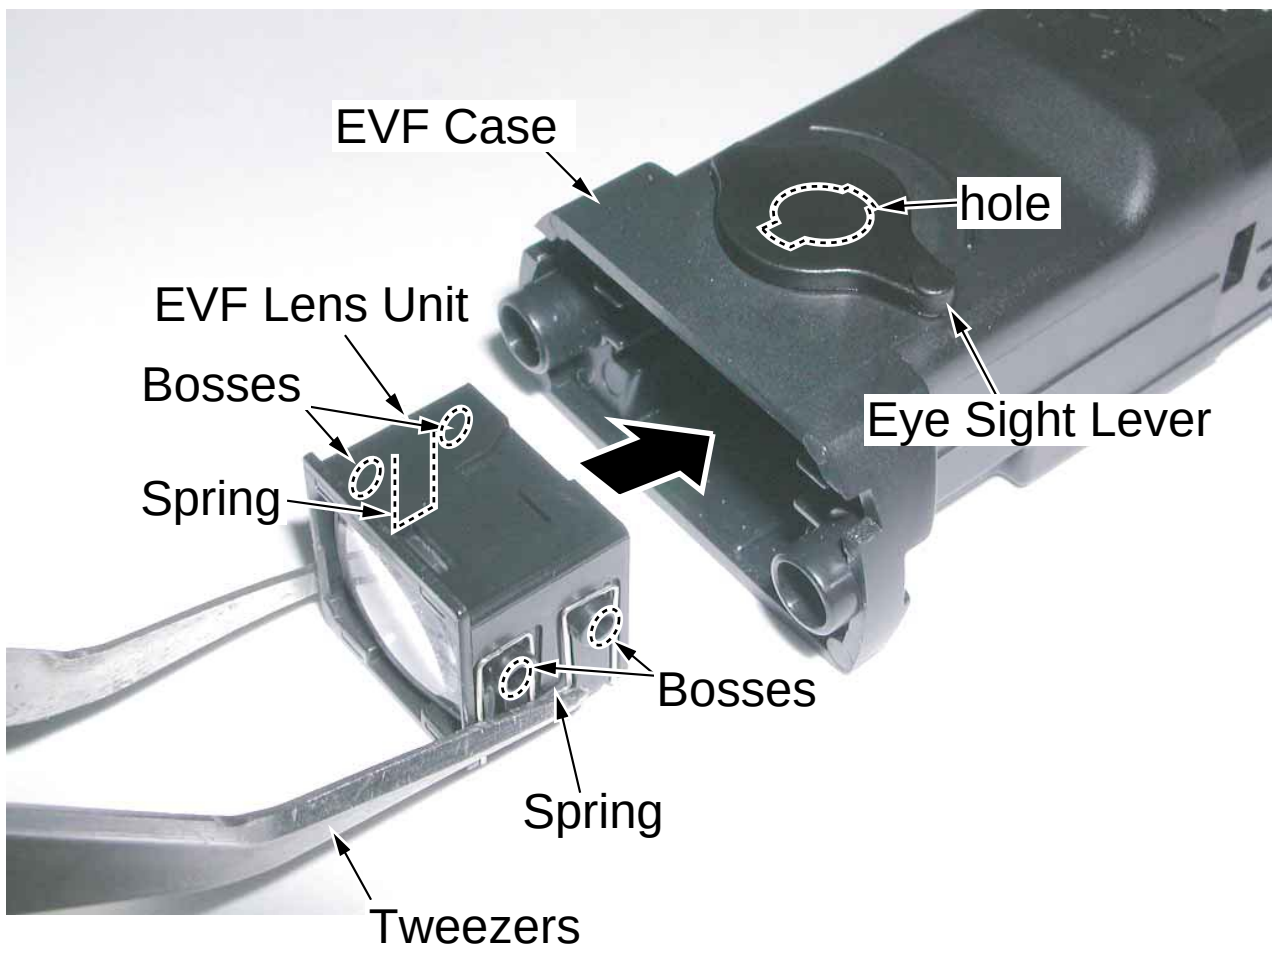
EVF Case
hole
EVF Lens Unit
Bosses
Eye Sight Lever
Spring
Bosses
Spring
Tweezers

Fig. D19

8.2. MECHANISM SECTION

Flow-Chart for Disassembly Procedures

No.	Item / Part	Fig.	Removal (Screw, Connector, Flex. & Other)
1	Cassette Up Unit	Fig. M1 Fig. M2 Fig. M3 Fig. M4	It makes the mechanism position in Eject condition (For Battery) 3-Screws (A) 3-Tabs It remove the piece arrangement unit from rail department
2	Cylinder Unit	Fig. M5 Fig. M6	1-Screw (B) 3-Screw (C) Cylinder Unit

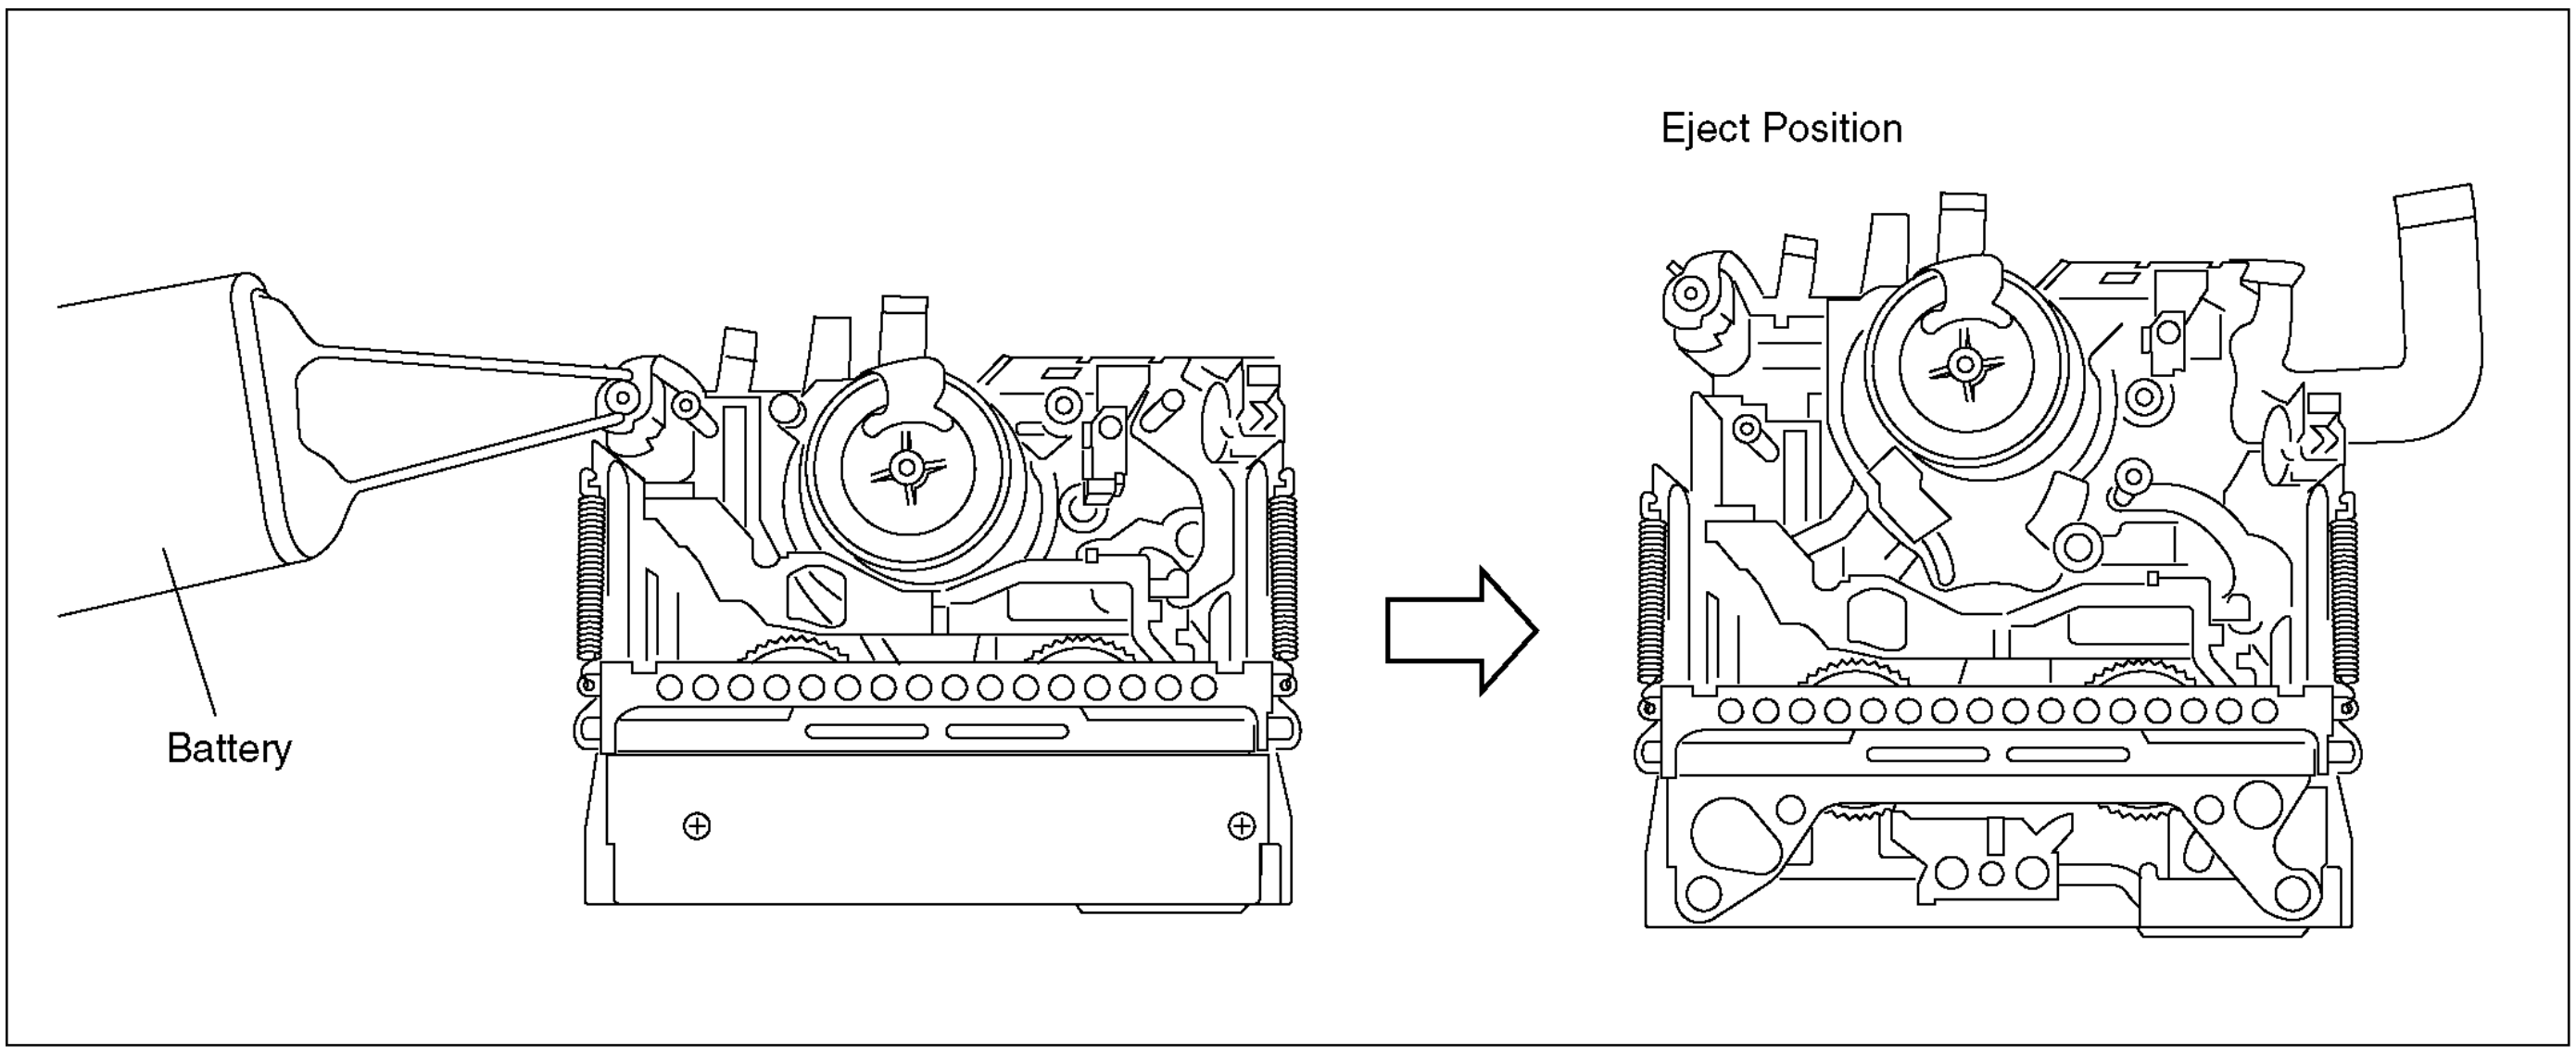

Fig. M1

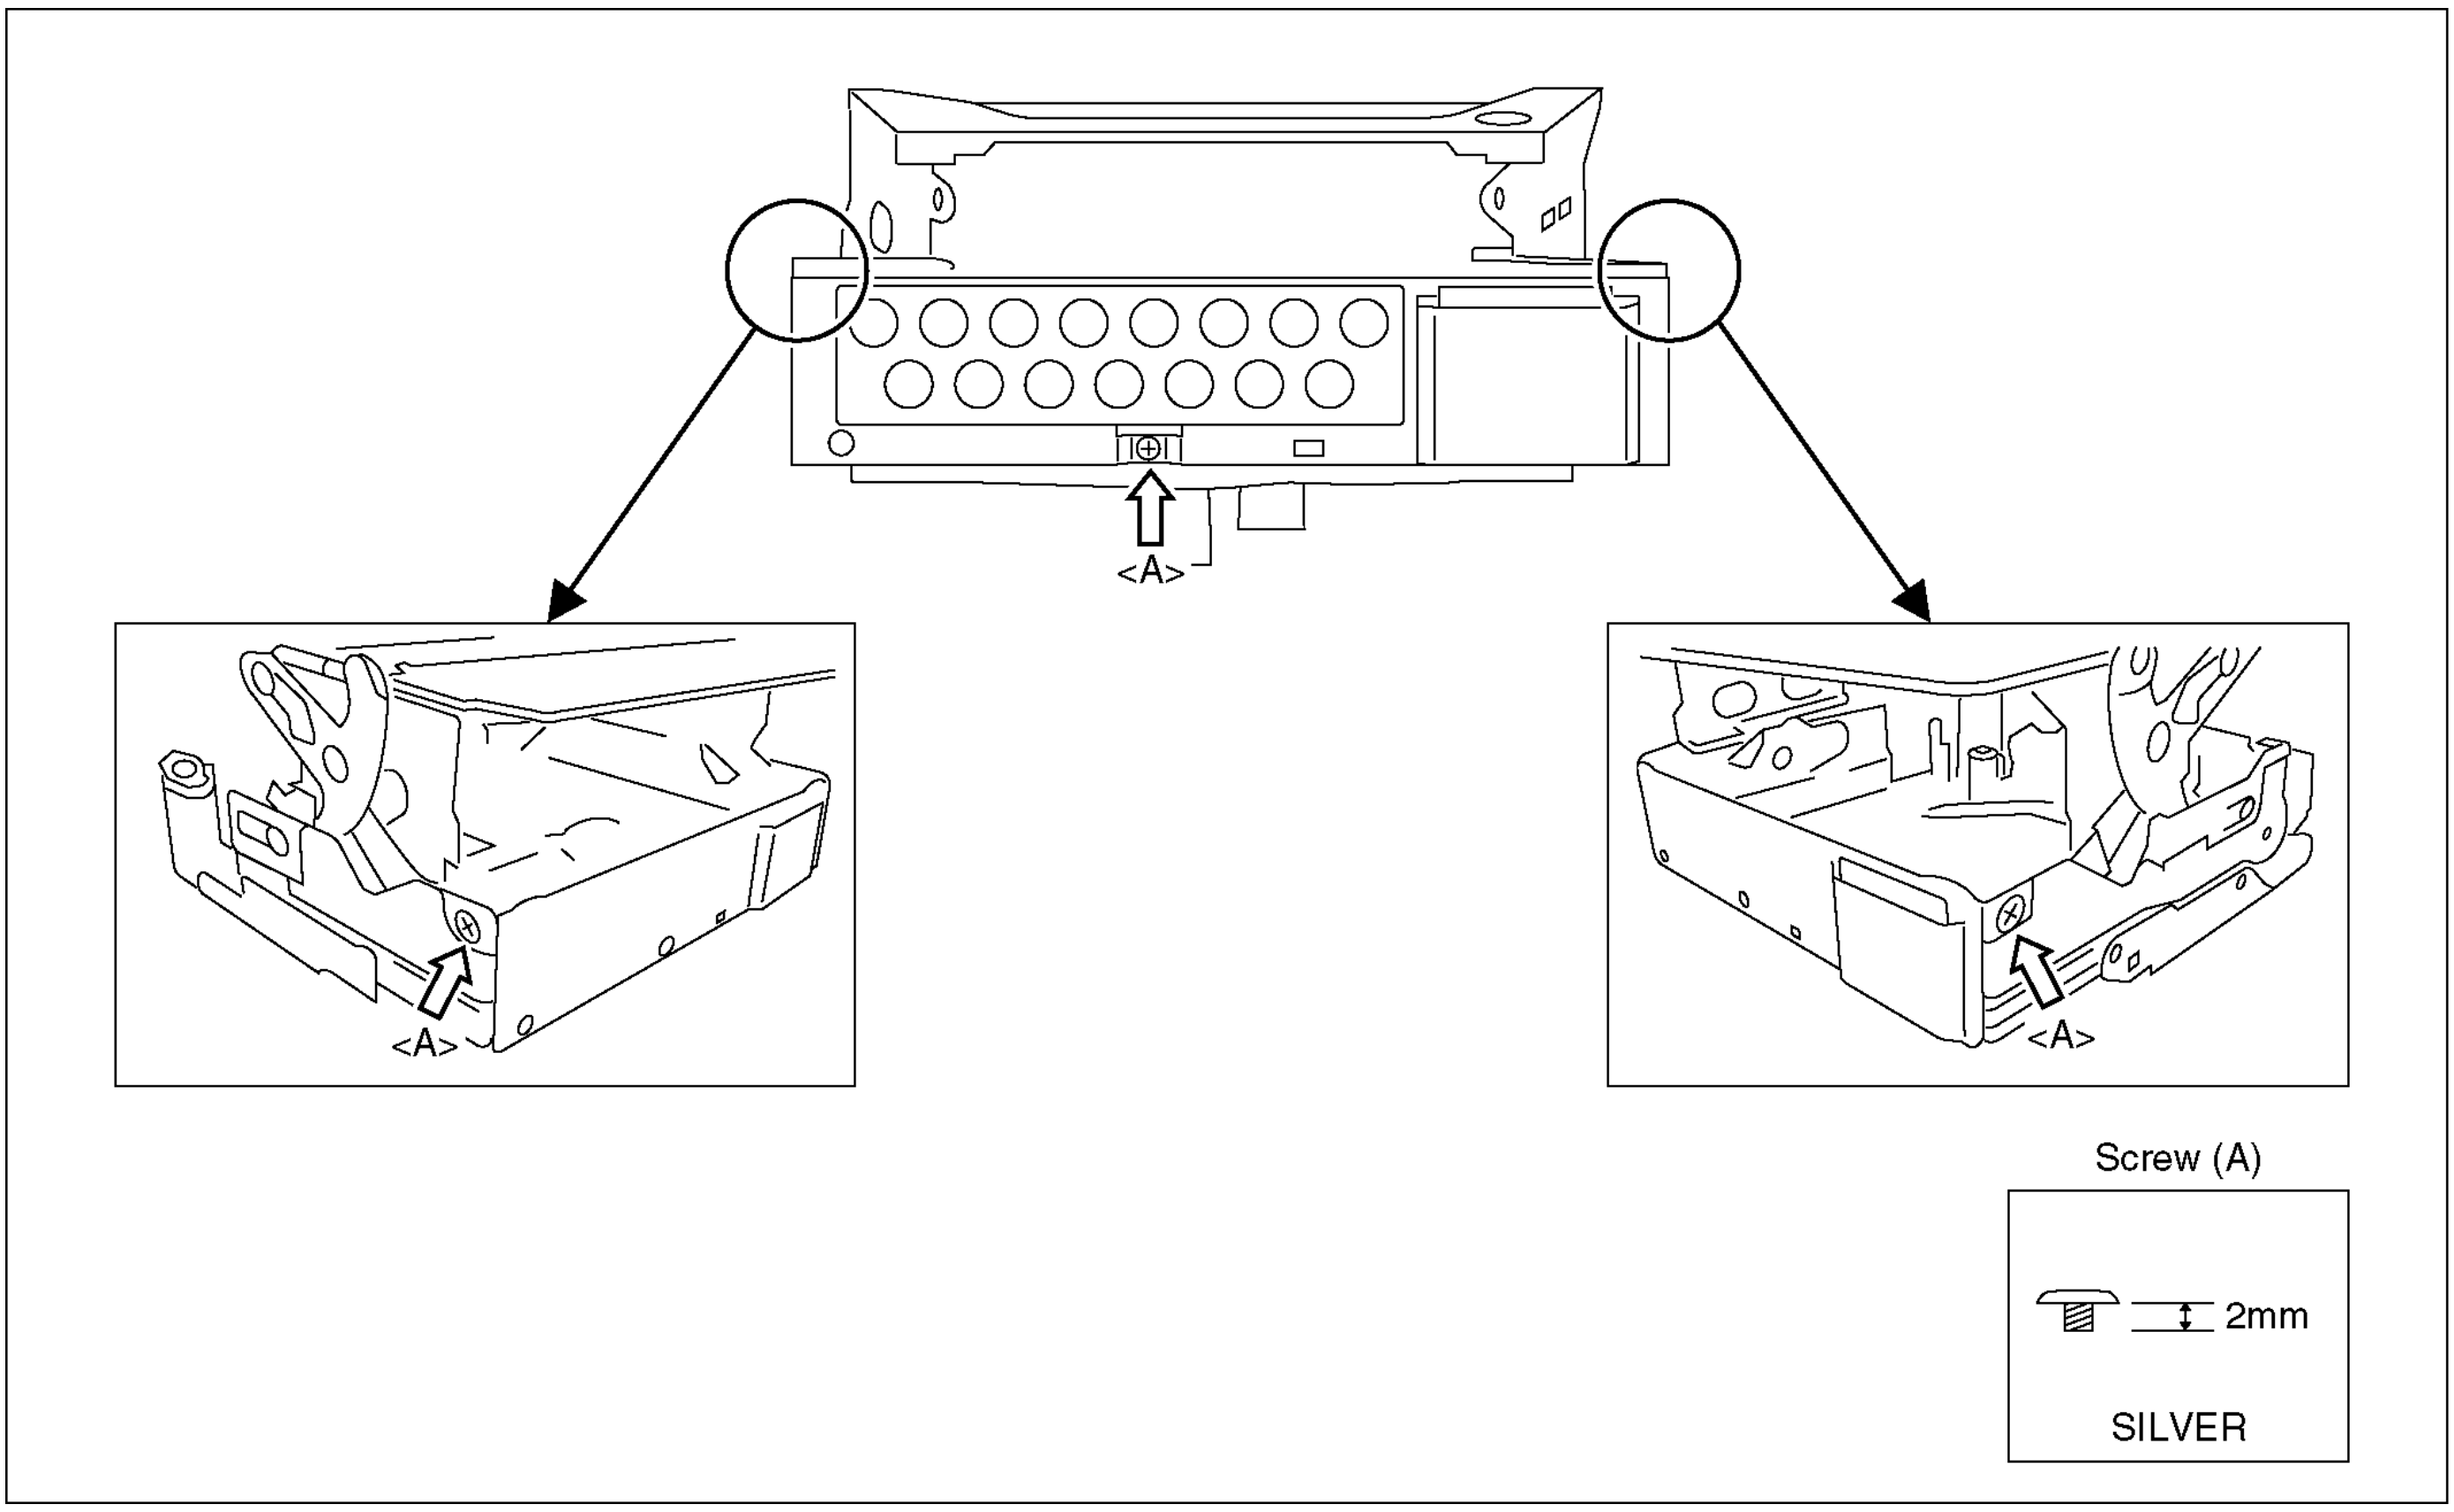

Fig. M2

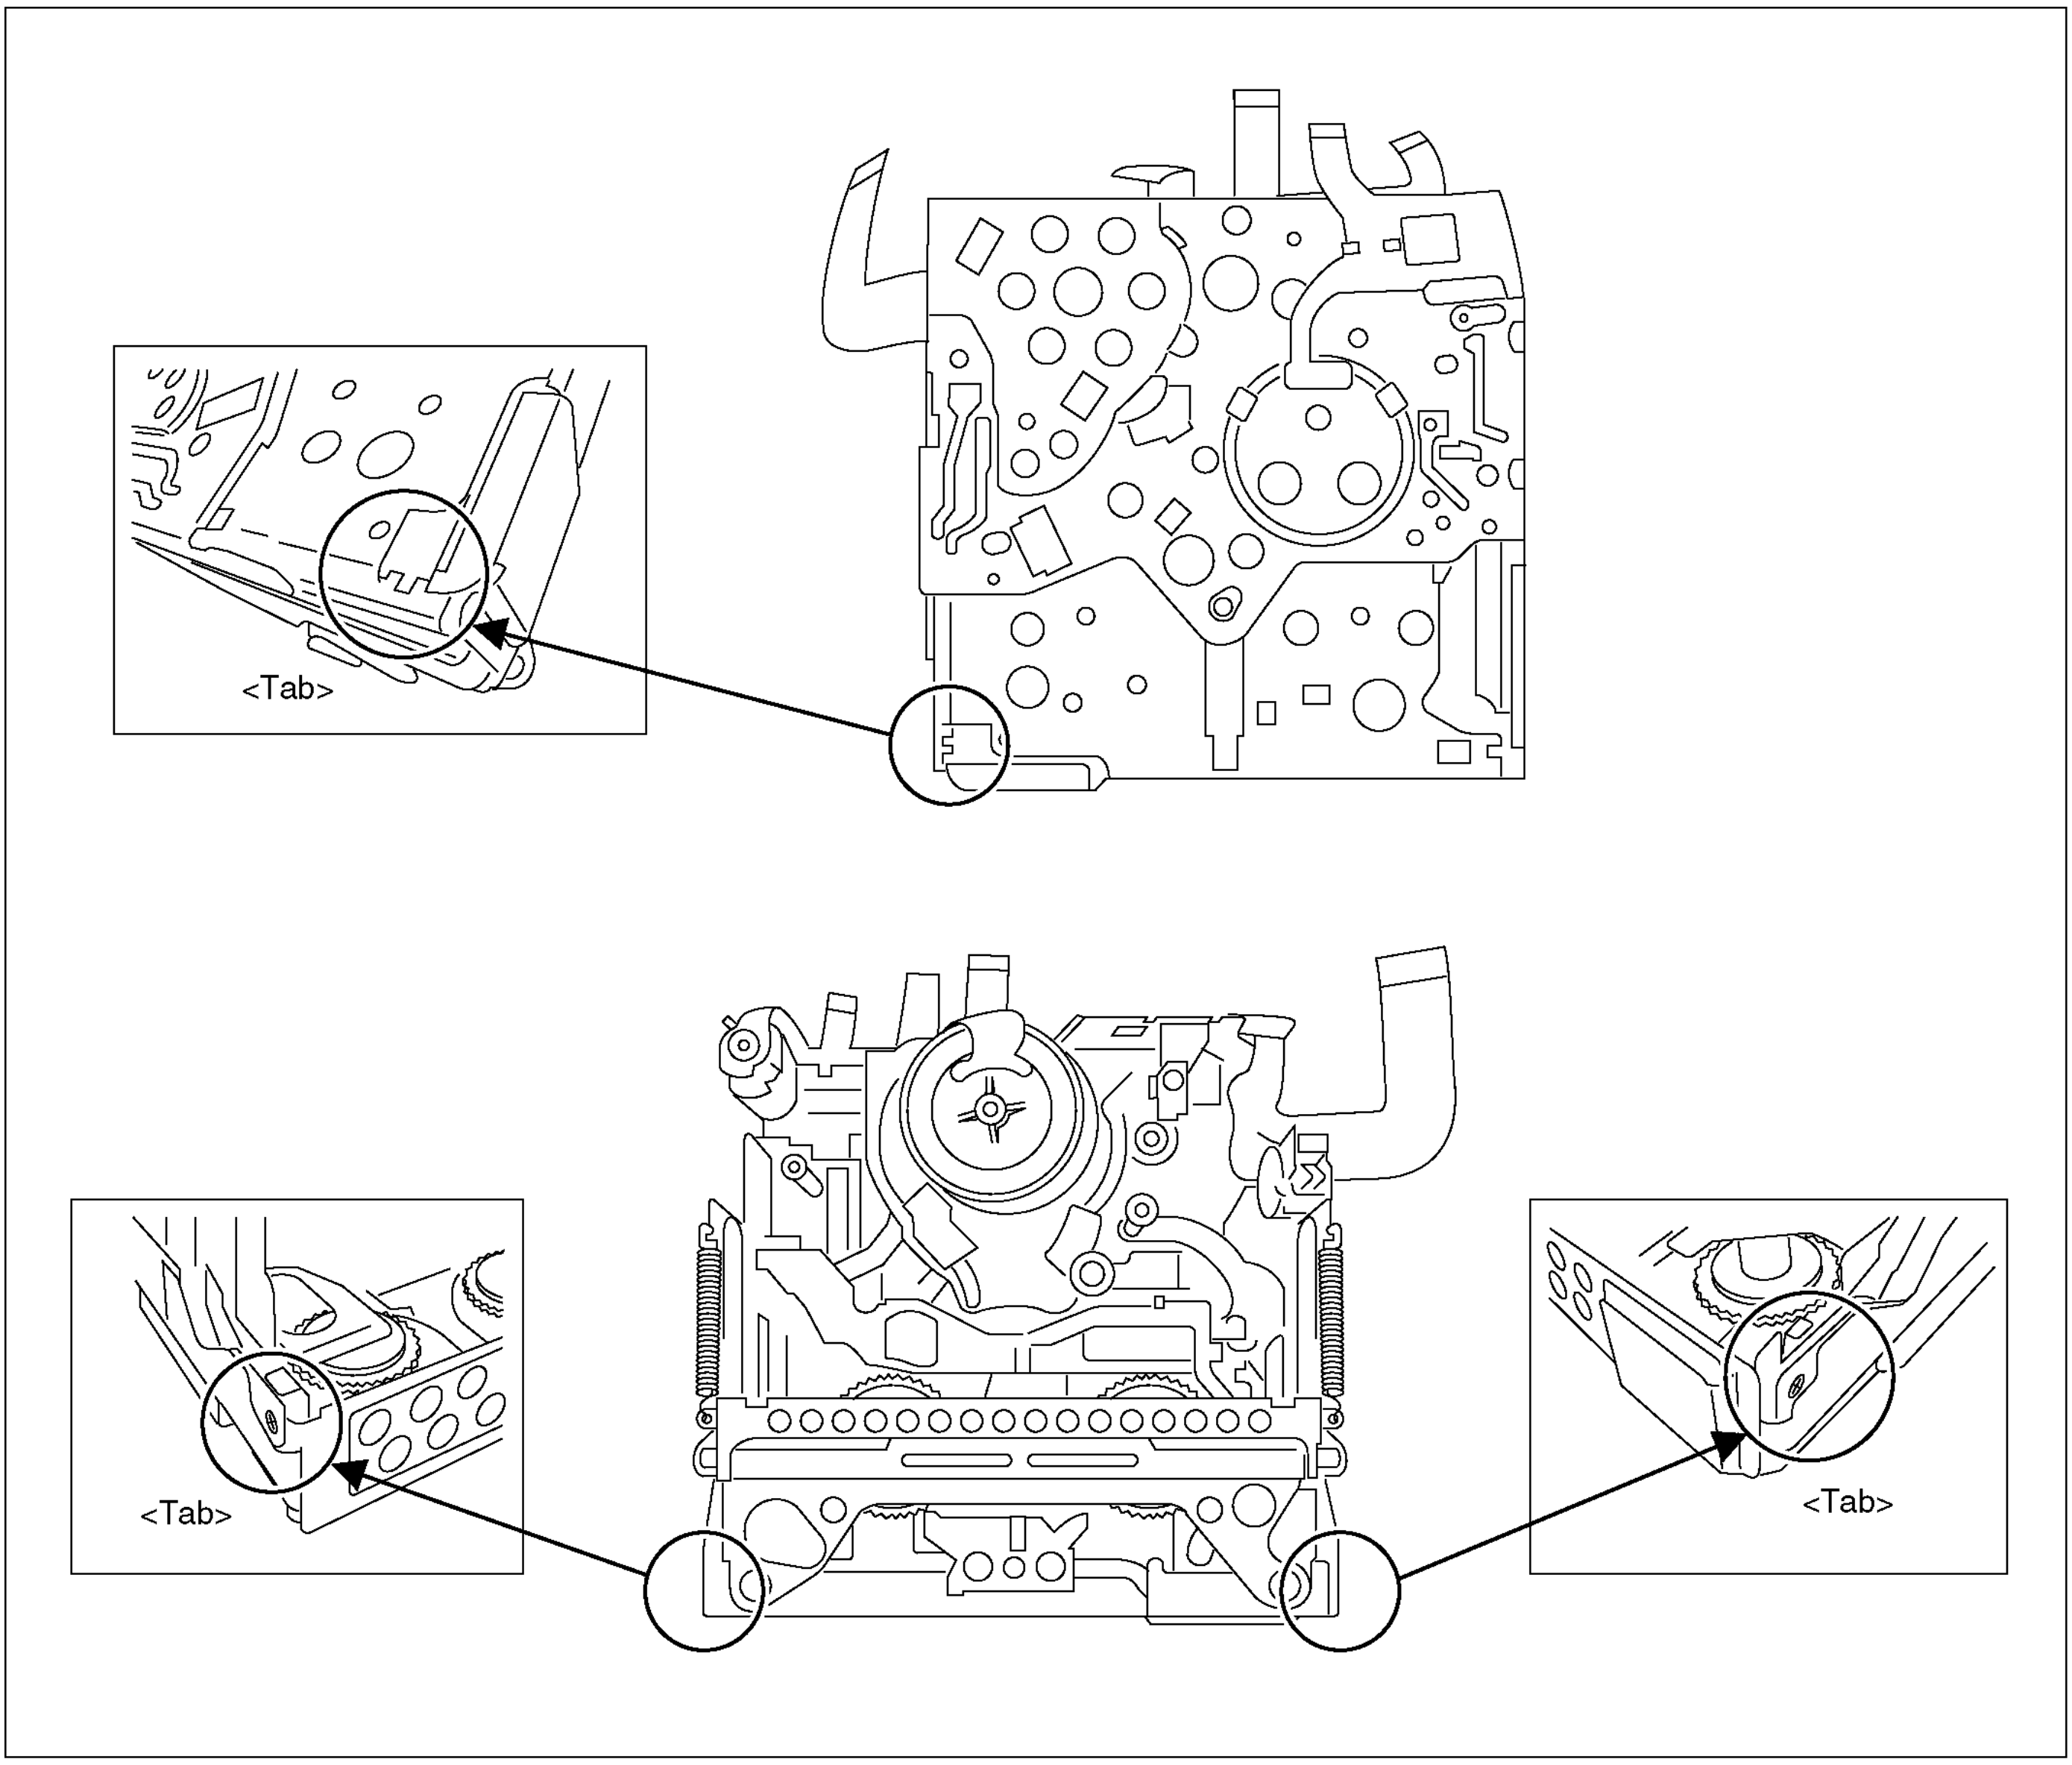

Fig. M3

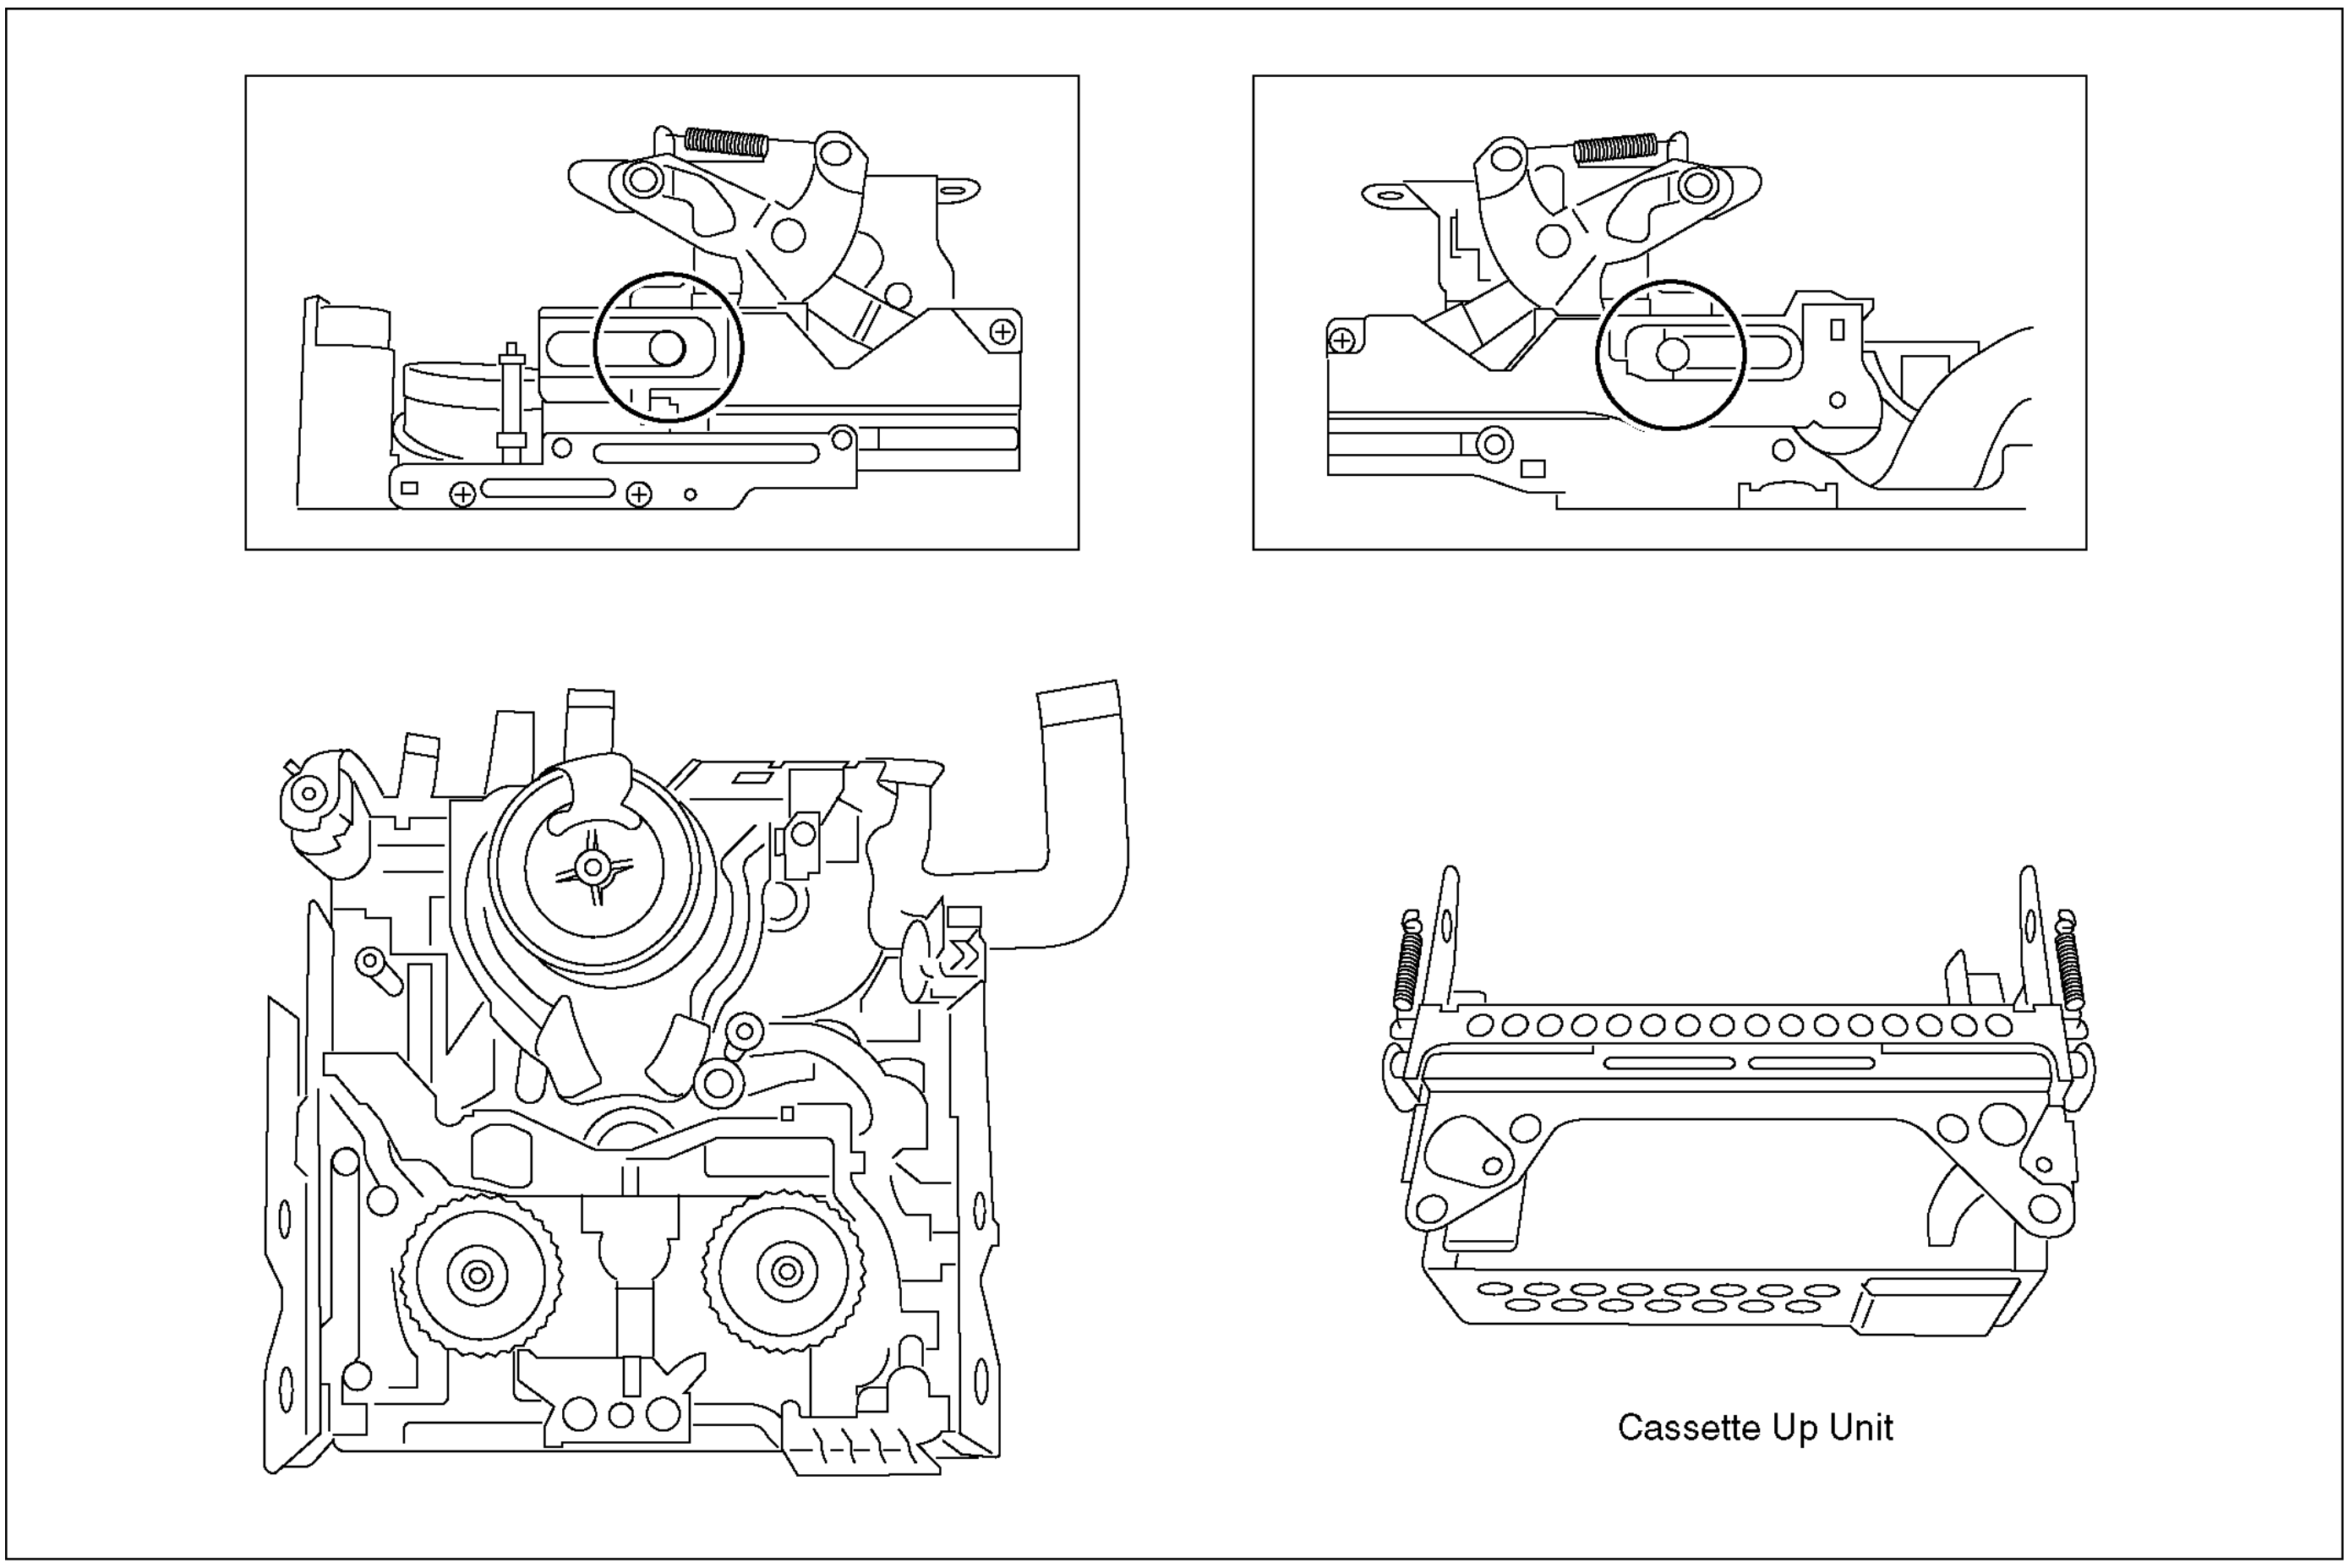
Cassette Up Unit

Fig. M4

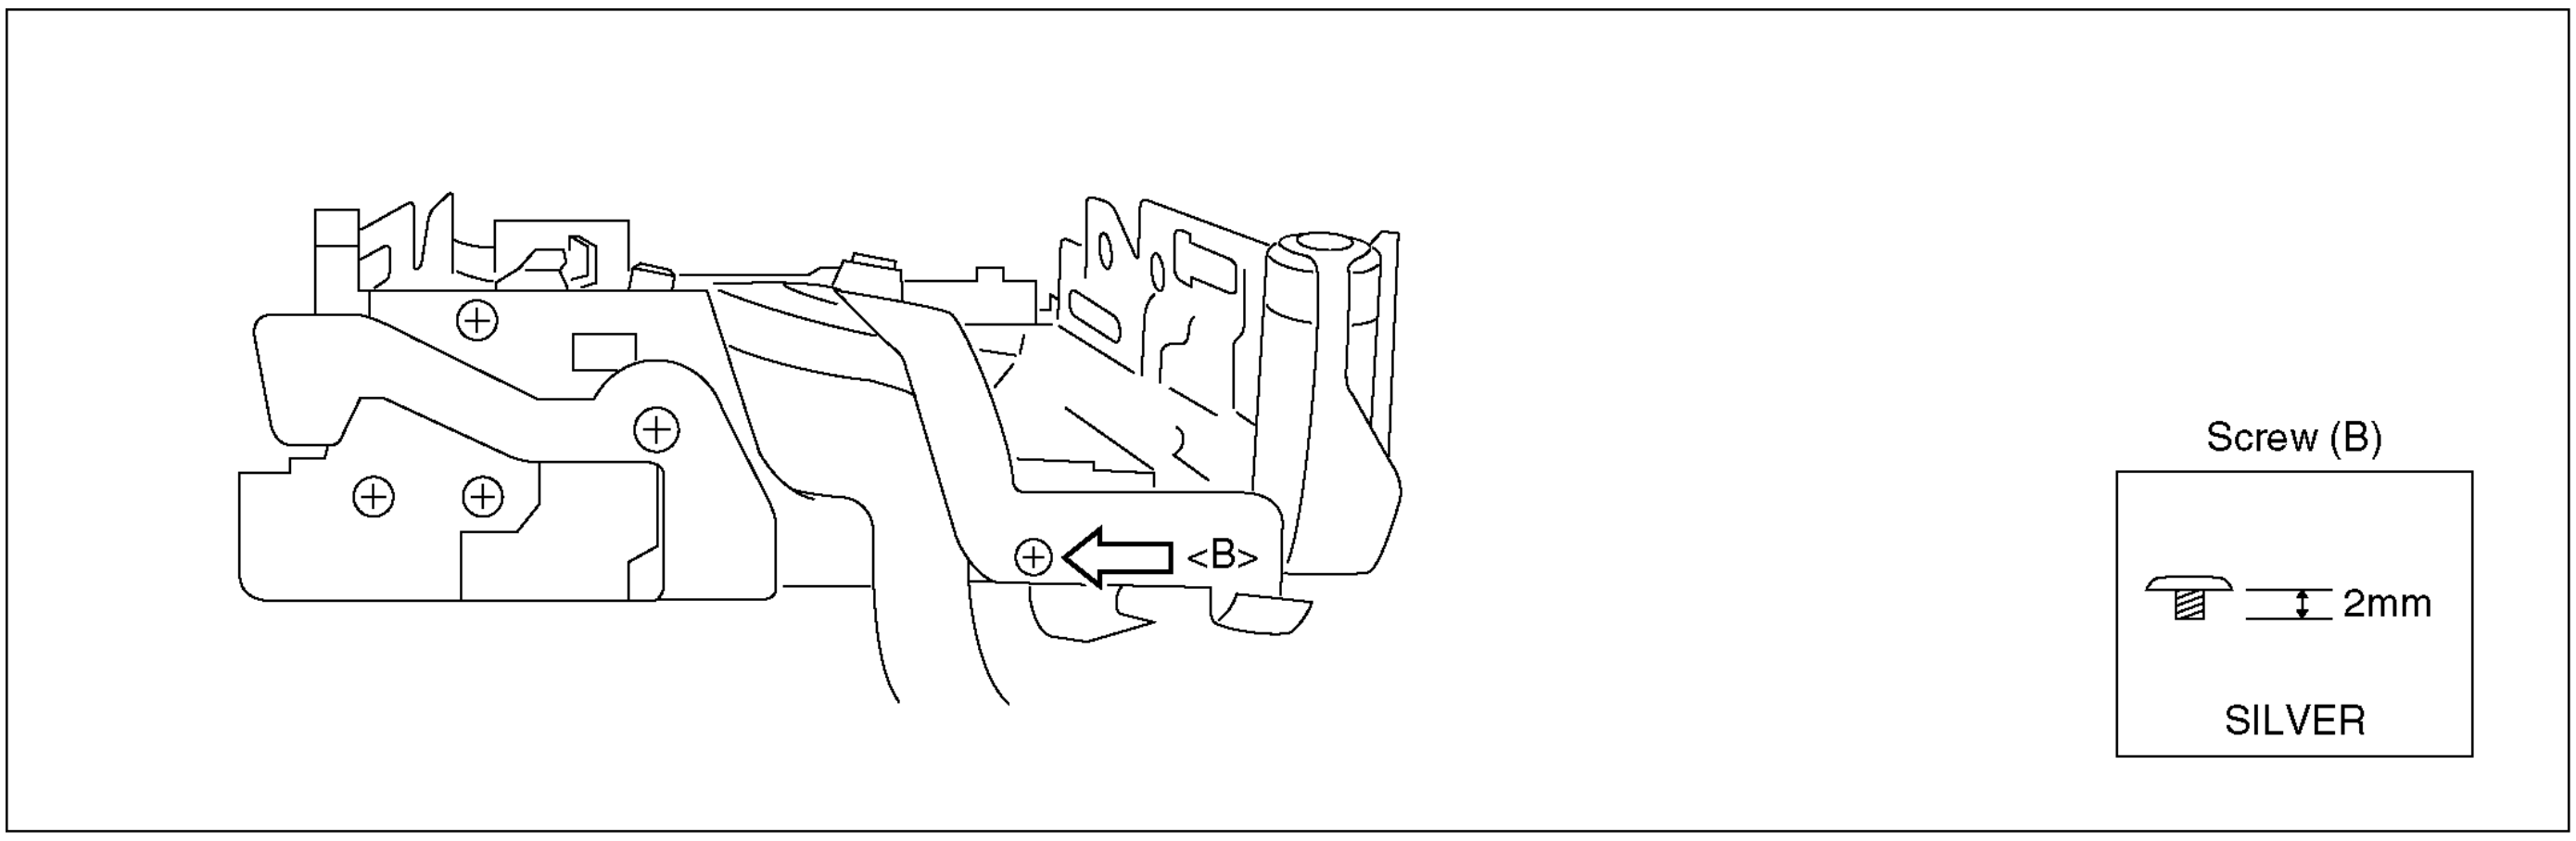
<B>
Screw (B)
2mm
SILVER

Fig. M5

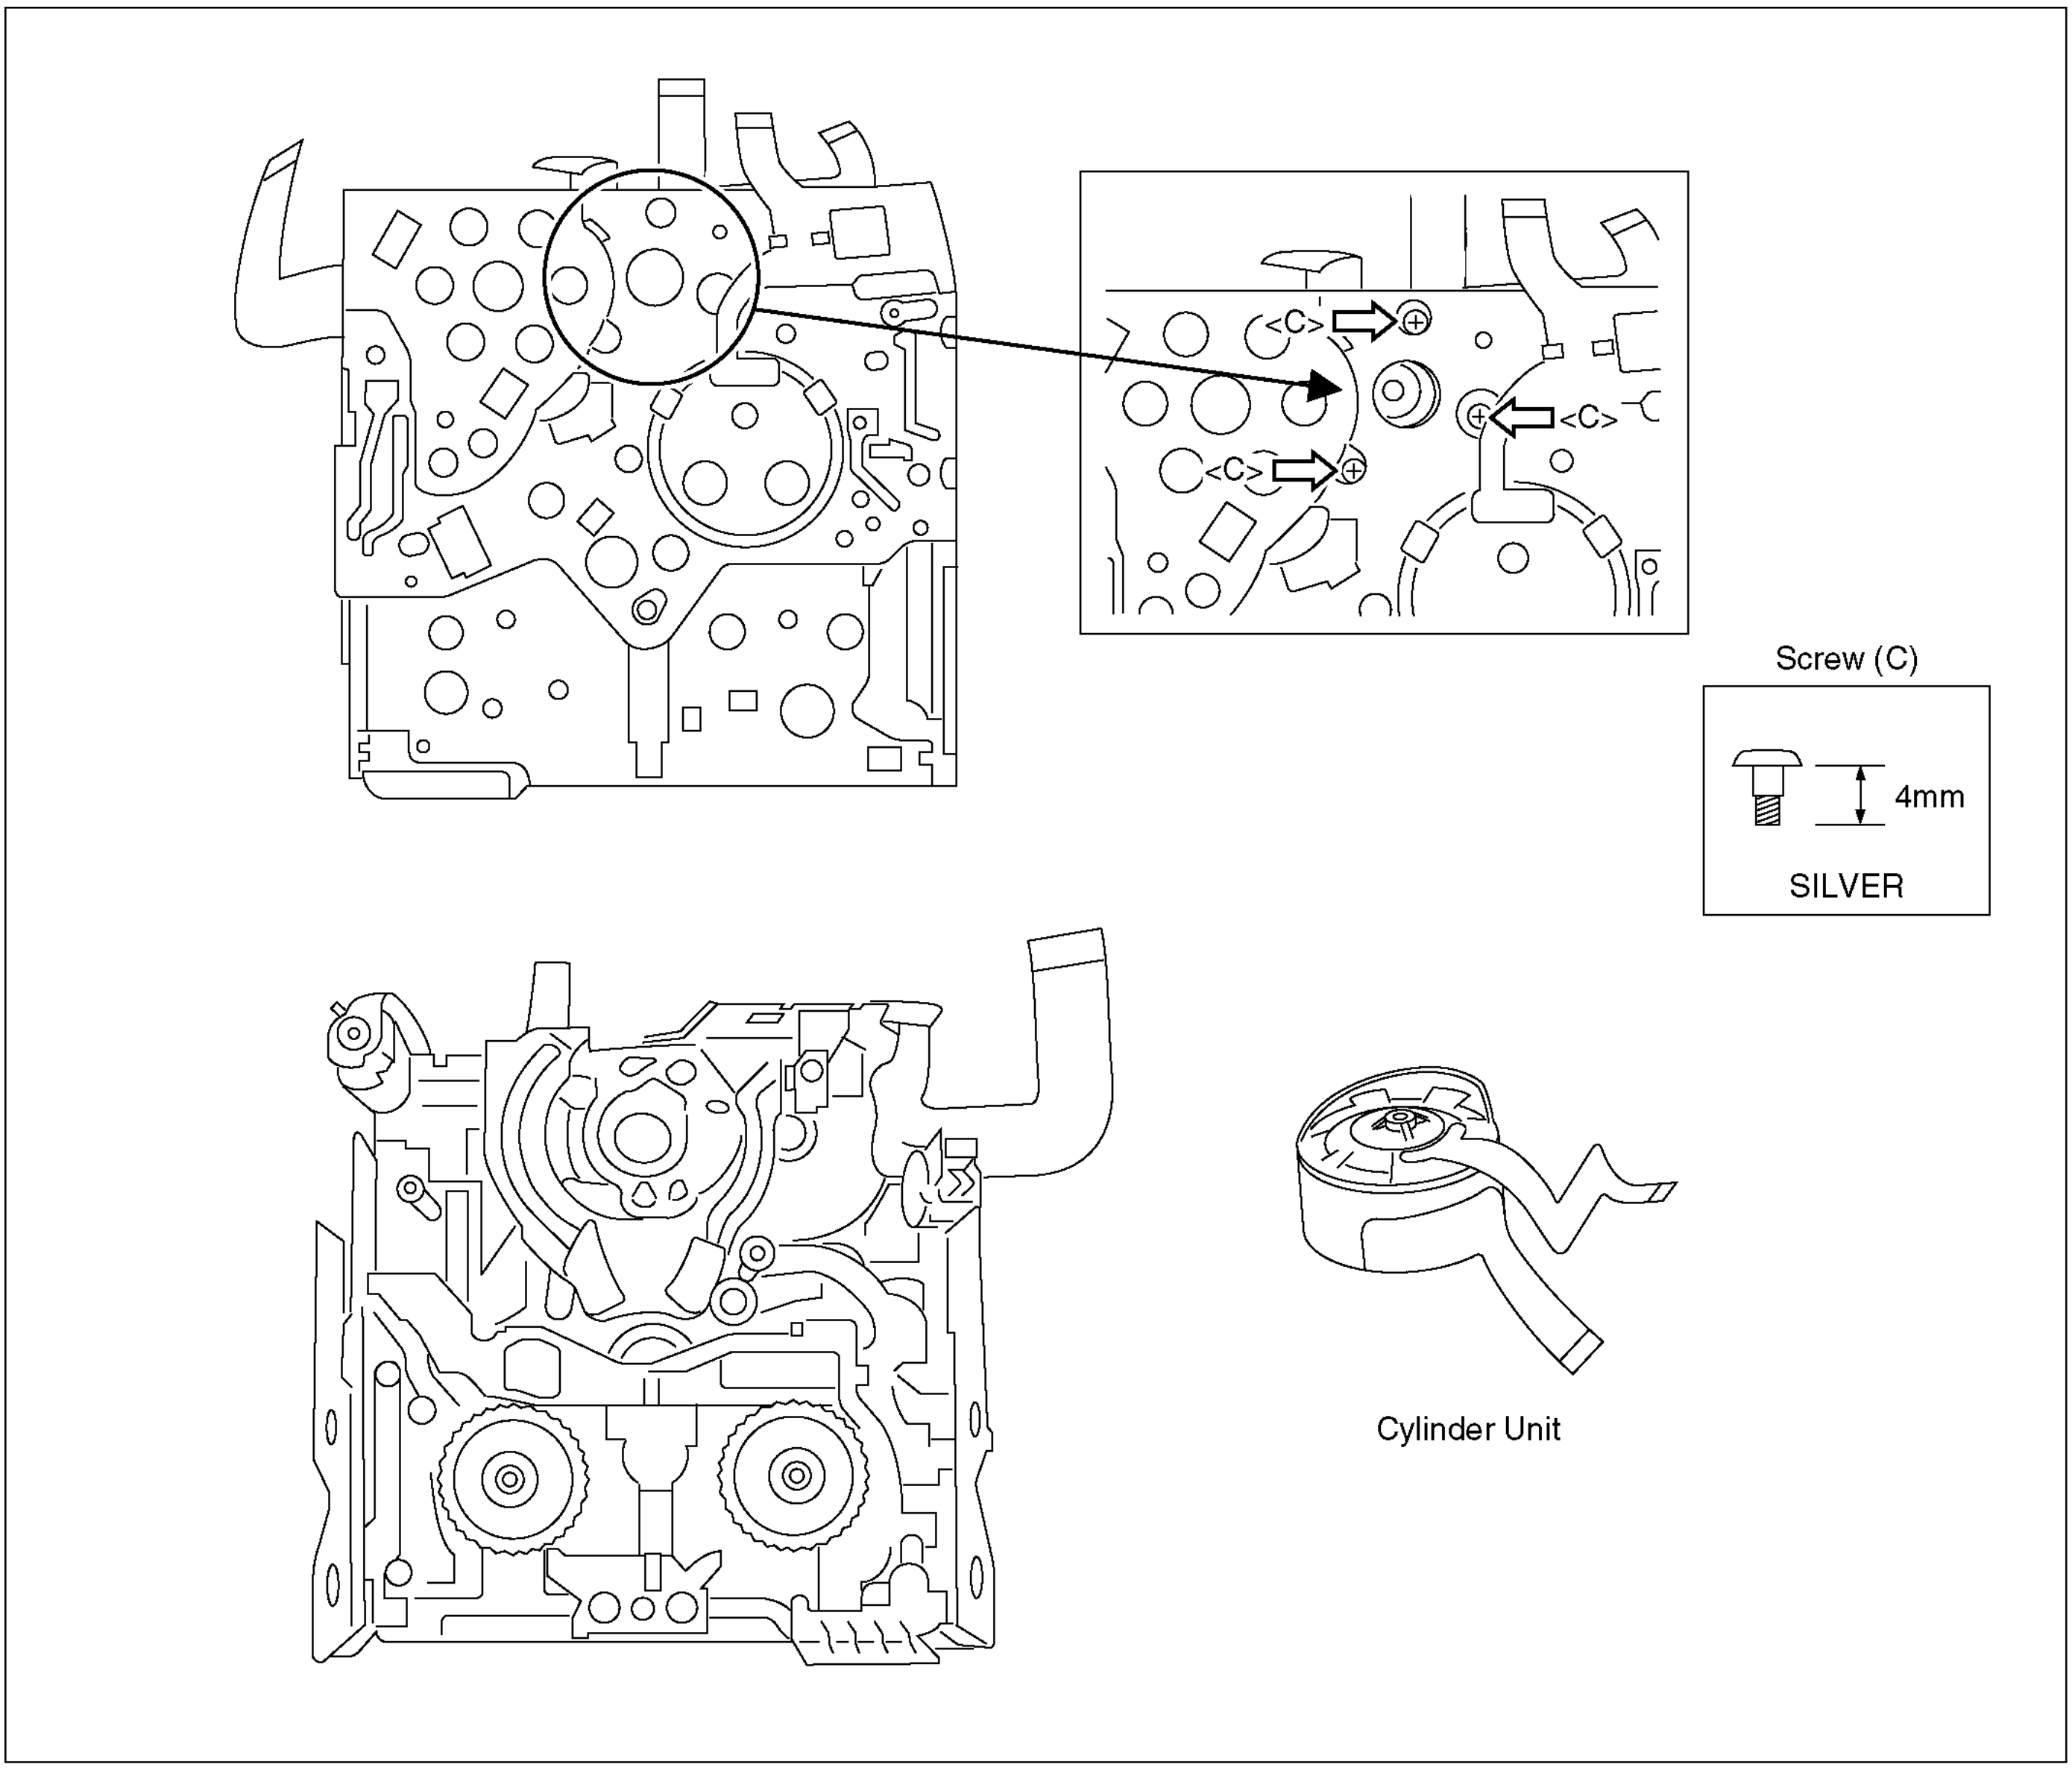
<C>
<C>
<C>
Screw (C)
4mm
SILVER
Cylinder Unit

Fig. M6

9 ADJUSTMENT PROCEDURES

9.1. SERVICE FIXTURES & TOOLS

Color Bar Standard Tape VFM3110EDS (Keeping condition: Keep at 18 °C ~ 28 °C) 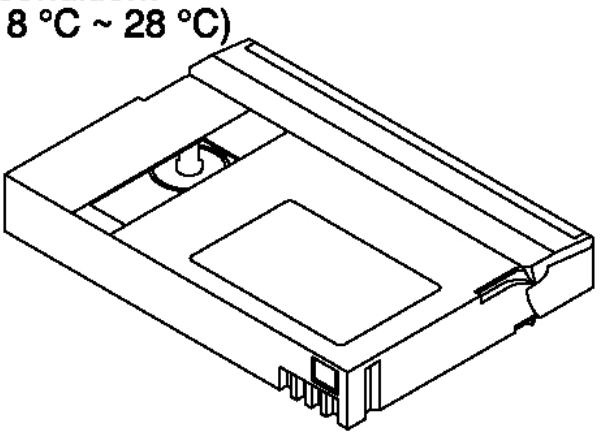	DVC Head Cleaning Tape VFK1451 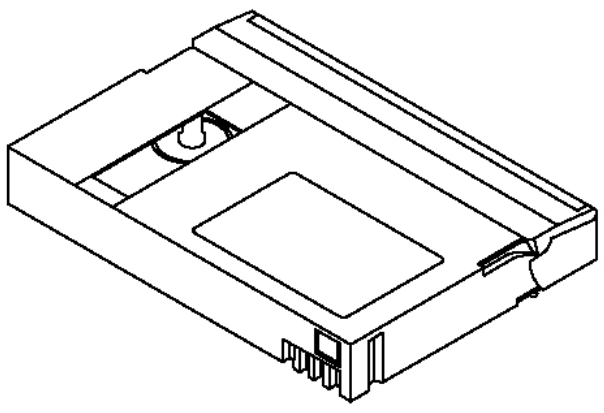	Plier for Non ZIF Connector LSVQ0028
Grease LSUQ0050 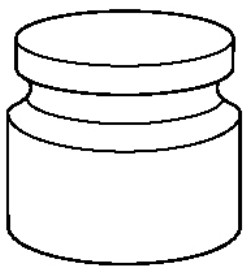	Extension Cable 8P LSUA0019 (2 pcs) 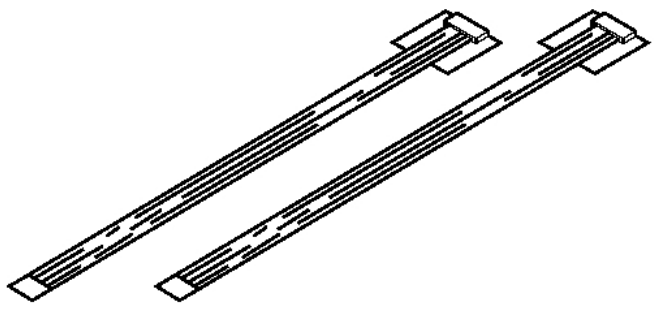	Extension Cable 10P LSUA0016 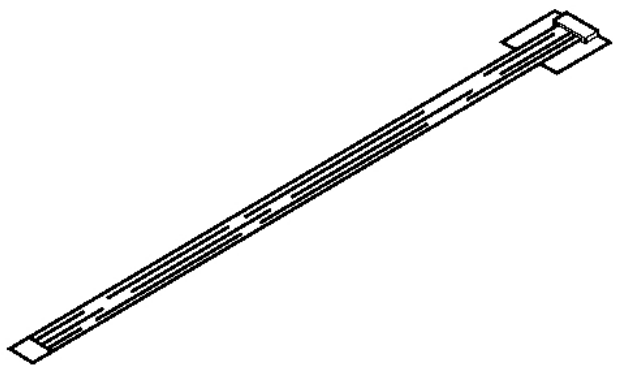
Extension Cable 12P VUVS0007 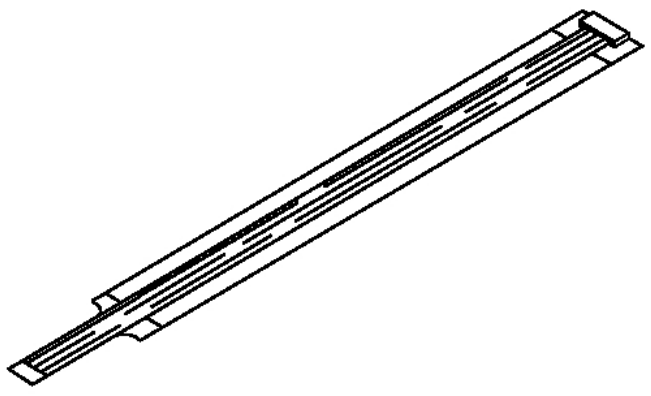	Extension Cable 14P VFKW0124A 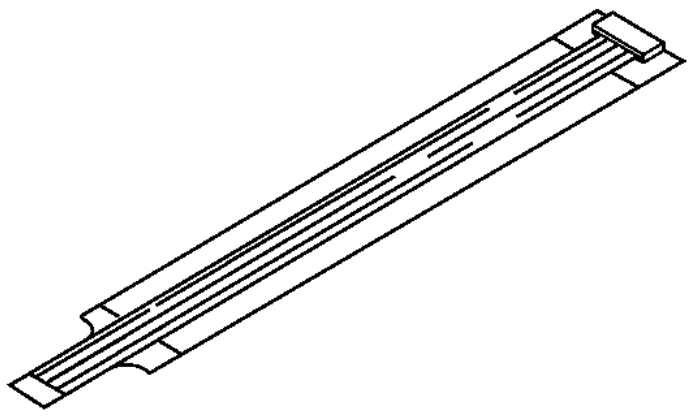	Extension Cable 18P LSUA0017 (2 pcs) 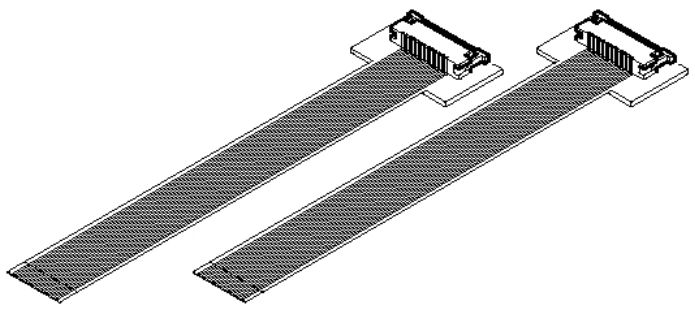
Extension Cable 22P VUVS0012 (2 pcs) 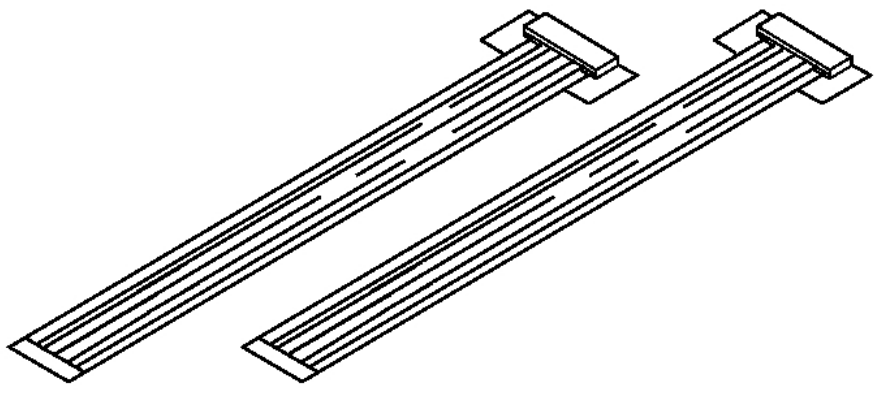		

Light Box and AC Adaptor VFK1164LBX1

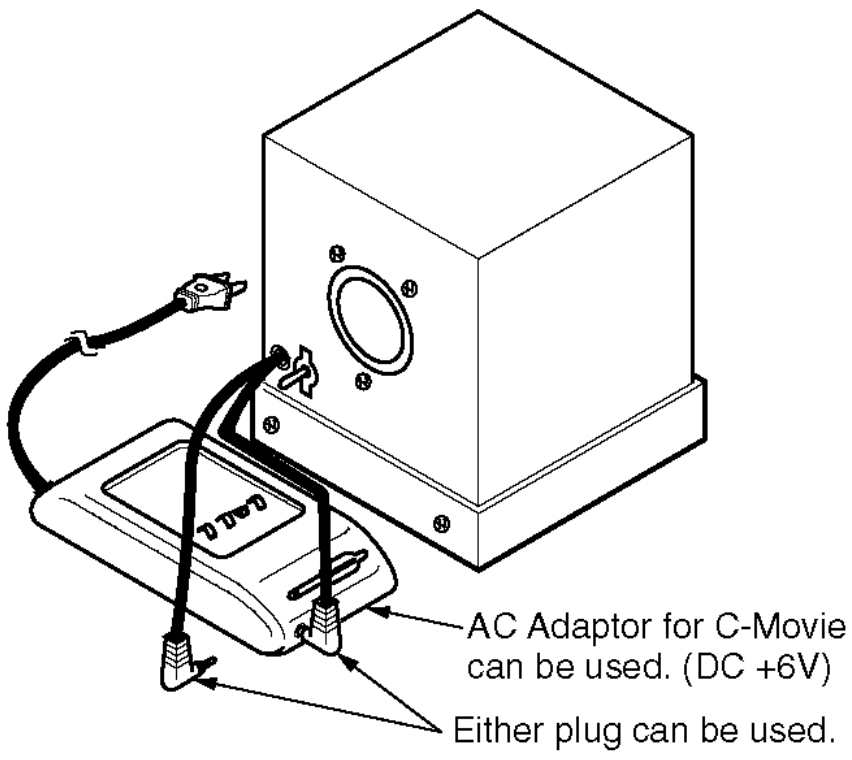

(AC Adaptor is not supplied)

Infinity Lens (with Focus Chart) VFK1164TCM02

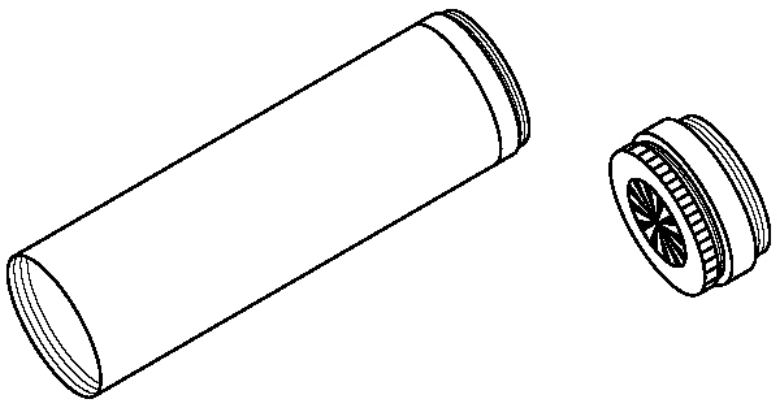

27mm Ring VFK1164TAR27



Color Conversion Filter (C14) VFK1164TFCT2



232C(M3) I/F Cable VFK1395

Post Height Adjustment Fixture VFK1899

DC Output Cable and AC Adaptor VJA0941

(AC Adaptor is not supplied)

White Chart VFK1164TFWC2



Color Bar Chart VFK1164TFCB2



Gray Scale Chart VFK1164TFGS2



Measuring Board for Electrical Adjustment VFK1308E

Connection Adaptor VFK1898



EVR Connector Board VFK1897

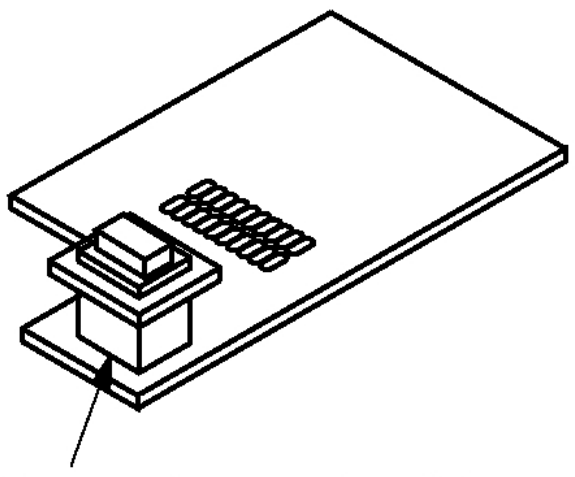

(With one Connection Adaptor)

EVR Connector Board VFK1309

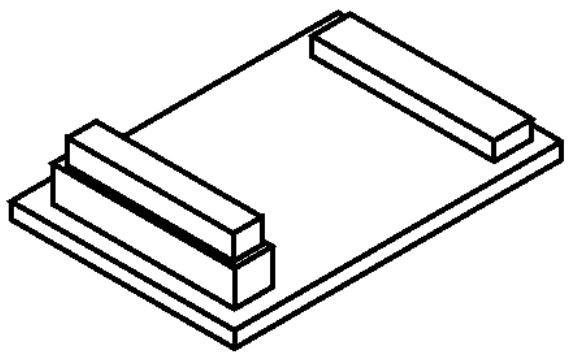

30 pin Flat Cable (2 pcs) VFK1317

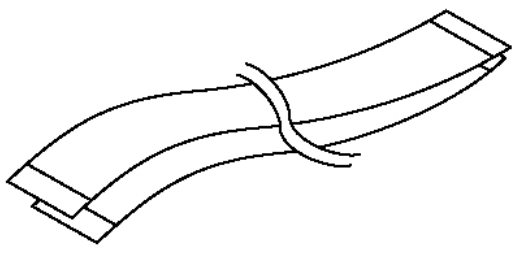

9.2. MECHANICAL ADJUSTMENT

9.2.1. ENVELOPE OUTPUT ADJUSTMENT

When replacing the Main Chassis Unit or the Cylinder Unit, be sure to perform the Envelope Output Adjustment as shown below.

1. Open the L Cover. Then, insert a flat headed (-) screwdriver or similar object into the gap of the Post Cover, and remove it.
2. Connect the Camcorder and the Measuring Board with the EVR Connector Boards, the Connection Adaptors and the 30 pin Flat Cables.
3. Connect the oscilloscope to "Envelope TP" on the Measuring Board.
4. Playback the Color Bar Standard Tape (VFM3110EDS).
5. Adjust the S1 post by turning the top of post with Post Height Adjustment Fixture so that the left half of envelope signal becomes flat as possible.
6. Adjust the T1 post by turning the top of post with Post Height Adjustment Fixture so that the right half of envelope signal becomes flat as possible.

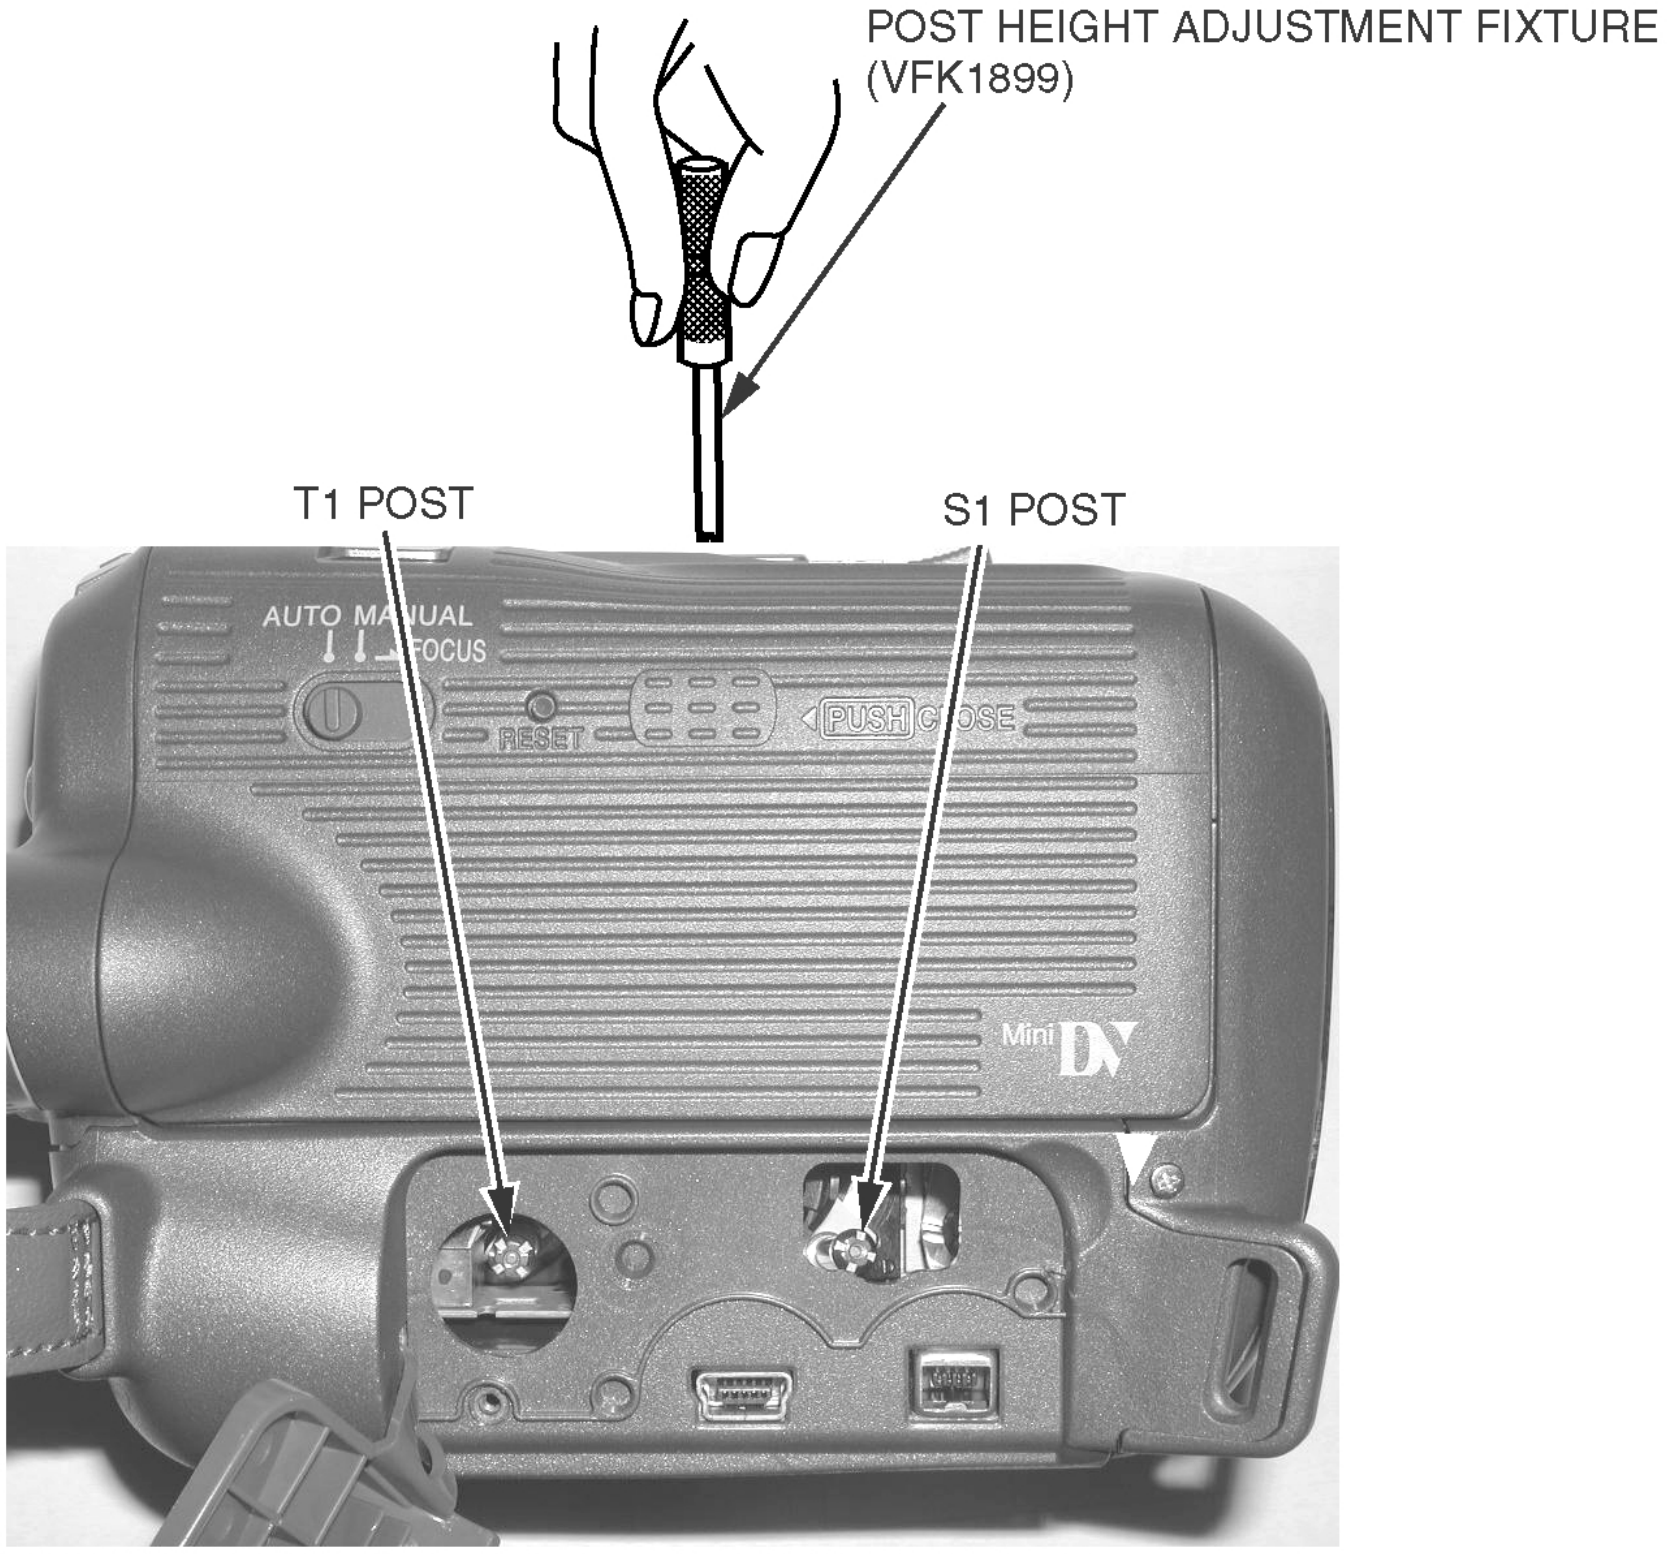
POST HEIGHT ADJUSTMENT FIXTURE
(VFK1899)
T1 POST
S1 POST

<Post Cover is removed>

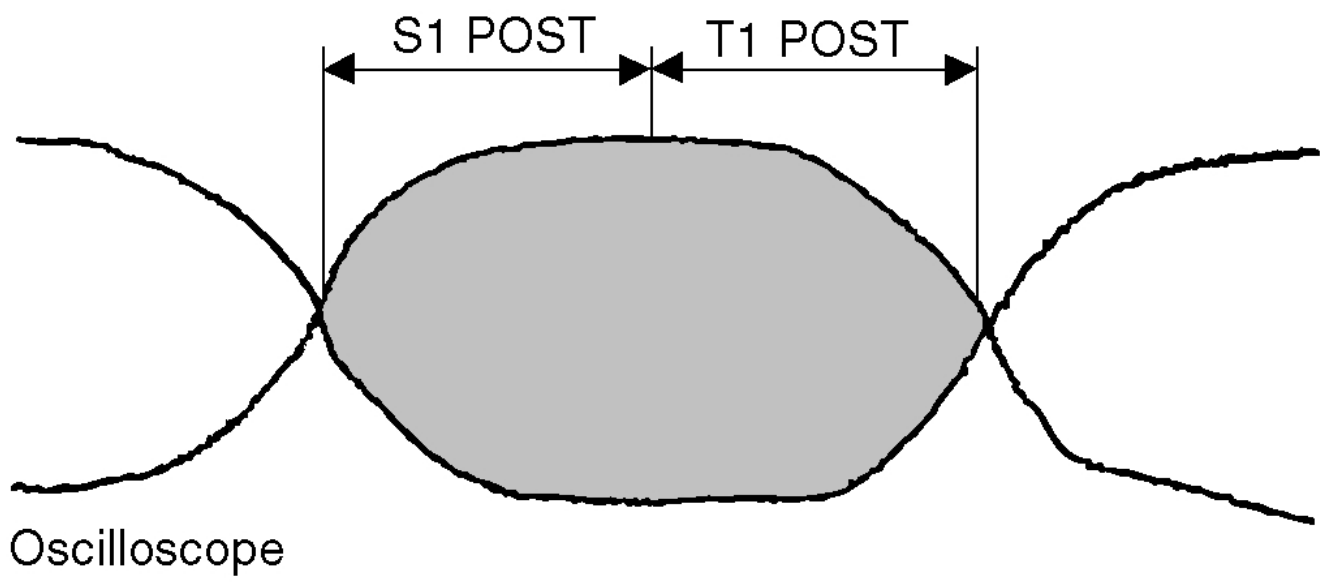
S1 POST
T1 POST
Oscilloscope

Before Adj.

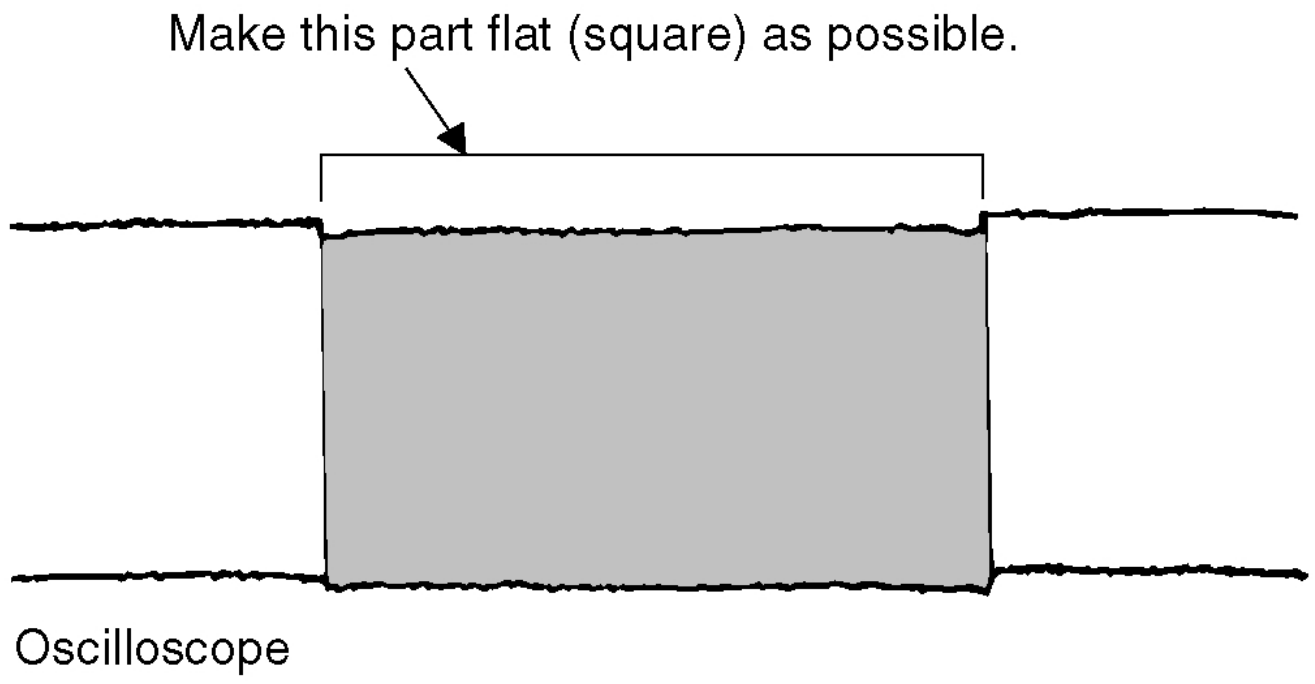
Make this part flat (square) as possible.
Oscilloscope

After Adj.

Note:
After the adjustment, be sure to confirm BER (Bit Error Ratio) using EVR Adjustment Software. If it is NG, try this adjustment once again.

9.3. ELECTRICAL ADJUSTMENT

9.3.1. INITIAL GUIDELINE

The table below shows which adjustments are necessary according to the unit parts and individual parts to be replaced. Make sure to perform these adjustments shown below as necessary.

Adjustment Item	Replacement Parts	MAIN C.B.A.	IC302 (CAMERA SIGNAL PROCESS)	IC701 (FOCUS/ZOOM MOTOR DRIVE & IRIS/HALL AMP CONTROL)	IC3001 (CAMERA DIGITAL SIGNAL PROCESS/SHUFFLING)	IC3101 (VIDEO/AUDIO SIGNAL PROCESS)	IC6001 (SYSTEM MICROCONTROLLER)	IC6002 (EEPROM)	LCD C.B.A.	IC8001(LCD RGB /EVF SIGNAL PROCESS)	CCD UNIT	LENS UNIT	CYLINDER UNIT	MAIN CHASSIS UNIT
Camera	CAM hall amplifier and Iris PWM	○		○			○	○				○		
	CAM Zoom Tracking and De-focus	○						○				○		
	CAM WB coarse	○	○		○			○			○			
	CAM AWB 3100	○	○		○			○			○			
	CAM AWB 5100	○	○		○			○			○			
	CAM Revision CCD scrach	○						○			○			
Video	VCR Sensitivity adj of Tape sensors	○						○						○
	VCR PG shifter adjustment	○						○					○	○
	VCR Luminance level	○			○	○		○						
	VCR Chroma level	○			○	○		○						
LCD	LCD Contrast							○		○				
	LCD Bright							○		○				
	LCD Sub Bright							○		○				
	LCD VCOM level							○		○				
EVF	EVF Horizontal free running							○		○				
	EVF Contrast							○		○				
	EVF Bright							○		○				
	EVF Sub Bright							○		○				
	EVF VCOM leve							○		○				

Note: ○ : Adjustment Item

9.3.2. TEST EQUIPMENT

1. Dual-Trace Oscilloscope
   Voltage Range: 0.001 to 50 V/Div.
   Frequency Range: DC to 50 MHz
   Probes: 10:1, 1:1
2. Frequency Counter
3. Vectorscope
4. Plastic Tip Driver
5. Personal Computer
   PC: IBM PC/AT or compatible
   OS: Microsoft® Windows®98 - Windows®XP
   CPU: 486 or higher
   Drive: 3.5 inch 1.44 MB floppy disk drive
   Port: D-Sub-9-pin Serial or D-Sub-25-pin Serial
   Monitor: VGA Color
6. PC-EVR Adjustment Program (VF0D2005DV10)

   Note:

   Ask for the latest version when placing an order for the PC-EVR Adjustment Program.
7. Measuring Board (VFK1308E)
8. 232C (M3) I/F Cable (VFK1395)
9. DC Output Cable and AC Adaptor (VJA0941)
10. Connection Adaptor (VFK1898)
11. EVR Connector Board (VFK1897)
12. EVR Connector Board (VFK1309)
13. 30 pin Flat Cable (VFK1317)
14. Color Bar Standard Tape (VFM3110EDS)
    (Keeping condition: Keep at 18 °C ~ 28 °C)
15. Gray Scale Chart (VFK1164TFGS2)
16. White Chart (VFK1164TFWC2)
17. Color Bar Chart (VFK1164TFCB2)
18. Light Box and AC Adaptor (for VHS-C)
19. Infinity Lens (with Focus Chart) (VFK1164TCM02)
20. AC Adaptor (for DVC)
21. 27 mm Ring (VFK1164TAR27)
22. Color Conversion Filter (C14) (VFK1164TFCT2)

9.3.3. PREPARATION

1. Insert a flat headed (-) screwdriver or similar object, remove the EVR Cover.
2. Connect the Connection Adaptor and the 2 EVR Connector Boards. Then, connect the 30 pin Flat Cables to P101 and P102 on the Interface Board.

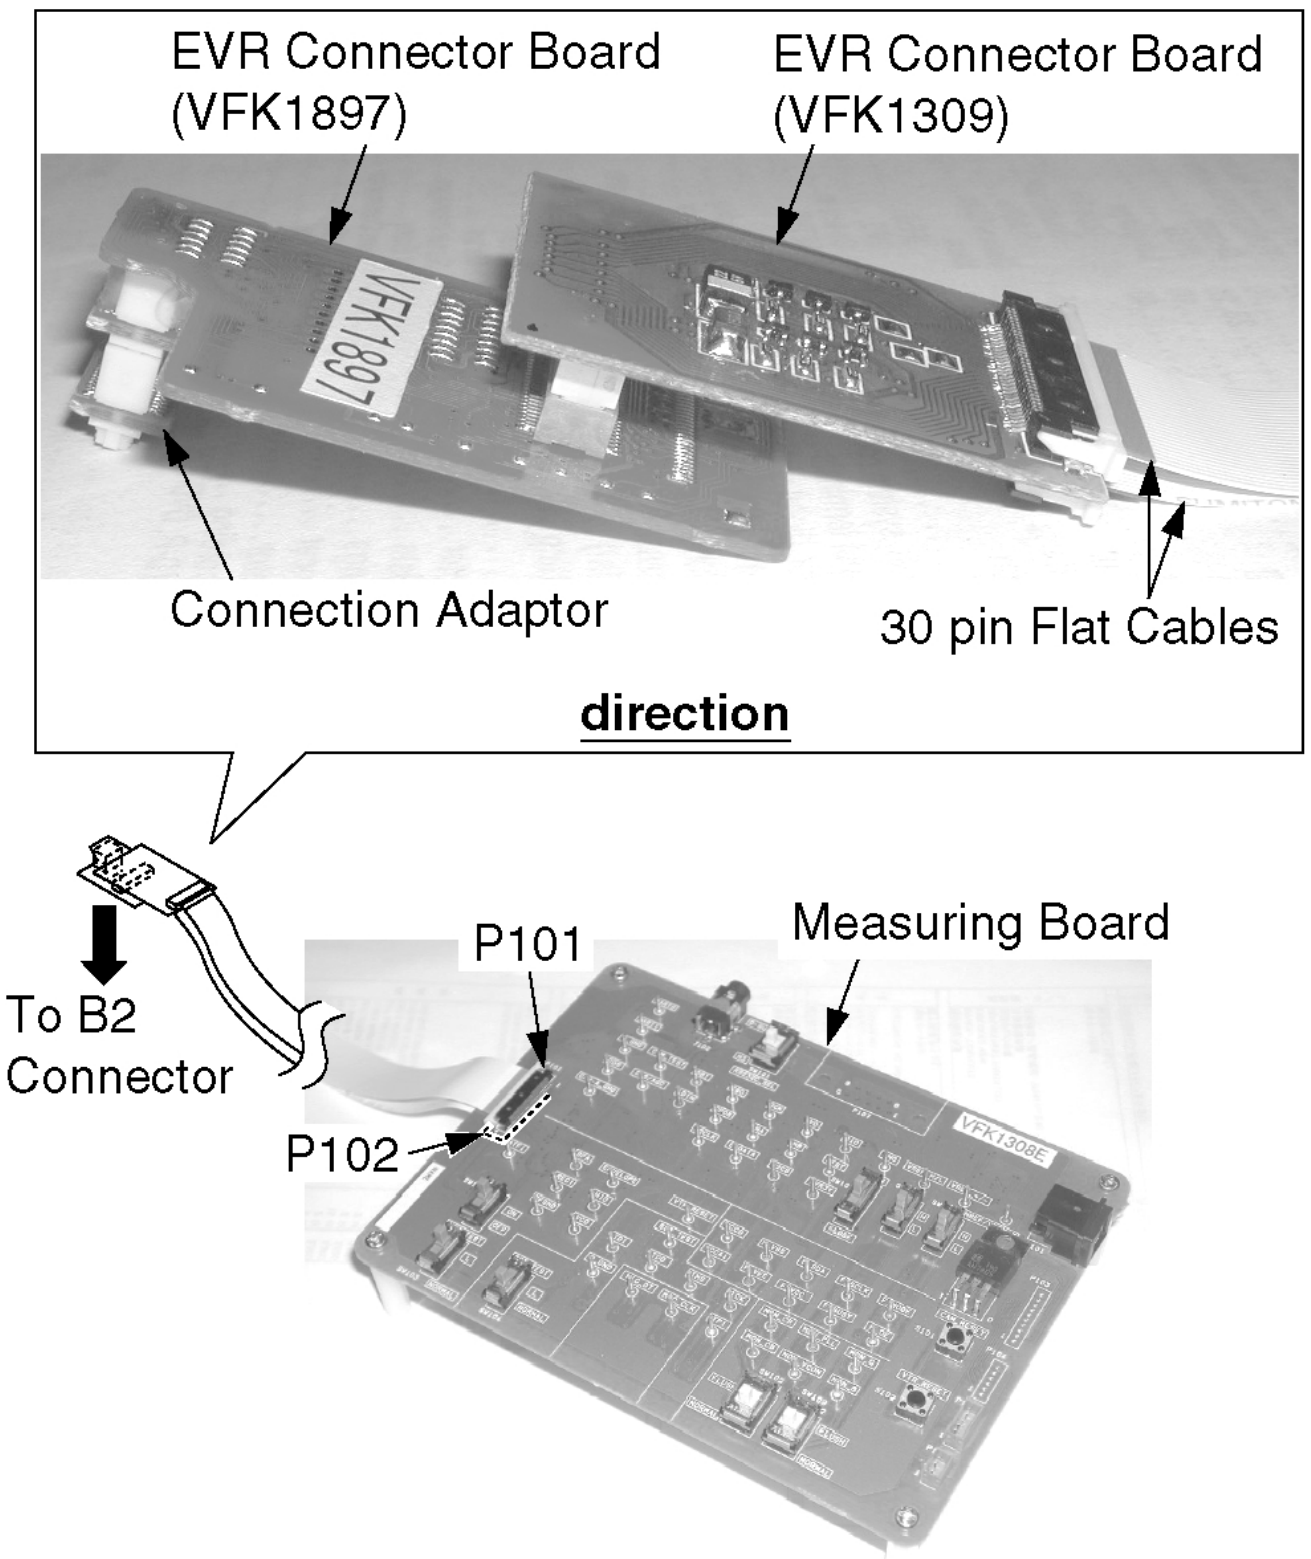
EVR Connector Board (VFK1897)
EVR Connector Board (VFK1309)
VFK1897
Connection Adaptor
30 pin Flat Cables
direction
To B2 Connector
P101
Measuring Board
P102

Fig. E1-1

Note:

When connecting them, pay attention to the direction of them.

3. Connect them to the Connector B2 on the Main C.B.A.

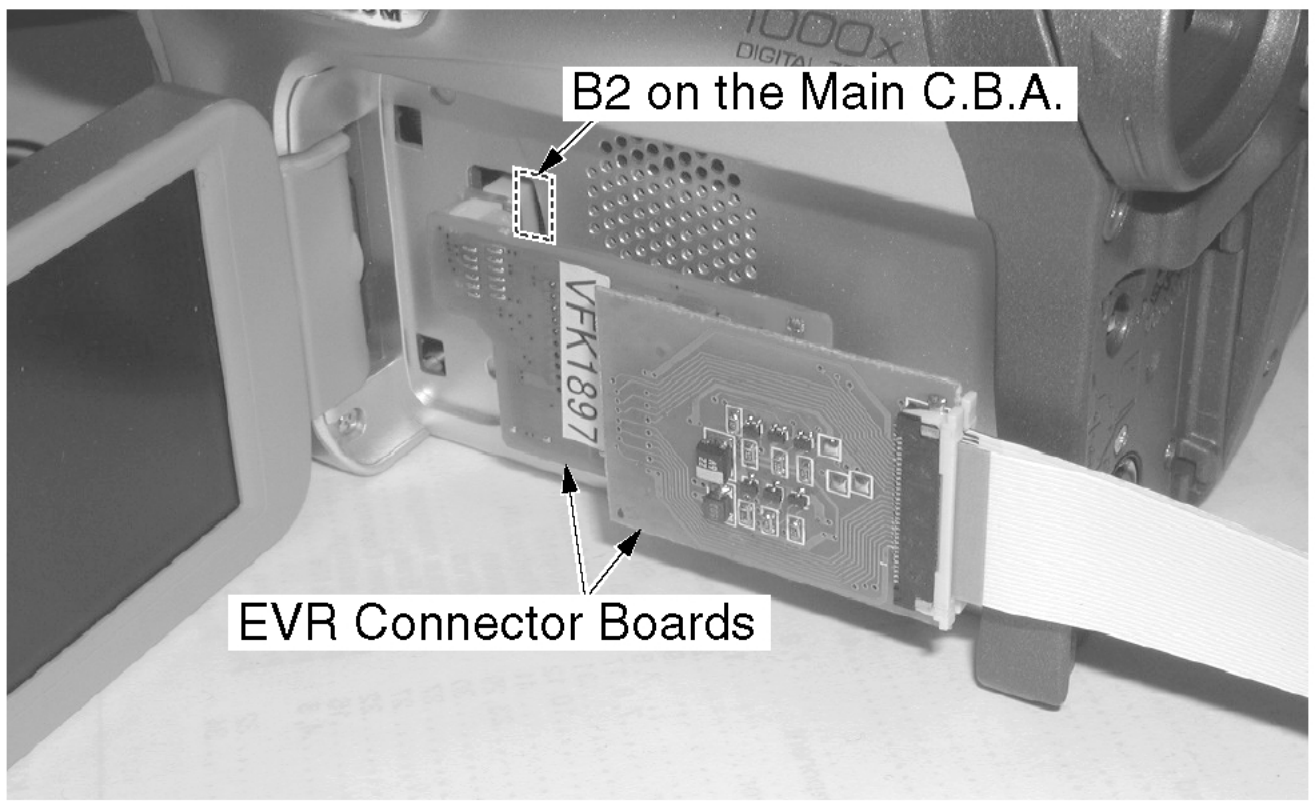
B2 on the Main C.B.A.
VFK1897
EVR Connector Boards

Fig. E1-2

4. Connect the AC Adaptor to the camcorder.
5. Connect the DC Output Cable (and AC Adaptor) to the J101 on the Measuring Board.
6. Connect the J102 on the Measuring Board to RS232C of the PC with 232C (M3) I/F Cable.
7. Set the SW101 (RS232C_SEL) on the Measuring Board to "M3."
8. Set the SW102 (FLUSH1) on the Measuring Board to "NORMAL."
9. Set the SW103 (VTR_TEST) on the Measuring Board to "NORMAL."
10. Set the SW104 (BST_TEST) on the Measuring Board to "NORMAL."
11. Set the SW105 on the Measuring Board to "L."
12. Set the SW106 on the Measuring Board to "ON."
13. Set the SW107 on the Measuring Board to center.
14. Set the SW108 on the Measuring Board to "L."
15. Set the SW109 (FLUSH2) on the Measuring Board to "FLUSH."
16. Power on the set.

<Computer Assisted Adjustment System>

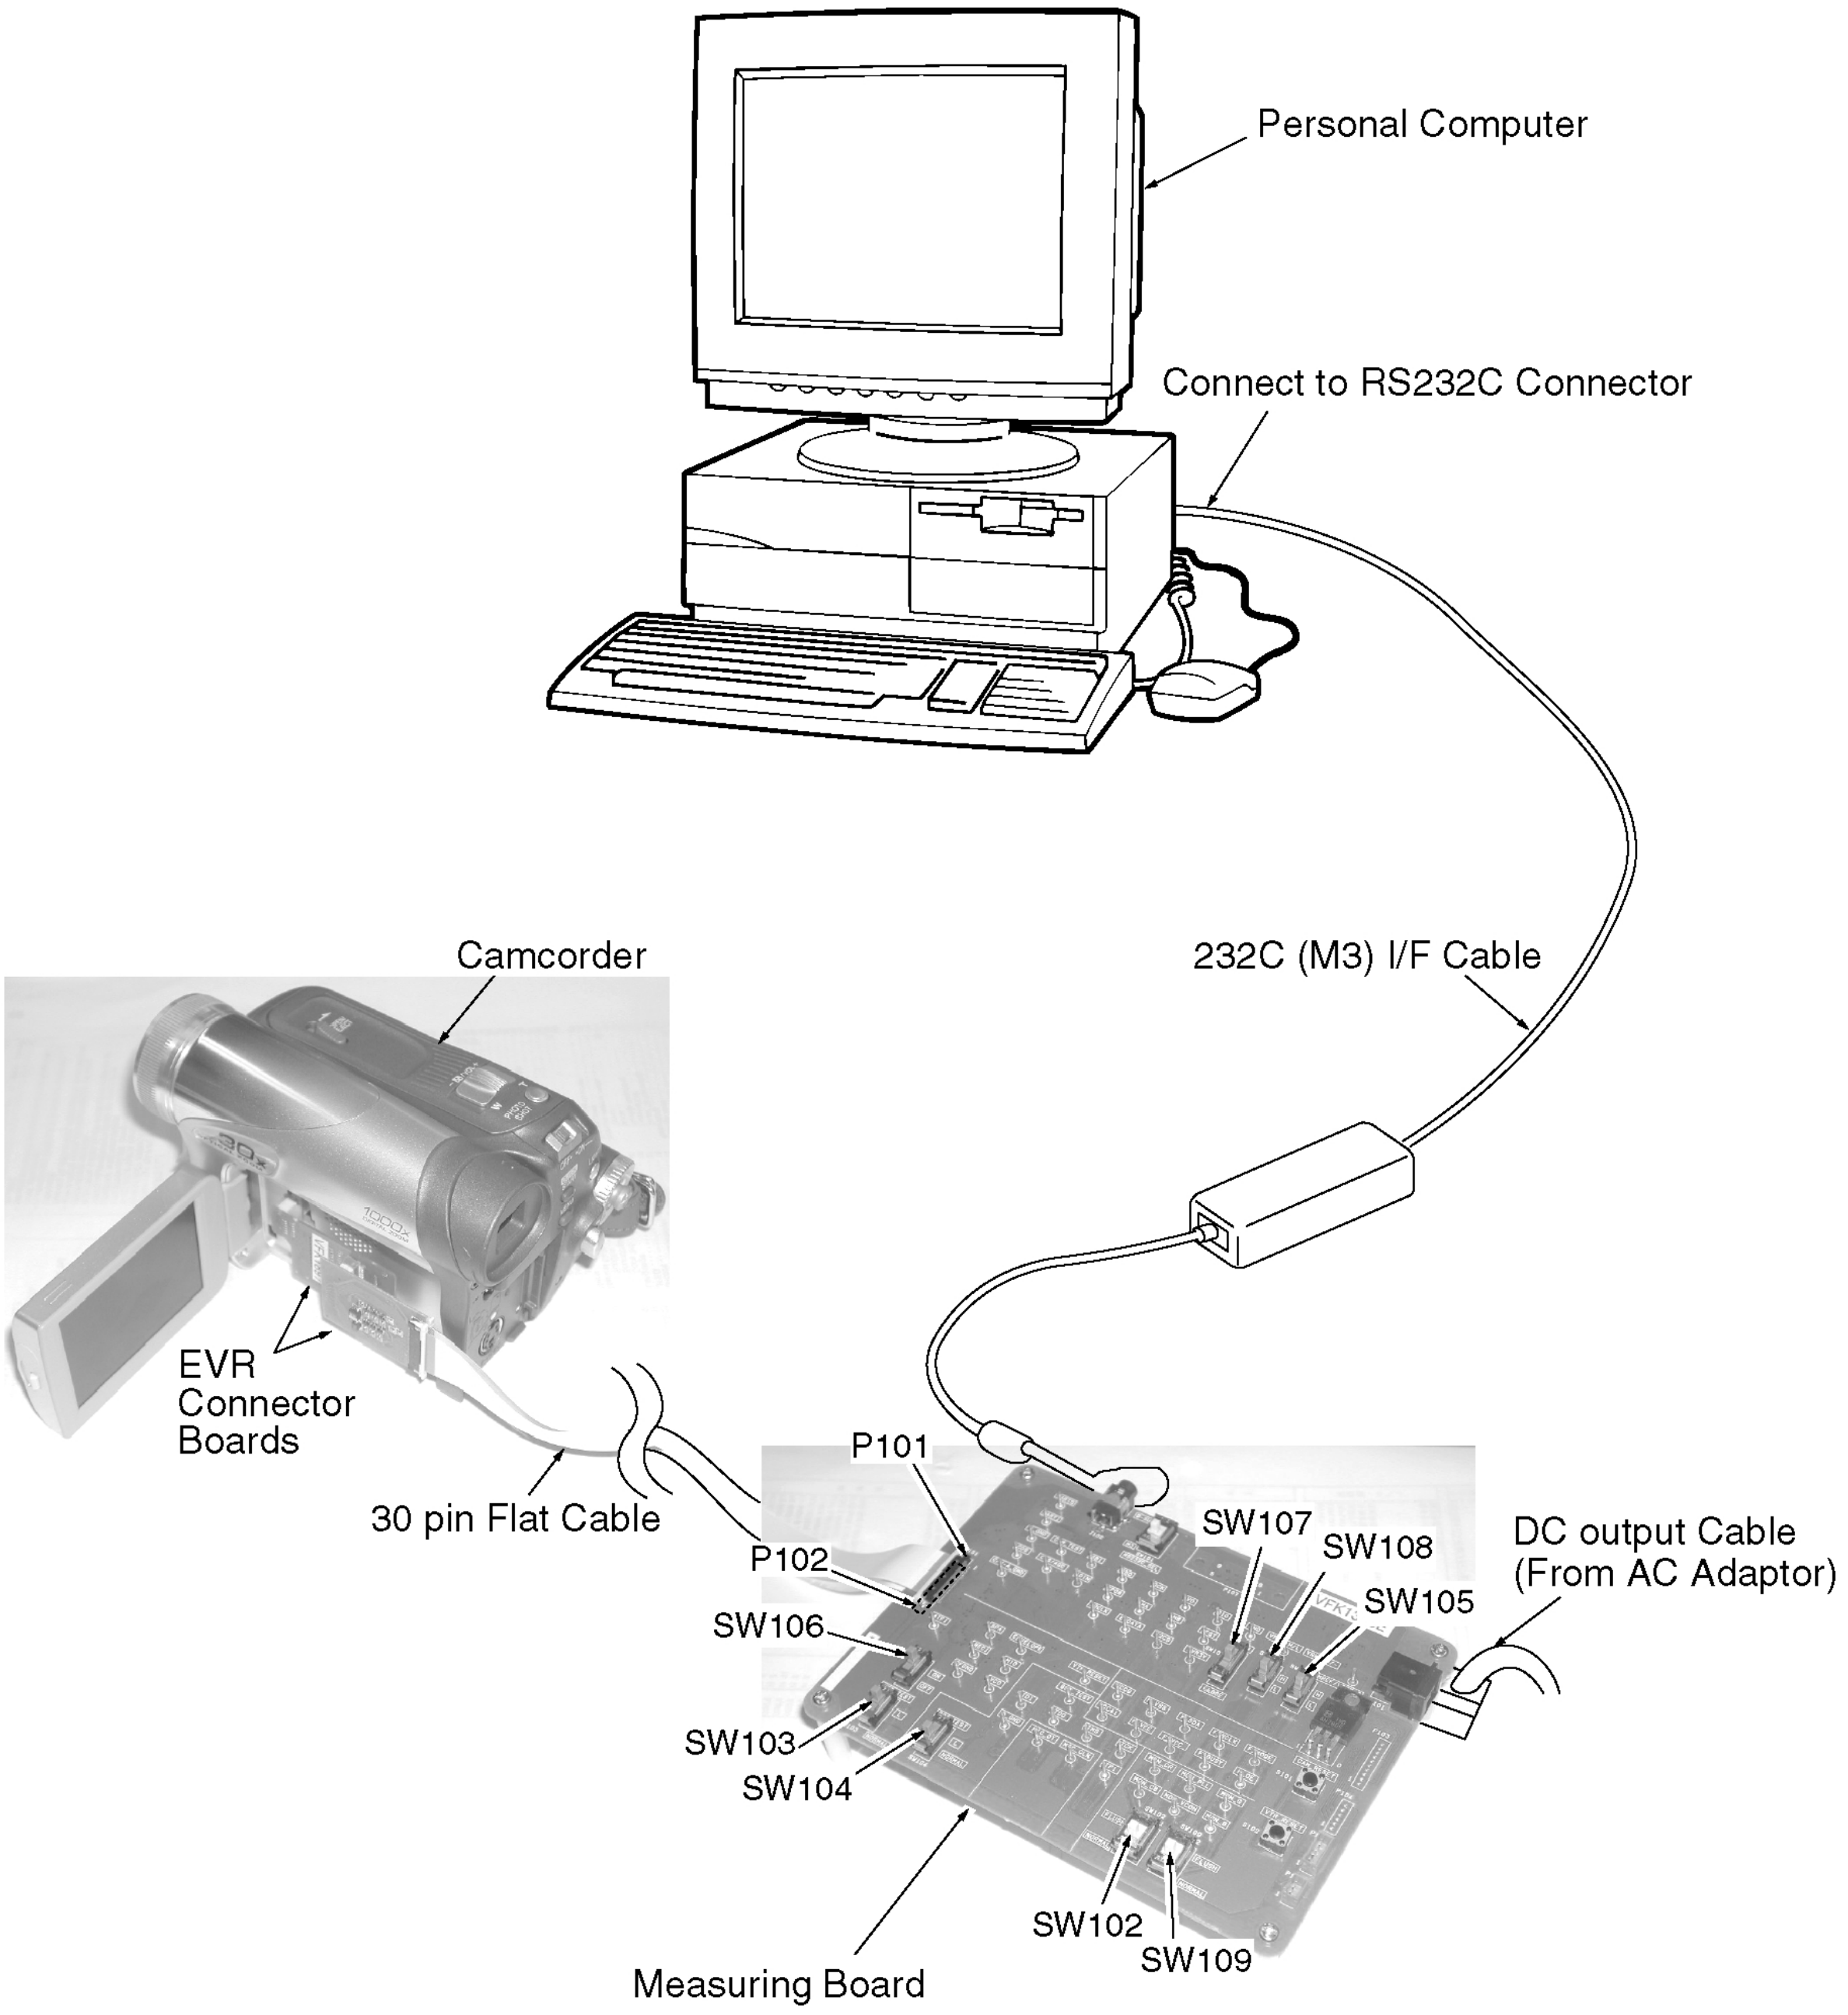
Personal Computer
Connect to RS232C Connector
Camcorder
232C (M3) I/F Cable
EVR
Connector
Boards
30 pin Flat Cable
P101
P102
SW106
SW103
SW104
SW107
SW108
SW105
DC output Cable
(From AC Adaptor)
SW102
SW109
Measuring Board

Fig. E1-3

9.3.4. TP Board Location

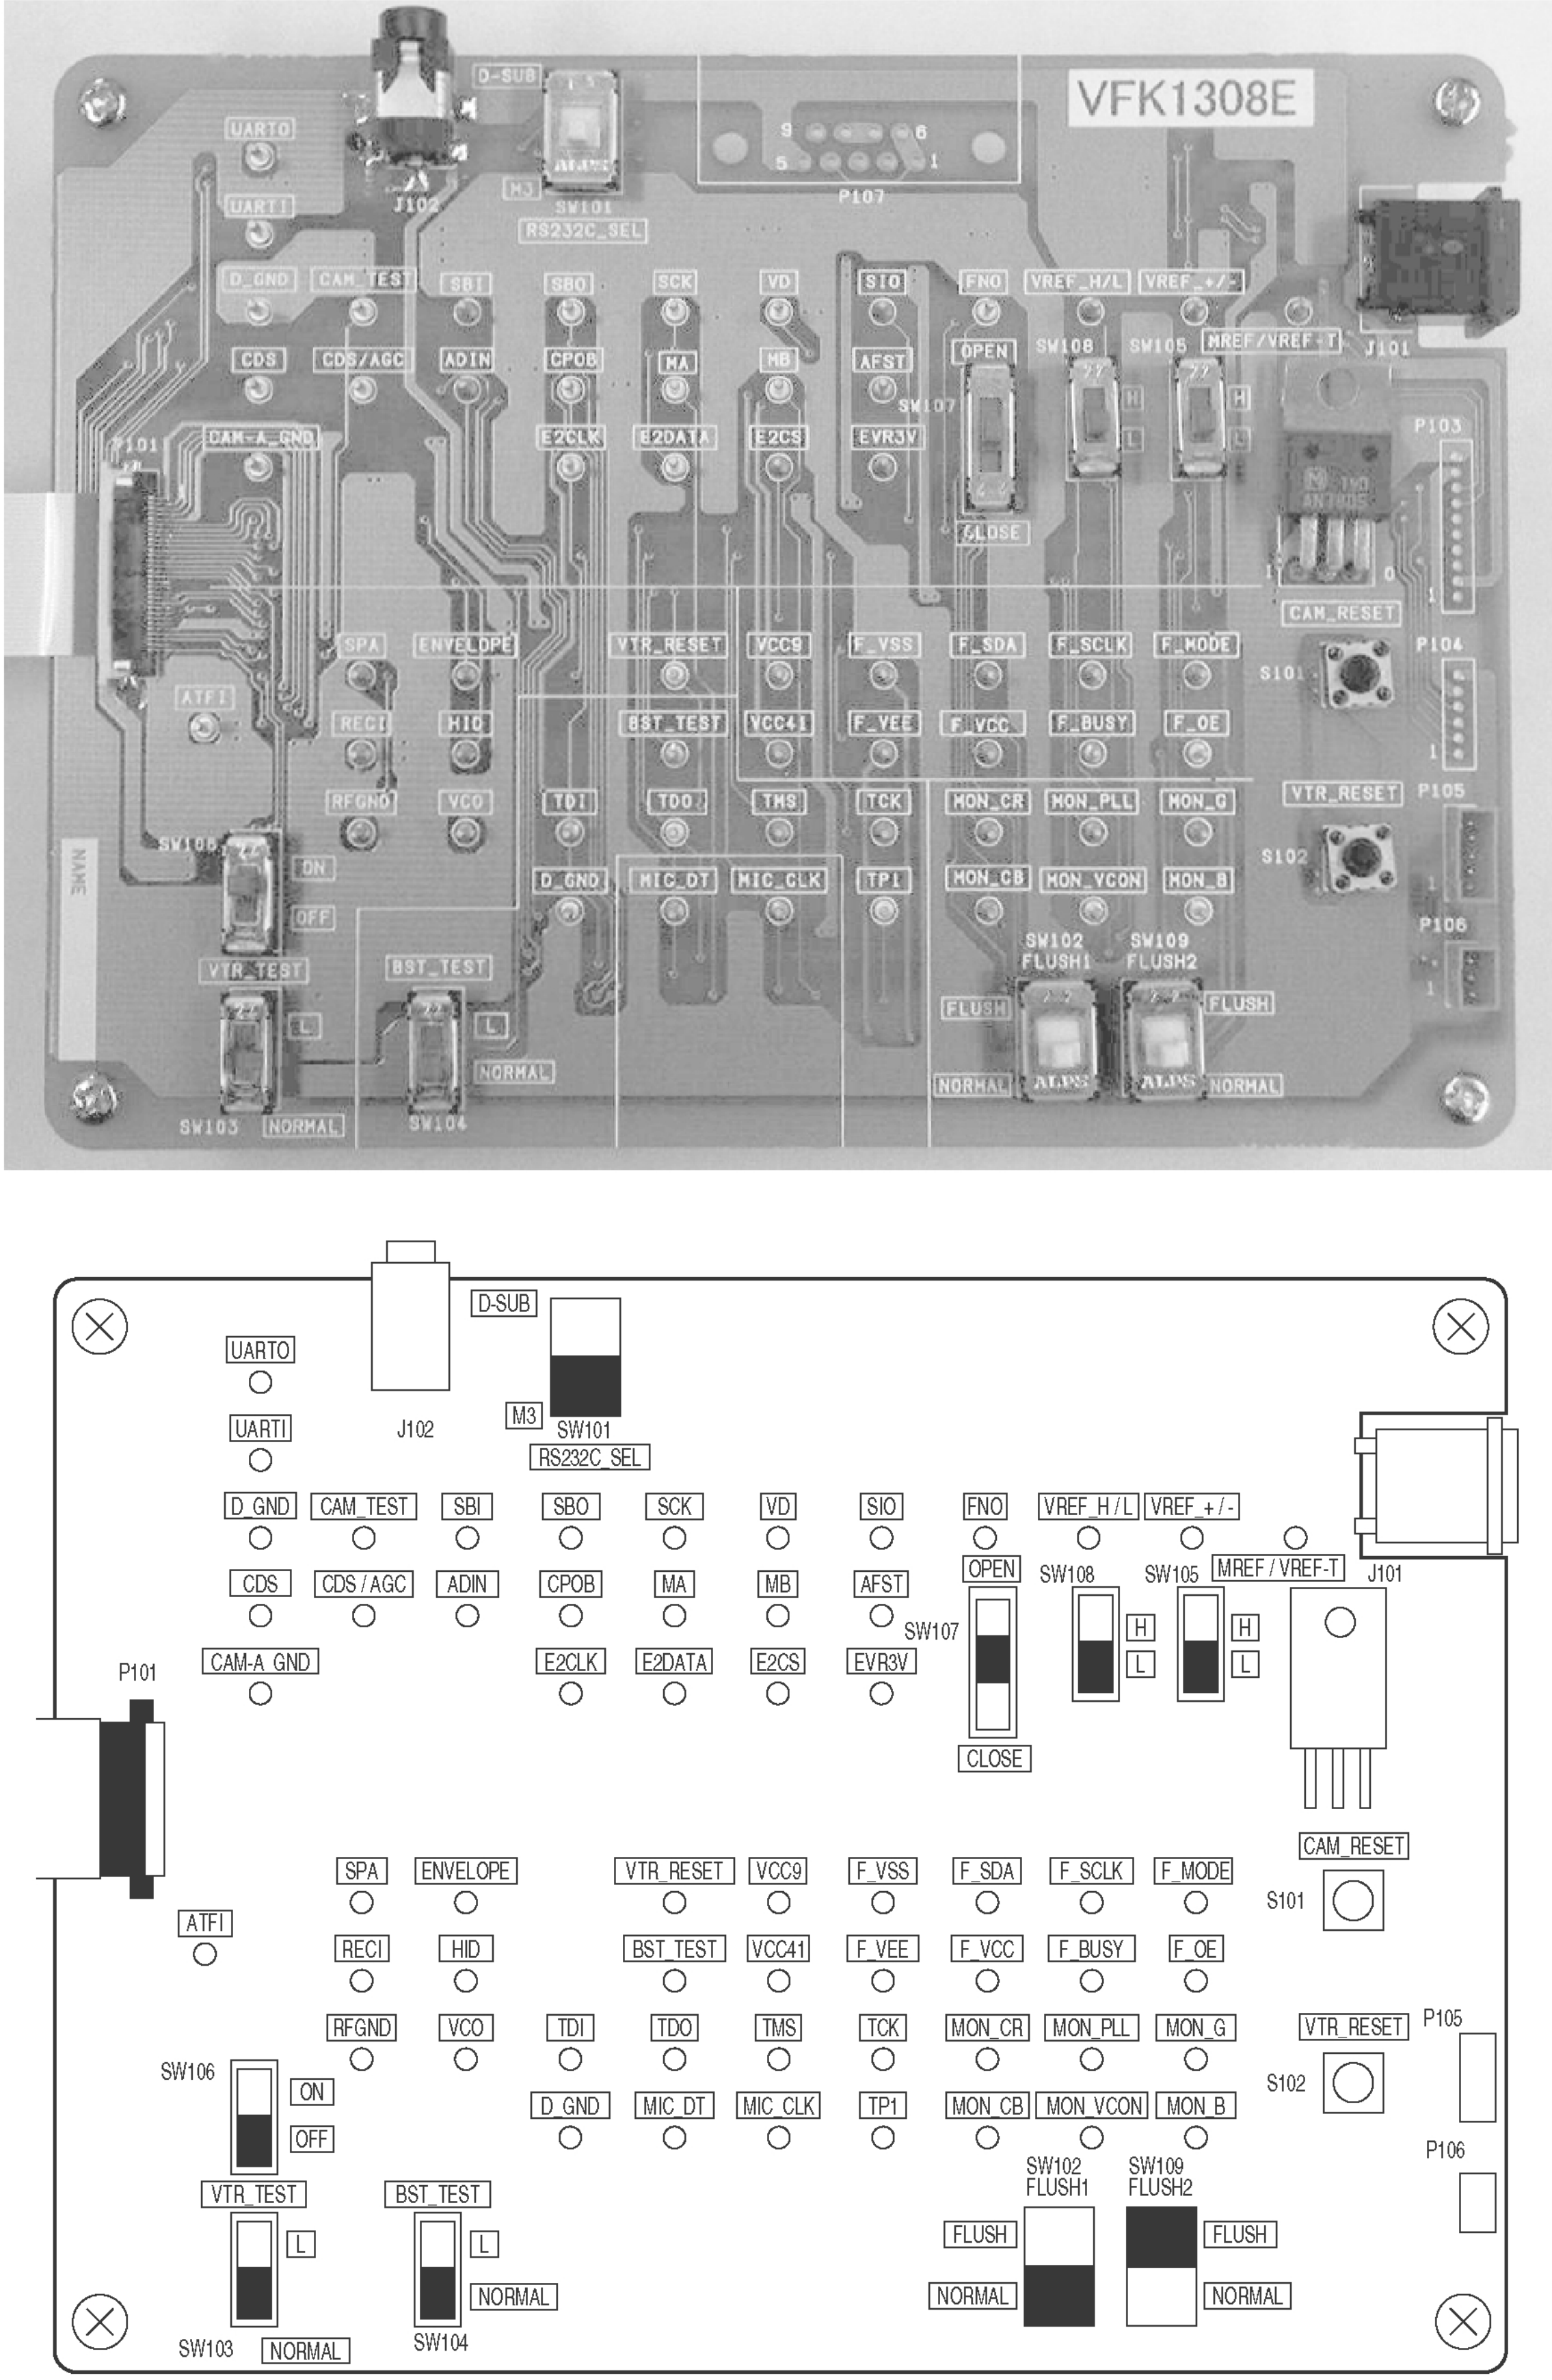
VFK1308E
P107
D-SUB
UARTO
UARTI
J102
M3
SW101
RS232C_SEL
D_GND
CAM_TEST
SBI
SBO
SCK
VD
SIO
FNO
VREF_H/L
VREF_+/-
CDS
CDS/AGC
ADIN
CPOB
MA
MB
AFST
OPEN
SW108
SW105
MREF/VREF-T
J101
SW107
H
L
CAM-A GND
E2CLK
E2DATA
E2CS
EVR3V
P101
CLOSE
P103
CAM_RESET
S101
P104
SPA
ENVELOPE
VTR_RESET
VCC9
F_VSS
F_SDA
F_SCLK
F_MODE
ATFI
RECI
HID
BST_TEST
VCC41
F_VEE
F_VCC
F_BUSY
F_OE
RFGND
VCO
TDI
TDO
TMS
TCK
MON_CR
MON_PLL
MON_G
VTR_RESET
P105
S102
SW106
ON
OFF
D_GND
MIC_DT
MIC_CLK
TP1
MON_CB
MON_VCON
MON_B
P106
SW102
FLUSH1
SW109
FLUSH2
VTR_TEST
BST_TEST
FLUSH
NORMAL
SW103
SW104
NAME

Fig. E1-4

9.3.5. SET UP OF PC-EVR ADJUSTMENT PROGRAM

1. Turn on the PC and install the PC-EVR Adjustment Program into the PC.
2. Execute the "kdv2005.exe" file by double clicking to start up the PC-EVR Adjustment Program.

   The main menu will be displayed.
3. Select the desired model.
4. Turn on the camcorder. Then click "Start."

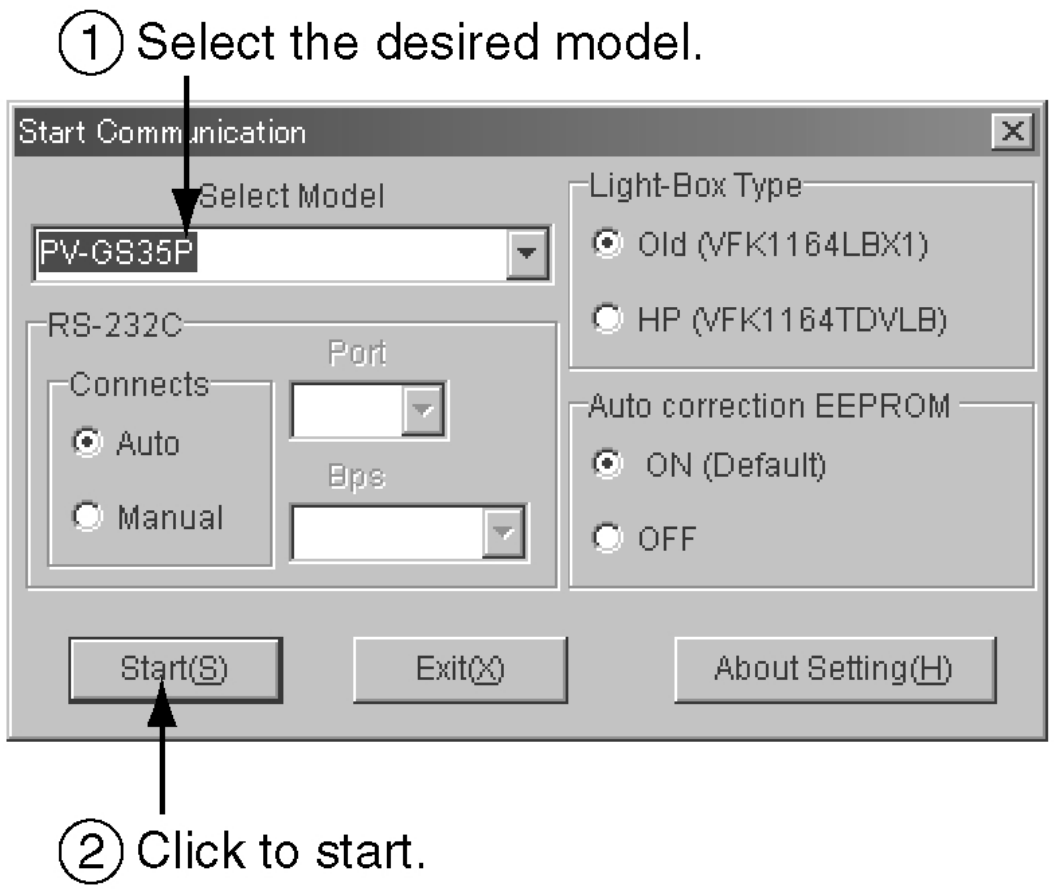
① Select the desired model.
Start Communication
Start(S)
Exit(X)
About Setting(H)
② Click to start.

Select Model: PV-GS35P

Light-Box Type: ● Old (VFK1164LBX1) ○ HP (VFK1164TDVLB)

RS-232C Connects: ● Auto ○ Manual

Port:

Bps:

Auto correction EEPROM: ● ON (Default) ○ OFF

Fig. E2-1

5. When the communication is complete, the dialog will appear.

   Then, click "Yes," and "Save" to save the EEPROM data.

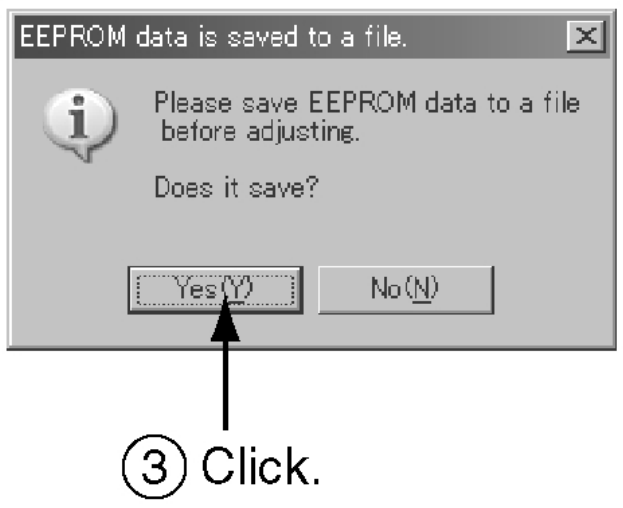
Yes(Y)
No(N)
③ Click.

EEPROM data is saved to a file.

Please save EEPROM data to a file before adjusting.

Does it save?

Fig. E2-2

6. When saving for EEPROM data is complete, the menu will appear.

   To perform each adjustment, display the adjustment menu by selecting the desired menu from "Camera Adjust," "Vcr Adjust," "LCD Adjust" or "EVF Adjust" and select each adjustment item.

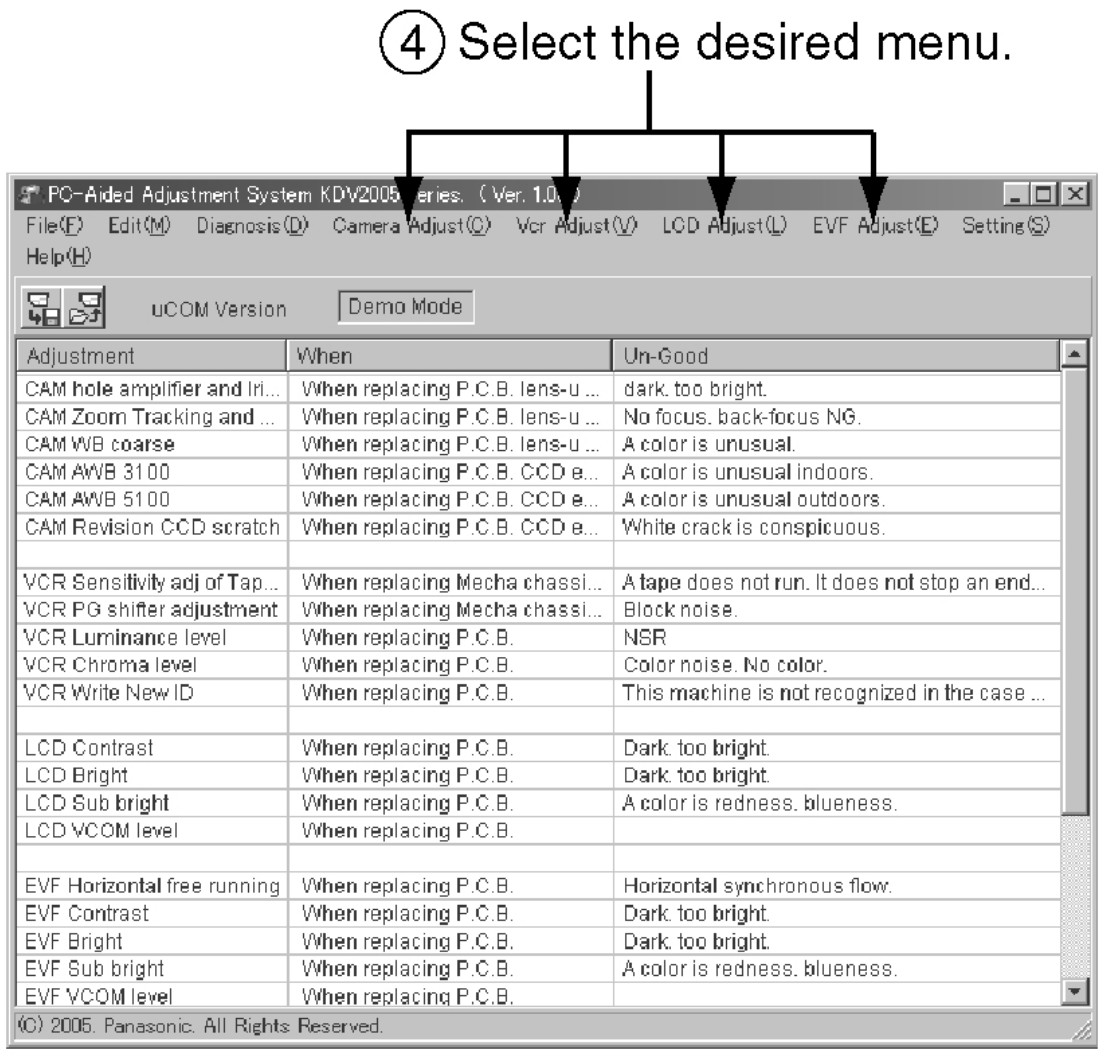
④ Select the desired menu.
File(F)
Edit(M)
Diagnosis(D)
Camera Adjust(C)
Vcr Adjust(V)
LCD Adjust(L)
EVF Adjust(E)
Setting(S)
Help(H)
uCOM Version
Demo Mode

PC-Aided Adjustment System KDV2005 series. (Ver. 1.0

Adjustment	When	Un-Good
CAM hole amplifier and Iri...	When replacing P.C.B. lens-u ...	dark. too bright.
CAM Zoom Tracking and ...	When replacing P.C.B. lens-u ...	No focus. back-focus NG.
CAM WB coarse	When replacing P.C.B. lens-u ...	A color is unusual.
CAM AWB 3100	When replacing P.C.B. CCD e...	A color is unusual indoors.
CAM AWB 5100	When replacing P.C.B. CCD e...	A color is unusual outdoors.
CAM Revision CCD scratch	When replacing P.C.B. CCD e...	White crack is conspicuous.
VCR Sensitivity adj of Tap...	When replacing Mecha chassi...	A tape does not run. It does not stop an end...
VCR PG shifter adjustment	When replacing Mecha chassi...	Block noise.
VCR Luminance level	When replacing P.C.B.	NSR
VCR Chroma level	When replacing P.C.B.	Color noise. No color.
VCR Write New ID	When replacing P.C.B.	This machine is not recognized in the case ...
LCD Contrast	When replacing P.C.B.	Dark. too bright.
LCD Bright	When replacing P.C.B.	Dark. too bright.
LCD Sub bright	When replacing P.C.B.	A color is redness. blueness.
LCD VCOM level	When replacing P.C.B.	
EVF Horizontal free running	When replacing P.C.B.	Horizontal synchronous flow.
EVF Contrast	When replacing P.C.B.	Dark. too bright.
EVF Bright	When replacing P.C.B.	Dark. too bright.
EVF Sub bright	When replacing P.C.B.	A color is redness. blueness.
EVF VCOM level	When replacing P.C.B.	

(C) 2005. Panasonic. All Rights Reserved.

Fig. E2-3

Note:

The adjusted data is stored in the EEPROM IC after each adjustment.

7. After adjustment, to close the software, select "Exit" in the File menu or close the window.

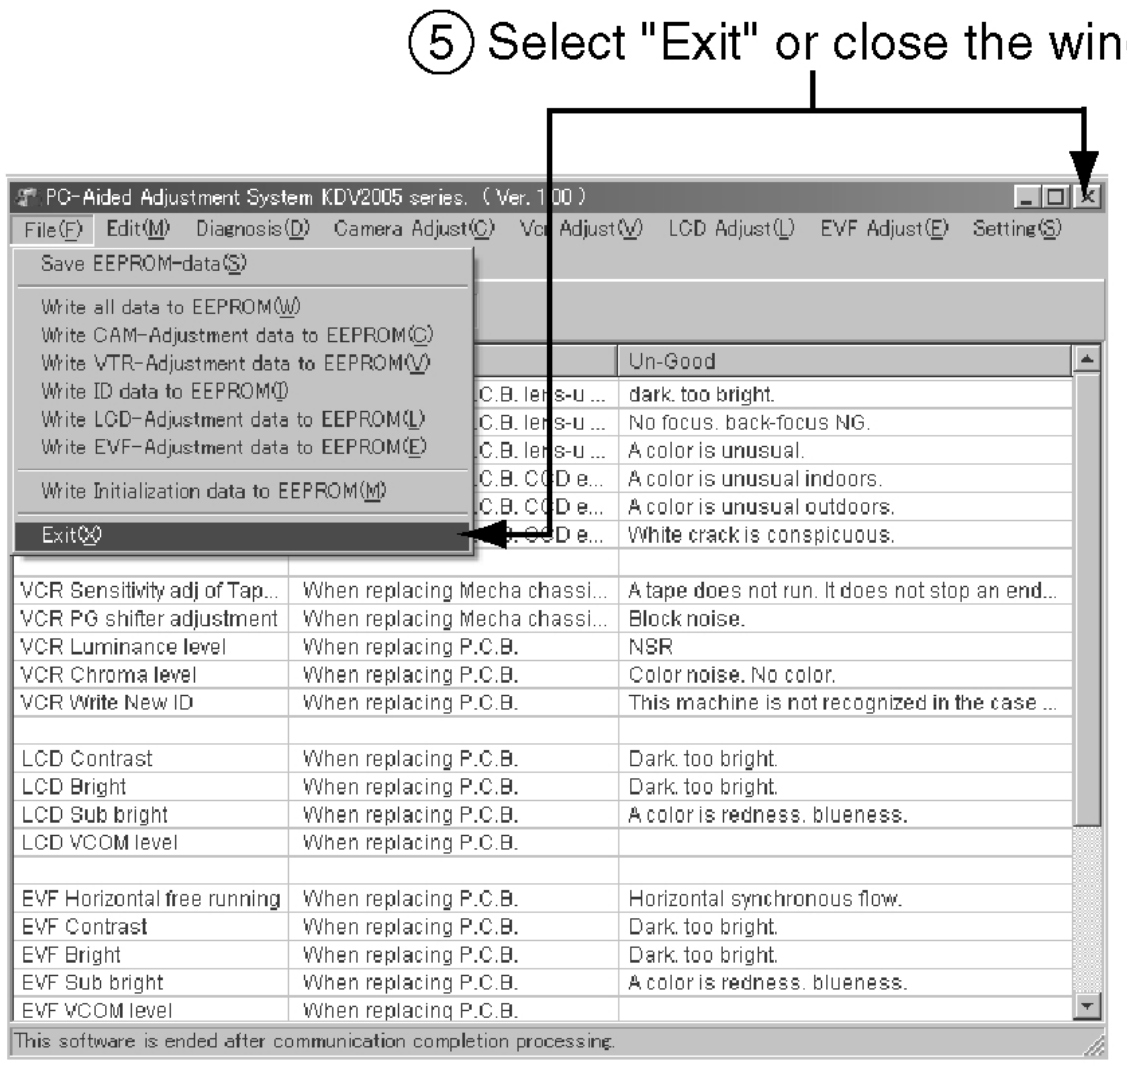
⑤ Select "Exit" or close the window.
File(F)
Edit(M)
Diagnosis(D)
Camera Adjust(C)
Vcr Adjust(V)
LCD Adjust(L)
EVF Adjust(E)
Setting(S)
Save EEPROM-data(S)
Write all data to EEPROM(W)
Write CAM-Adjustment data to EEPROM(C)
Write VTR-Adjustment data to EEPROM(V)
Write ID data to EEPROM(I)
Write LCD-Adjustment data to EEPROM(L)
Write EVF-Adjustment data to EEPROM(E)
Write Initialization data to EEPROM(M)
Exit(X)

PC-Aided Adjustment System KDV2005 series. (Ver. 1.00)

This software is ended after communication completion processing.

Fig. E2-4

10 SCHEMATIC DIAGRAMS

10.1. SCHEMATIC DIAGRAM & CIRCUIT BOARD LAYOUT NOTES

1. **Important safety notice**

   Components identified by the sign ⚠ have special characteristics important for safety. When replacing any of these components. Use only the specified parts.

2. Do not use the part number shown on this drawing for ordering.
   The correct part number and part value is shown in the parts list, and may be slightly different or amended since this drawing was prepared.

3. Use only original replacement parts:
   To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Parts different in shape or size may be used.
   However, only interchangeable parts will be supplied as service replacement parts.

5. Test point information

   ⚲ : Test point with no test pin.

Schematic Diagram Notes

1. Indication for Zener Voltage of Zener Diodes
   The Zener Voltage of Zener Diodes are indicated as such on Schematic Diagrams.

   Example:
   (6.2V)......Zener Voltage

2. How to identify Connectors
   Each connector is labeled with a Connector No. and Pin No. Indicating what it is connected to,
   in other words, its counter part.
   Use the interconnection schematic diagram to find the connection between associated connectors.

   Example:
   The connections between C.B.A.s are shown below.

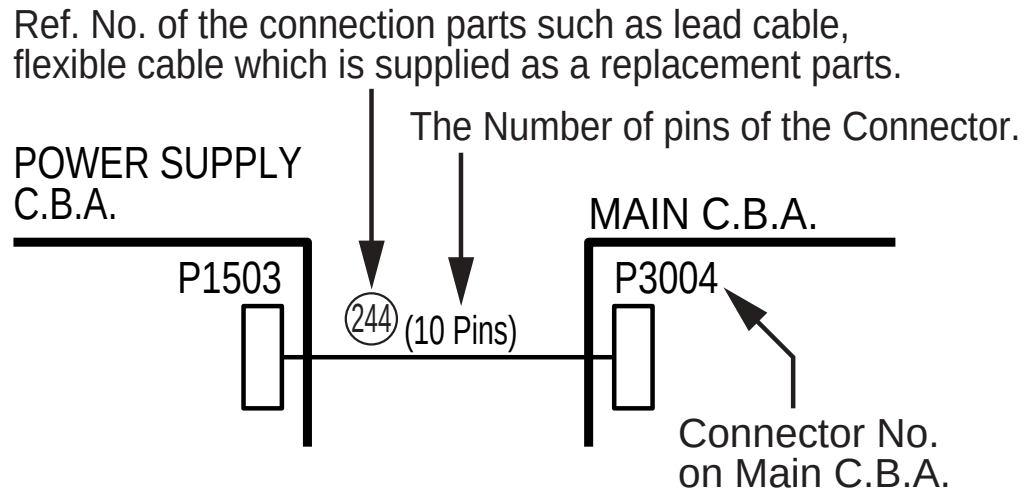
Ref. No. of the connection parts such as lead cable, flexible cable which is supplied as a replacement parts.
The Number of pins of the Connector.
POWER SUPPLY C.B.A.
MAIN C.B.A.
P1503
244
(10 Pins)
P3004
Connector No. on Main C.B.A.

3. Parts marked "PT" are not used in any models included in this service model.

Example:


C6011
100P
PT
C6011
PT
R6097
PT

Signal Waveform Note

How to read Signal Waveform

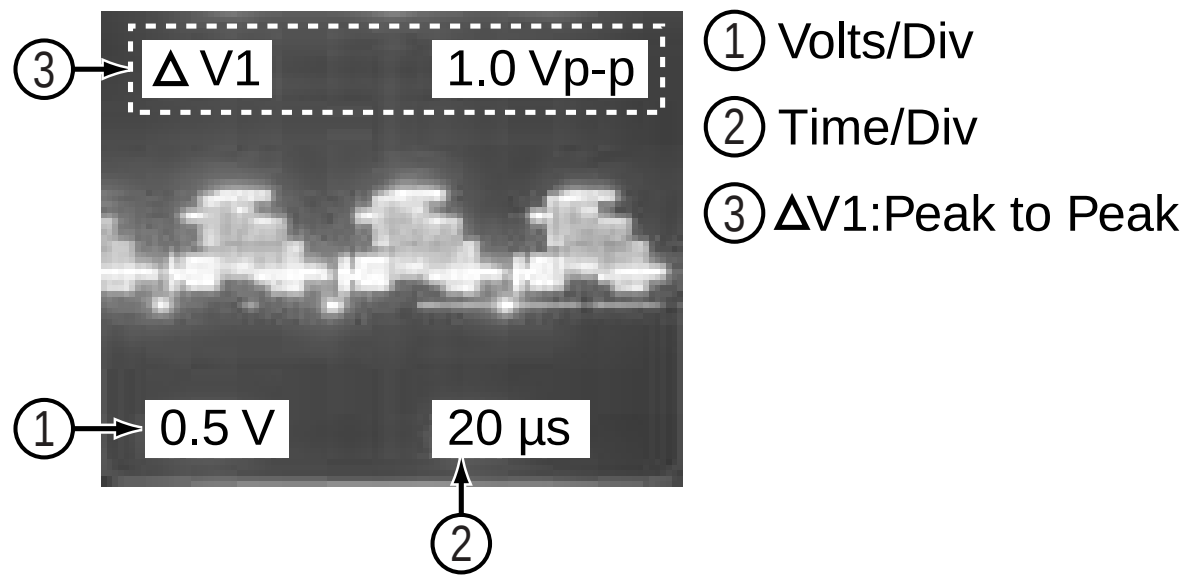
③
Δ V1
1.0 Vp-p
①
0.5 V
20 µs
②
① Volts/Div
② Time/Div
③ ΔV1:Peak to Peak

Voltage Chart Note

Voltage Measurement

a. Color bar signal in SP mode.
b. ---:Unmeasurable or not necessary to measure.

Circuit Board Layout Note

Circuit Board Layout shows components installed for various models.
For proper parts content for the model you are servicing, please refer to the schematic diagram and parts list.

NOTE:
Circuit Board Layout includes components which are not used.

Model Number Indication

Model numbers are indicated without "NV-GS."

10.2. FRONT SCHEMATIC DIAGRAM

FRONT SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

NOTE:
PARTS MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

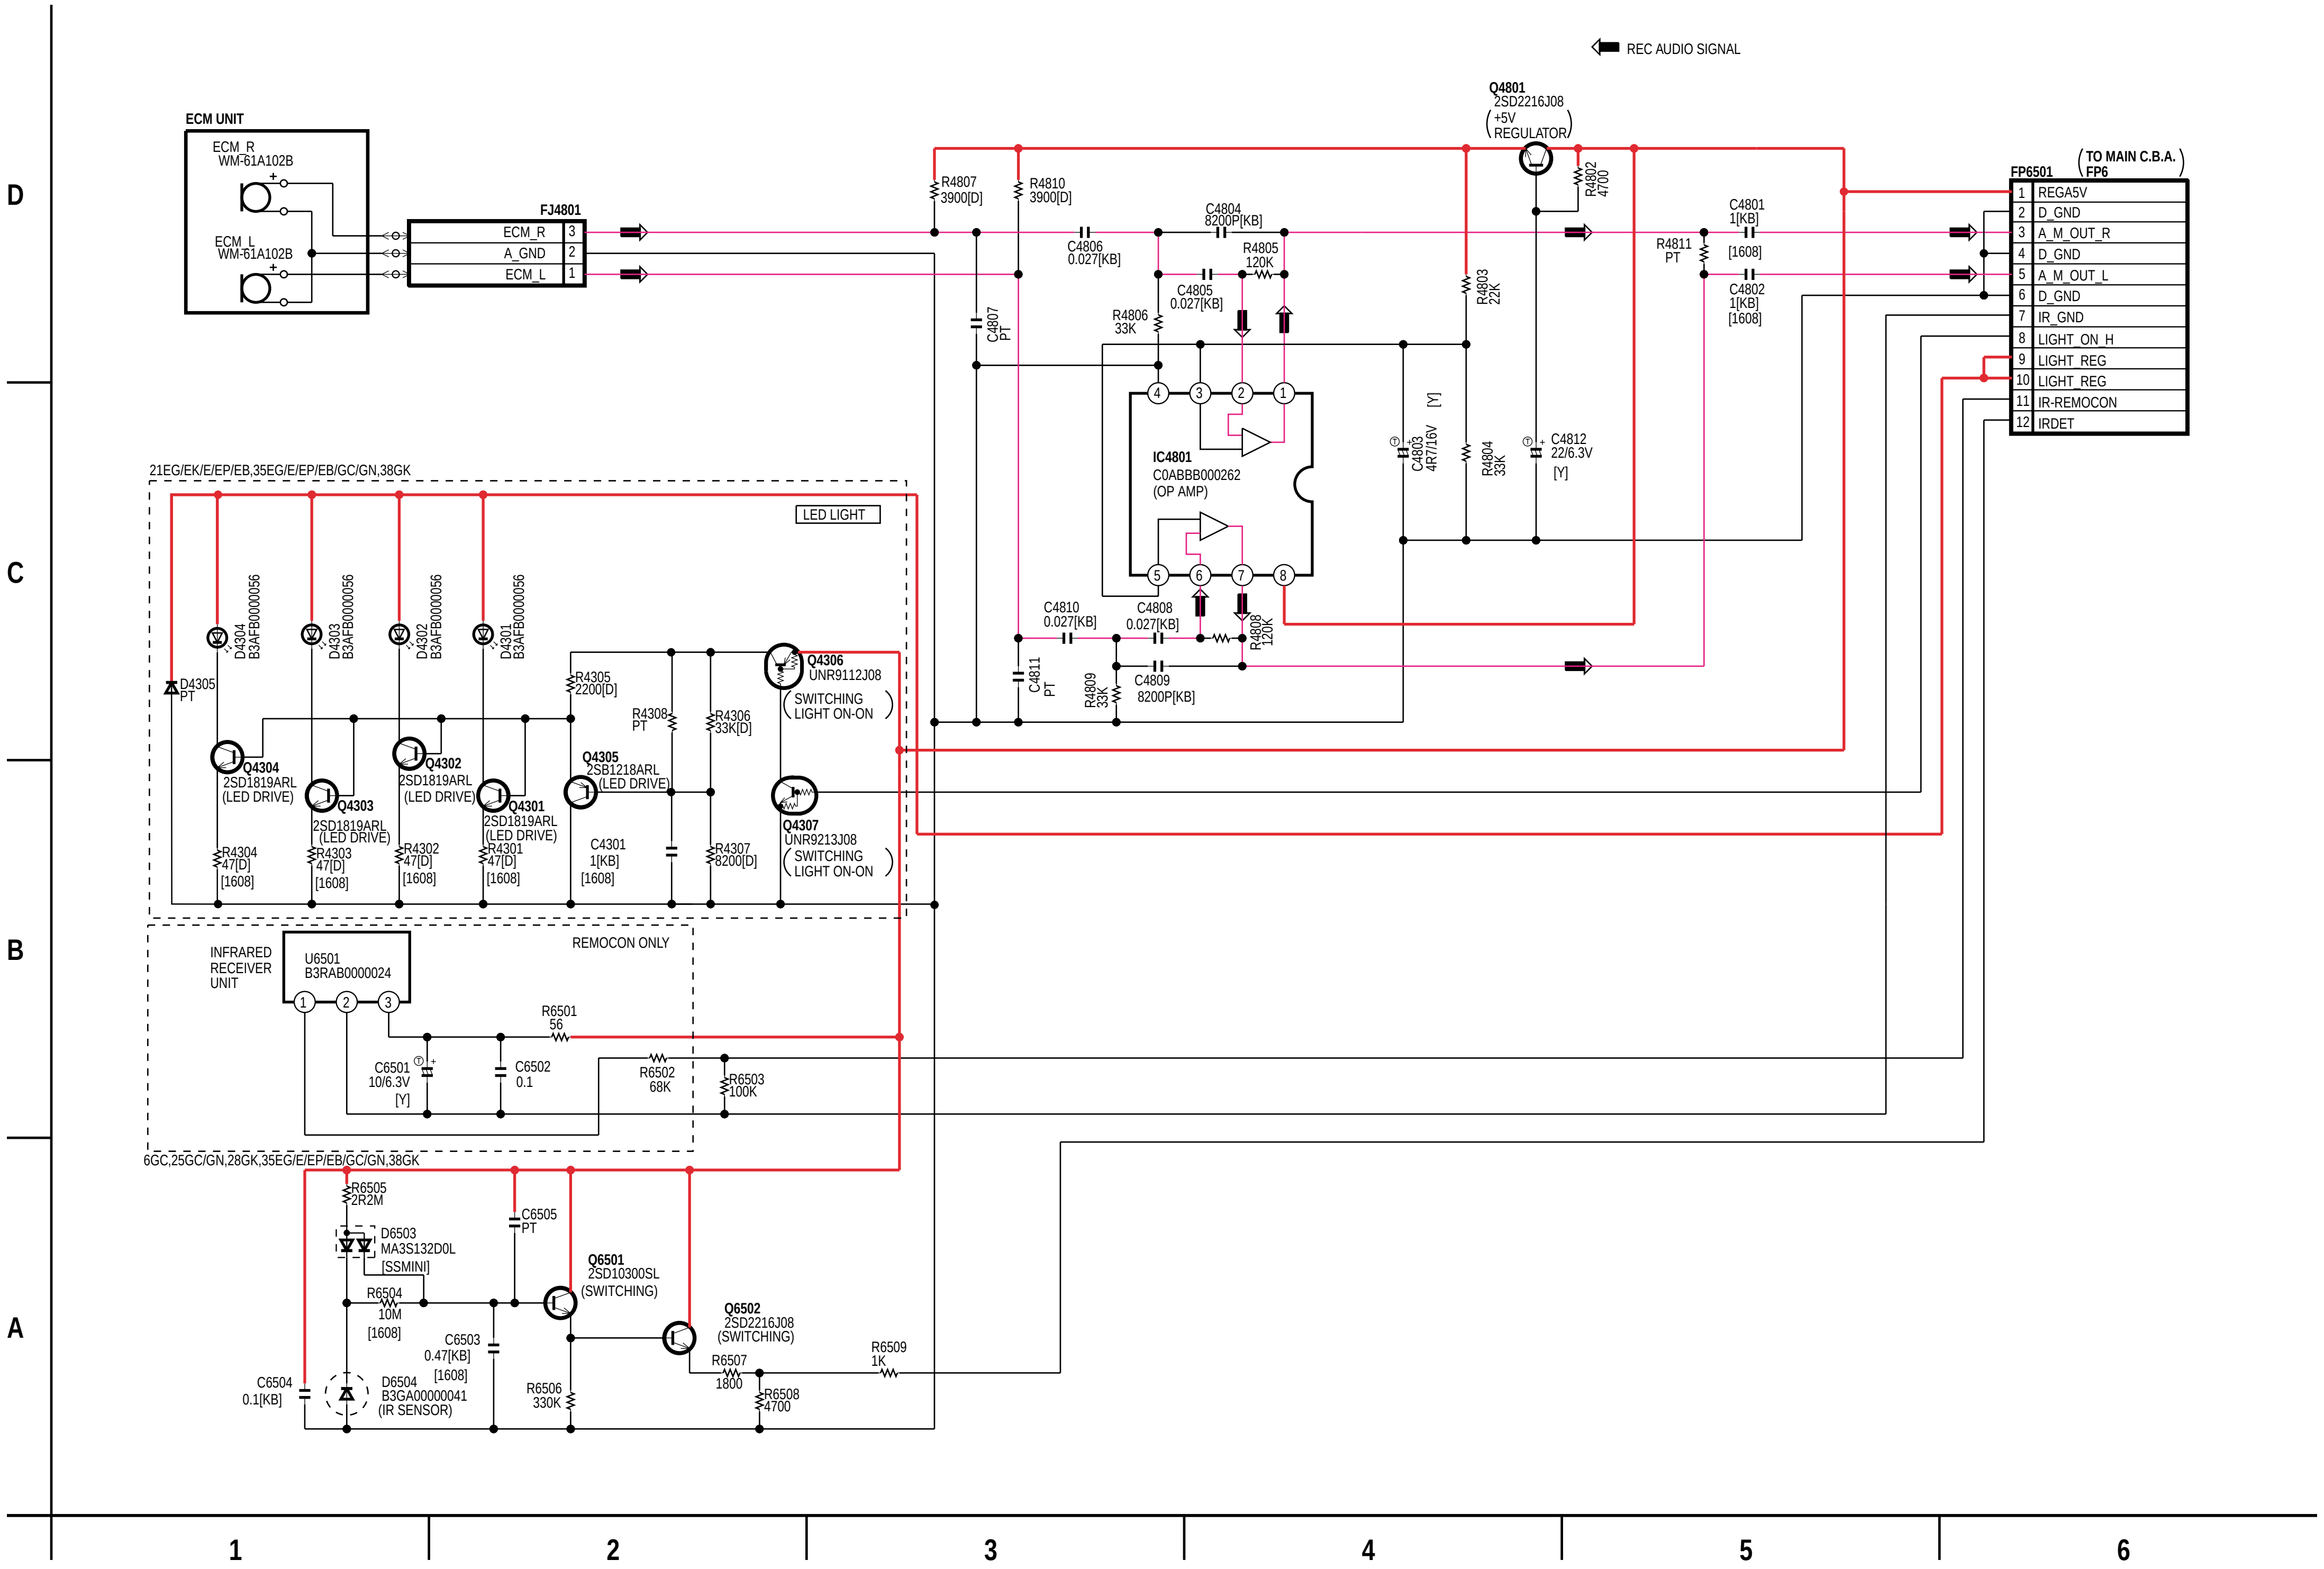
REC AUDIO SIGNAL
ECM UNIT
ECM_R WM-61A102B
ECM_L WM-61A102B
FJ4801
ECM_R 3
A_GND 2
ECM_L 1
Q4801 2SD2216J08 (+5V REGULATOR)
R4807 3900[D]
R4810 3900[D]
R4802 4700
C4804 8200P[KB]
C4806 0.027[KB]
R4805 120K
C4805 0.027[KB]
R4806 33K
C4807 PT
R4803 22K
R4811 PT
C4801 1[KB] [1608]
C4802 1[KB] [1608]
IC4801 C0ABBB000262 (OP AMP)
C4803 4R7/16V [Y]
R4804 33K
C4812 22/6.3V [Y]
C4810 0.027[KB]
C4808 0.027[KB]
R4808 120K
C4811 PT
R4809 33K
C4809 8200P[KB]
TO MAIN C.B.A. FP6
FP6501
1 REGA5V
2 D_GND
3 A_M_OUT_R
4 D_GND
5 A_M_OUT_L
6 D_GND
7 IR_GND
8 LIGHT_ON_H
9 LIGHT_REG
10 LIGHT_REG
11 IR-REMOCON
12 IRDET
21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
LED LIGHT
D4304 B3AFB0000056
D4303 B3AFB0000056
D4302 B3AFB0000056
D4301 B3AFB0000056
D4305 PT
R4305 2200[D]
R4308 PT
R4306 33K[D]
Q4306 UNR9112J08 (SWITCHING LIGHT ON-ON)
Q4304 2SD1819ARL (LED DRIVE)
Q4303 2SD1819ARL (LED DRIVE)
Q4302 2SD1819ARL (LED DRIVE)
Q4301 2SD1819ARL (LED DRIVE)
Q4305 2SB1218ARL (LED DRIVE)
Q4307 UNR9213J08 (SWITCHING LIGHT ON-ON)
R4304 47[D] [1608]
R4303 47[D] [1608]
R4302 47[D] [1608]
R4301 47[D] [1608]
C4301 1[KB] [1608]
R4307 8200[D]
INFRARED RECEIVER UNIT
U6501 B3RAB0000024
REMOCON ONLY
R6501 56
C6501 10/6.3V [Y]
C6502 0.1
R6502 68K
R6503 100K
6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6505 2R2M
C6505 PT
D6503 MA3S132D0L [SSMINI]
R6504 10M [1608]
Q6501 2SD1030OSL (SWITCHING)
C6503 0.47[KB] [1608]
Q6502 2SD2216J08 (SWITCHING)
C6504 0.1[KB]
D6504 B3GA00000041 (IR SENSOR)
R6506 330K
R6507 1800
R6508 4700
R6509 1K
A
B
C
D
1
2
3
4
5
6

LSJB8296
FRONT SCHEMATIC DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

10.3. JACK SCHEMATIC DIAGRAM

JACK SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

NOTE:
PARTS MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

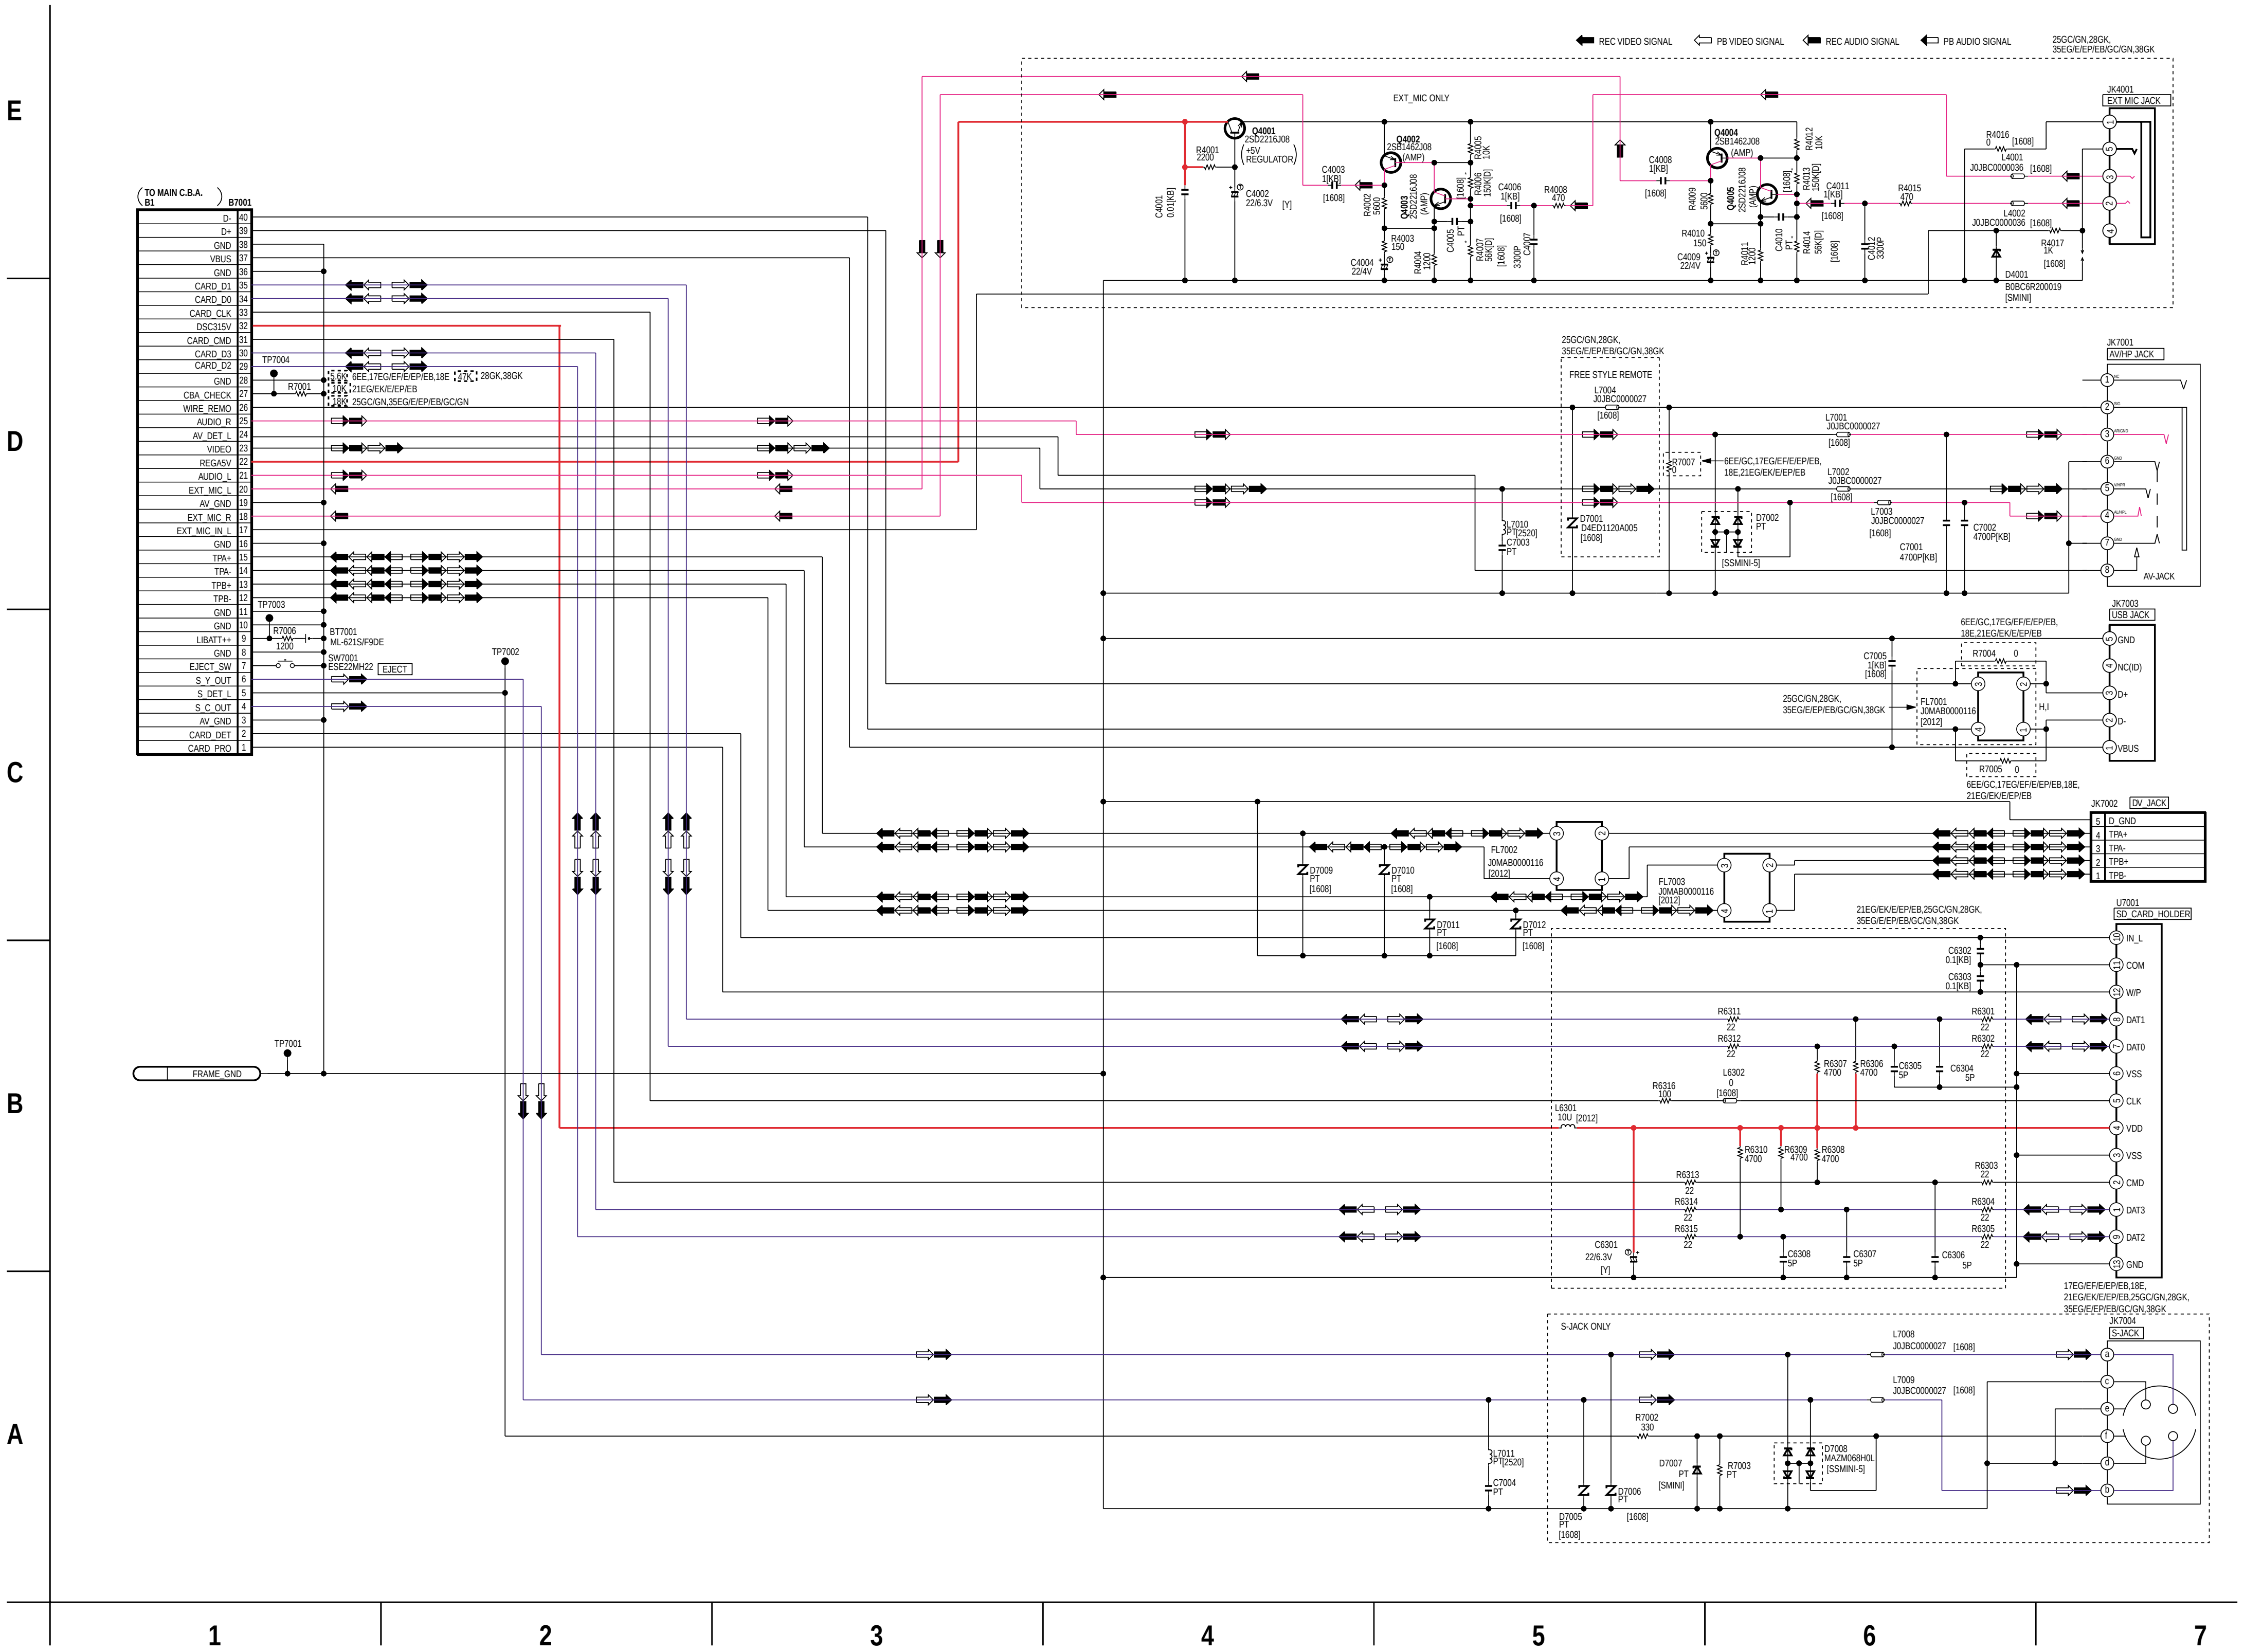
REC VIDEO SIGNAL
PB VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
E
D
C
B
A
1
2
3
4
5
6
7
TO MAIN C.B.A. B1
B7001
D- 40
D+ 39
GND 38
VBUS 37
GND 36
CARD_D1 35
CARD_D0 34
CARD_CLK 33
DSC315V 32
CARD_CMD 31
CARD_D3 30
CARD_D2 29
GND 28
CBA_CHECK 27
WIRE_REMO 26
AUDIO_R 25
AV_DET_L 24
VIDEO 23
REGA5V 22
AUDIO_L 21
EXT_MIC_L 20
AV_GND 19
EXT_MIC_R 18
EXT_MIC_IN_L 17
GND 16
TPA+ 15
TPA- 14
TPB+ 13
TPB- 12
GND 11
GND 10
LIBATT++ 9
GND 8
EJECT_SW 7
S_Y_OUT 6
S_DET_L 5
S_C_OUT 4
AV_GND 3
CARD_DET 2
CARD_PRO 1
TP7004
R7001
5.6K 6EE,17EG/EF/E/EP/EB,18E
47K 28GK,38GK
10K 21EG/EK/E/EP/EB
18K 25GC/GN,35EG/E/EP/EB/GC/GN
TP7003
R7006 1200
BT7001 ML-621S/F9DE
SW7001 ESE22MH22
EJECT
TP7002
TP7001
FRAME_GND
25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
EXT_MIC ONLY
Q4001 2SD2216J08 (+5V REGULATOR)
R4001 2200
C4001 0.01[KB]
C4002 22/6.3V [Y]
C4003 1[KB] [1608]
Q4002 2SB1462J08 (AMP)
R4002 5600
Q4003 2SD2216J08 (AMP)
R4003 150
C4004 22/4V
R4004 1200
C4005 PT
R4005 10K
R4006 150K[D]
R4007 56K[D]
C4006 1[KB] [1608]
C4007 3300P
R4008 470
C4008 1[KB] [1608]
Q4004 2SB1462J08 (AMP)
R4009 5600
Q4005 2SD2216J08 (AMP)
R4010 150
C4009 22/4V
R4011 1200
C4010 PT
R4012 10K
R4013 150K[D]
R4014 56K[D]
C4011 1[KB] [1608]
C4012 3300P
R4015 470
R4016 0 [1608]
L4001 J0JBC0000036 [1608]
L4002 J0JBC0000036 [1608]
R4017 1K [1608]
D4001 B0BC6R200019 [SMINI]
JK4001 EXT MIC JACK
FREE STYLE REMOTE
L7004 J0JBC0000027 [1608]
L7010 PT[2520]
C7003 PT
D7001 D4ED1120A005 [1608]
R7007 PT
6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB
D7002 PT
[SSMINI-5]
L7001 J0JBC0000027 [1608]
L7002 J0JBC0000027 [1608]
L7003 J0JBC0000027 [1608]
C7001 4700P[KB]
C7002 4700P[KB]
JK7001 AV/HP JACK
AV-JACK
JK7003 USB JACK
GND
NC(ID)
D+
D-
VBUS
C7005 1[KB] [1608]
R7004 0
R7005 0
FL7001 J0MAB0000116 [2012]
25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB
JK7002 DV_JACK
D_GND
TPA+
TPA-
TPB+
TPB-
D7009 PT [1608]
D7010 PT [1608]
D7011 PT [1608]
D7012 PT [1608]
FL7002 J0MAB0000116 [2012]
FL7003 J0MAB0000116 [2012]
21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
U7001 SD_CARD_HOLDER
IN_L
COM
W/P
DAT1
DAT0
VSS
CLK
VDD
VSS
CMD
DAT3
DAT2
GND
C6302 0.1[KB]
C6303 0.1[KB]
R6301 22
R6302 22
R6303 22
R6304 22
R6305 22
R6306 4700
R6307 4700
R6308 4700
R6309 4700
R6310 4700
R6311 22
R6312 22
R6313 22
R6314 22
R6315 22
R6316 100
L6301 10U [2012]
L6302 0 [1608]
C6301 22/6.3V [Y]
C6304 5P
C6305 5P
C6306 5P
C6307 5P
C6308 5P
17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
S-JACK ONLY
JK7004 S-JACK
L7008 J0JBC0000027 [1608]
L7009 J0JBC0000027 [1608]
R7002 330
L7011 PT[2520]
C7004 PT
D7007 PT [SMINI]
R7003 PT
D7008 MAZM068H0L [SSMINI-5]
D7005 PT [1608]
D7006 PT [1608]

LINK TO VOLTAGE CHART

LSJB8297

JACK SCHEMATIC DIAGRAM

NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

10.4. LCD BACKLIGHT SCHEMATIC DIAGRAM

LCD BACKLIGHT SCHEMATIC DIAGRAM

NOTE:
ALL INDIVIDUAL PARTS EXCEPT D8101, D8103, D8105, AND D8107 ON LCD BACKLIGHT C.B.A. ARE SUPPLIED AS REPLACEMENT PARTS. WHEN SERVICING THESE PARTS, REPLACE LCD BACKLIGHT C.B.A. INSTEAD OF INDIVIDUAL PARTS.

NOTE: For placing a purchase order of the parts, be sure to use the part number listed in the parts list. Do not use the part number on this diagram.

NOTE:
PARTS MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

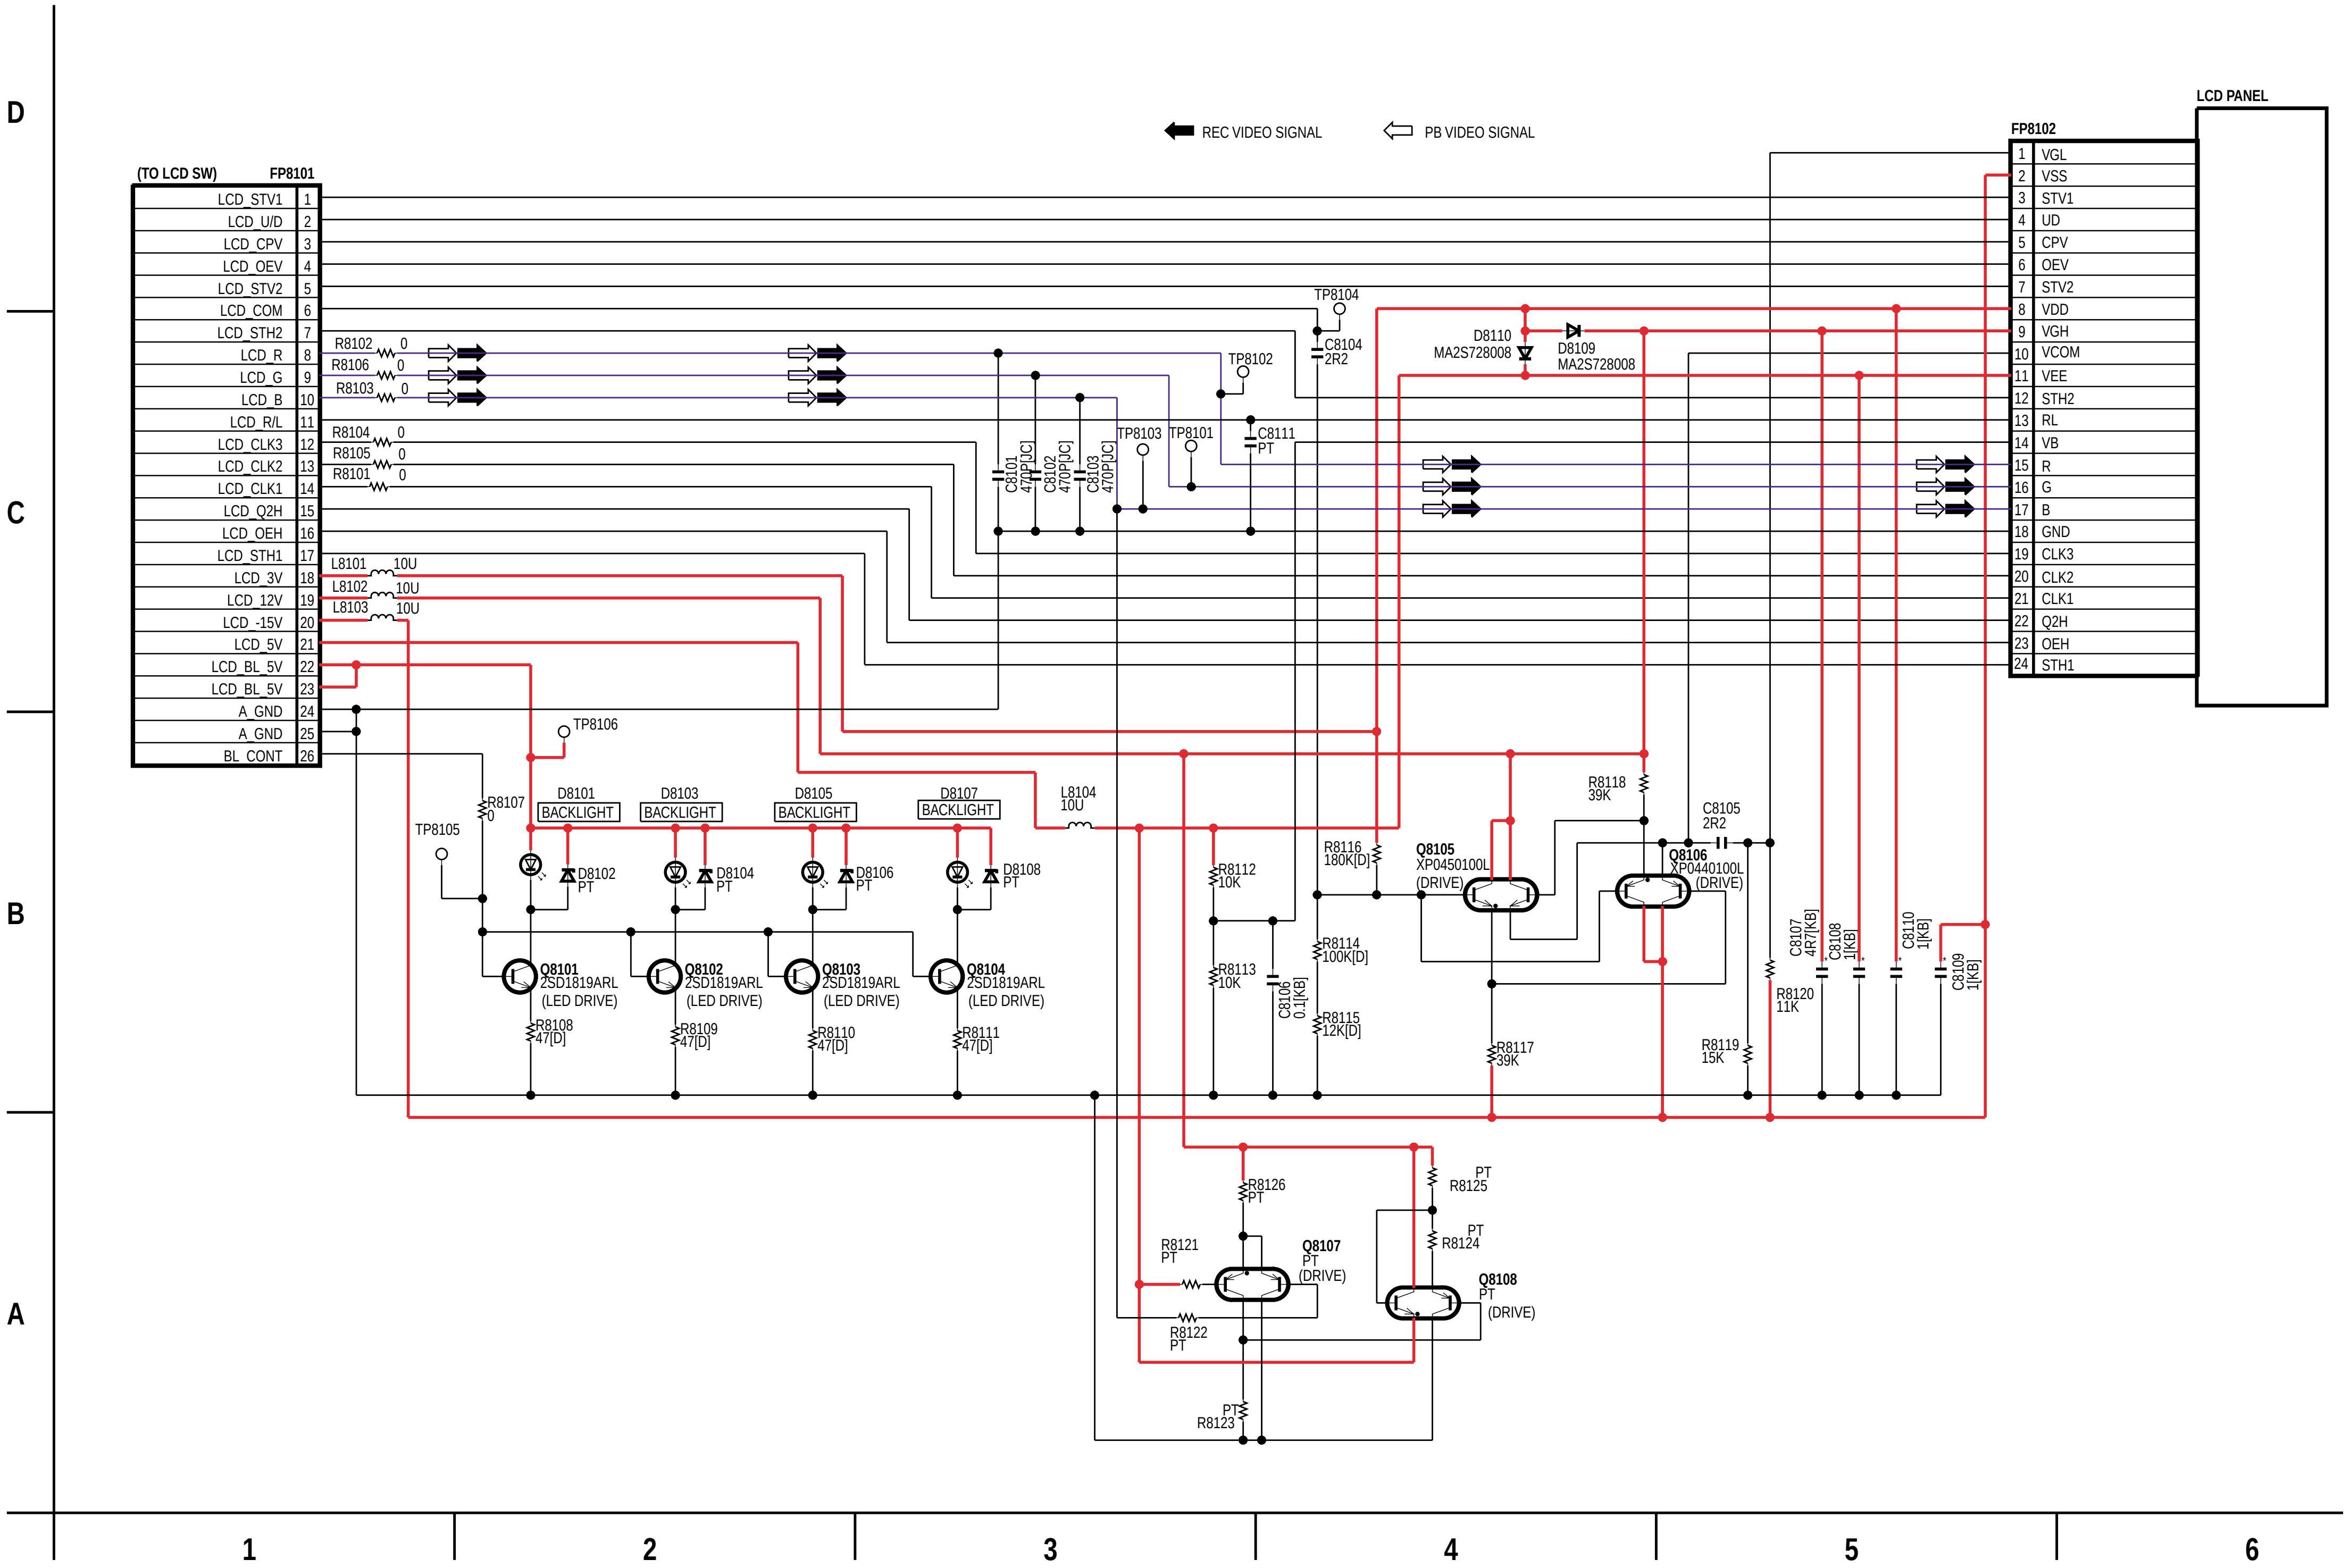
D
C
B
A
1
2
3
4
5
6
REC VIDEO SIGNAL
PB VIDEO SIGNAL
(TO LCD SW)
FP8101
1 LCD_STV1
2 LCD_U/D
3 LCD_CPV
4 LCD_OEV
5 LCD_STV2
6 LCD_COM
7 LCD_STH2
8 LCD_R
9 LCD_G
10 LCD_B
11 LCD_R/L
12 LCD_CLK3
13 LCD_CLK2
14 LCD_CLK1
15 LCD_Q2H
16 LCD_OEH
17 LCD_STH1
18 LCD_3V
19 LCD_12V
20 LCD_-15V
21 LCD_5V
22 LCD_BL_5V
23 LCD_BL_5V
24 A_GND
25 A_GND
26 BL_CONT
LCD PANEL
FP8102
1 VGL
2 VSS
3 STV1
4 UD
5 CPV
6 OEV
7 STV2
8 VDD
9 VGH
10 VCOM
11 VEE
12 STH2
13 RL
14 VB
15 R
16 G
17 B
18 GND
19 CLK3
20 CLK2
21 CLK1
22 Q2H
23 OEH
24 STH1
R8102 0
R8106 0
R8103 0
R8104 0
R8105 0
R8101 0
L8101 10U
L8102 10U
L8103 10U
TP8104
TP8102
TP8103
TP8101
TP8105
TP8106
C8101 470P[JC]
C8102 470P[JC]
C8103 470P[JC]
C8104 2R2
C8111 PT
D8110 MA2S728008
D8109 MA2S728008
R8107 0
D8101 BACKLIGHT
D8103 BACKLIGHT
D8105 BACKLIGHT
D8107 BACKLIGHT
D8102 PT
D8104 PT
D8106 PT
D8108 PT
Q8101 2SD1819ARL (LED DRIVE)
Q8102 2SD1819ARL (LED DRIVE)
Q8103 2SD1819ARL (LED DRIVE)
Q8104 2SD1819ARL (LED DRIVE)
R8108 47[D]
R8109 47[D]
R8110 47[D]
R8111 47[D]
L8104 10U
R8112 10K
R8113 10K
C8106 0.1[KB]
R8116 180K[D]
R8114 100K[D]
R8115 12K[D]
Q8105 XP0450100L (DRIVE)
Q8106 XP0440100L (DRIVE)
R8118 39K
R8117 39K
C8105 2R2
R8119 15K
R8120 11K
C8107 4R7[KB]
C8108 1[KB]
C8110 1[KB]
C8109 1[KB]
R8126 PT
R8125 PT
R8124 PT
R8121 PT
R8122 PT
R8123 PT
Q8107 PT (DRIVE)
Q8108 PT (DRIVE)

LINK TO VOLTAGE CHART

LSJB8298
LCD BACKLIGHT SCHEMATIC DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

10.5. EVF BACKLIGHT / CASSETTE COVER SCHEMATIC DIAGRAMS

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

NOTE:
PARTS MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

EVF BACKLIGHT SCHEMATIC DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E,
NV-GS21EG/EK/E/EP/EB, NV-GS25GC/GN, NV-GS28GK

“FOR REFERENCE ONLY”

NOTE:
EVF BACKLIGHT IS NOT SERVICEABLE AND IS
SUPPLIED AS A UNIT ONLY FOR REPLACEMENT.

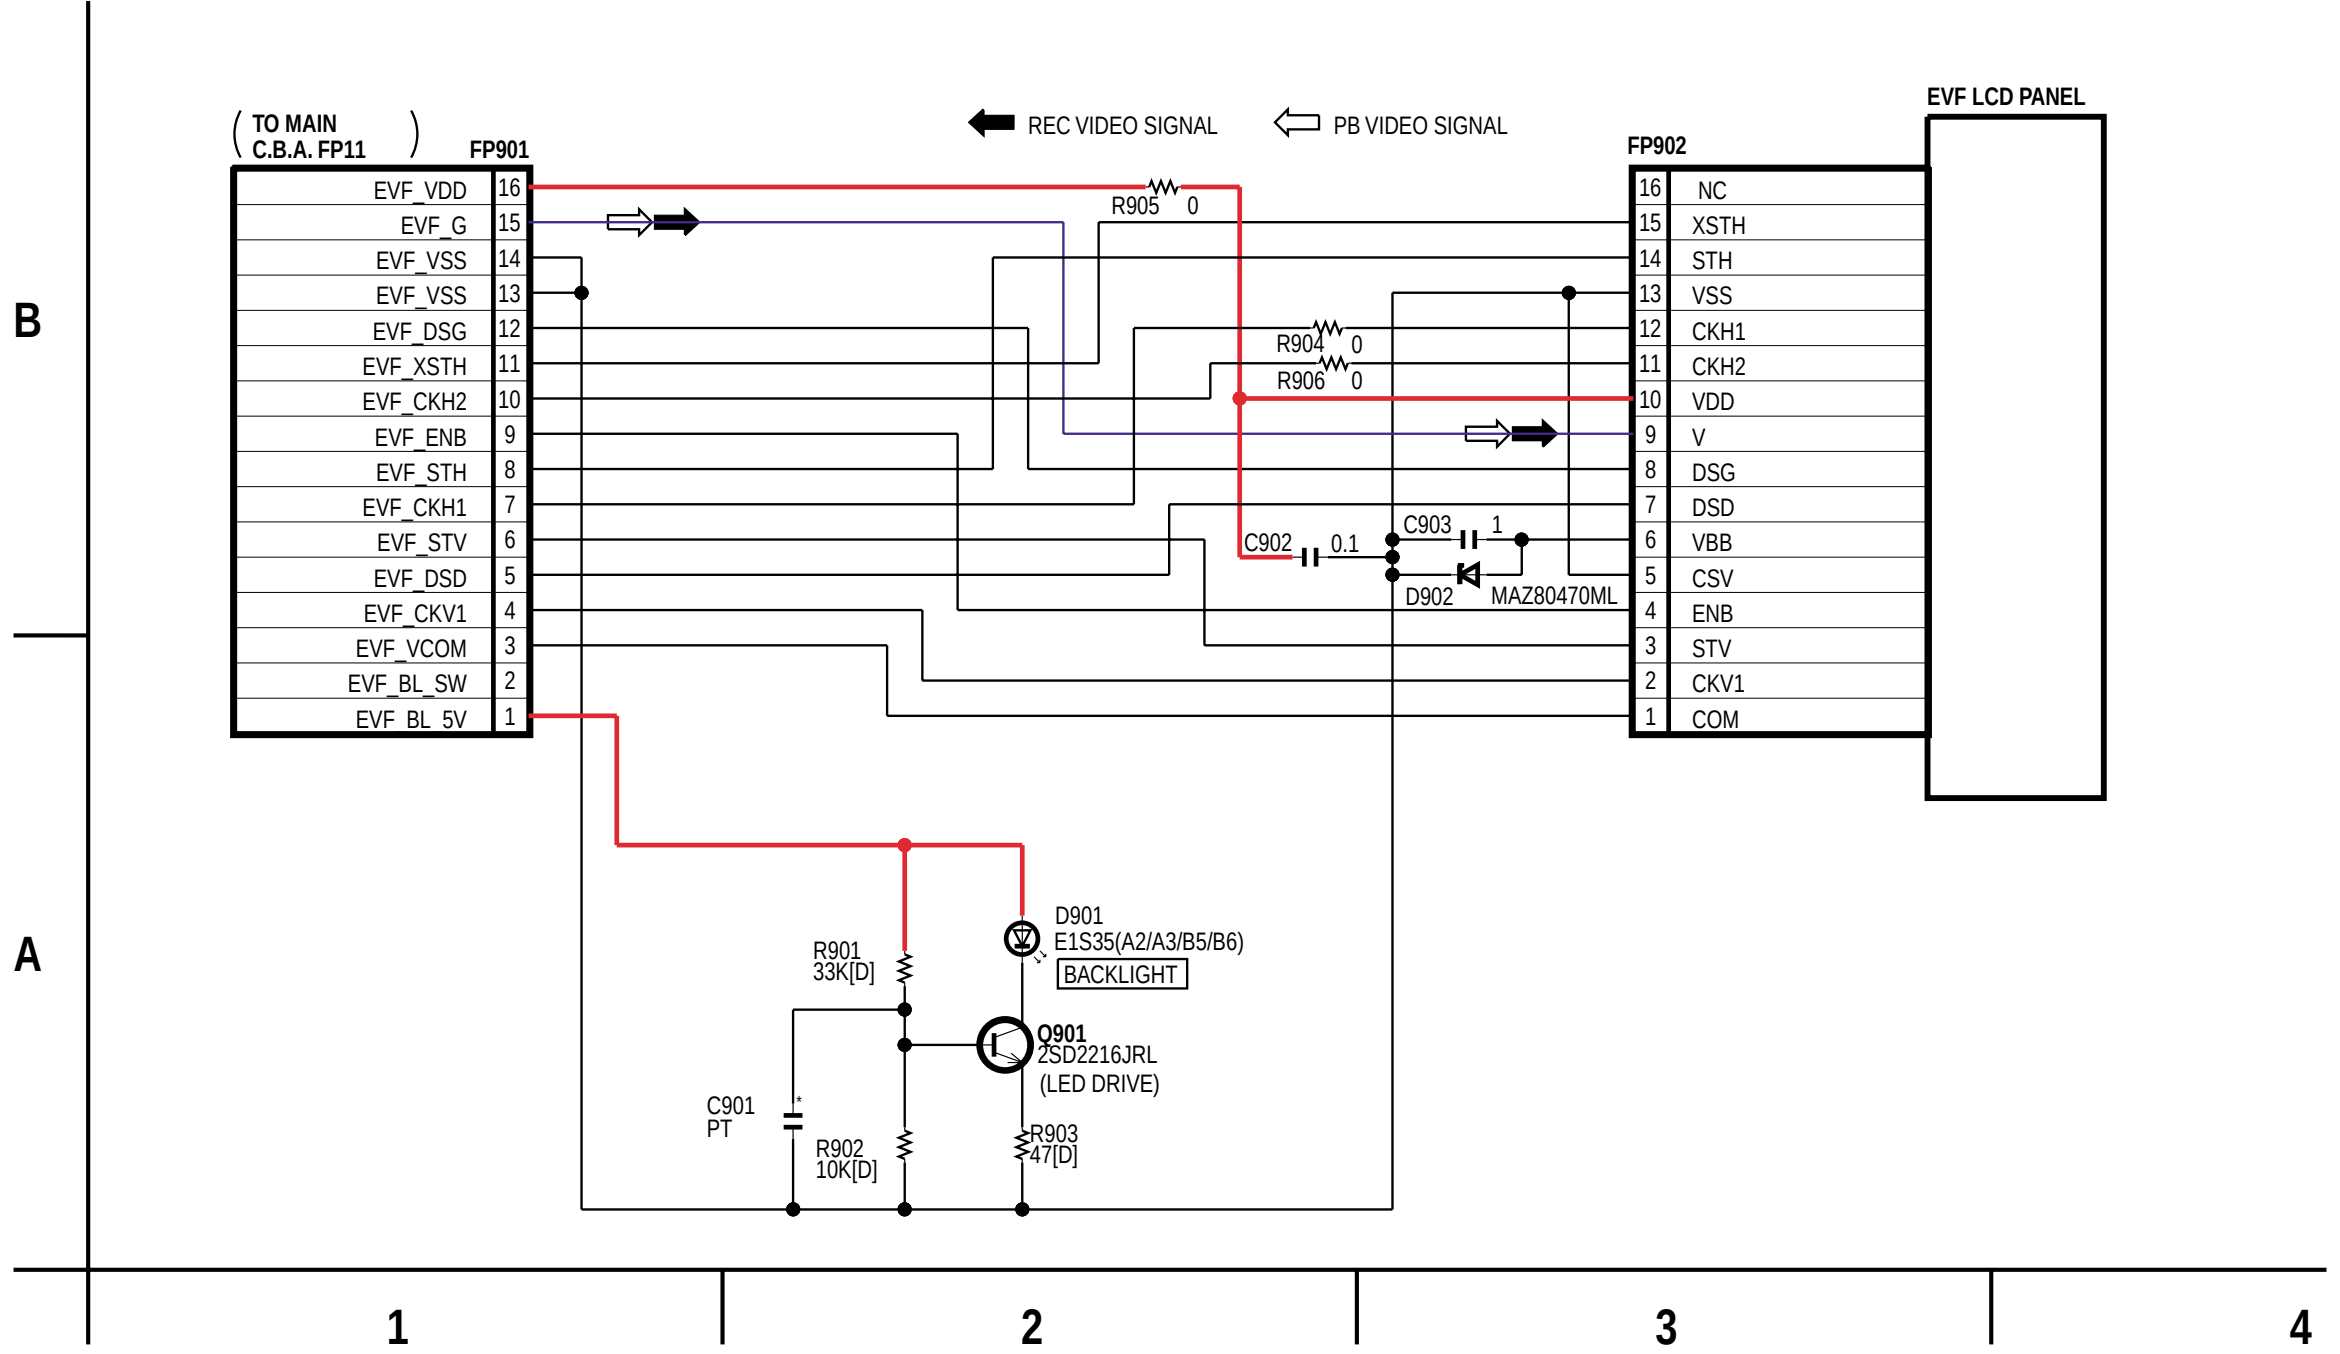

TO MAIN C.B.A. FP11
FP901
EVF_VDD 16
EVF_G 15
EVF_VSS 14
EVF_VSS 13
EVF_DSG 12
EVF_XSTH 11
EVF_CKH2 10
EVF_ENB 9
EVF_STH 8
EVF_CKH1 7
EVF_STV 6
EVF_DSD 5
EVF_CKV1 4
EVF_VCOM 3
EVF_BL_SW 2
EVF_BL_5V 1
REC VIDEO SIGNAL
PB VIDEO SIGNAL
R905 0
R904 0
R906 0
C902 0.1
C903 1
D902 MAZ80470ML
FP902
16 NC
15 XSTH
14 STH
13 VSS
12 CKH1
11 CKH2
10 VDD
9 V
8 DSG
7 DSD
6 VBB
5 CSV
4 ENB
3 STV
2 CKV1
1 COM
EVF LCD PANEL
D901
E1S35(A2/A3/B5/B6)
BACKLIGHT
R901 33K[D]
Q901
2SD2216JRL
(LED DRIVE)
C901 PT
R902 10K[D]
R903 47[D]
B
A
1
2
3
4

EVF BACKLIGHT SCHEMATIC DIAGRAM NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

NOTE:
EVF BACKLIGHT IS NOT SERVICEABLE AND IS
SUPPLIED AS A UNIT ONLY FOR REPLACEMENT.

“FOR REFERENCE ONLY”

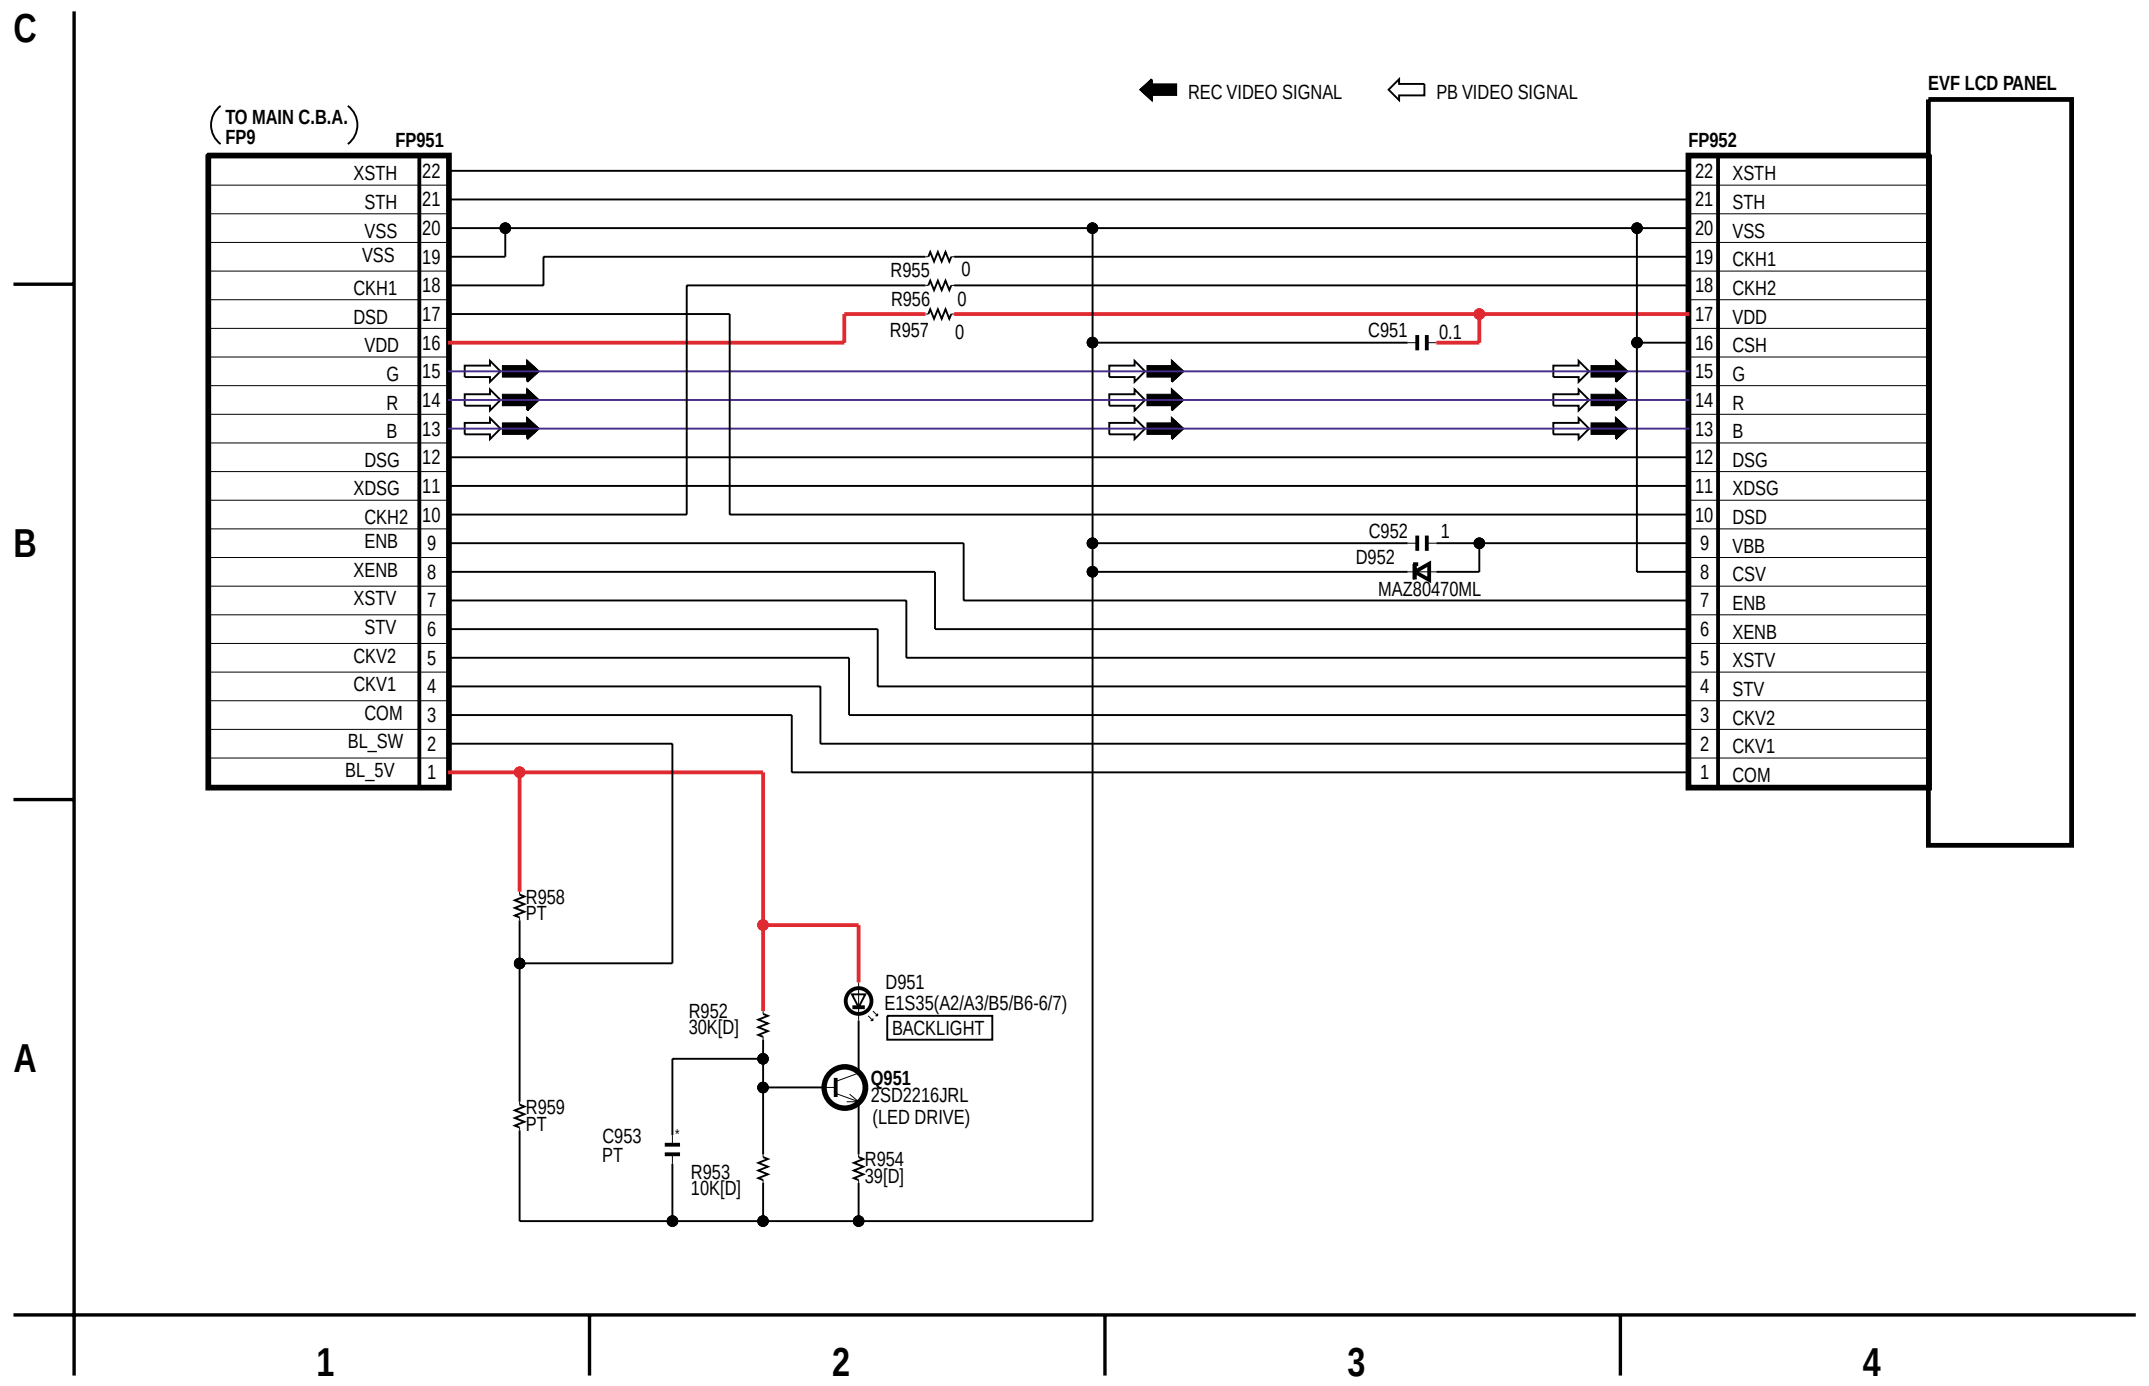

C
B
A
REC VIDEO SIGNAL
PB VIDEO SIGNAL
EVF LCD PANEL
TO MAIN C.B.A. FP9
FP951
XSTH 22
STH 21
VSS 20
VSS 19
CKH1 18
DSD 17
VDD 16
G 15
R 14
B 13
DSG 12
XDSG 11
CKH2 10
ENB 9
XENB 8
XSTV 7
STV 6
CKV2 5
CKV1 4
COM 3
BL_SW 2
BL_5V 1
R955 0
R956 0
R957 0
C951 0.1
C952 1
D952
MAZ80470ML
FP952
22 XSTH
21 STH
20 VSS
19 CKH1
18 CKH2
17 VDD
16 CSH
15 G
14 R
13 B
12 DSG
11 XDSG
10 DSD
9 VBB
8 CSV
7 ENB
6 XENB
5 XSTV
4 STV
3 CKV2
2 CKV1
1 COM
R958 PT
R959 PT
R952 30K[D]
D951
E1S35(A2/A3/B5/B6-6/7)
BACKLIGHT
Q951
2SD2216JRL
(LED DRIVE)
C953 PT
R953 10K[D]
R954 39[D]
1
2
3
4

CASSETTE COVER SCHEMATIC DIAGRAM

“FOR REFERENCE ONLY”

NOTE:
CASSETTE COVER UNIT IS NOT SERVICEABLE AND IS
SUPPLIED AS A UNIT ONLY FOR REPLACEMENT.

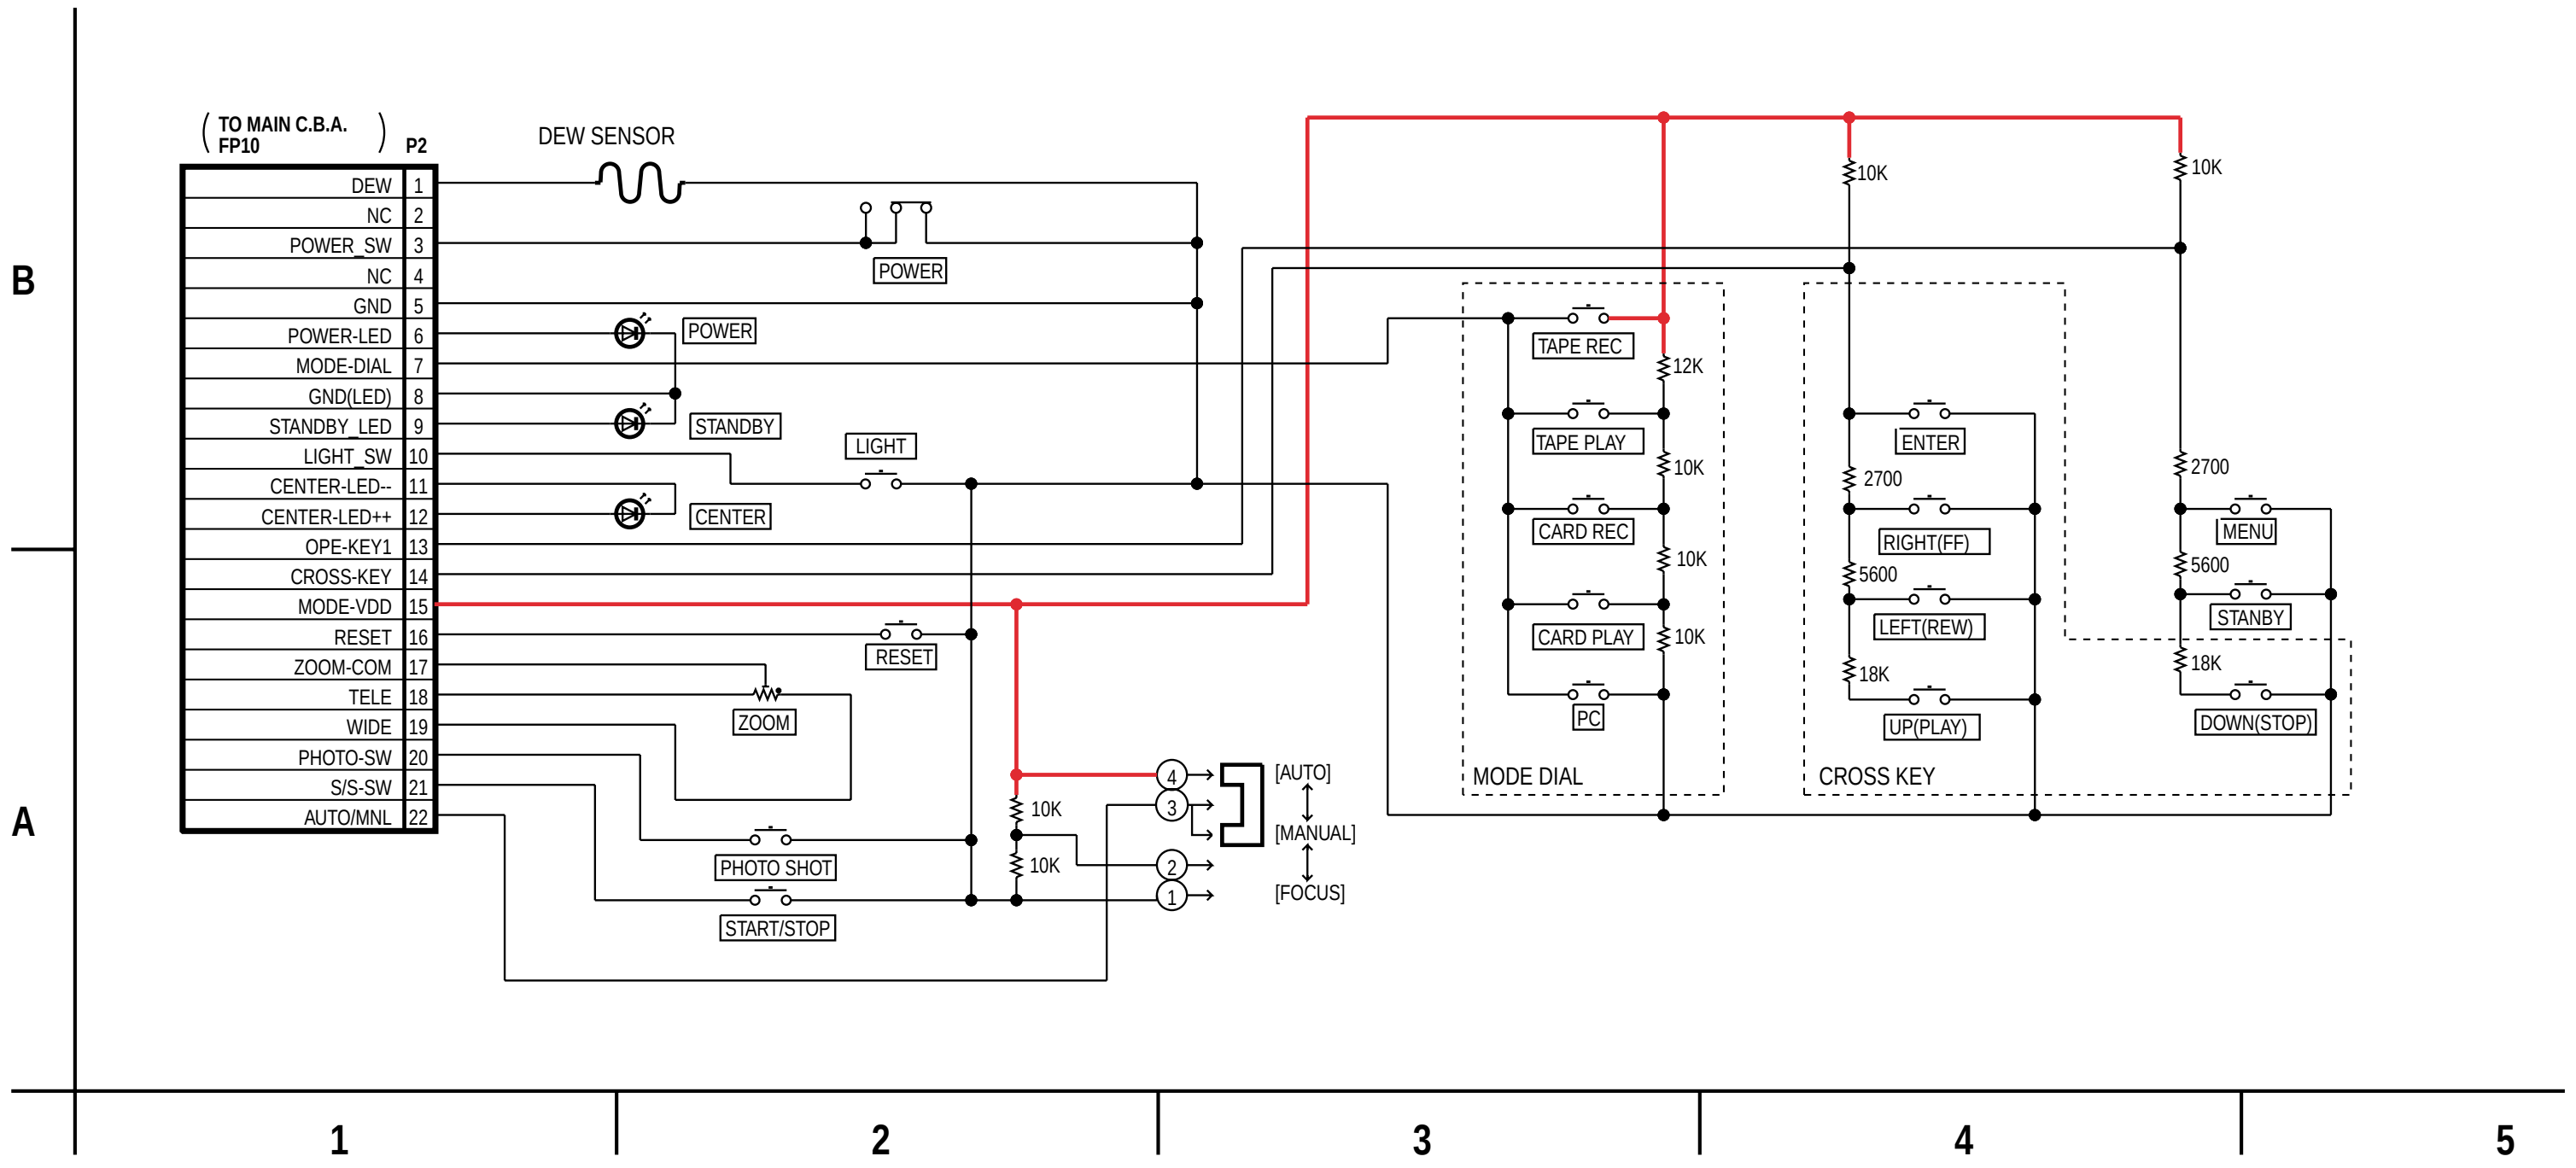

TO MAIN C.B.A. FP10
P2
DEW 1
NC 2
POWER_SW 3
NC 4
GND 5
POWER-LED 6
MODE-DIAL 7
GND(LED) 8
STANDBY_LED 9
LIGHT_SW 10
CENTER-LED-- 11
CENTER-LED++ 12
OPE-KEY1 13
CROSS-KEY 14
MODE-VDD 15
RESET 16
ZOOM-COM 17
TELE 18
WIDE 19
PHOTO-SW 20
S/S-SW 21
AUTO/MNL 22
DEW SENSOR
POWER
POWER
STANDBY
LIGHT
CENTER
RESET
ZOOM
PHOTO SHOT
START/STOP
10K
10K
[AUTO]
[MANUAL]
[FOCUS]
TAPE REC
TAPE PLAY
CARD REC
CARD PLAY
PC
12K
10K
10K
10K
MODE DIAL
10K
ENTER
2700
RIGHT(FF)
5600
LEFT(REW)
18K
UP(PLAY)
CROSS KEY
10K
2700
MENU
5600
STANBY
18K
DOWN(STOP)
B
A
1
2
3
4
5

EVF BACKLIGHT SCHEMATIC DIAGRAM
CASSETTE COVER SCHEMATIC DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

10.6. CCD / SIDE CASE R / LCD SW SCHEMATIC DIAGRAMS

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

NOTE:
PARTS MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

CCD SCHEMATIC DIAGRAM

“FOR REFERENCE ONLY”

NOTE:
CCD C.B.A. IS NOT SERVICEABLE AND IS
SUPPLIED AS A UNIT ONLY FOR REPLACEMENT.

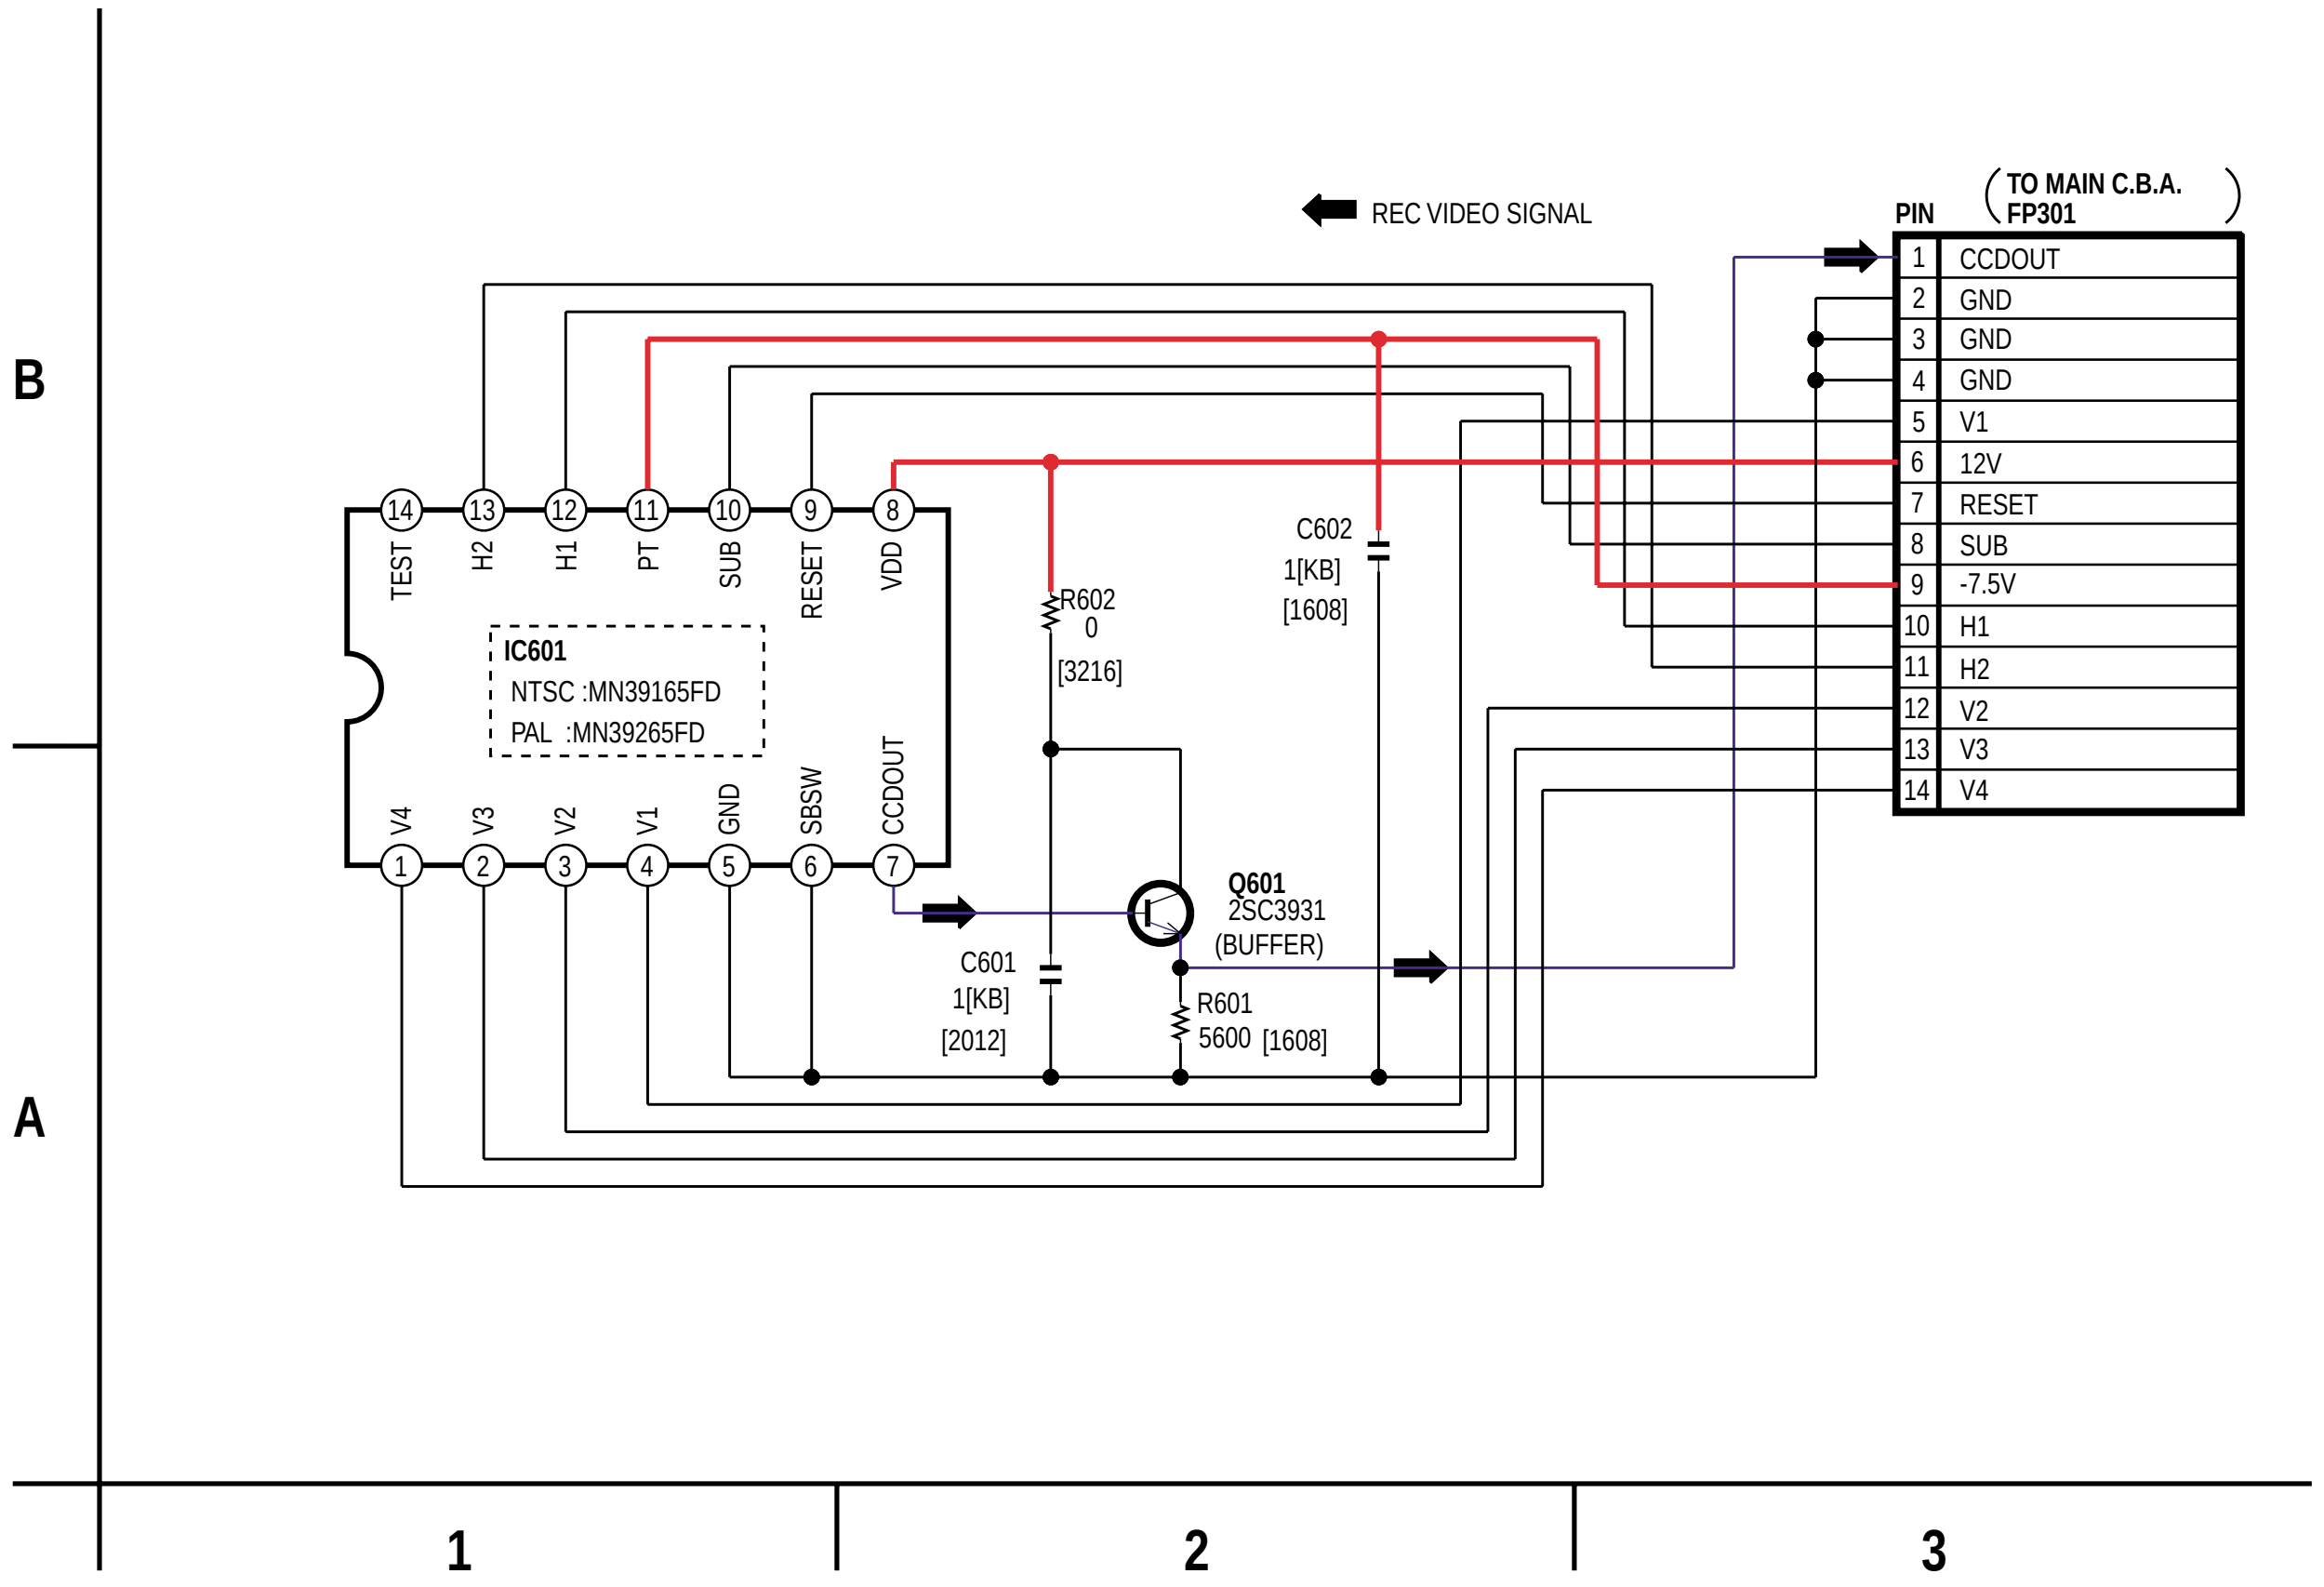
REC VIDEO SIGNAL
PIN
TO MAIN C.B.A. FP301
1 CCDOUT
2 GND
3 GND
4 GND
5 V1
6 12V
7 RESET
8 SUB
9 -7.5V
10 H1
11 H2
12 V2
13 V3
14 V4
14 TEST
13 H2
12 H1
11 PT
10 SUB
9 RESET
8 VDD
IC601
NTSC :MN39165FD
PAL :MN39265FD
1 V4
2 V3
3 V2
4 V1
5 GND
6 SBSW
7 CCDOUT
R602
0
[3216]
C602
1[KB]
[1608]
Q601
2SC3931
(BUFFER)
C601
1[KB]
[2012]
R601
5600 [1608]
B
A
1
2
3

LCD SW SCHEMATIC DIAGRAM

“FOR REFERENCE ONLY”

NOTE:
LCD SW IS NOT SERVICEABLE AND IS
SUPPLIED AS A SHAFT CASE UNIT ONLY FOR REPLACEMENT.

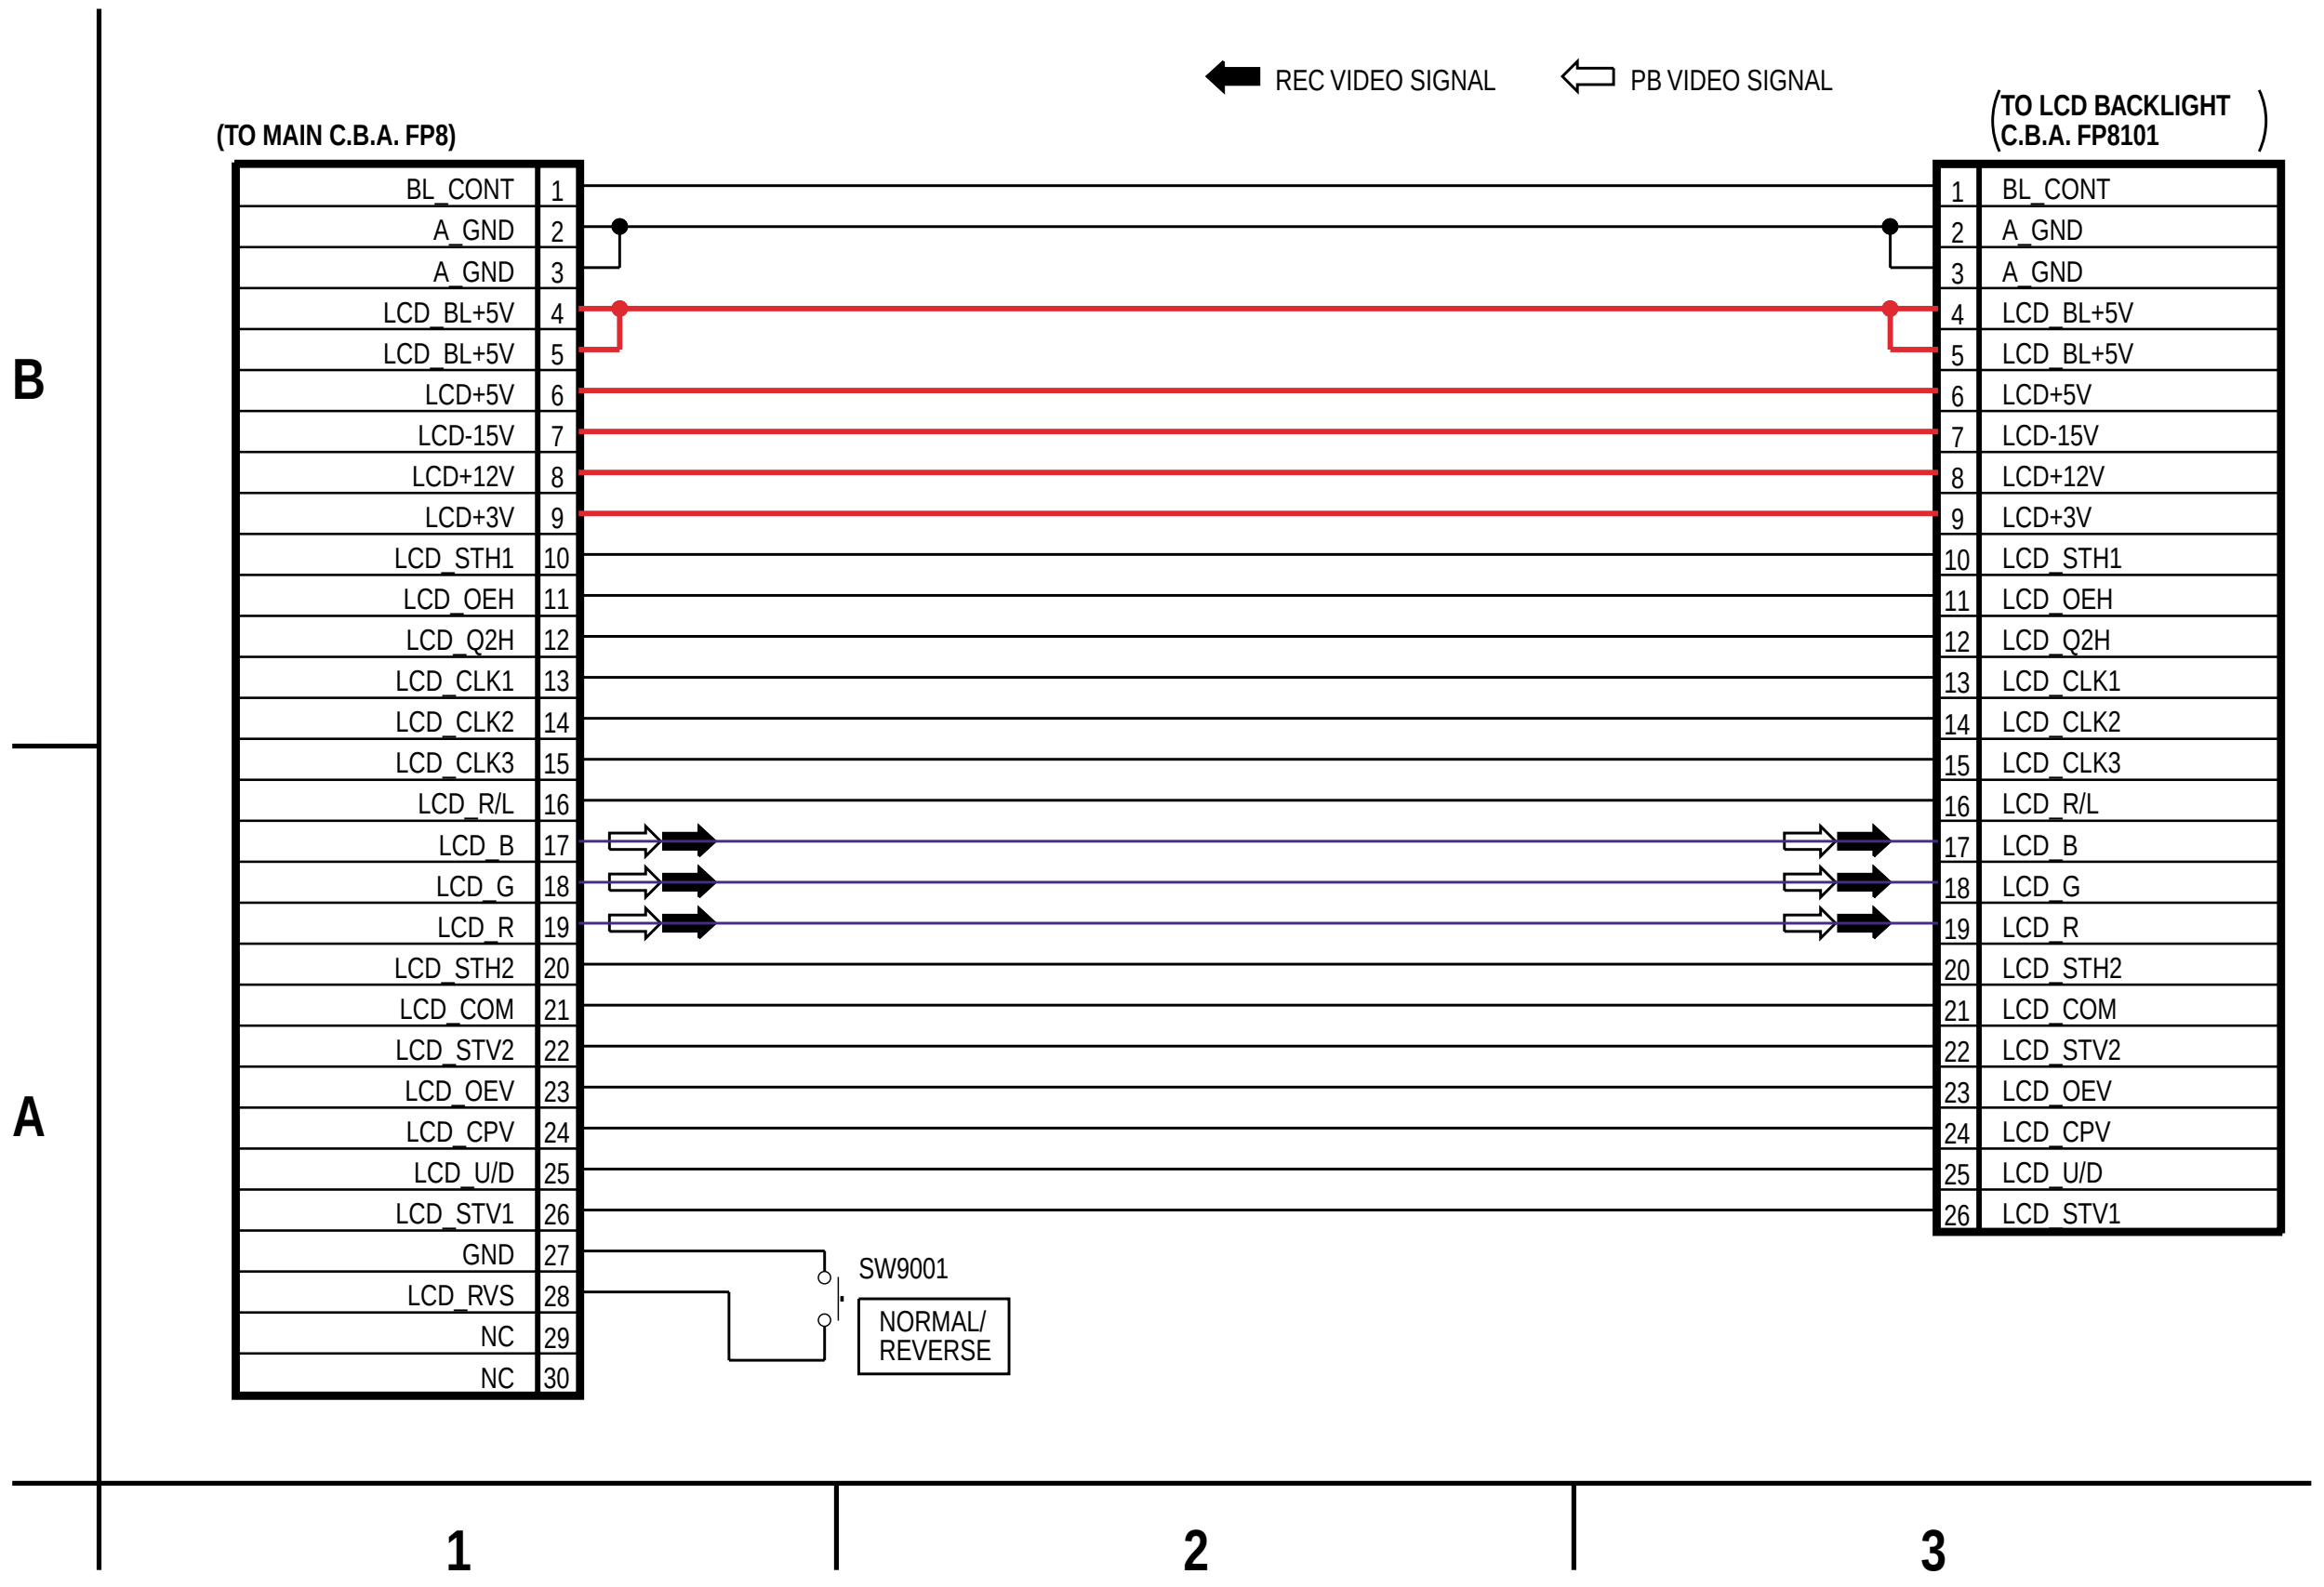
REC VIDEO SIGNAL
PB VIDEO SIGNAL
(TO MAIN C.B.A. FP8)
TO LCD BACKLIGHT C.B.A. FP8101
BL_CONT 1
A_GND 2
A_GND 3
LCD_BL+5V 4
LCD_BL+5V 5
LCD+5V 6
LCD-15V 7
LCD+12V 8
LCD+3V 9
LCD_STH1 10
LCD_OEH 11
LCD_Q2H 12
LCD_CLK1 13
LCD_CLK2 14
LCD_CLK3 15
LCD_R/L 16
LCD_B 17
LCD_G 18
LCD_R 19
LCD_STH2 20
LCD_COM 21
LCD_STV2 22
LCD_OEV 23
LCD_CPV 24
LCD_U/D 25
LCD_STV1 26
GND 27
LCD_RVS 28
NC 29
NC 30
SW9001
NORMAL/ REVERSE
1 BL_CONT
2 A_GND
3 A_GND
4 LCD_BL+5V
5 LCD_BL+5V
6 LCD+5V
7 LCD-15V
8 LCD+12V
9 LCD+3V
10 LCD_STH1
11 LCD_OEH
12 LCD_Q2H
13 LCD_CLK1
14 LCD_CLK2
15 LCD_CLK3
16 LCD_R/L
17 LCD_B
18 LCD_G
19 LCD_R
20 LCD_STH2
21 LCD_COM
22 LCD_STV2
23 LCD_OEV
24 LCD_CPV
25 LCD_U/D
26 LCD_STV1
B
A
1
2
3

SIDE CASE R SCHEMATIC DIAGRAM

“FOR REFERENCE ONLY”

NOTE:
SIDE CASE R UNIT IS NOT SERVICEABLE AND IS
SUPPLIED AS A UNIT ONLY FOR REPLACEMENT.

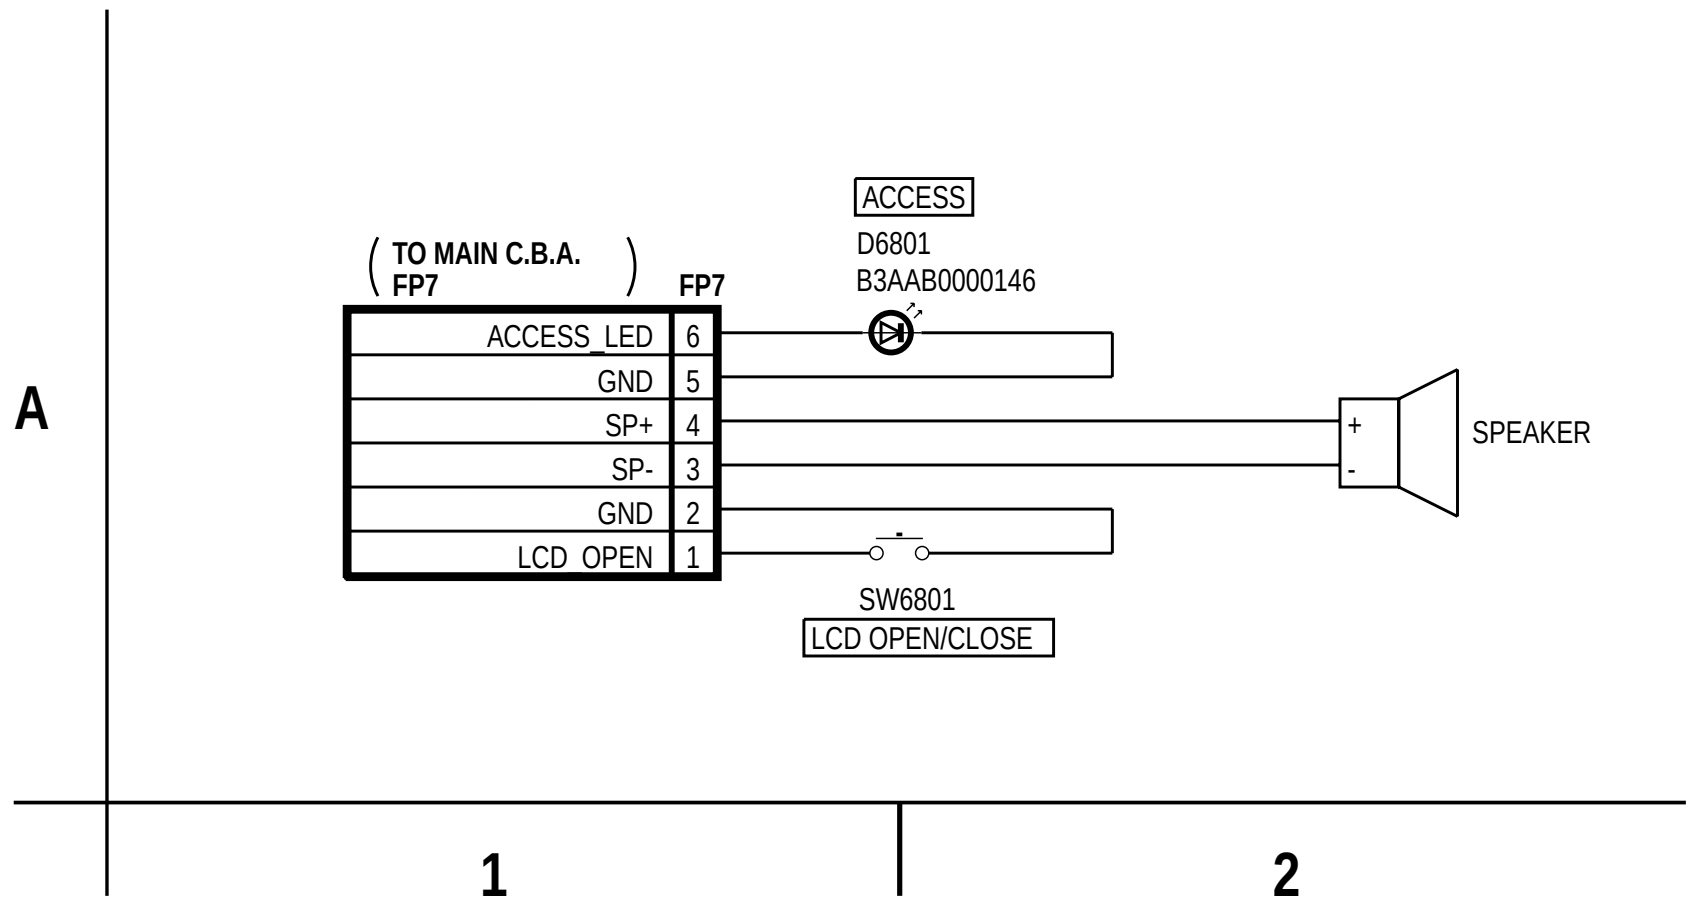
TO MAIN C.B.A. FP7
FP7
ACCESS_LED 6
GND 5
SP+ 4
SP- 3
GND 2
LCD_OPEN 1
ACCESS
D6801
B3AAB0000146
+
-
SPEAKER
SW6801
LCD OPEN/CLOSE
A
1
2

CCD SCHEMATIC DIAGRAM
SIDE CASE R SCHEMATIC DIAGRAM
LCD SW SCHEMATIC DIAGRAM

NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

10.7. INTERCONNECTION SCHEMATIC DIAGRAM

INTERCONNECTION SCHEMATIC DIAGRAM

NOTE: For placing a purchase order of the parts,
be sure to use the part number listed in the parts list.
Do not use the part number on this diagram.

NOTE:
PARTS MARKED "PT" ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

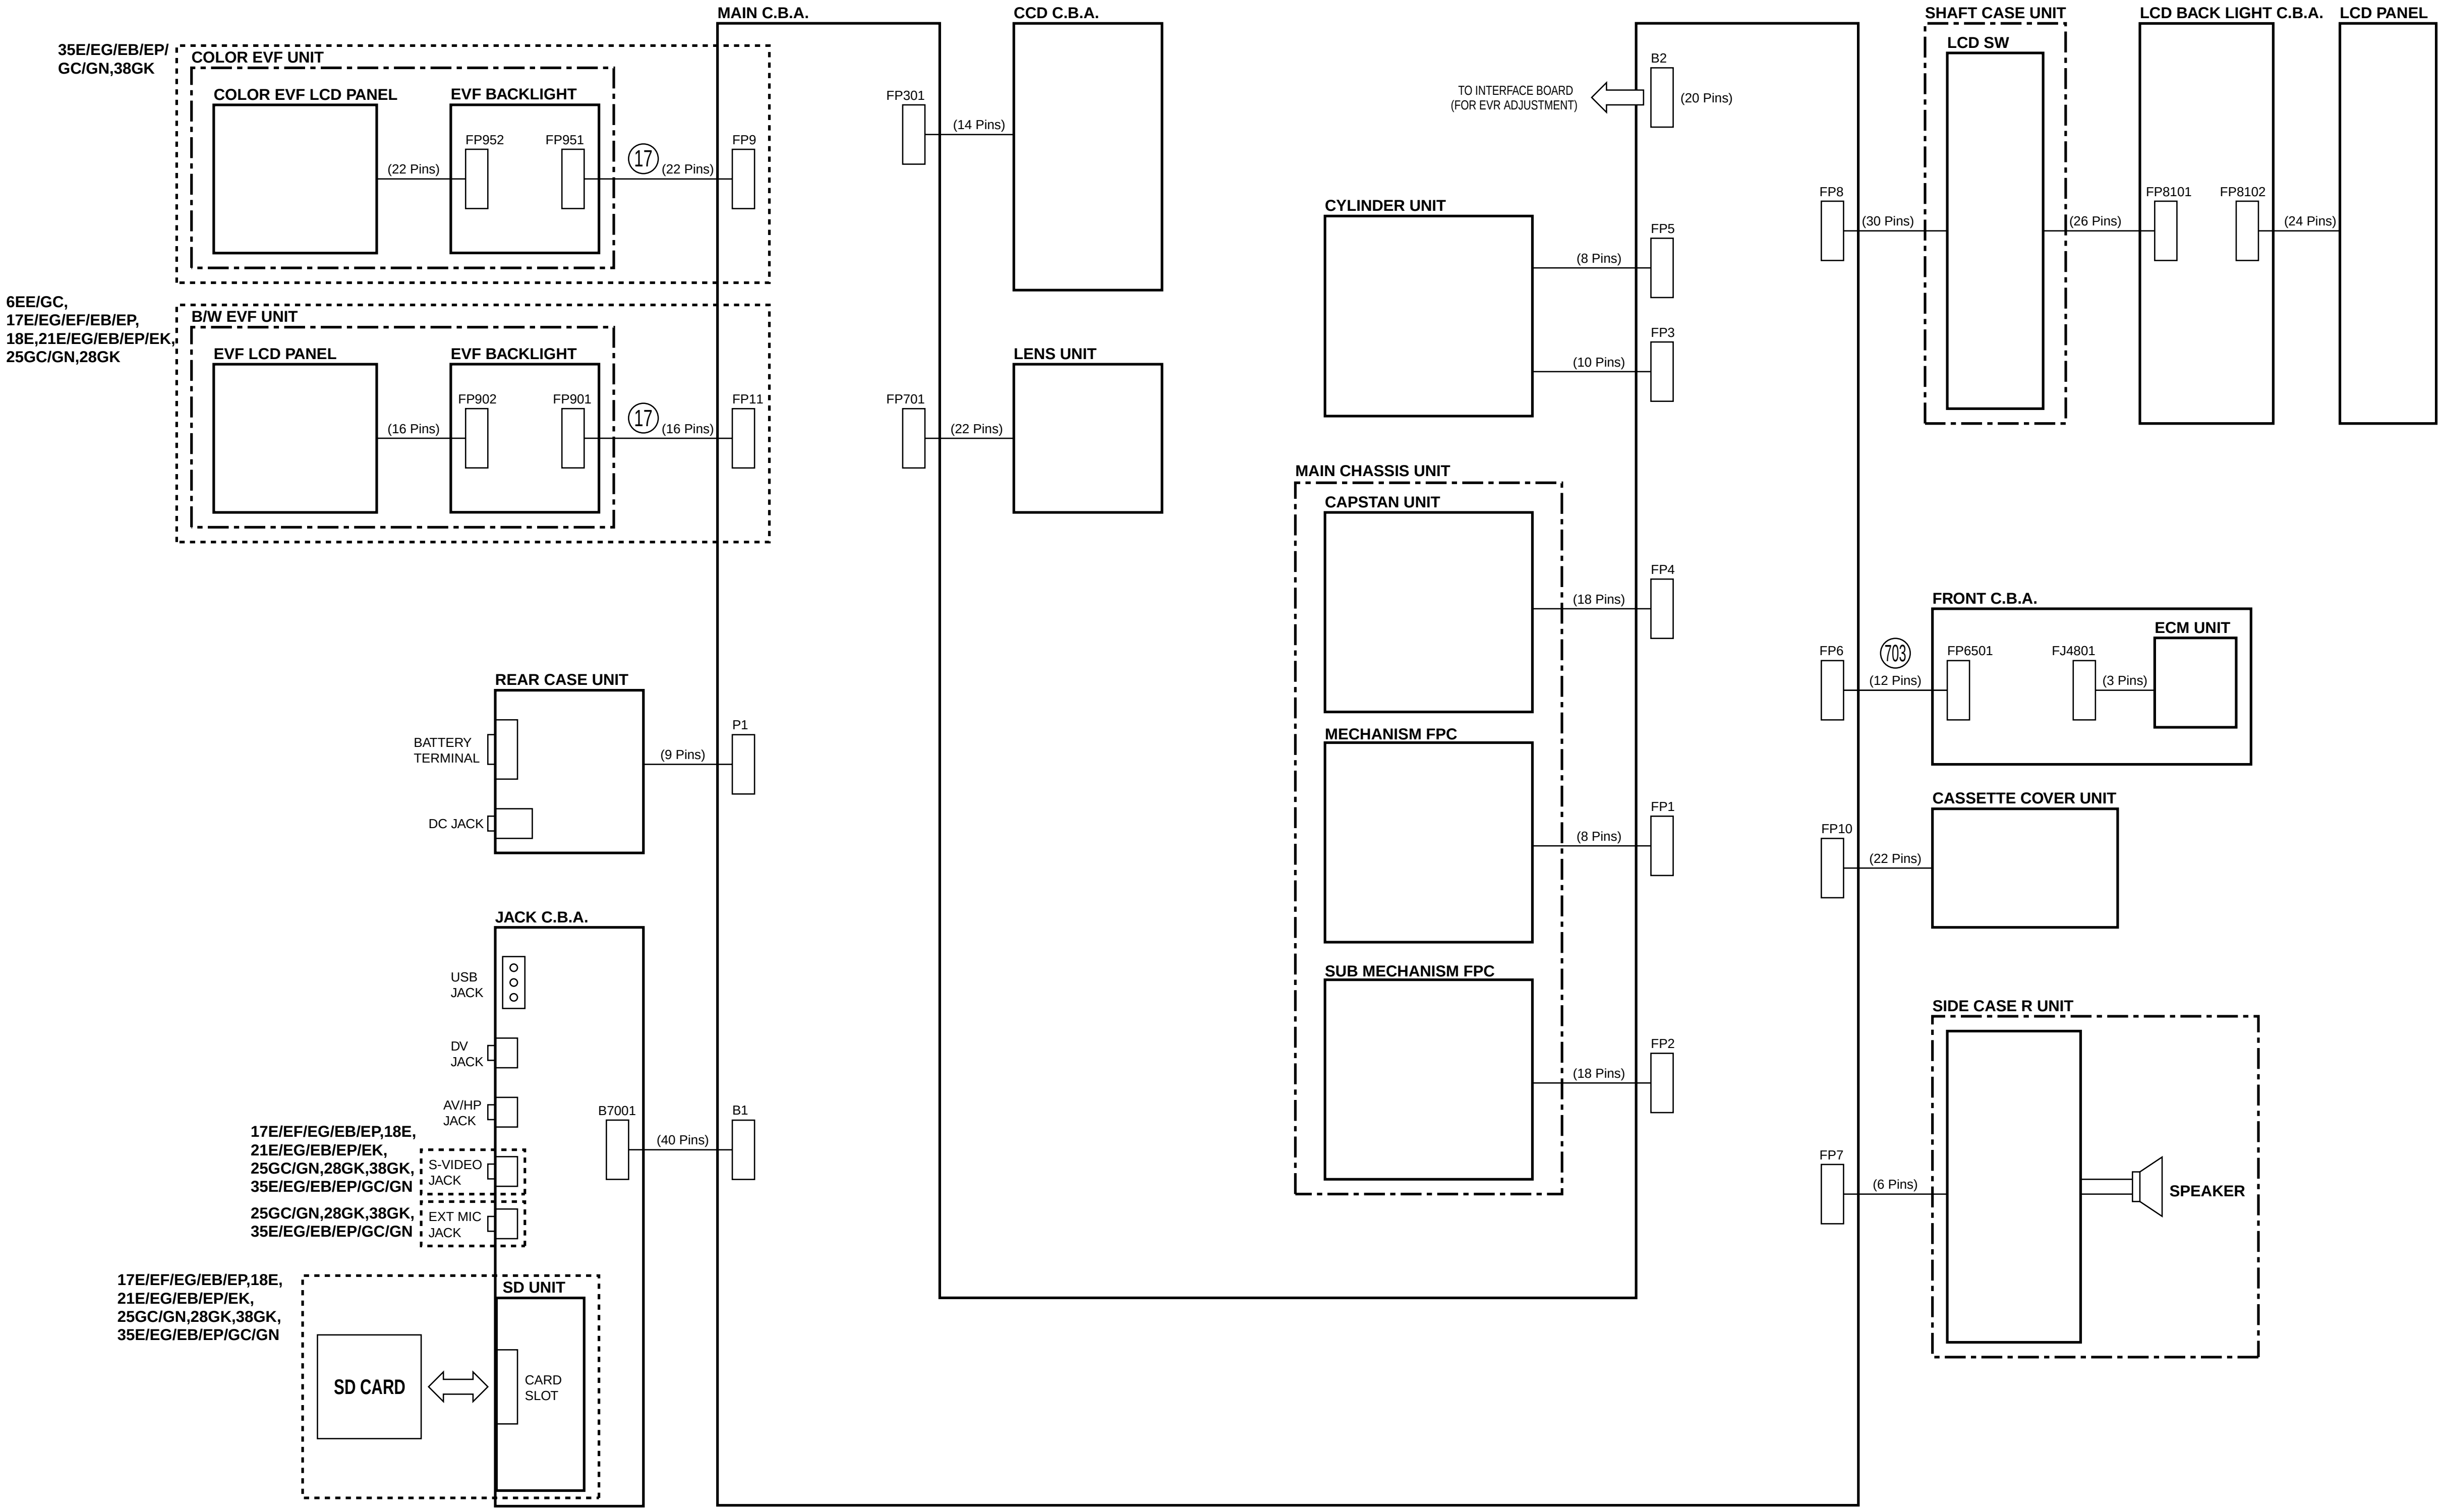
35E/EG/EB/EP/
GC/GN,38GK
COLOR EVF UNIT
COLOR EVF LCD PANEL
EVF BACKLIGHT
FP952
FP951
(22 Pins)
17
(22 Pins)
FP9
6EE/GC,
17E/EG/EF/EB/EP,
18E,21E/EG/EB/EP/EK,
25GC/GN,28GK
B/W EVF UNIT
EVF LCD PANEL
EVF BACKLIGHT
FP902
FP901
(16 Pins)
17
(16 Pins)
FP11
MAIN C.B.A.
FP301
(14 Pins)
CCD C.B.A.
FP701
(22 Pins)
LENS UNIT
REAR CASE UNIT
BATTERY
TERMINAL
DC JACK
(9 Pins)
P1
JACK C.B.A.
USB
JACK
DV
JACK
AV/HP
JACK
17E/EF/EG/EB/EP,18E,
21E/EG/EB/EP/EK,
25GC/GN,28GK,38GK,
35E/EG/EB/EP/GC/GN
S-VIDEO
JACK
25GC/GN,28GK,38GK,
35E/EG/EB/EP/GC/GN
EXT MIC
JACK
B7001
(40 Pins)
B1
17E/EF/EG/EB/EP,18E,
21E/EG/EB/EP/EK,
25GC/GN,28GK,38GK,
35E/EG/EB/EP/GC/GN
SD UNIT
SD CARD
CARD
SLOT
TO INTERFACE BOARD
(FOR EVR ADJUSTMENT)
B2
(20 Pins)
CYLINDER UNIT
(8 Pins)
FP5
(10 Pins)
FP3
MAIN CHASSIS UNIT
CAPSTAN UNIT
(18 Pins)
FP4
MECHANISM FPC
(8 Pins)
FP1
SUB MECHANISM FPC
(18 Pins)
FP2
FP8
(30 Pins)
SHAFT CASE UNIT
LCD SW
(26 Pins)
LCD BACK LIGHT C.B.A.
FP8101
FP8102
(24 Pins)
LCD PANEL
FRONT C.B.A.
FP6
703
(12 Pins)
FP6501
FJ4801
(3 Pins)
ECM UNIT
CASSETTE COVER UNIT
FP10
(22 Pins)
SIDE CASE R UNIT
FP7
(6 Pins)
SPEAKER

INTERCONNECTION SCHEMATIC DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

10.8. VOLTAGE CHART

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

LCD BACKLIGHT C.B.A.

MODE / PIN NO.	STOP
Q8101	
E	0
C	0.1
B	3.1
Q8102	
E	0
C	0.1
B	1.9
Q8103	
E	12.0
C	11.9
B	11.2
Q8104	
E	3.2
C	3.1
B	2.4
Q8105	
E	7.3
C	11.9
B	7.9
Q8106	
E	0
C	7.9
B	0.5
Q8107	
E	0
C	0.1
B	1.9
Q8108	
E	4.9
C	4.9
B	4.2
TP8101	2.5
TP8102	2.5
TP8103	2.5
TP8104	4.3
TP8105	1.3
TP8106	4.9

JACK C.B.A.

MODE / PIN NO.	STOP
Q4001	
E	4.3
C	5.0
B	5.0
Q4002	
E	4.3
C	2.3
B	3.7
Q4003	
E	0.5
C	3.7
B	1.0
Q4004	
E	4.3
C	2.3
B	3.7
Q4005	
E	0.5
C	3.7
B	1.0
TP7001	0
TP7002	1.9
TP7003	3.2
TP7004	0

11 CIRCUIT BOARD LAYOUT

11.1. FRONT C.B.A.

FRONT C.B.A. LSEP8296A1 NV-GS6EE, NV-GS17EG/EF/E/EP/EB,NV-GS18E
LSEP8296C1 NV-GS6GC, NV-GS25GC/GN, NV-GS28GK
LSEP8296B1 NV-GS21EG/EK/E/EP/EB
LSEP8296D1 NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

NOTE:
CIRCUIT BOARD LAYOUT SHOWS COMPONENTS INSTALLED FOR VARIOUS MODELS.
FOR PROPER PARTS CONTENT FOR THE MODEL YOU ARE SERVICING,
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

(COMPONENT SIDE)

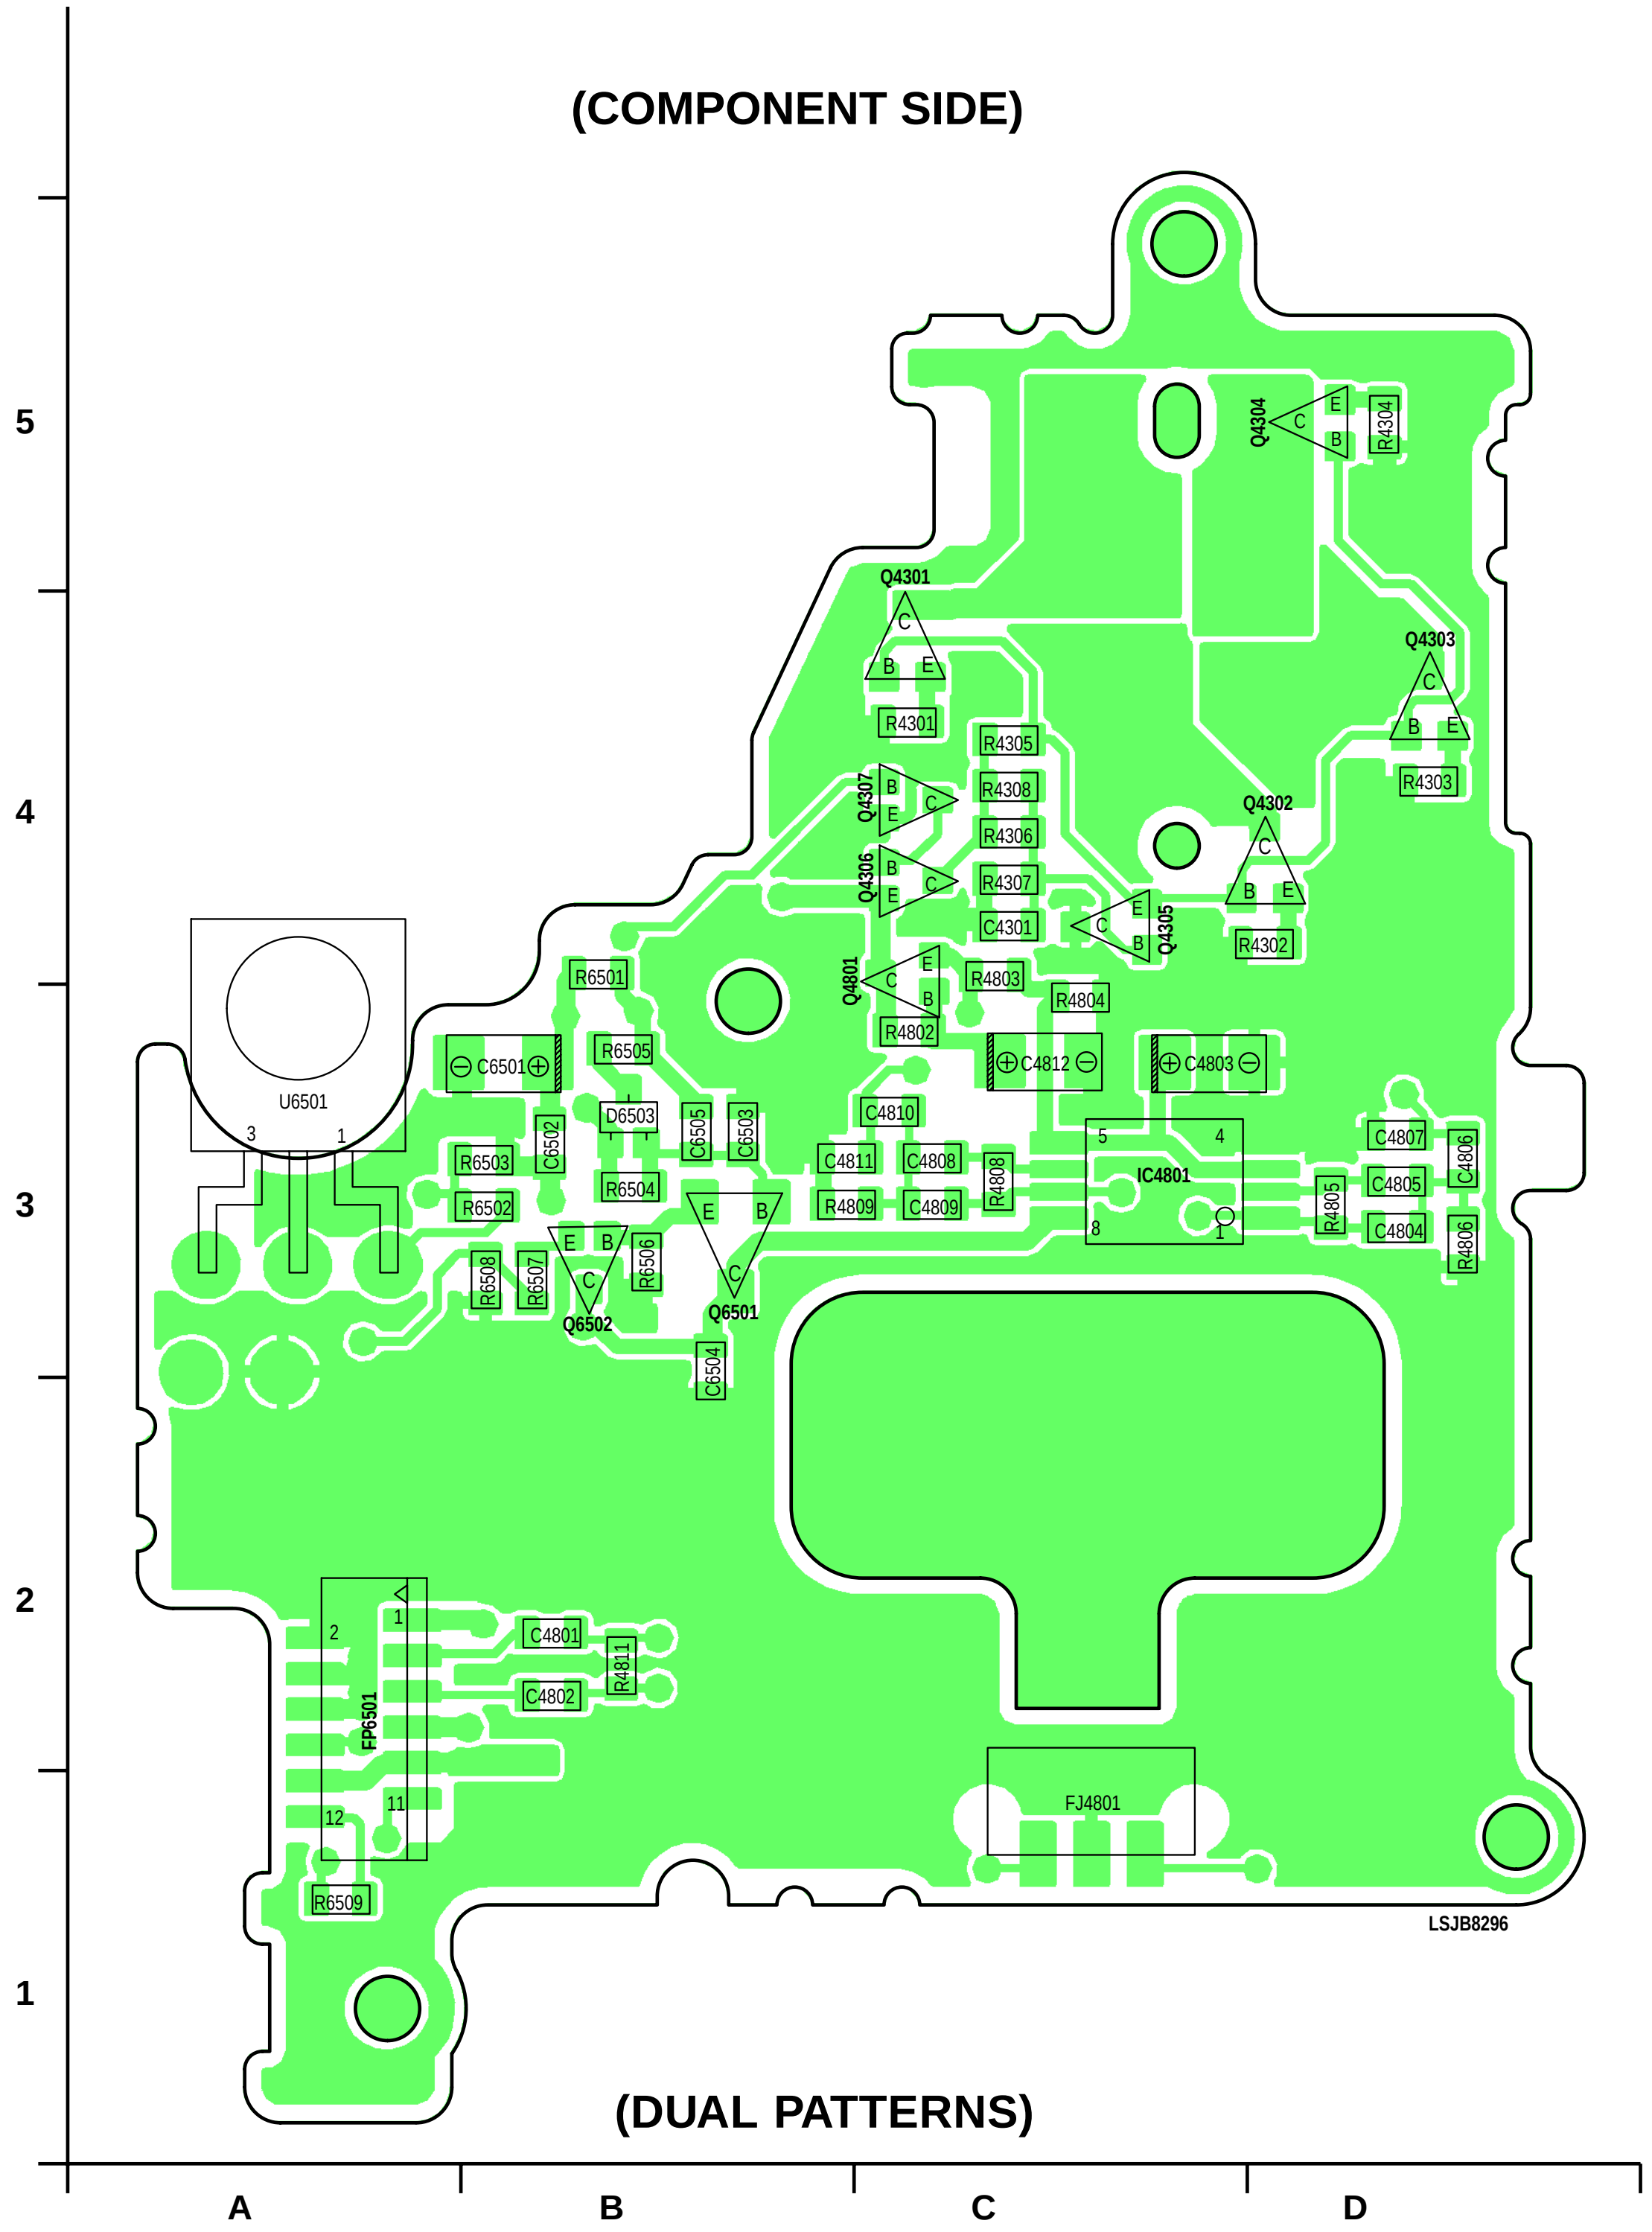
5
4
3
2
1
A
B
C
D
Q4304
R4304
Q4301
Q4303
R4301
R4305
R4308
R4306
R4307
C4301
Q4307
Q4306
Q4302
Q4305
R4303
R4302
Q4801
R4803
R4804
R4802
R6501
R6505
C6501
U6501
C4812
C4803
C4810
D6503
C6505
C6503
C6502
R6503
R6502
R6504
C4811
C4808
C4809
R4809
R4808
IC4801
C4807
C4805
C4804
C4806
R4805
R4806
R6508
R6507
R6506
Q6502
Q6501
C6504
C4801
C4802
R4811
FP6501
FJ4801
R6509
LSJB8296

(DUAL PATTERNS)

(FOIL SIDE)

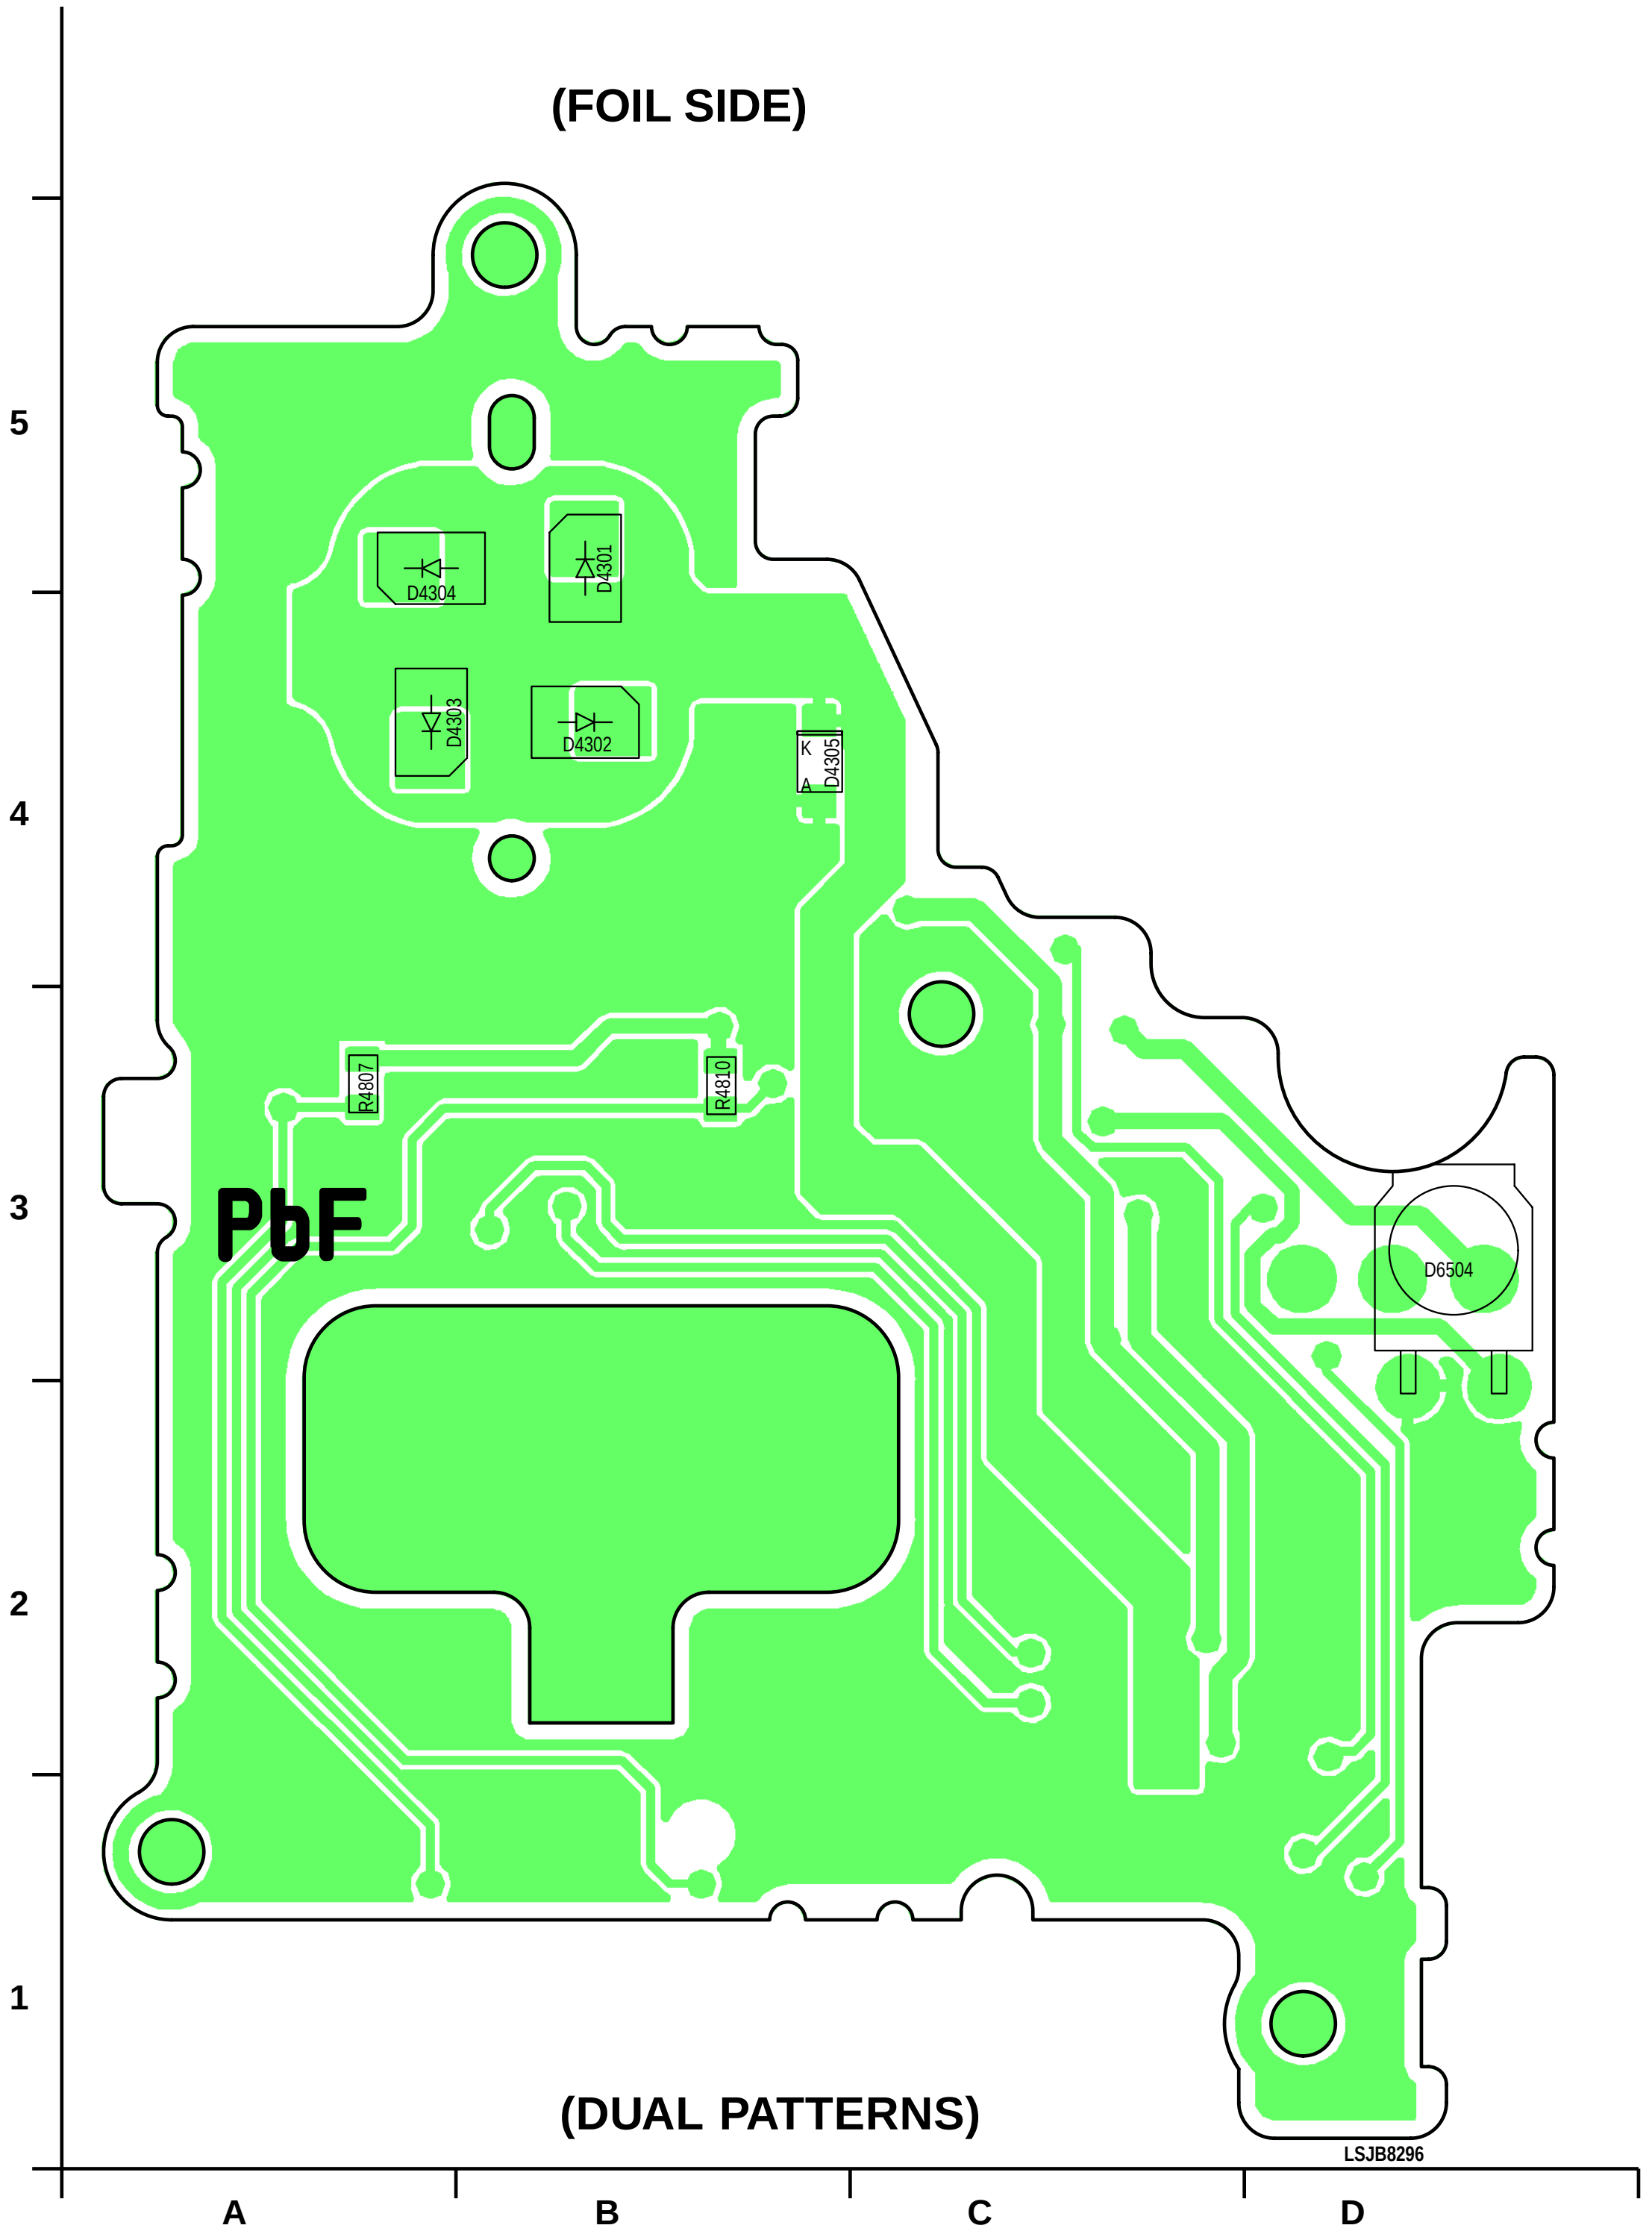
5
4
3
2
1
A
B
C
D
D4304
D4301
D4303
D4302
D4305
R4807
R4810
PbF
D6504
LSJB8296

(DUAL PATTERNS)

Parts Location

Front C.B.A.					
Integrated Circuits			Resistors		
IC4801	C-3	C	R4301	C-4	C
Transisters			R4302	D-4	C
Q4301	C-4	C	R4303	D-4	C
Q4302	D-4	C	R4304	D-5	C
Q4303	D-4	C	R4305	C-4	C
Q4304	D-5	C	R4306	C-4	C
Q4305	C-4	C	R4307	C-4	C
Q4306	C-4	C	R4308	C-4	C
Q4307	C-4	C	R4802	C-3	C
Q4801	C-4	C	R4803	C-4	C
Q6501	B-3	C	R4804	C-3	C
Q6502	B-3	C	R4805	D-3	C
Connectors			R4806	D-3	C
FJ4801	C-1	C	R4807	A-3	F
FP6501	A-2	C	R4808	C-3	C
Diodes			R4809	B-3	C
D4301	B-5	F	R4810	B-3	F
D4302	B-4	F	R4811	B-2	C
D4303	A-4	F	R6501	B-4	C
D4304	A-5	F	R6502	B-3	C
D4305	B-4	F	R6503	B-3	C
D6503	B-3	C	R6504	B-3	C
D6504	D-3	F	R6505	B-3	C
Capacitors			R6506	B-3	C
C4301	C-4	C	R6507	B-3	C
C4801	B-2	C	R6508	B-3	C
C4802	B-2	C	R6509	A-1	C
C4803	C-3	C	Miscellaneous		
C4804	D-3	C	U6501	A-3	C
C4805	D-3	C			
C4806	D-3	C			
C4807	D-3	C			
C4808	C-3	C			
C4809	C-3	C			
C4810	C-3	C			
C4811	B-3	C			
C4812	C-3	C			
C6501	B-3	C			
C6502	B-3	C			
C6503	B-3	C			
C6504	B-3	C			
C6505	B-3	C			

FRONT C.B.A.
LSEP8296A1/LSEP8296C1/LSEP8296B1/LSEP8296D1
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

11.2. JACK C.B.A.

JACK C.B.A. LSEP8297T1 NV-GS6EE
LSEP8297D1 NV-GS6GC
LSEP8297P1 NV-GS17EG/EF/E/EP/EB, NV-GS18E
LSEP8297R1 NV-GS25GC/GN, NV-GS35EG/E/EP/EB/GC/GN
LSEP8297S1 NV-GS28GK, NV-GS38GK

(COMPONENT SIDE)

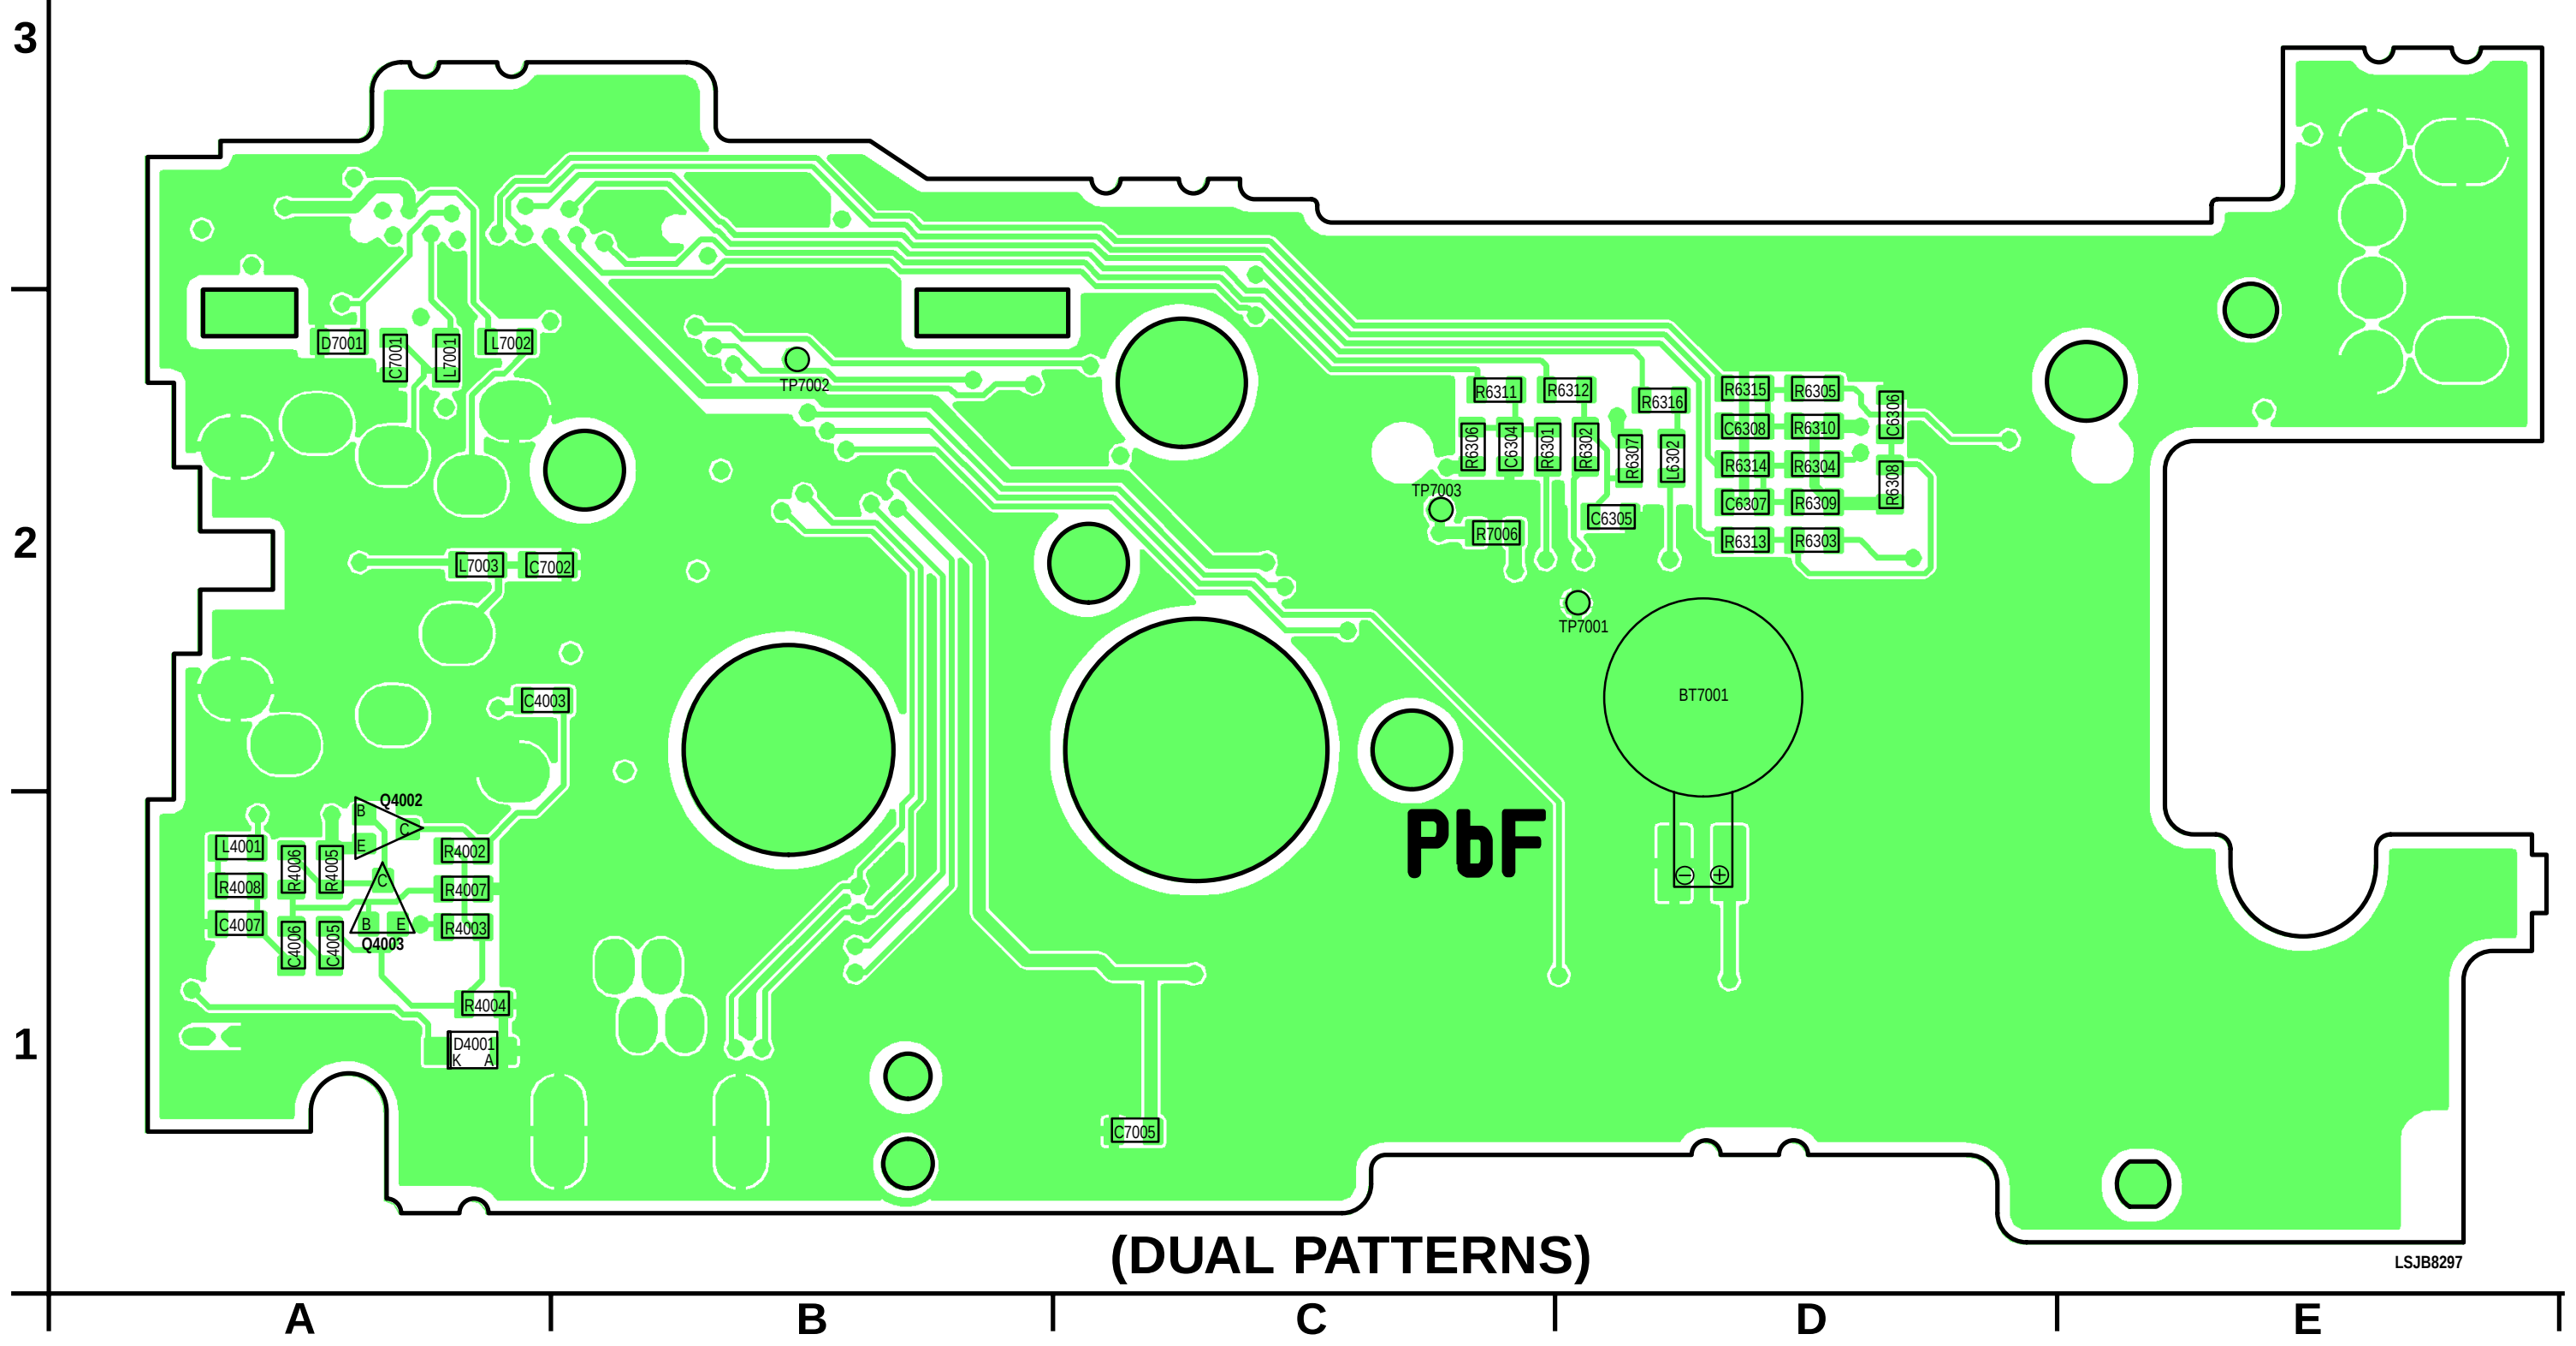

(DUAL PATTERNS)

(FOIL SIDE)

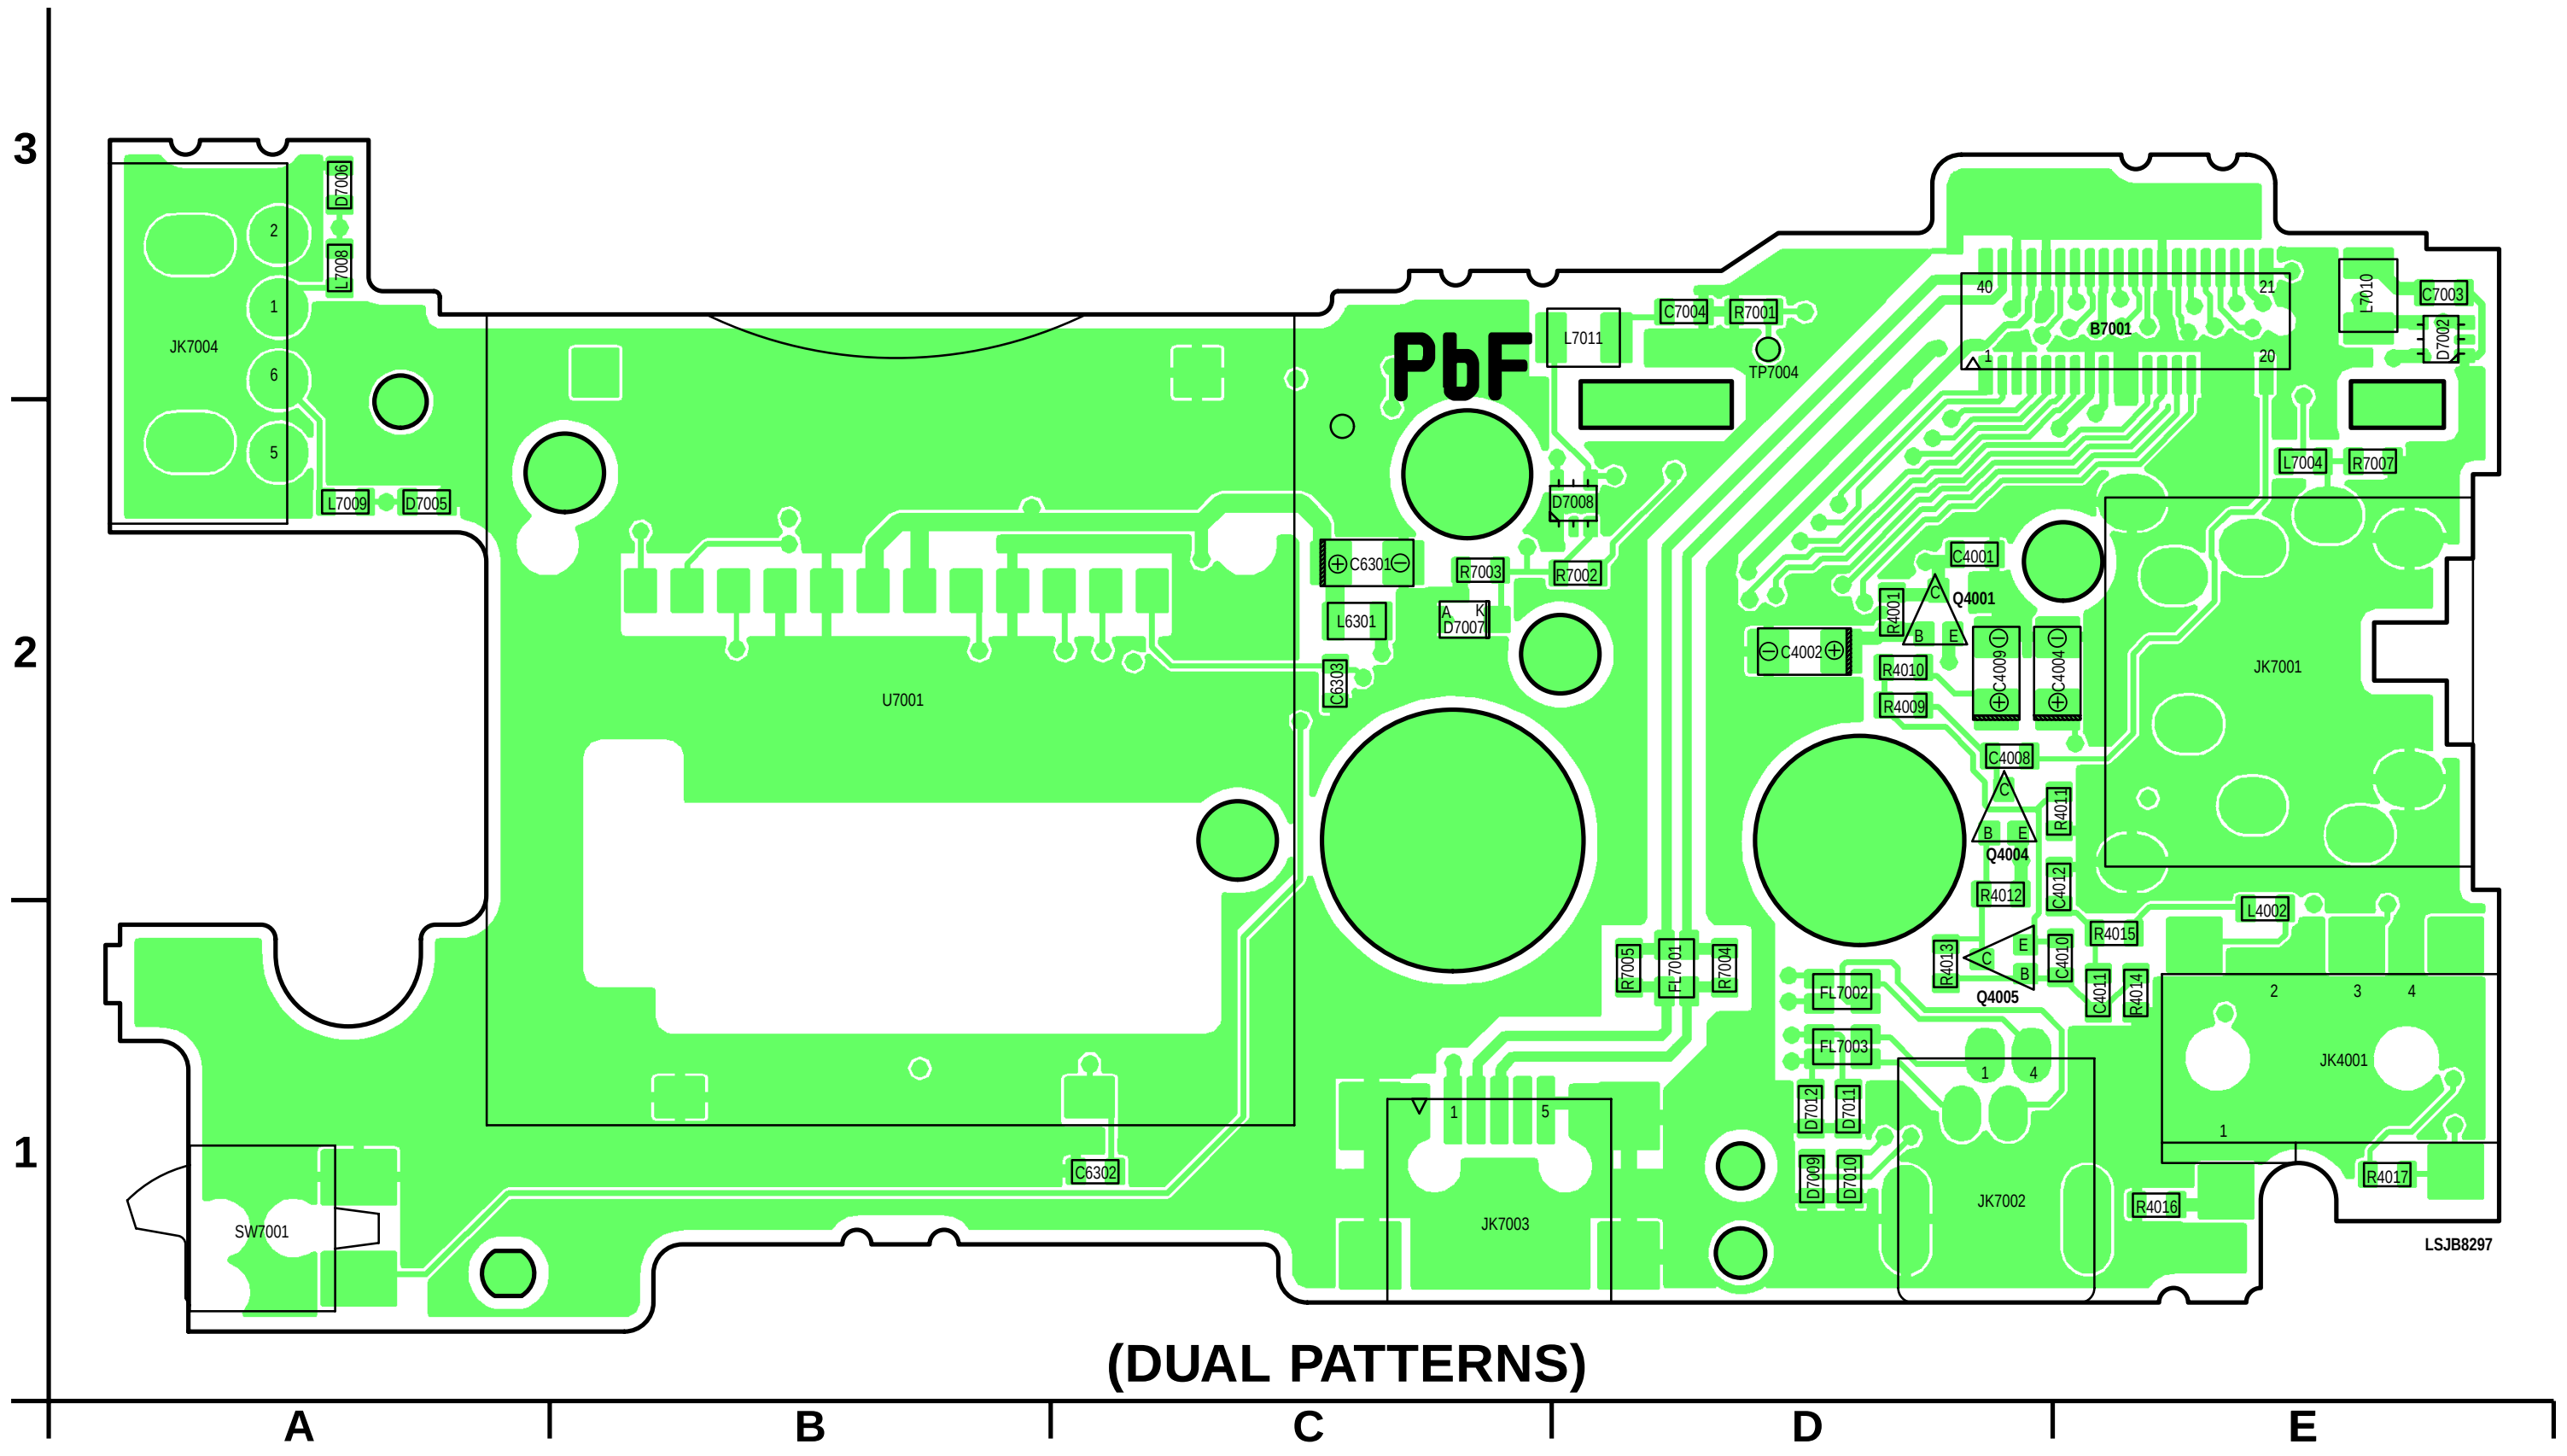

(DUAL PATTERNS)

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES, REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
CIRCUIT BOARD LAYOUT SHOWS COMPONENTS INSTALLED FOR VARIOUS MODELS. FOR PROPER PARTS CONTENT FOR THE MODEL YOU ARE SERVICING, PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.

Parts Location

JACK C.B.A.								
Transisters			Switch			Resistors		
Q4001	D-2	F	SW7001	A-1	F	R4001	D-2	F
Q4002	A-1	C	Capacitors			R4002	A-1	C
Q4003	A-1	C	C4001	D-2	F	R4003	A-1	C
Q4004	D-2	F	C4002	D-2	F	R4004	A-1	C
Q4005	D-1	F	C4003	A-2	C	R4005	A-1	C
Test Points			C4004	D-2	F	R4006	A-1	C
TP7001	D-2	C	C4005	A-1	C	R4007	A-1	C
TP7002	B-2	C	C4006	A-1	C	R4008	A-1	C
TP7003	C-2	C	C4007	A-1	C	R4009	D-2	F
TP7004	D-3	F	C4008	D-2	F	R4010	D-2	F
Diodes			C4009	D-2	F	R4011	E-2	F
D4001	A-1	C	C4010	E-1	F	R4012	D-2	F
D7001	A-2	C	C4011	E-1	F	R4013	D-1	F
D7002	E-3	F	C4012	E-2	F	R4014	E-1	F
D7005	A-2	F	C6301	C-2	F	R4015	E-1	F
D7006	A-3	F	C6302	C-1	F	R4016	E-1	F
D7007	C-2	F	C6303	C-2	F	R4017	E-1	F
D7008	D-2	F	C6304	C-2	C	R6301	C-2	C
D7009	D-1	F	C6305	D-2	C	R6302	D-2	C
D7010	D-1	F	C6306	D-2	C	R6303	D-2	C
D7011	D-1	F	C6307	D-2	C	R6304	D-2	C
D7012	D-1	F	C6308	D-2	C	R6305	D-2	C
Coilss			C7001	A-2	C	R6306	C-2	C
L4001	A-1	C	C7002	A-2	C	R6307	D-2	C
L4002	E-1	F	C7003	E-3	F	R6308	D-2	C
L6301	C-2	F	C7004	D-3	F	R6309	D-2	C
L6302	D-2	C	C7005	C-1	C	R6310	D-2	C
L7001	A-2	C	Miscellaneous			R6311	C-2	C
L7002	A-2	C	BT7001	D-2	C	R6312	C-2	C
L7003	A-2	C	FL7001	D-1	F	R6313	D-2	C
L7004	E-2	F	FL7002	D-1	F	R6314	D-2	C
L7008	A-3	F	FL7003	D-1	F	R6315	D-2	C
L7009	A-2	F	JK4001	E-1	F	R6316	D-2	C
L7010	E-3	F	JK7001	E-2	F	R7001	D-3	F
L7011	D-3	F	JK7002	D-1	F	R7002	D-2	F
			JK7003	C-1	F	R7003	C-2	F
			JK7004	A-3	F	R7004	D-1	F
			U7001	B-2	F	R7005	D-1	F
						R7007	E-2	F
						R7006	C-2	C

JACK C.B.A.
LSEP8297T1/LSEP8297D1/LSEP8297P1
/LSEP8297Q1/LSEP8297R1/LSEP8297S1
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

11.3. LCD BACKLIGHT C.B.A.

LCD BACKLIGHT C.B.A. LSEP8298P1

NOTE:
CIRCUIT BOARD LAYOUT SHOWS COMPONENTS INSTALLED FOR VARIOUS MODELS.
FOR PROPER PARTS CONTENT FOR THE MODEL YOU ARE SERVICING,
PLEASE REFER TO THE SCHEMATIC DIAGRAM AND PARTS LIST.

NOTE:
CIRCUIT BOARD LAYOUT INCLUDES COMPONENTS WHICH ARE NOT USED.

NOTE:
FOR SCHEMATIC DIAGRAM AND CIRCUIT BOARD LAYOUT NOTES,
REFER TO BEGINNING OF SCHEMATIC SECTION.

NOTE:
ALL INDIVIDUAL PARTS EXCEPT D8101, D8103, D8105, AND D8107
ON LCD BACKLIGHT C.B.A. ARE SUPPLIED AS REPLACEMENT PARTS.
WHEN SERVICING THESE PARTS, REPLACE LCD BACKLIGHT C.B.A.
INSTEAD OF INDIVIDUAL PARTS.

(COMPONENT SIDE)

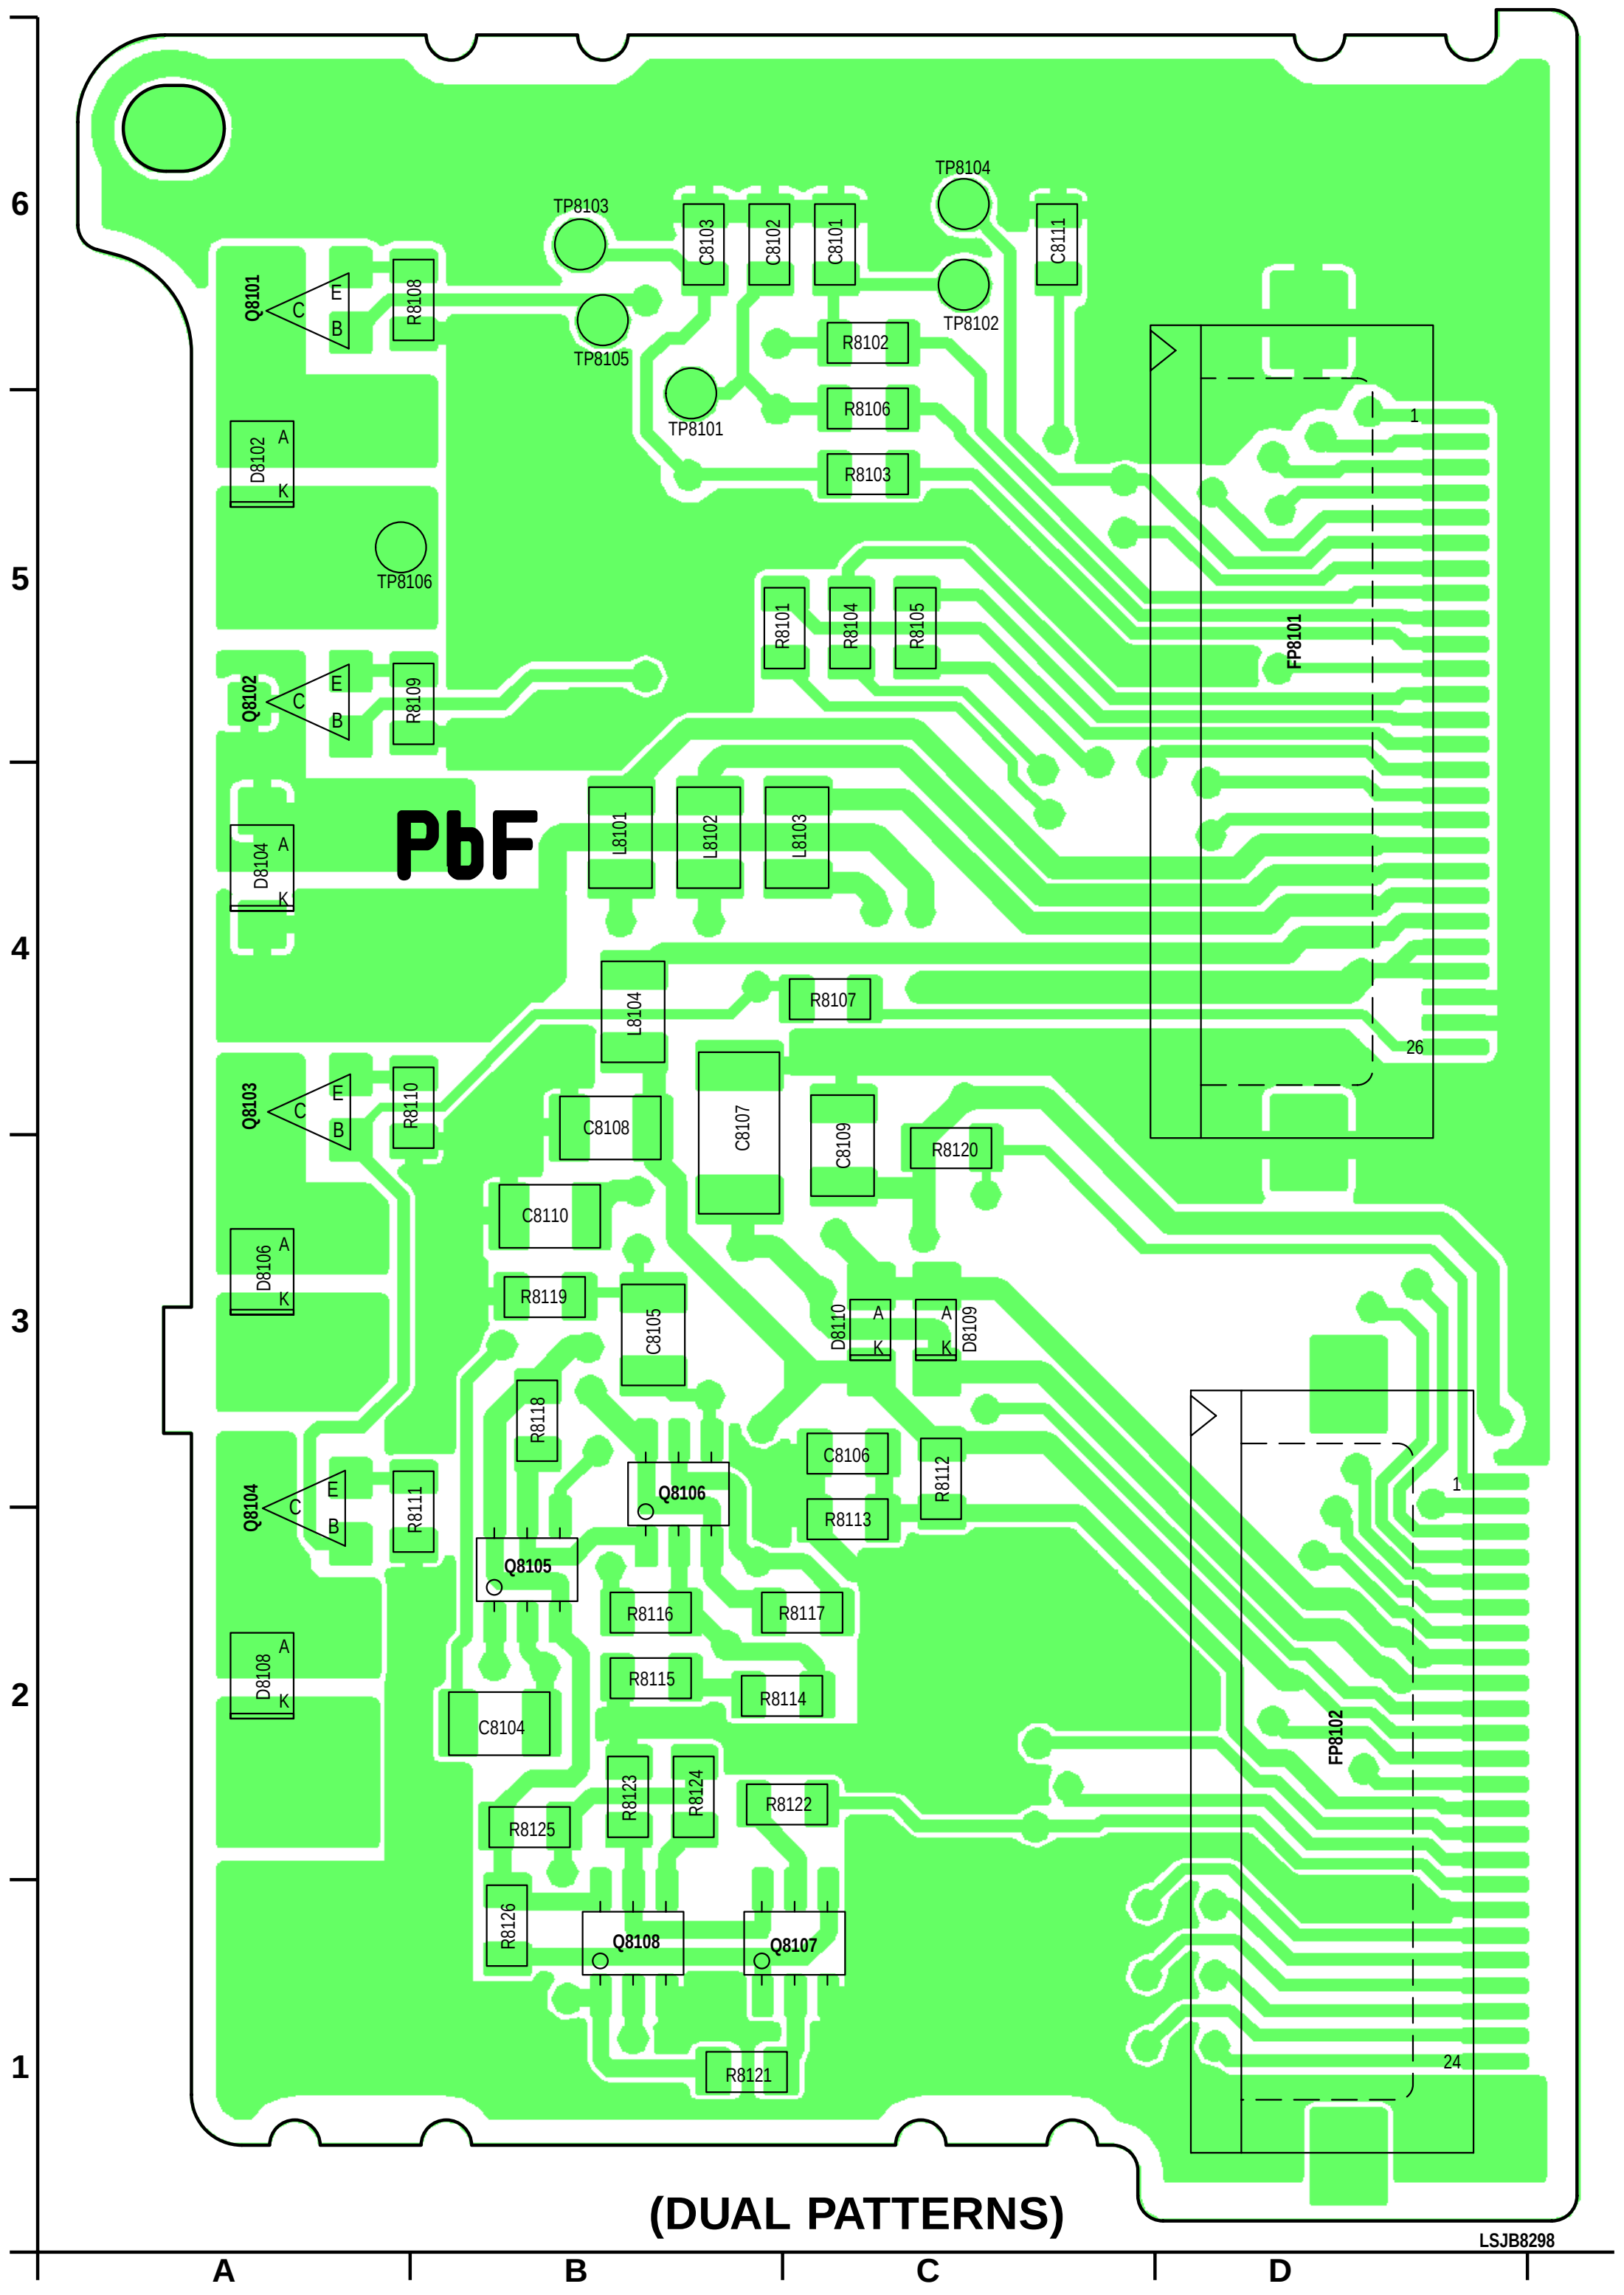
6
5
4
3
2
1
A
B
C
D
Q8101
Q8102
Q8103
Q8104
Q8105
Q8106
Q8107
Q8108
D8102
D8104
D8106
D8108
D8109
D8110
TP8101
TP8102
TP8103
TP8104
TP8105
TP8106
C8101
C8102
C8103
C8104
C8105
C8106
C8107
C8108
C8109
C8110
C8111
R8101
R8102
R8103
R8104
R8105
R8106
R8107
R8108
R8109
R8110
R8111
R8112
R8113
R8114
R8115
R8116
R8117
R8118
R8119
R8120
R8121
R8122
R8123
R8124
R8125
R8126
L8101
L8102
L8103
L8104
FP8101
FP8102
1
26
24
PbF
(DUAL PATTERNS)
LSJB8298

(FOIL SIDE)

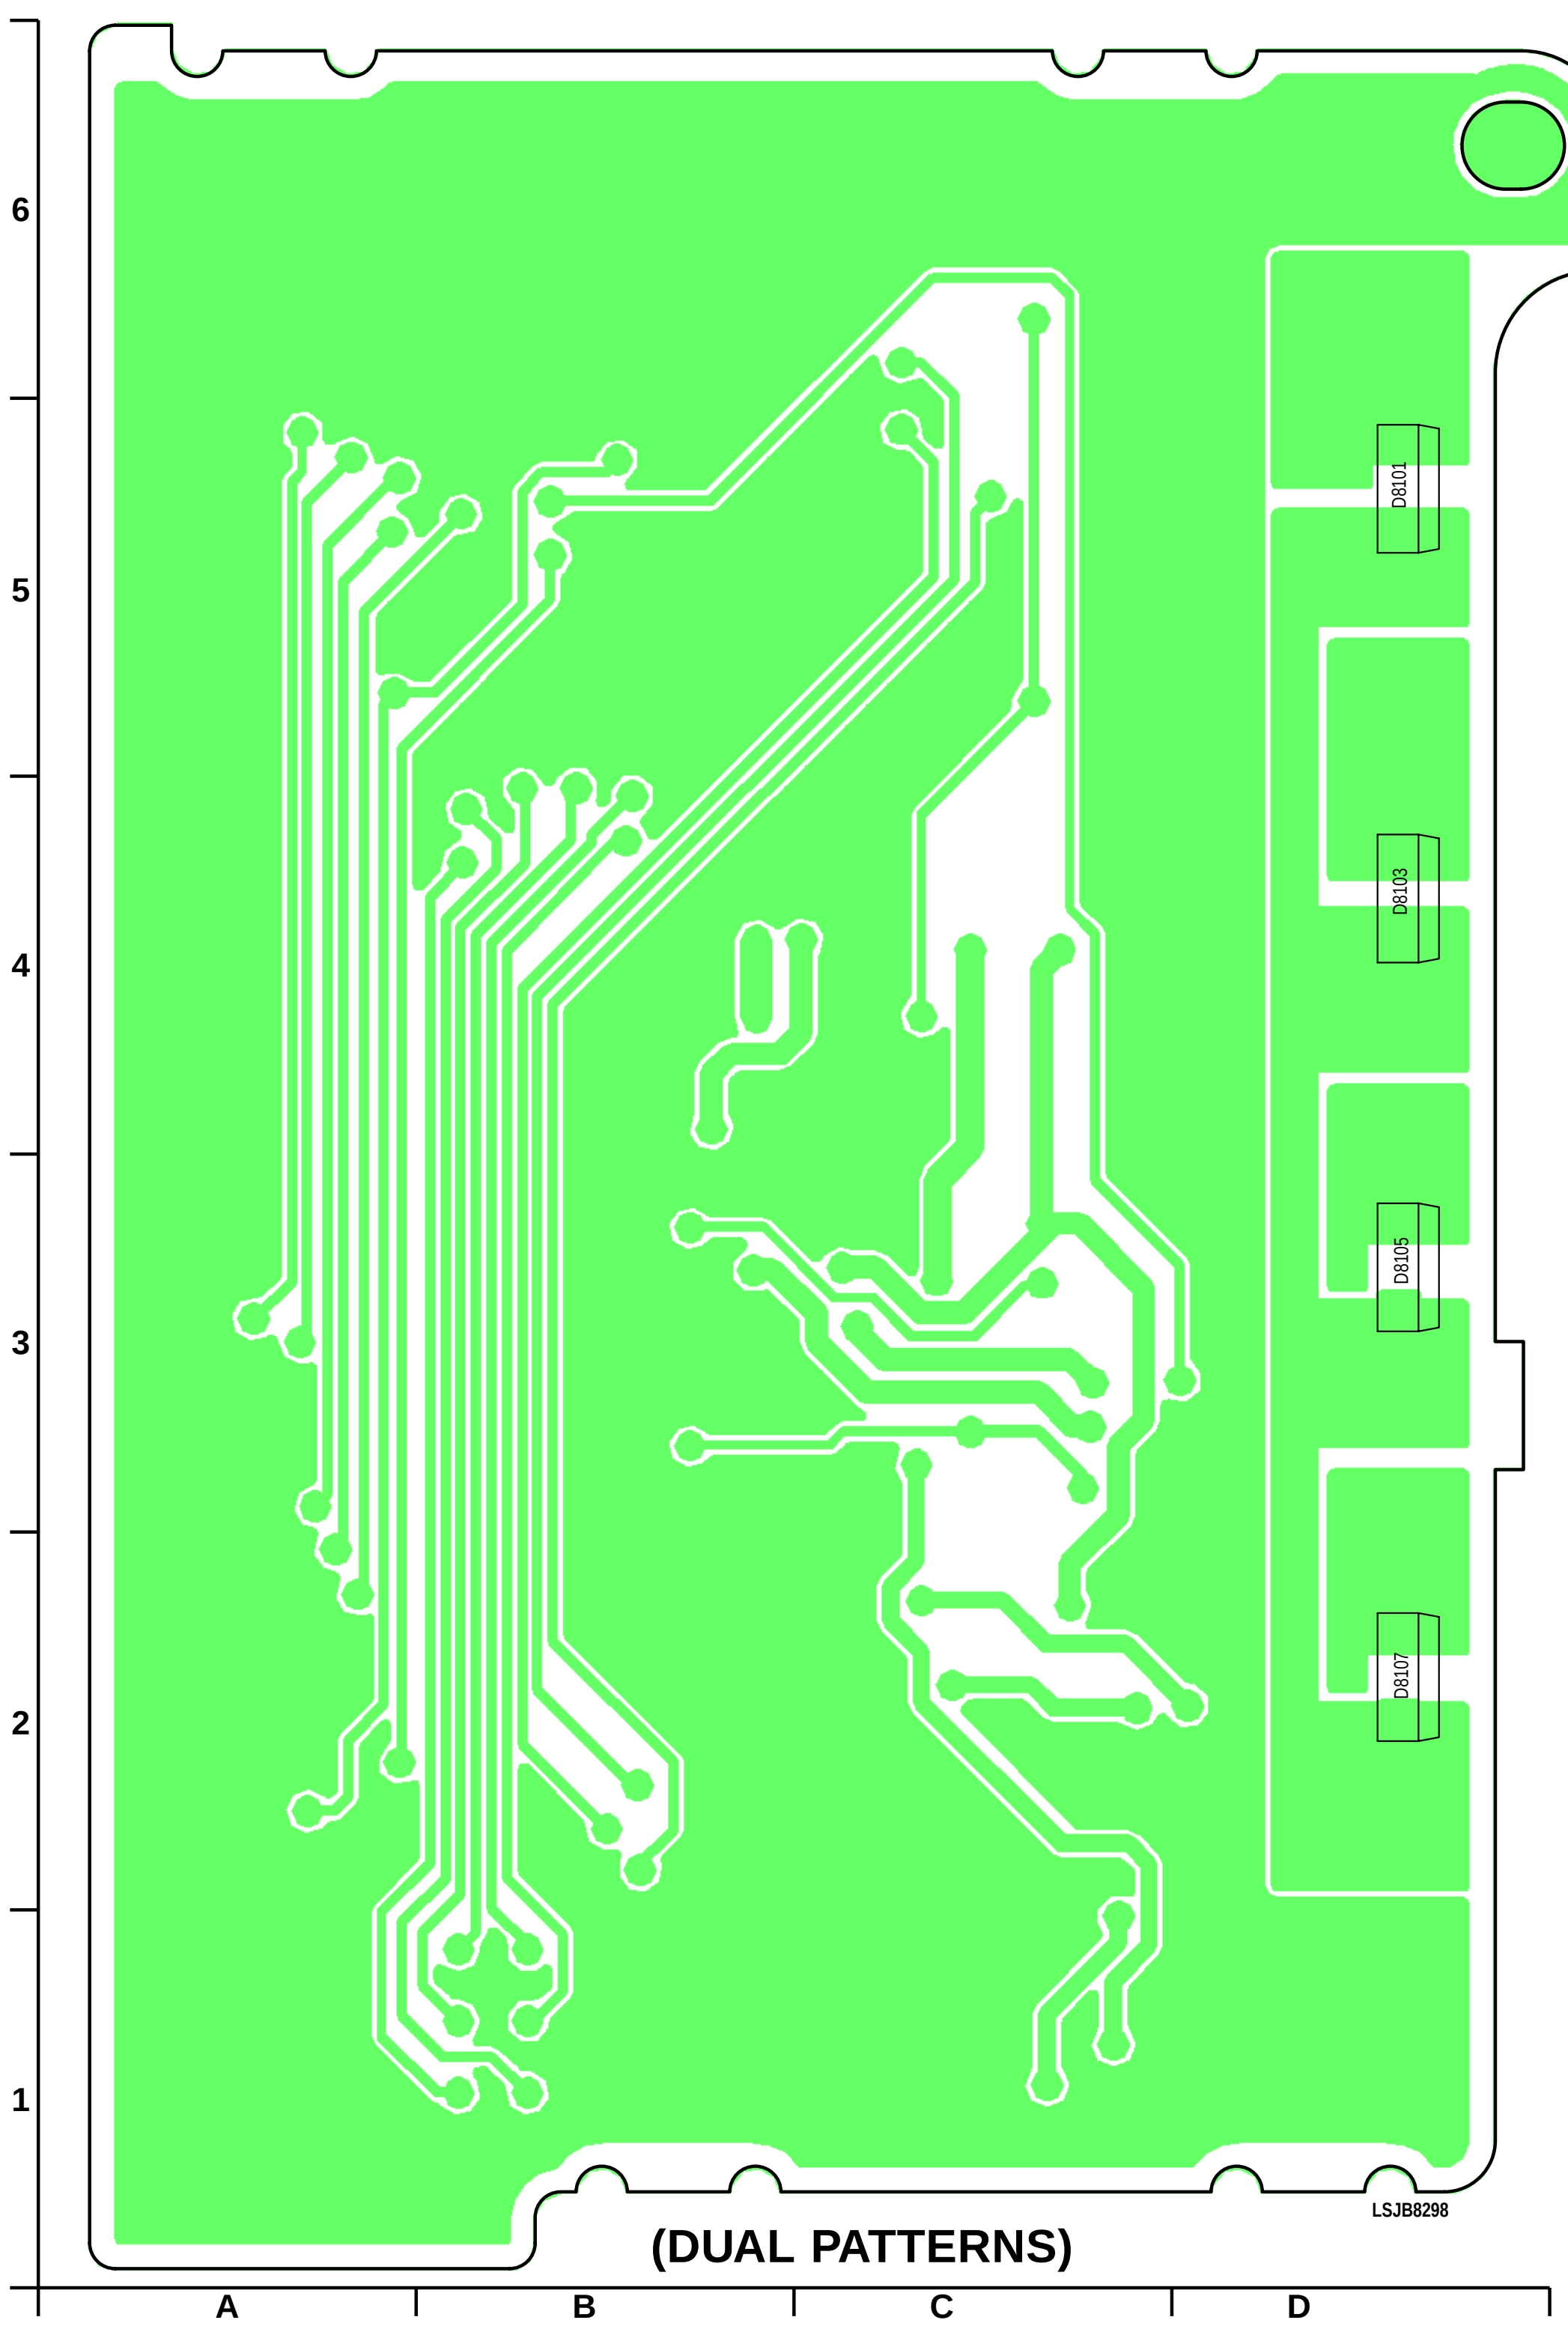
6
5
4
3
2
1
A
B
C
D
D8101
D8103
D8105
D8107
(DUAL PATTERNS)
LSJB8298

Parts Location

LCD C.B.A.					
Transisters			Capacitors		
Q8101	A-6	C	C8101	C-6	C
Q8102	A-5	C	C8102	B-6	C
Q8103	A-4	C	C8103	B-6	C
Q8104	A-2	C	C8104	B-2	C
Q8105	B-2	C	C8105	B-3	C
Q8106	B-3	C	C8106	C-3	C
Q8107	C-1	C	C8107	B-3	C
Q8108	B-1	C	C8108	B-4	C
Test Points			C8109	C-3	C
TP8101	B-5	C	C8110	B-3	C
TP8102	C-6	C	C8111	C-6	C
TP8103	B-6	C	Resistors		
TP8104	C-6	C	R8101	C-5	C
TP8105	B-6	C	R8102	C-6	C
TP8106	A-5	C	R8103	C-5	C
Connectors			R8104	C-5	C
FP8101	D-5	C	R8105	C-5	C
FP8102	D-2	C	R8106	C-5	C
Diodes			R8107	C-4	C
D8101	D-5	F	R8108	B-6	C
D8102	A-5	C	R8109	B-5	C
D8103	D-4	F	R8110	B-4	C
D8104	A-4	C	R8111	B-2	C
D8105	D-3	F	R8112	C-3	C
D8106	A-3	C	R8113	C-2	C
D8107	D-2	F	R8114	B-2	C
D8108	A-2	C	R8115	B-2	C
D8109	C-3	C	R8116	B-2	C
D8110	C-3	C	R8117	C-2	C
Coils			R8118	B-3	C
L8101	B-4	C	R8119	B-3	C
L8102	B-4	C	R8120	C-3	C
L8103	C-4	C	R8121	B-1	C
L8104	B-4	C	R8122	B-2	C
			R8123	B-2	C
			R8124	B-2	C
			R8125	B-2	C
			R8126	B-1	C

LCD BACKLIGHT C.B.A. LSEP8298P1
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

12 BLOCK DIAGRAMS

OVERALL BLOCK DIAGRAM

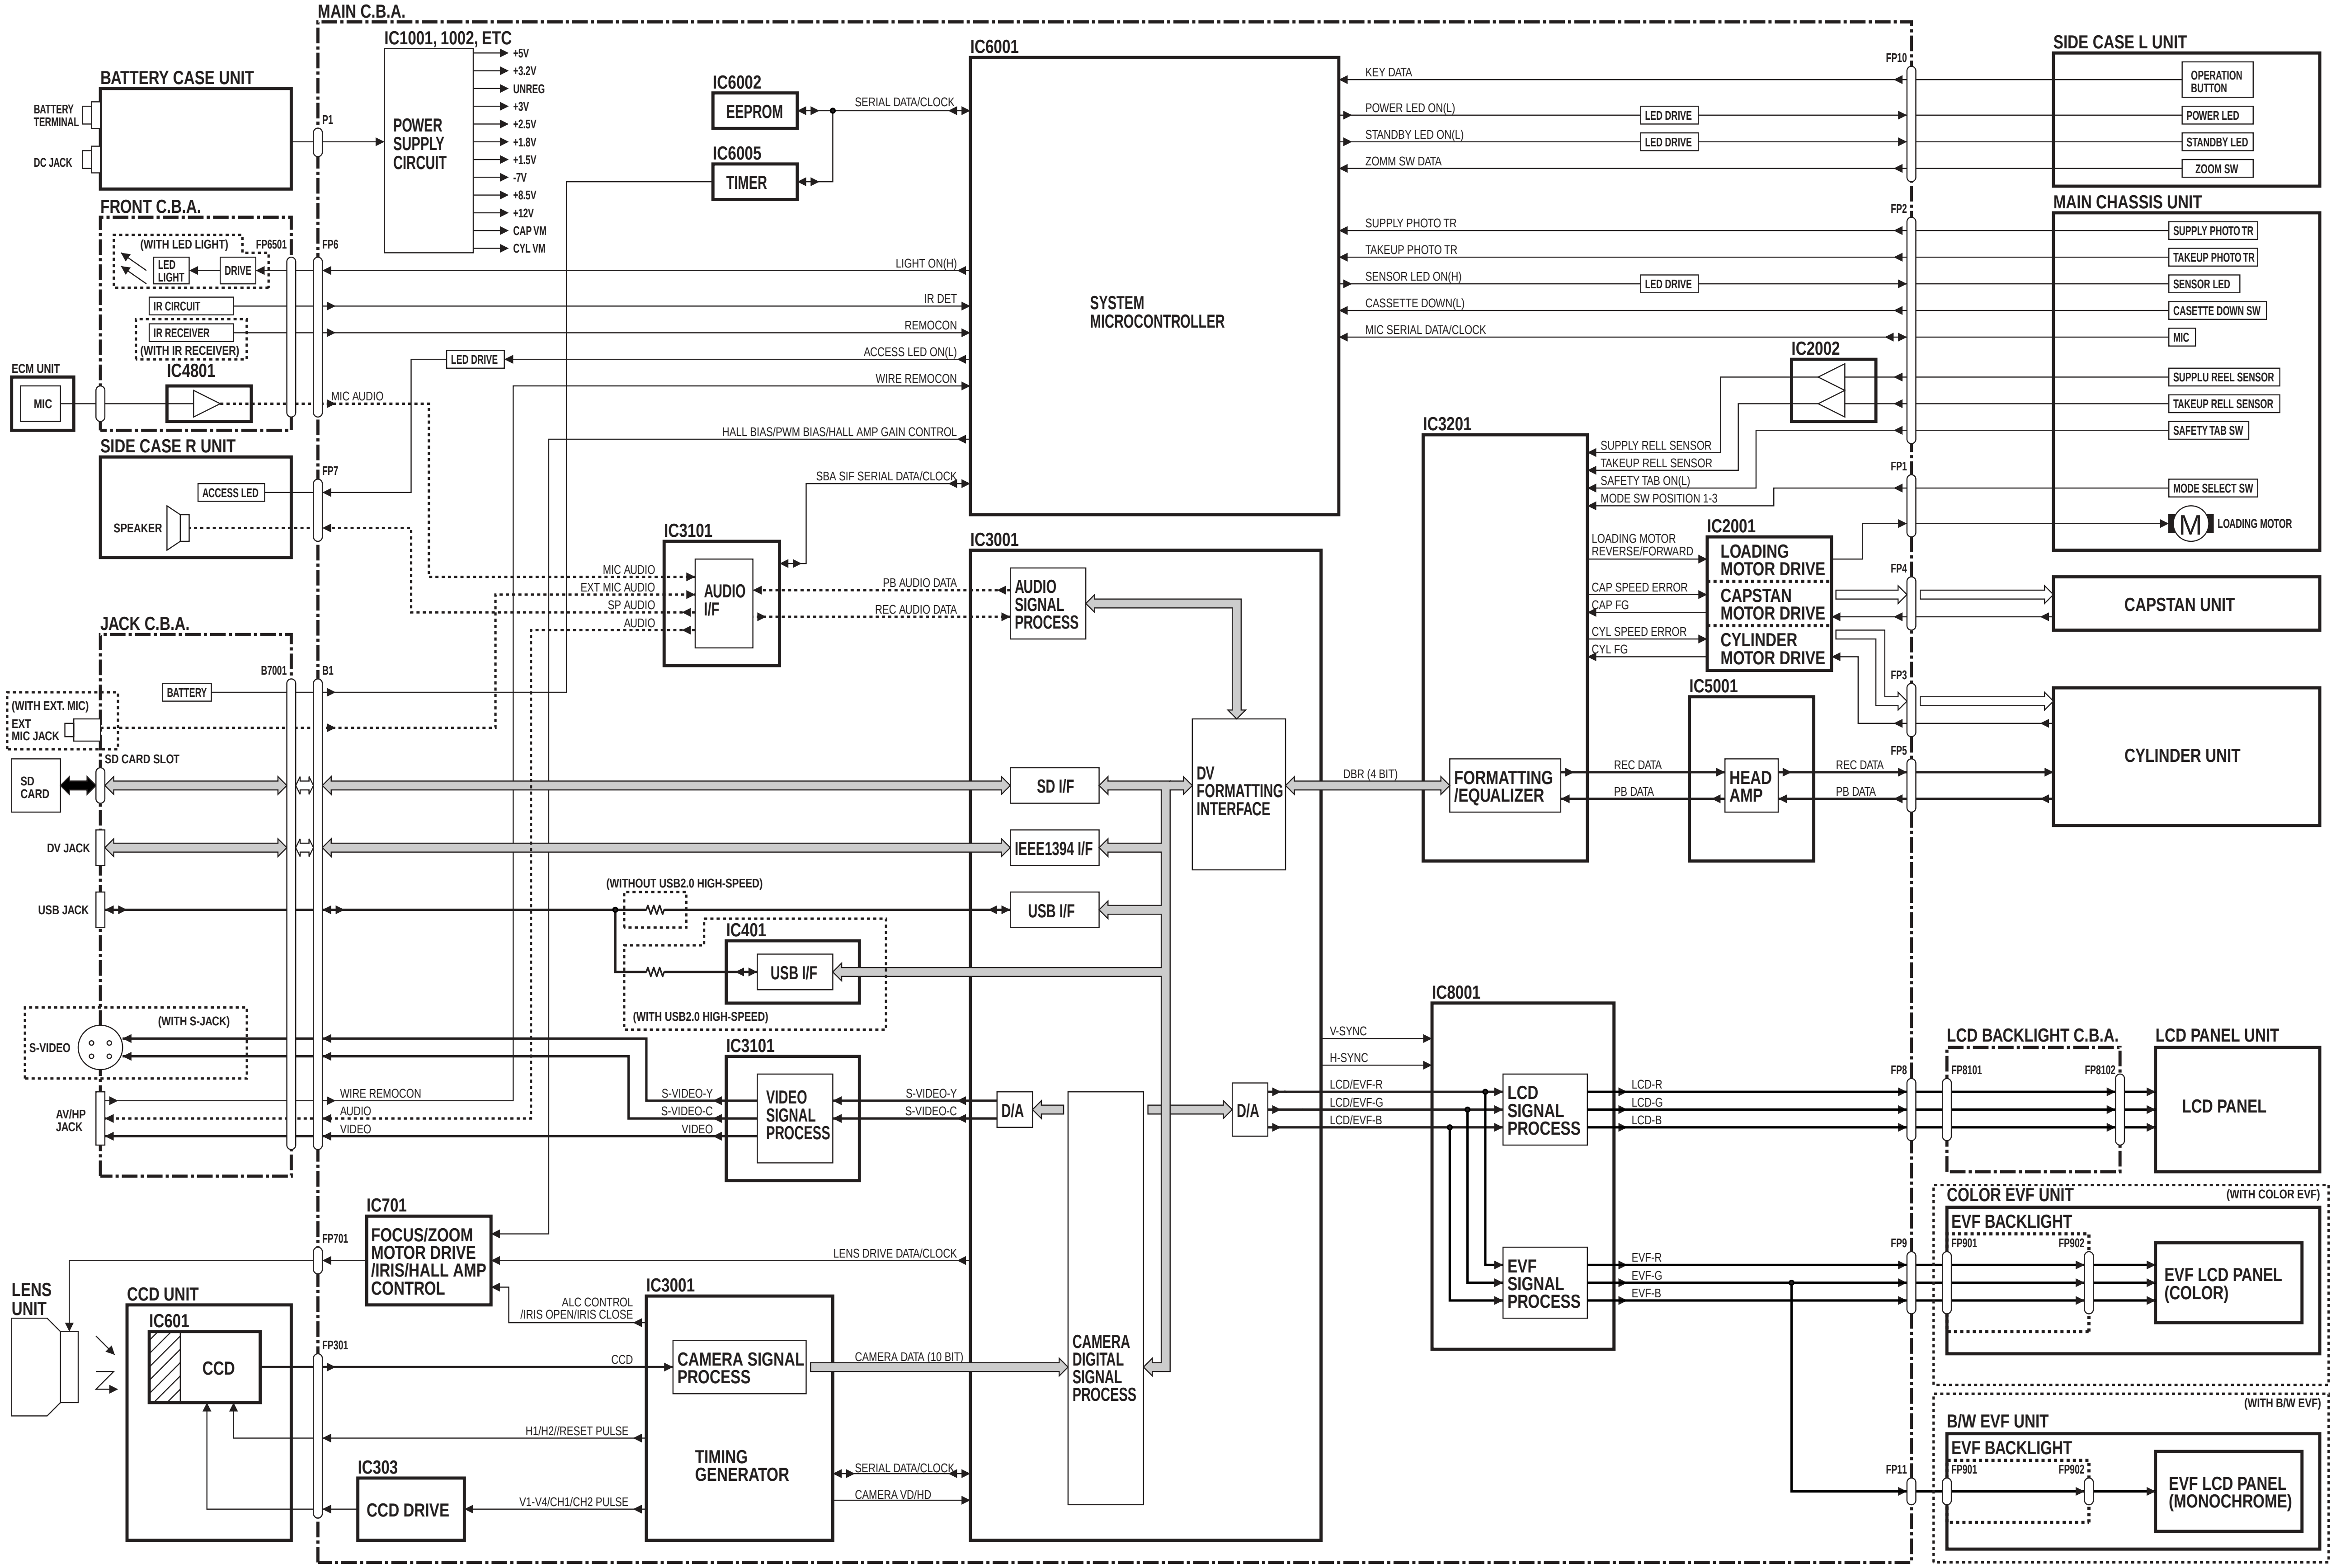
MAIN C.B.A.
BATTERY CASE UNIT
BATTERY TERMINAL
DC JACK
P1
IC1001, 1002, ETC
POWER SUPPLY CIRCUIT
+5V
+3.2V
UNREG
+3V
+2.5V
+1.8V
+1.5V
-7V
+8.5V
+12V
CAP VM
CYL VM
IC6002
EEPROM
IC6005
TIMER
SERIAL DATA/CLOCK
IC6001
SYSTEM MICROCONTROLLER
FRONT C.B.A.
(WITH LED LIGHT)
FP6501
FP6
LED LIGHT
DRIVE
IR CIRCUIT
IR RECEIVER
(WITH IR RECEIVER)
LIGHT ON(H)
IR DET
REMOCON
ACCESS LED ON(L)
WIRE REMOCON
LED DRIVE
ECM UNIT
MIC
IC4801
MIC AUDIO
HALL BIAS/PWM BIAS/HALL AMP GAIN CONTROL
SBA SIF SERIAL DATA/CLOCK
SIDE CASE R UNIT
ACCESS LED
SPEAKER
FP7
IC3101
AUDIO I/F
MIC AUDIO
EXT MIC AUDIO
SP AUDIO
AUDIO
PB AUDIO DATA
REC AUDIO DATA
IC3001
AUDIO SIGNAL PROCESS
JACK C.B.A.
B7001
B1
BATTERY
(WITH EXT. MIC)
EXT MIC JACK
SD CARD SLOT
SD CARD
DV JACK
USB JACK
SD I/F
IEEE1394 I/F
USB I/F
DV FORMATTING INTERFACE
(WITHOUT USB2.0 HIGH-SPEED)
IC401
USB I/F
(WITH USB2.0 HIGH-SPEED)
(WITH S-JACK)
S-VIDEO
IC3101
VIDEO SIGNAL PROCESS
S-VIDEO-Y
S-VIDEO-C
VIDEO
AV/HP JACK
WIRE REMOCON
AUDIO
VIDEO
D/A
D/A
IC701
FOCUS/ZOOM MOTOR DRIVE /IRIS/HALL AMP CONTROL
FP701
LENS DRIVE DATA/CLOCK
ALC CONTROL /IRIS OPEN/IRIS CLOSE
LENS UNIT
CCD UNIT
IC601
CCD
FP301
IC3001
CAMERA SIGNAL PROCESS
TIMING GENERATOR
CCD
CAMERA DATA (10 BIT)
CAMERA DIGITAL SIGNAL PROCESS
H1/H2//RESET PULSE
IC303
CCD DRIVE
V1-V4/CH1/CH2 PULSE
SERIAL DATA/CLOCK
CAMERA VD/HD
SIDE CASE L UNIT
FP10
KEY DATA
POWER LED ON(L)
STANDBY LED ON(L)
ZOMM SW DATA
LED DRIVE
LED DRIVE
OPERATION BUTTON
POWER LED
STANDBY LED
ZOOM SW
MAIN CHASSIS UNIT
FP2
SUPPLY PHOTO TR
TAKEUP PHOTO TR
SENSOR LED ON(H)
CASSETTE DOWN(L)
MIC SERIAL DATA/CLOCK
LED DRIVE
SUPPLY PHOTO TR
TAKEUP PHOTO TR
SENSOR LED
CASETTE DOWN SW
MIC
IC2002
SUPPLU REEL SENSOR
TAKEUP RELL SENSOR
SAFETY TAB SW
IC3201
SUPPLY RELL SENSOR
TAKEUP RELL SENSOR
SAFETY TAB ON(L)
MODE SW POSITION 1-3
FP1
MODE SELECT SW
M
LOADING MOTOR
IC2001
LOADING MOTOR REVERSE/FORWARD
LOADING MOTOR DRIVE
CAP SPEED ERROR
CAP FG
CAPSTAN MOTOR DRIVE
CYL SPEED ERROR
CYL FG
CYLINDER MOTOR DRIVE
FP4
CAPSTAN UNIT
FP3
CYLINDER UNIT
IC5001
FP5
DBR (4 BIT)
FORMATTING /EQUALIZER
REC DATA
PB DATA
HEAD AMP
REC DATA
PB DATA
IC8001
V-SYNC
H-SYNC
LCD/EVF-R
LCD/EVF-G
LCD/EVF-B
LCD SIGNAL PROCESS
LCD-R
LCD-G
LCD-B
EVF SIGNAL PROCESS
EVF-R
EVF-G
EVF-B
LCD BACKLIGHT C.B.A.
LCD PANEL UNIT
FP8
FP8101
FP8102
LCD PANEL
COLOR EVF UNIT
(WITH COLOR EVF)
EVF BACKLIGHT
FP9
FP901
FP902
EVF LCD PANEL (COLOR)
(WITH B/W EVF)
B/W EVF UNIT
EVF BACKLIGHT
FP11
FP901
FP902
EVF LCD PANEL (MONOCHROME)

OVERALL BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

CCD DRIVE BLOCK DIAGRAM

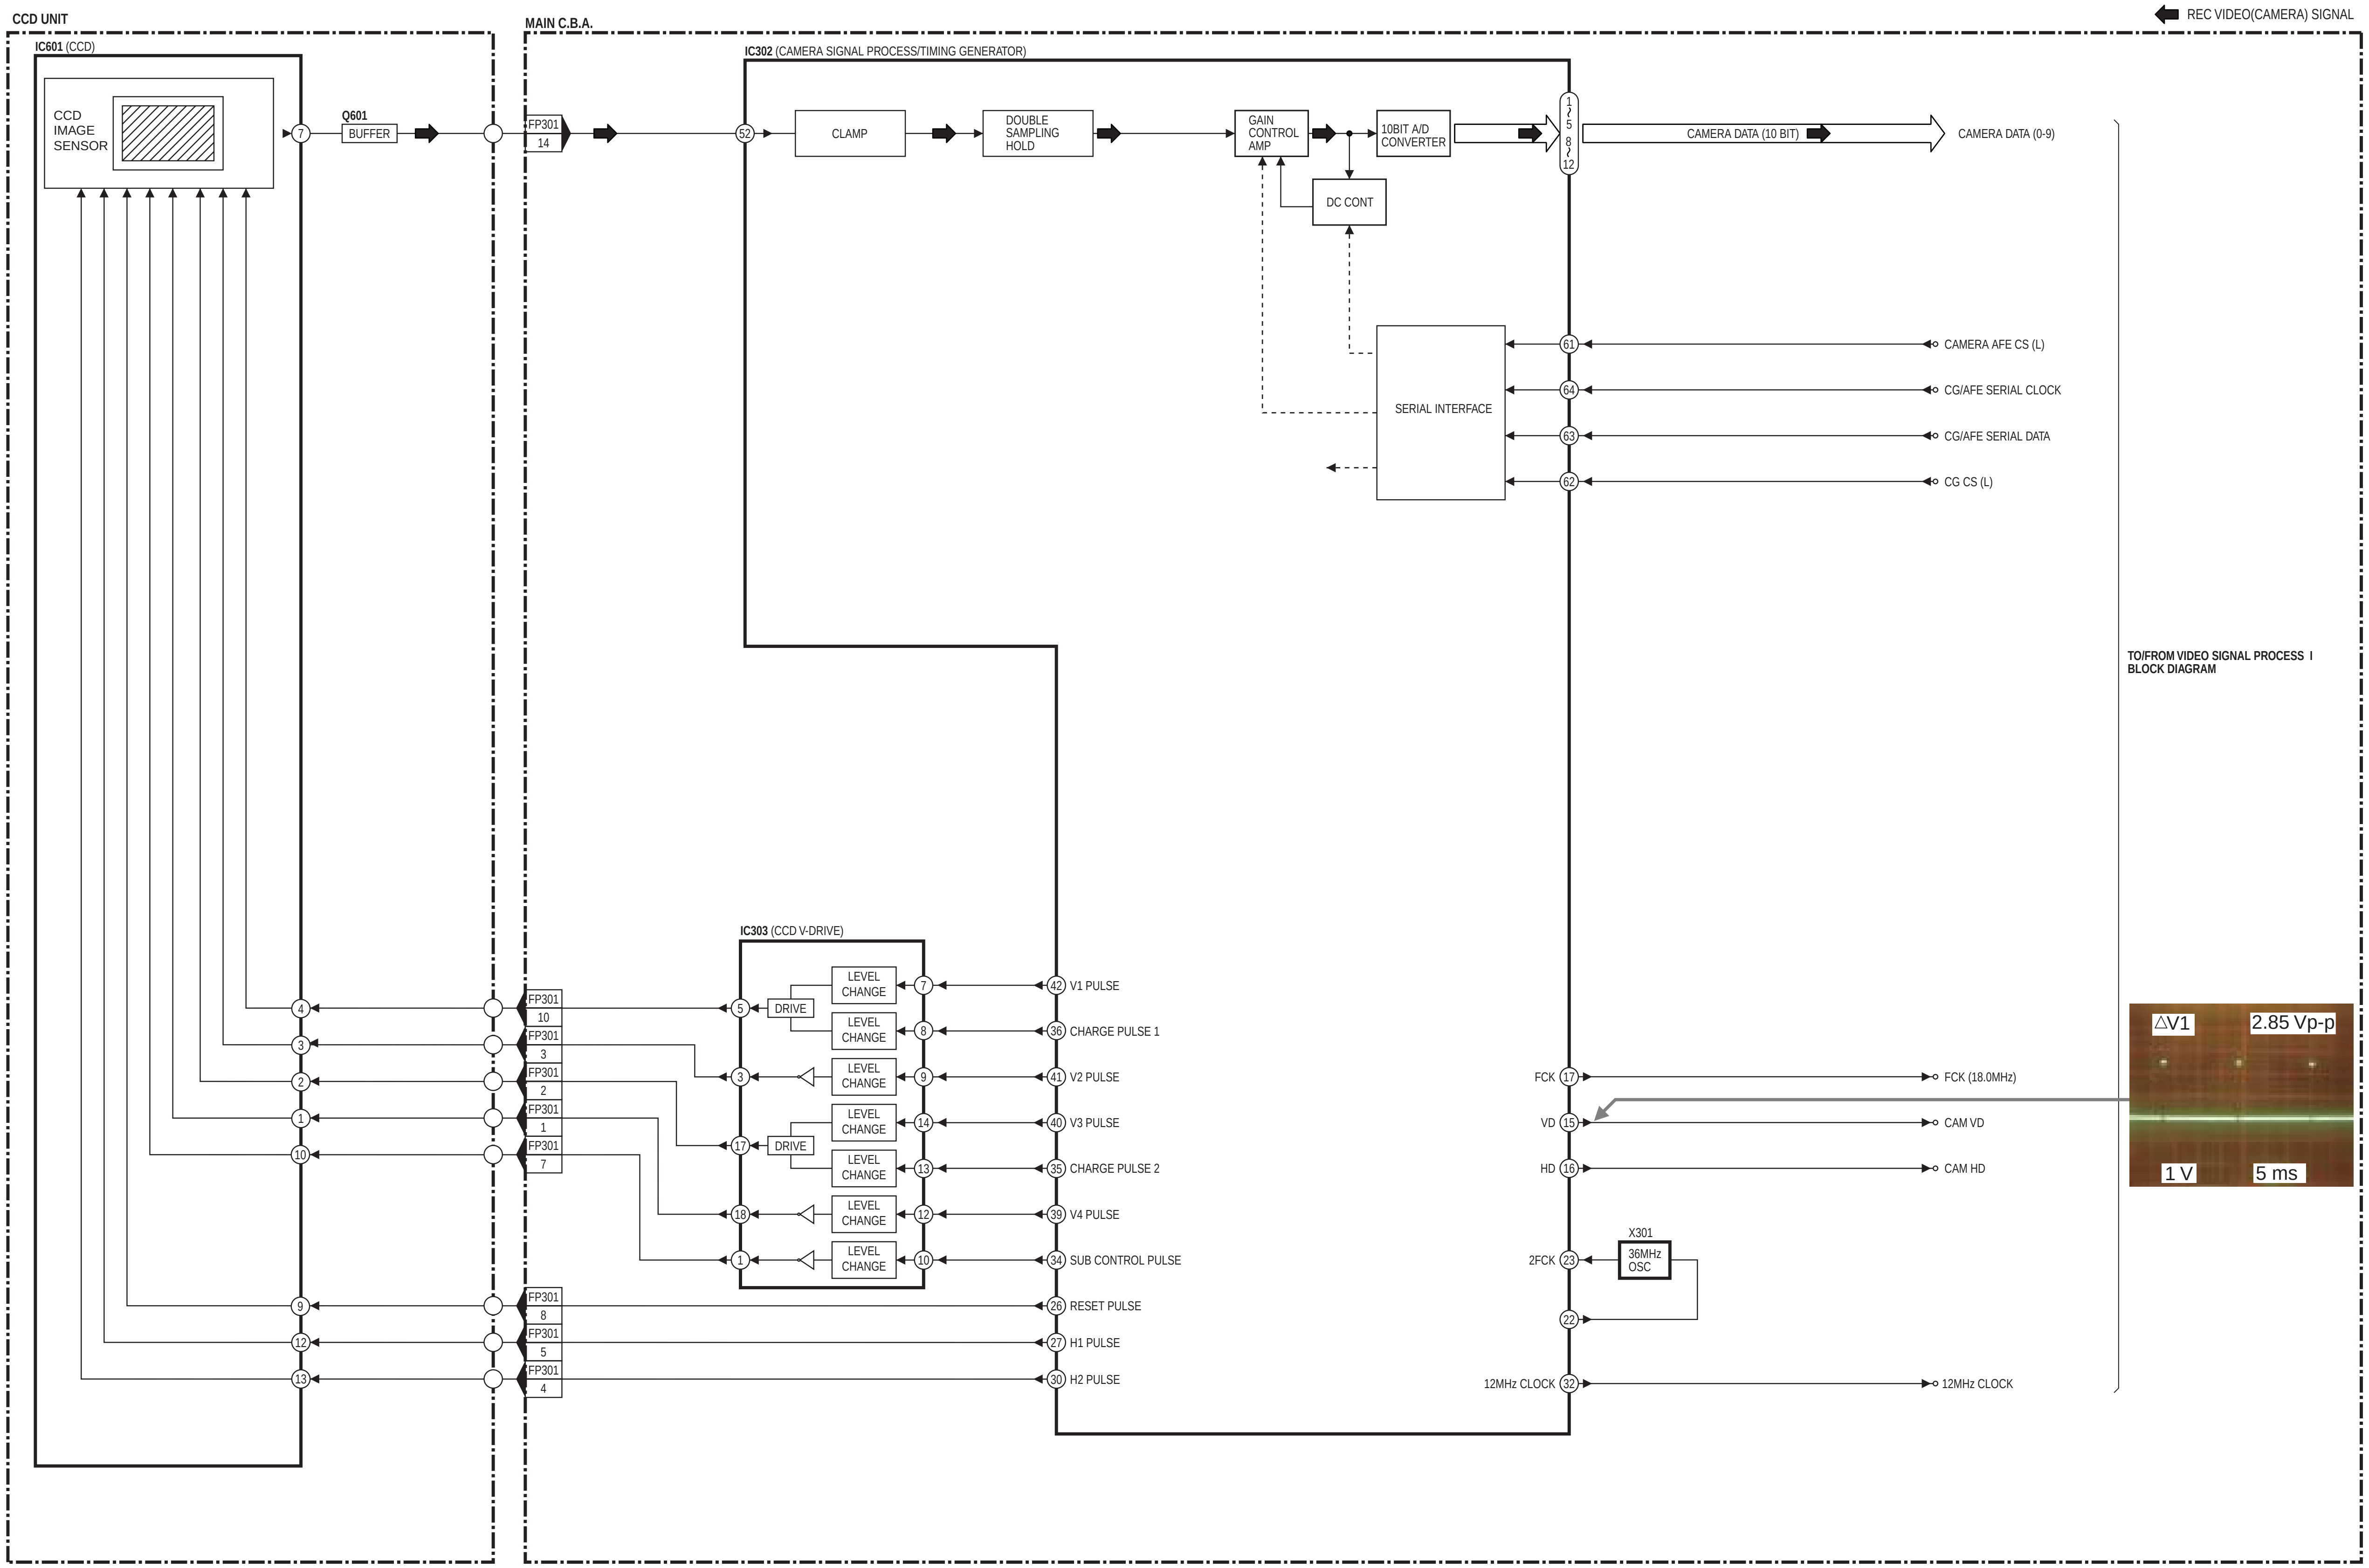
REC VIDEO(CAMERA) SIGNAL
CCD UNIT
IC601 (CCD)
CCD IMAGE SENSOR
MAIN C.B.A.
Q601
BUFFER
FP301
IC302 (CAMERA SIGNAL PROCESS/TIMING GENERATOR)
CLAMP
DOUBLE SAMPLING HOLD
GAIN CONTROL AMP
10BIT A/D CONVERTER
DC CONT
CAMERA DATA (10 BIT)
CAMERA DATA (0-9)
SERIAL INTERFACE
CAMERA AFE CS (L)
CG/AFE SERIAL CLOCK
CG/AFE SERIAL DATA
CG CS (L)
TO/FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
IC303 (CCD V-DRIVE)
LEVEL CHANGE
DRIVE
V1 PULSE
CHARGE PULSE 1
V2 PULSE
V3 PULSE
CHARGE PULSE 2
V4 PULSE
SUB CONTROL PULSE
RESET PULSE
H1 PULSE
H2 PULSE
FCK
FCK (18.0MHz)
VD
CAM VD
HD
CAM HD
X301
36MHz OSC
2FCK
12MHz CLOCK
△V1
2.85 Vp-p
1 V
5 ms

CCD DRIVE BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

VIDEO SIGNAL PROCESS I BLOCK DIAGRAM

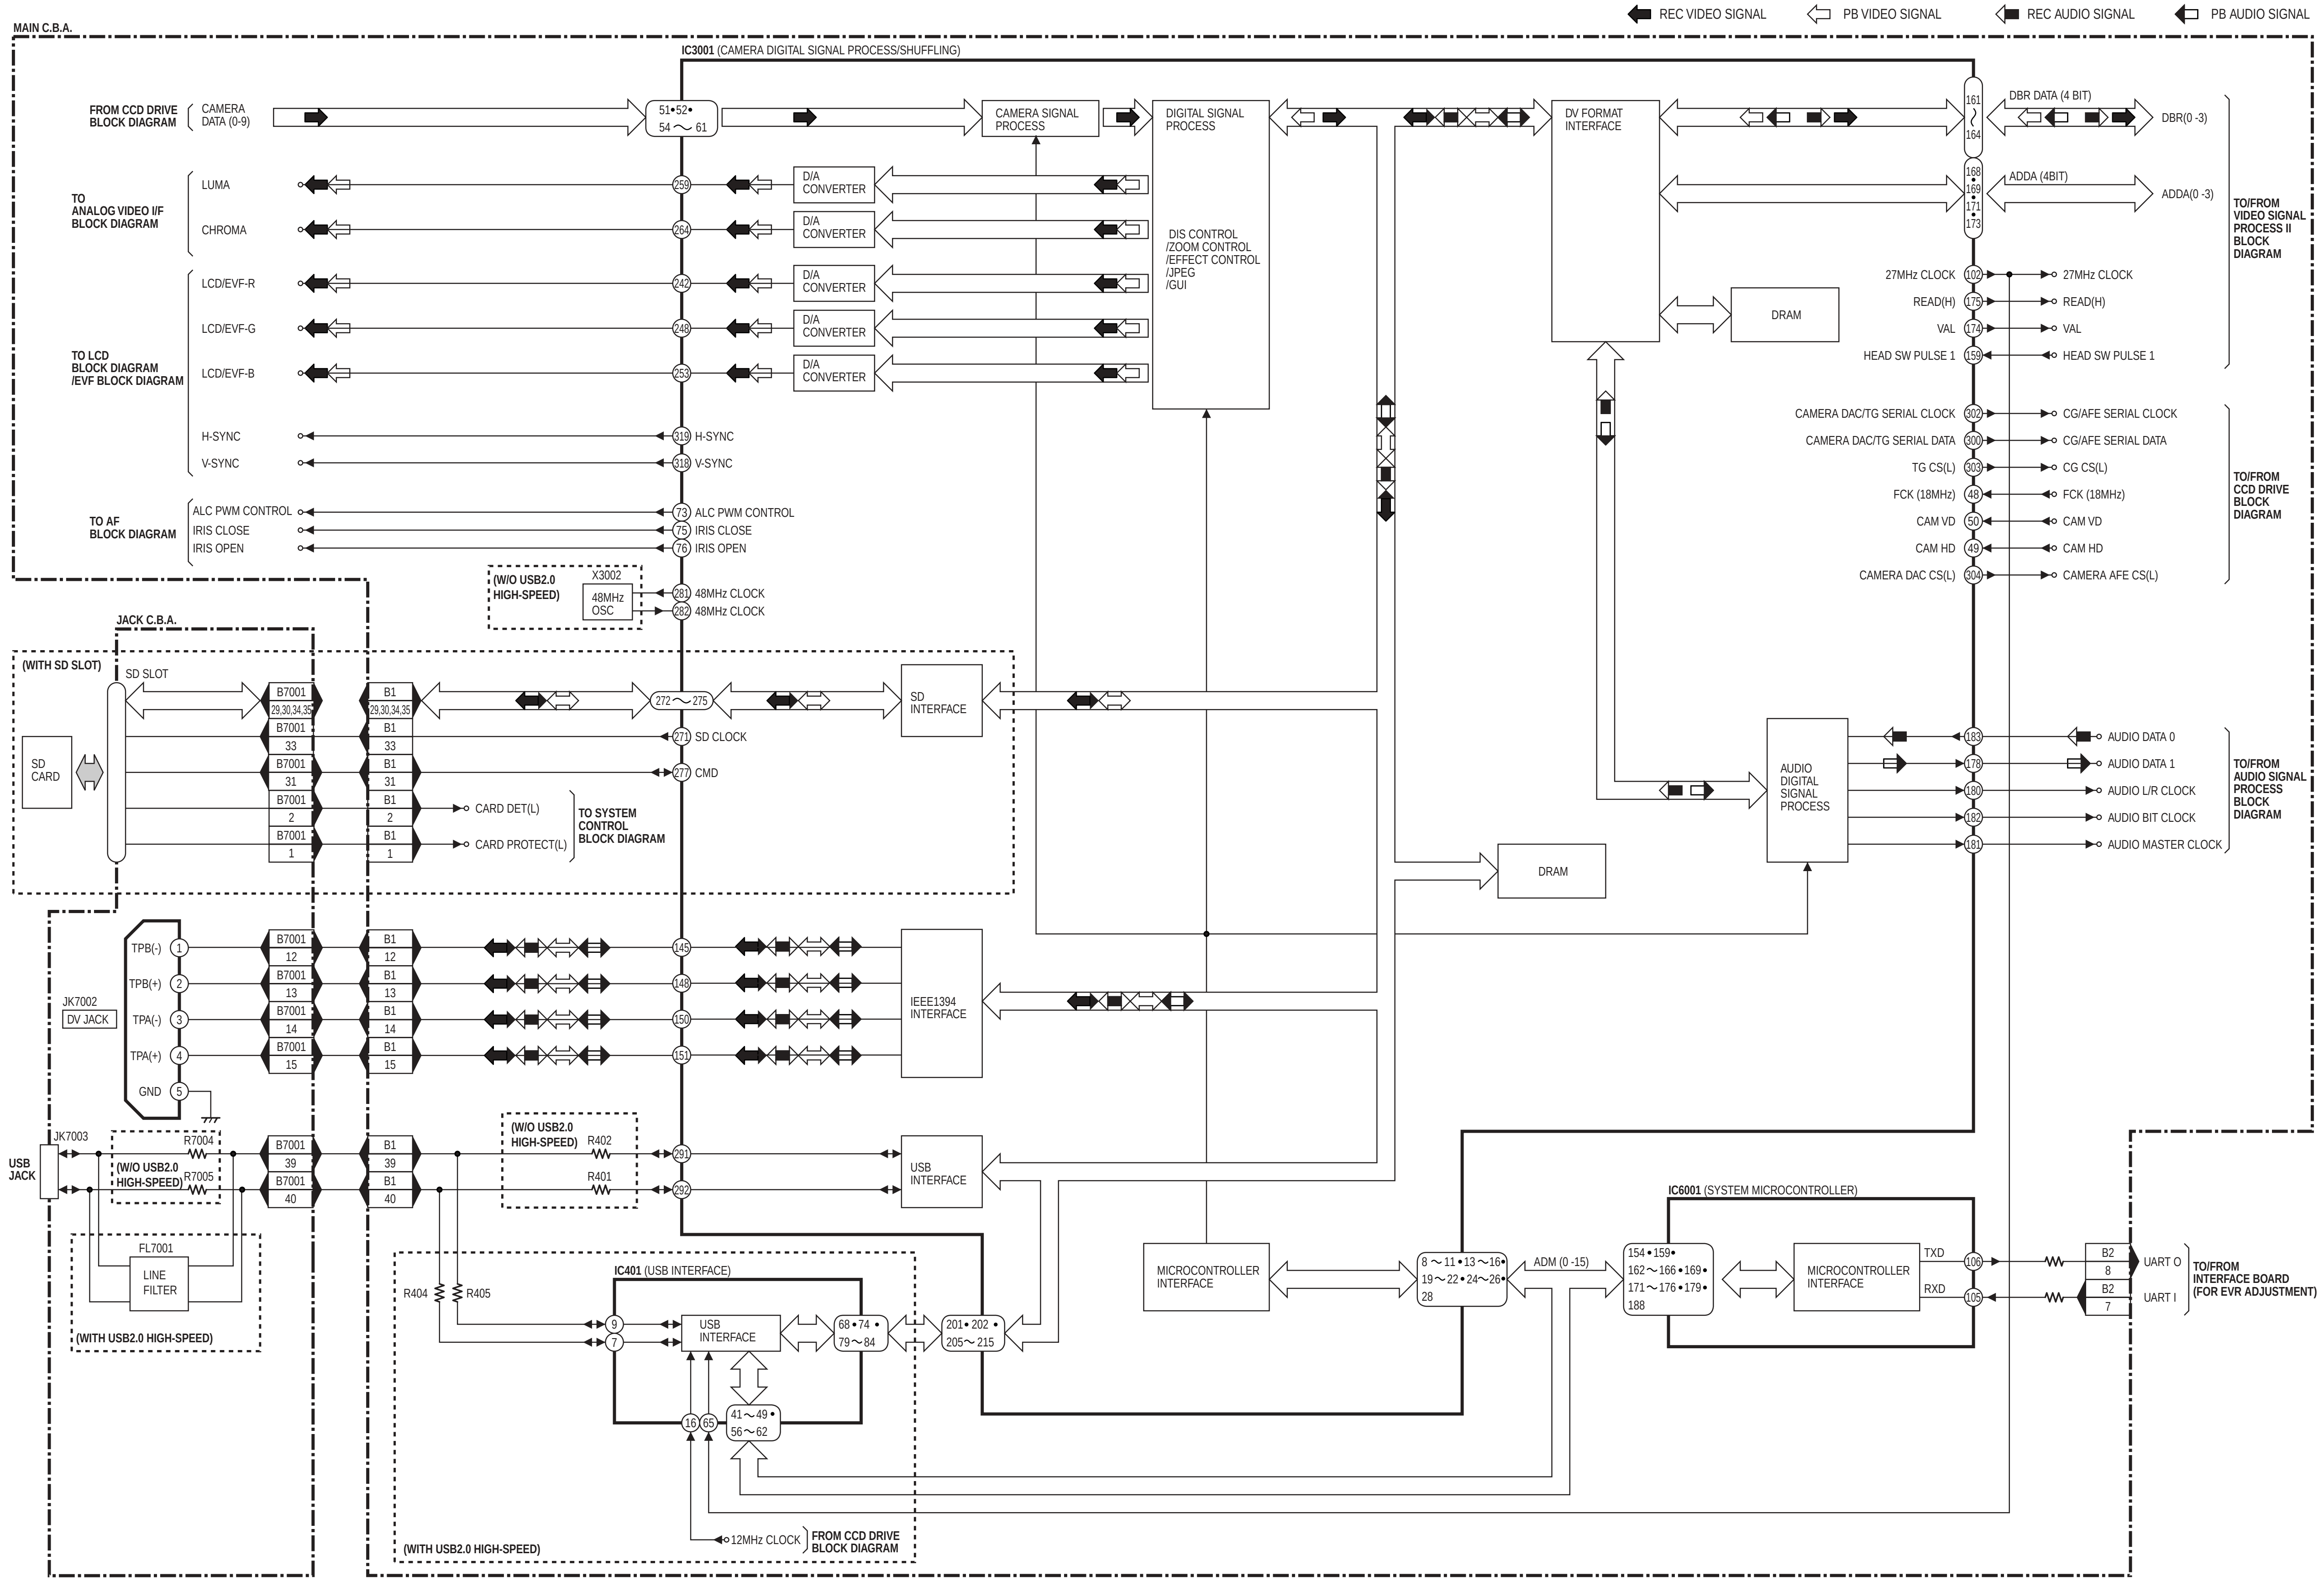
REC VIDEO SIGNAL
PB VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
MAIN C.B.A.
IC3001 (CAMERA DIGITAL SIGNAL PROCESS/SHUFFLING)
FROM CCD DRIVE BLOCK DIAGRAM
CAMERA DATA (0-9)
51•52• 54～61
CAMERA SIGNAL PROCESS
DIGITAL SIGNAL PROCESS
DIS CONTROL /ZOOM CONTROL /EFFECT CONTROL /JPEG /GUI
DV FORMAT INTERFACE
DBR DATA (4 BIT)
161～164
DBR(0 -3)
ADDA (4BIT)
168•169•171•173
ADDA(0 -3)
TO/FROM VIDEO SIGNAL PROCESS II BLOCK DIAGRAM
TO ANALOG VIDEO I/F BLOCK DIAGRAM
LUMA
CHROMA
259
264
D/A CONVERTER
TO LCD BLOCK DIAGRAM /EVF BLOCK DIAGRAM
LCD/EVF-R
LCD/EVF-G
LCD/EVF-B
242
248
253
H-SYNC
V-SYNC
319 H-SYNC
318 V-SYNC
TO AF BLOCK DIAGRAM
ALC PWM CONTROL
IRIS CLOSE
IRIS OPEN
73 ALC PWM CONTROL
75 IRIS CLOSE
76 IRIS OPEN
DRAM
27MHz CLOCK 102
READ(H) 175
VAL 174
HEAD SW PULSE 1 159
27MHz CLOCK
READ(H)
VAL
HEAD SW PULSE 1
CAMERA DAC/TG SERIAL CLOCK 302
CAMERA DAC/TG SERIAL DATA 300
TG CS(L) 303
FCK (18MHz) 48
CAM VD 50
CAM HD 49
CAMERA DAC CS(L) 304
CG/AFE SERIAL CLOCK
CG/AFE SERIAL DATA
CG CS(L)
FCK (18MHz)
CAM VD
CAM HD
CAMERA AFE CS(L)
TO/FROM CCD DRIVE BLOCK DIAGRAM
(W/O USB2.0 HIGH-SPEED)
X3002
48MHz OSC
281 48MHz CLOCK
282 48MHz CLOCK
JACK C.B.A.
(WITH SD SLOT)
SD SLOT
SD CARD
B7001
B1
29,30,34,35
33
31
2
1
272～275
SD INTERFACE
271 SD CLOCK
277 CMD
CARD DET(L)
CARD PROTECT(L)
TO SYSTEM CONTROL BLOCK DIAGRAM
AUDIO DIGITAL SIGNAL PROCESS
183 AUDIO DATA 0
178 AUDIO DATA 1
180 AUDIO L/R CLOCK
182 AUDIO BIT CLOCK
181 AUDIO MASTER CLOCK
TO/FROM AUDIO SIGNAL PROCESS BLOCK DIAGRAM
DRAM
JK7002
DV JACK
TPB(-) 1
TPB(+) 2
TPA(-) 3
TPA(+) 4
GND 5
12
13
14
15
145
148
150
151
IEEE1394 INTERFACE
JK7003
USB JACK
R7004
R7005
(W/O USB2.0 HIGH-SPEED)
39
40
R402
R401
291
292
USB INTERFACE
FL7001
LINE FILTER
(WITH USB2.0 HIGH-SPEED)
R404
R405
IC401 (USB INTERFACE)
9
7
USB INTERFACE
68•74• 79～84
201•202• 205～215
16
65
41～49• 56～62
12MHz CLOCK
FROM CCD DRIVE BLOCK DIAGRAM
(WITH USB2.0 HIGH-SPEED)
MICROCONTROLLER INTERFACE
8～11•13～16• 19～22•24～26• 28
ADM (0 -15)
IC6001 (SYSTEM MICROCONTROLLER)
154•159• 162～166•169• 171～176•179• 188
MICROCONTROLLER INTERFACE
TXD 106
RXD 105
B2
8
7
UART O
UART I
TO/FROM INTERFACE BOARD (FOR EVR ADJUSTMENT)

VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

VIDEO SIGNAL PROCESS II BLOCK DIAGRAM

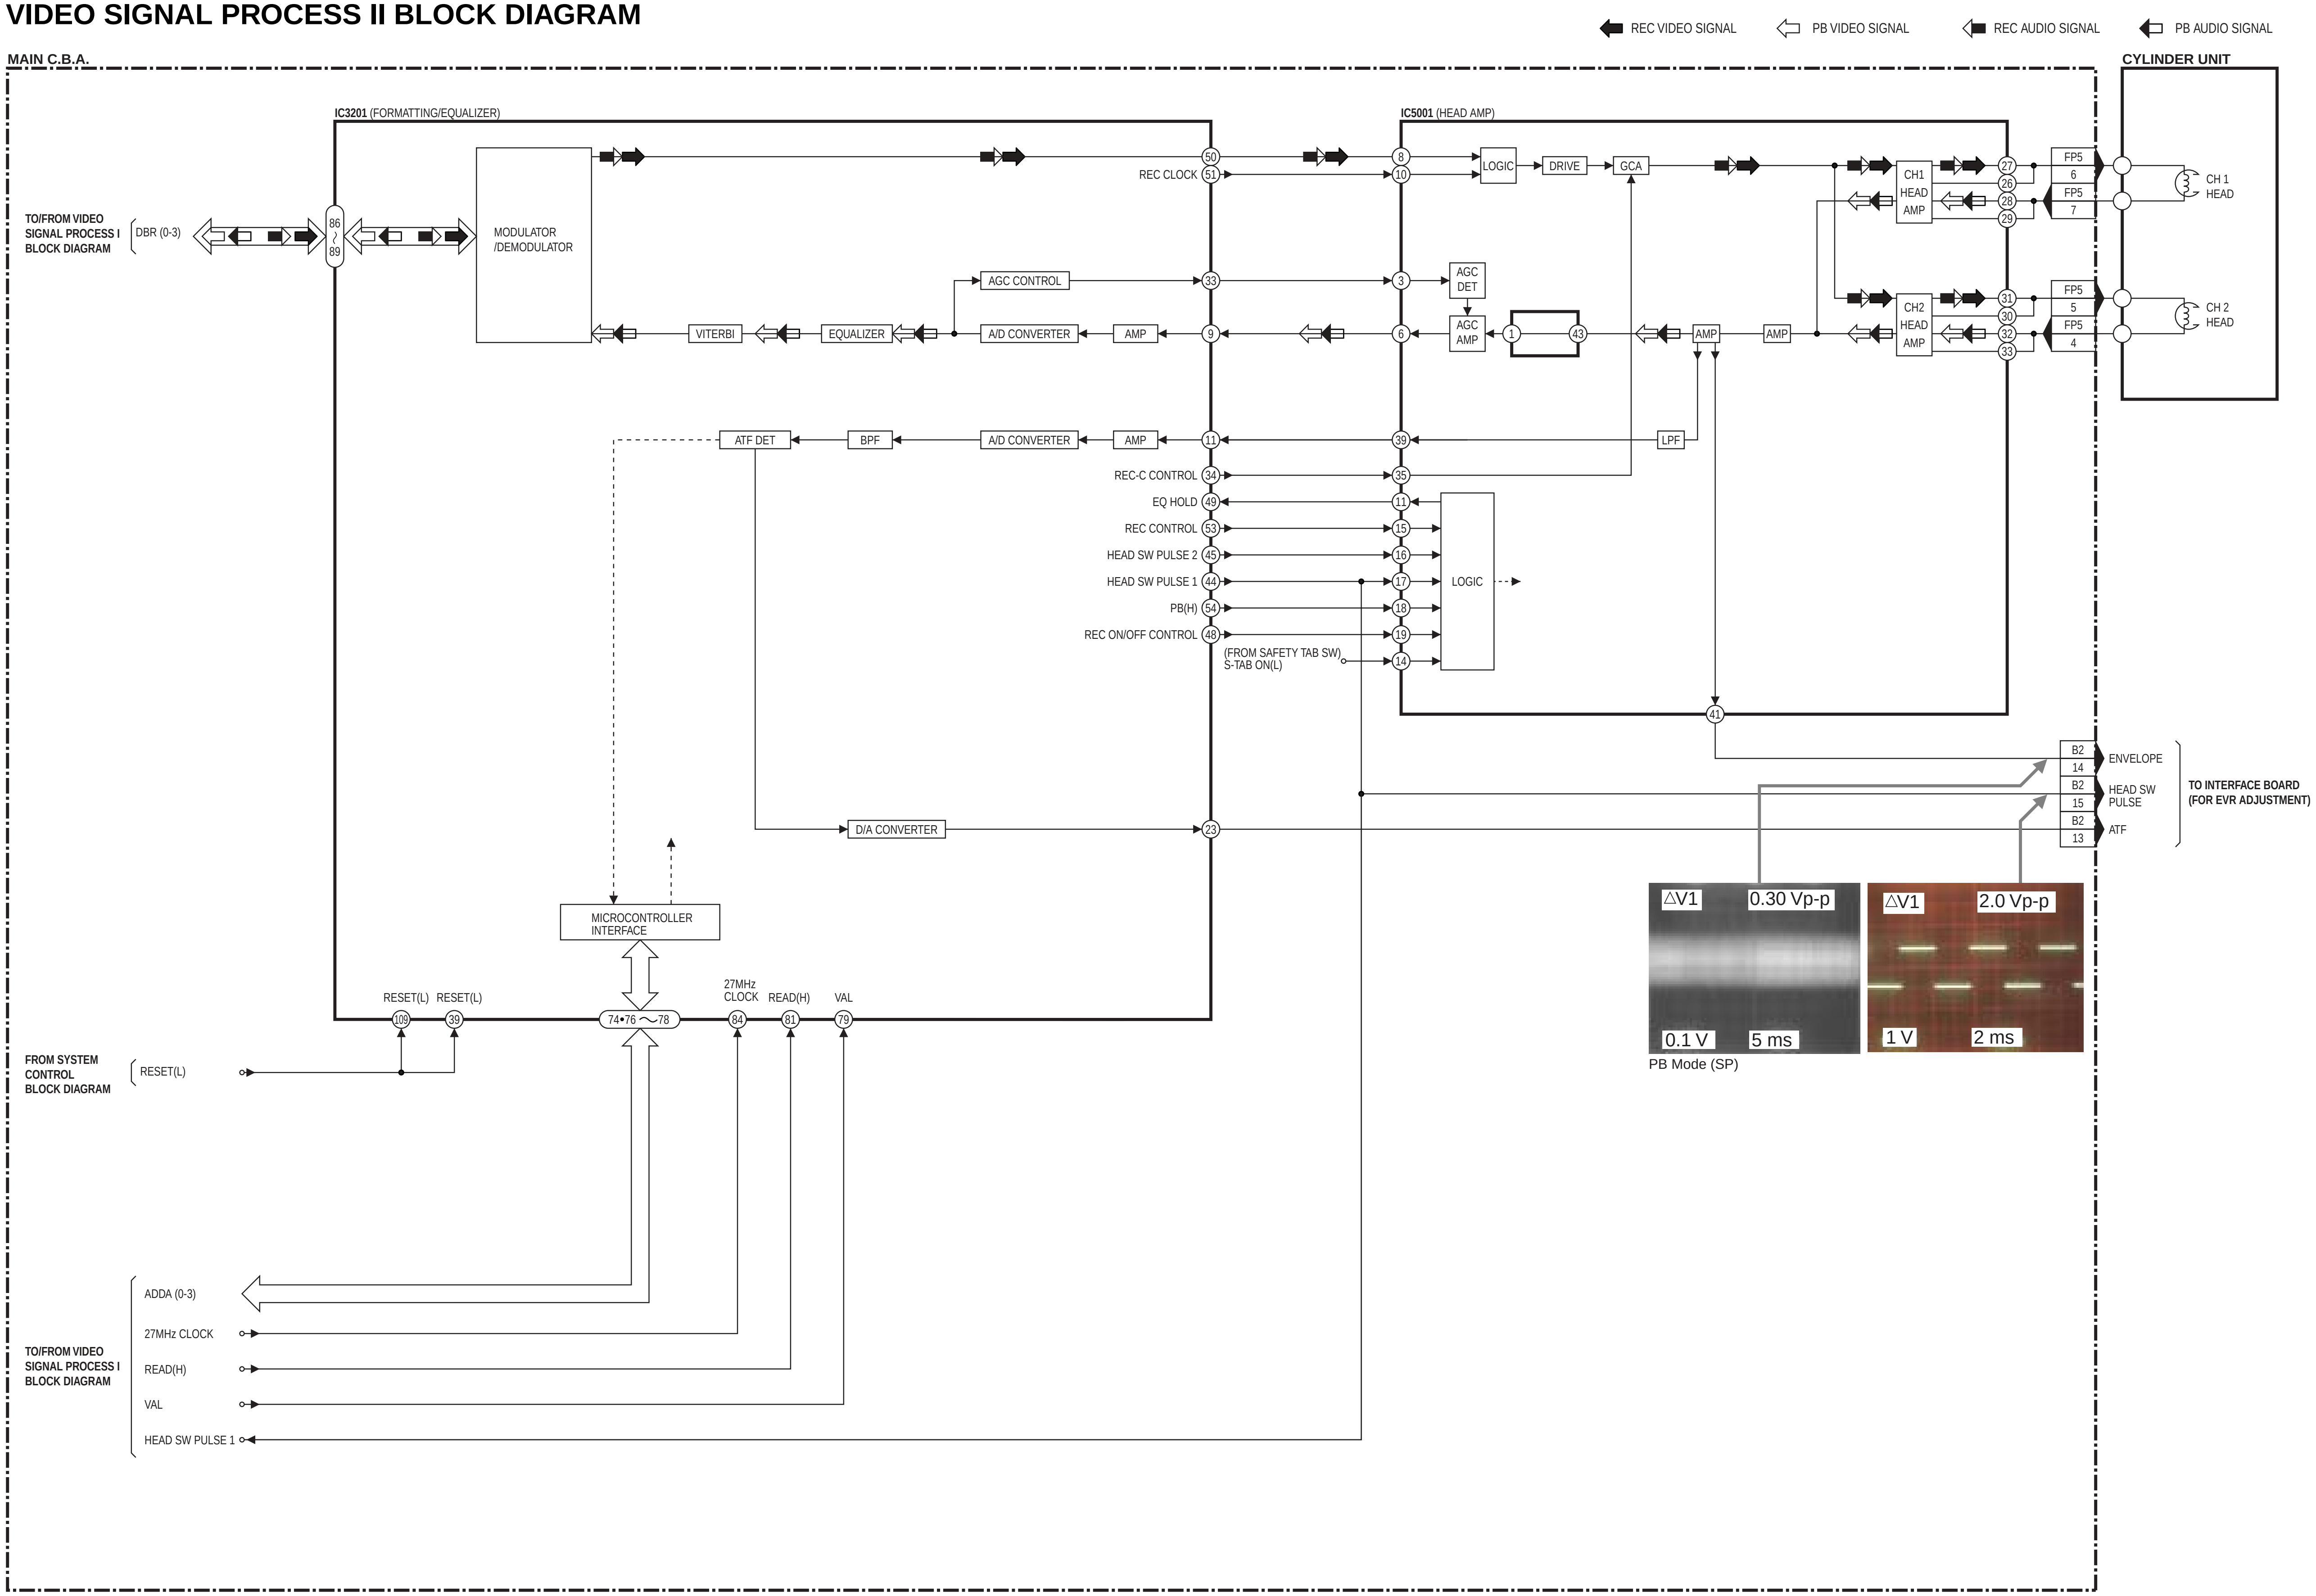
REC VIDEO SIGNAL
PB VIDEO SIGNAL
REC AUDIO SIGNAL
PB AUDIO SIGNAL
MAIN C.B.A.
CYLINDER UNIT
IC3201 (FORMATTING/EQUALIZER)
IC5001 (HEAD AMP)
TO/FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
DBR (0-3)
86 ~ 89
MODULATOR /DEMODULATOR
50
REC CLOCK 51
AGC CONTROL
33
VITERBI
EQUALIZER
A/D CONVERTER
AMP
9
ATF DET
BPF
A/D CONVERTER
AMP
11
REC-C CONTROL 34
EQ HOLD 49
REC CONTROL 53
HEAD SW PULSE 2 45
HEAD SW PULSE 1 44
PB(H) 54
REC ON/OFF CONTROL 48
(FROM SAFETY TAB SW) S-TAB ON(L)
8
10
LOGIC
DRIVE
GCA
3
AGC DET
6
AGC AMP
1
43
AMP
AMP
LPF
39
35
11
15
16
17
18
19
14
LOGIC
41
CH1 HEAD AMP
27
26
28
29
CH2 HEAD AMP
31
30
32
33
FP5 6
FP5 7
FP5 5
FP5 4
CH 1 HEAD
CH 2 HEAD
B2 14
B2 15
B2 13
ENVELOPE
HEAD SW PULSE
ATF
TO INTERFACE BOARD (FOR EVR ADJUSTMENT)
D/A CONVERTER
23
MICROCONTROLLER INTERFACE
RESET(L) 109
RESET(L) 39
74•76 ~ 78
27MHz CLOCK 84
READ(H) 81
VAL 79
FROM SYSTEM CONTROL BLOCK DIAGRAM
RESET(L)
TO/FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
ADDA (0-3)
27MHz CLOCK
READ(H)
VAL
HEAD SW PULSE 1
△V1 0.30 Vp-p
0.1 V 5 ms
PB Mode (SP)
△V1 2.0 Vp-p
1 V 2 ms

VIDEO SIGNAL PROCESS II BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

ANALOG VIDEO I/F BLOCK DIAGRAM

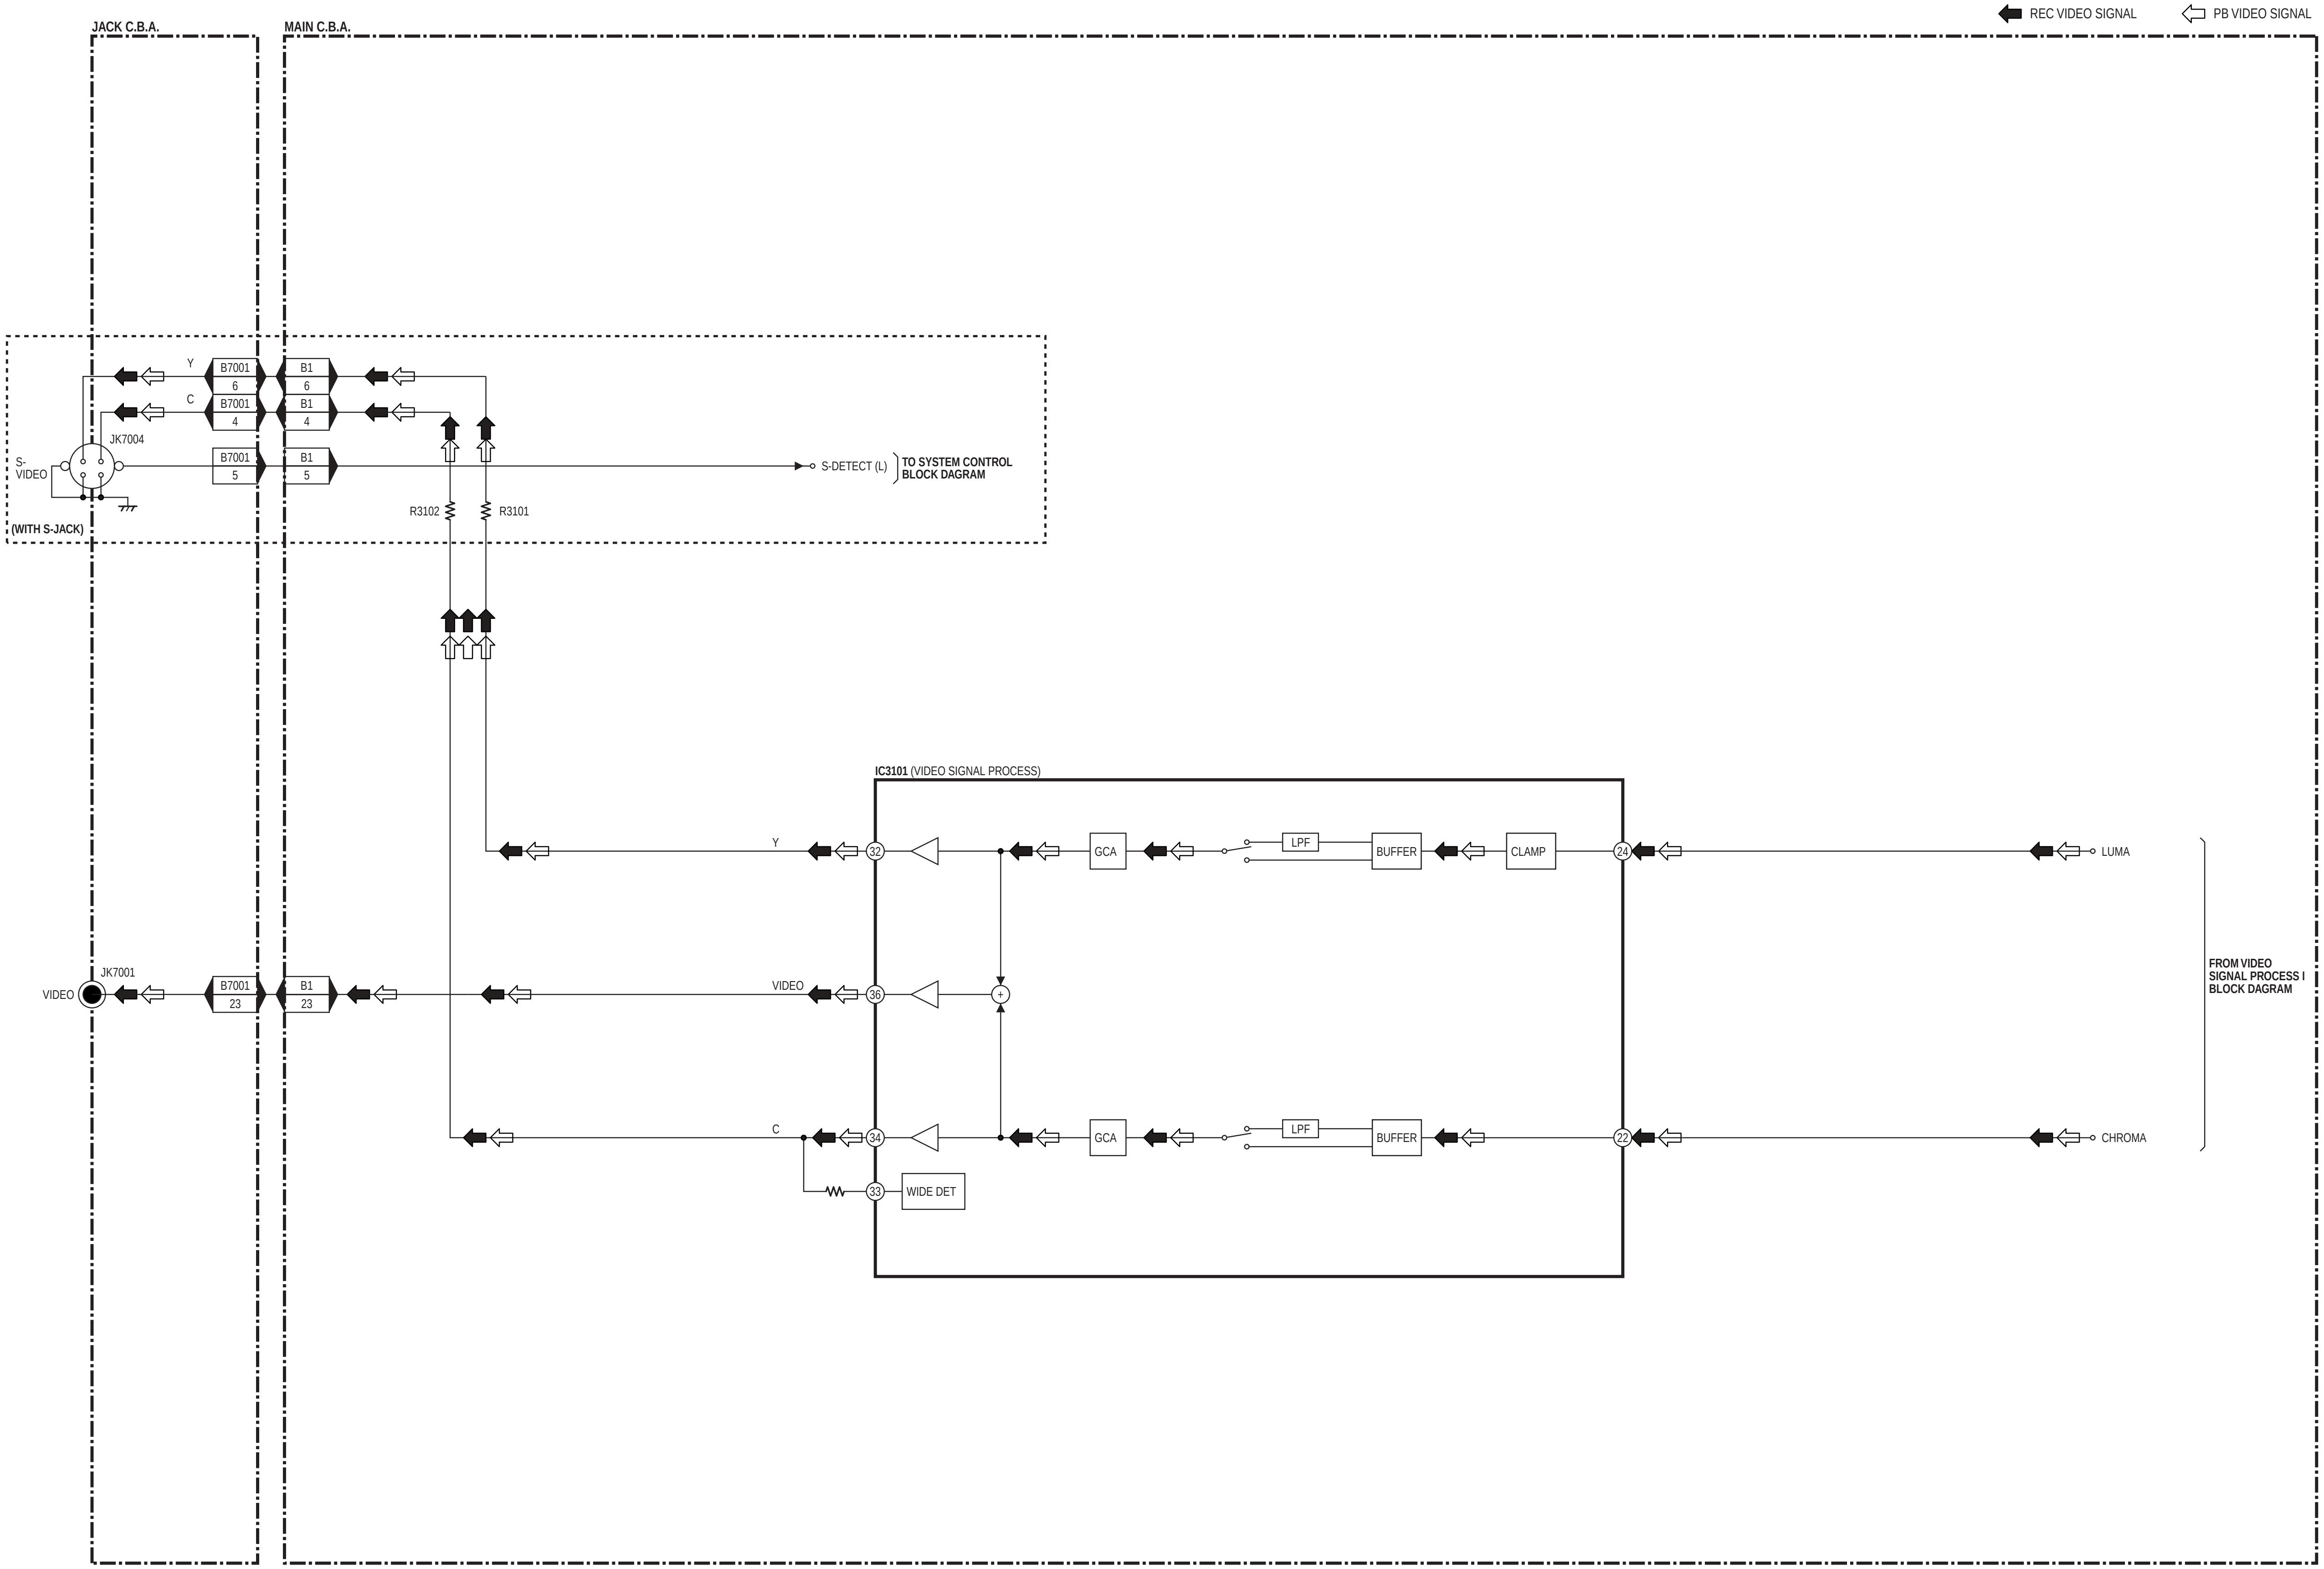
REC VIDEO SIGNAL
PB VIDEO SIGNAL
JACK C.B.A.
MAIN C.B.A.
Y
C
B7001
6
4
5
23
B1
JK7004
S-
VIDEO
(WITH S-JACK)
S-DETECT (L)
TO SYSTEM CONTROL
BLOCK DAGRAM
R3102
R3101
IC3101 (VIDEO SIGNAL PROCESS)
Y
VIDEO
C
32
36
34
33
24
22
GCA
LPF
BUFFER
CLAMP
WIDE DET
+
LUMA
CHROMA
FROM VIDEO
SIGNAL PROCESS I
BLOCK DAGRAM
JK7001
VIDEO

ANALOG VIDEO I/F BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

AUDIO SIGNAL PROCESS BLOCK DIAGRAM

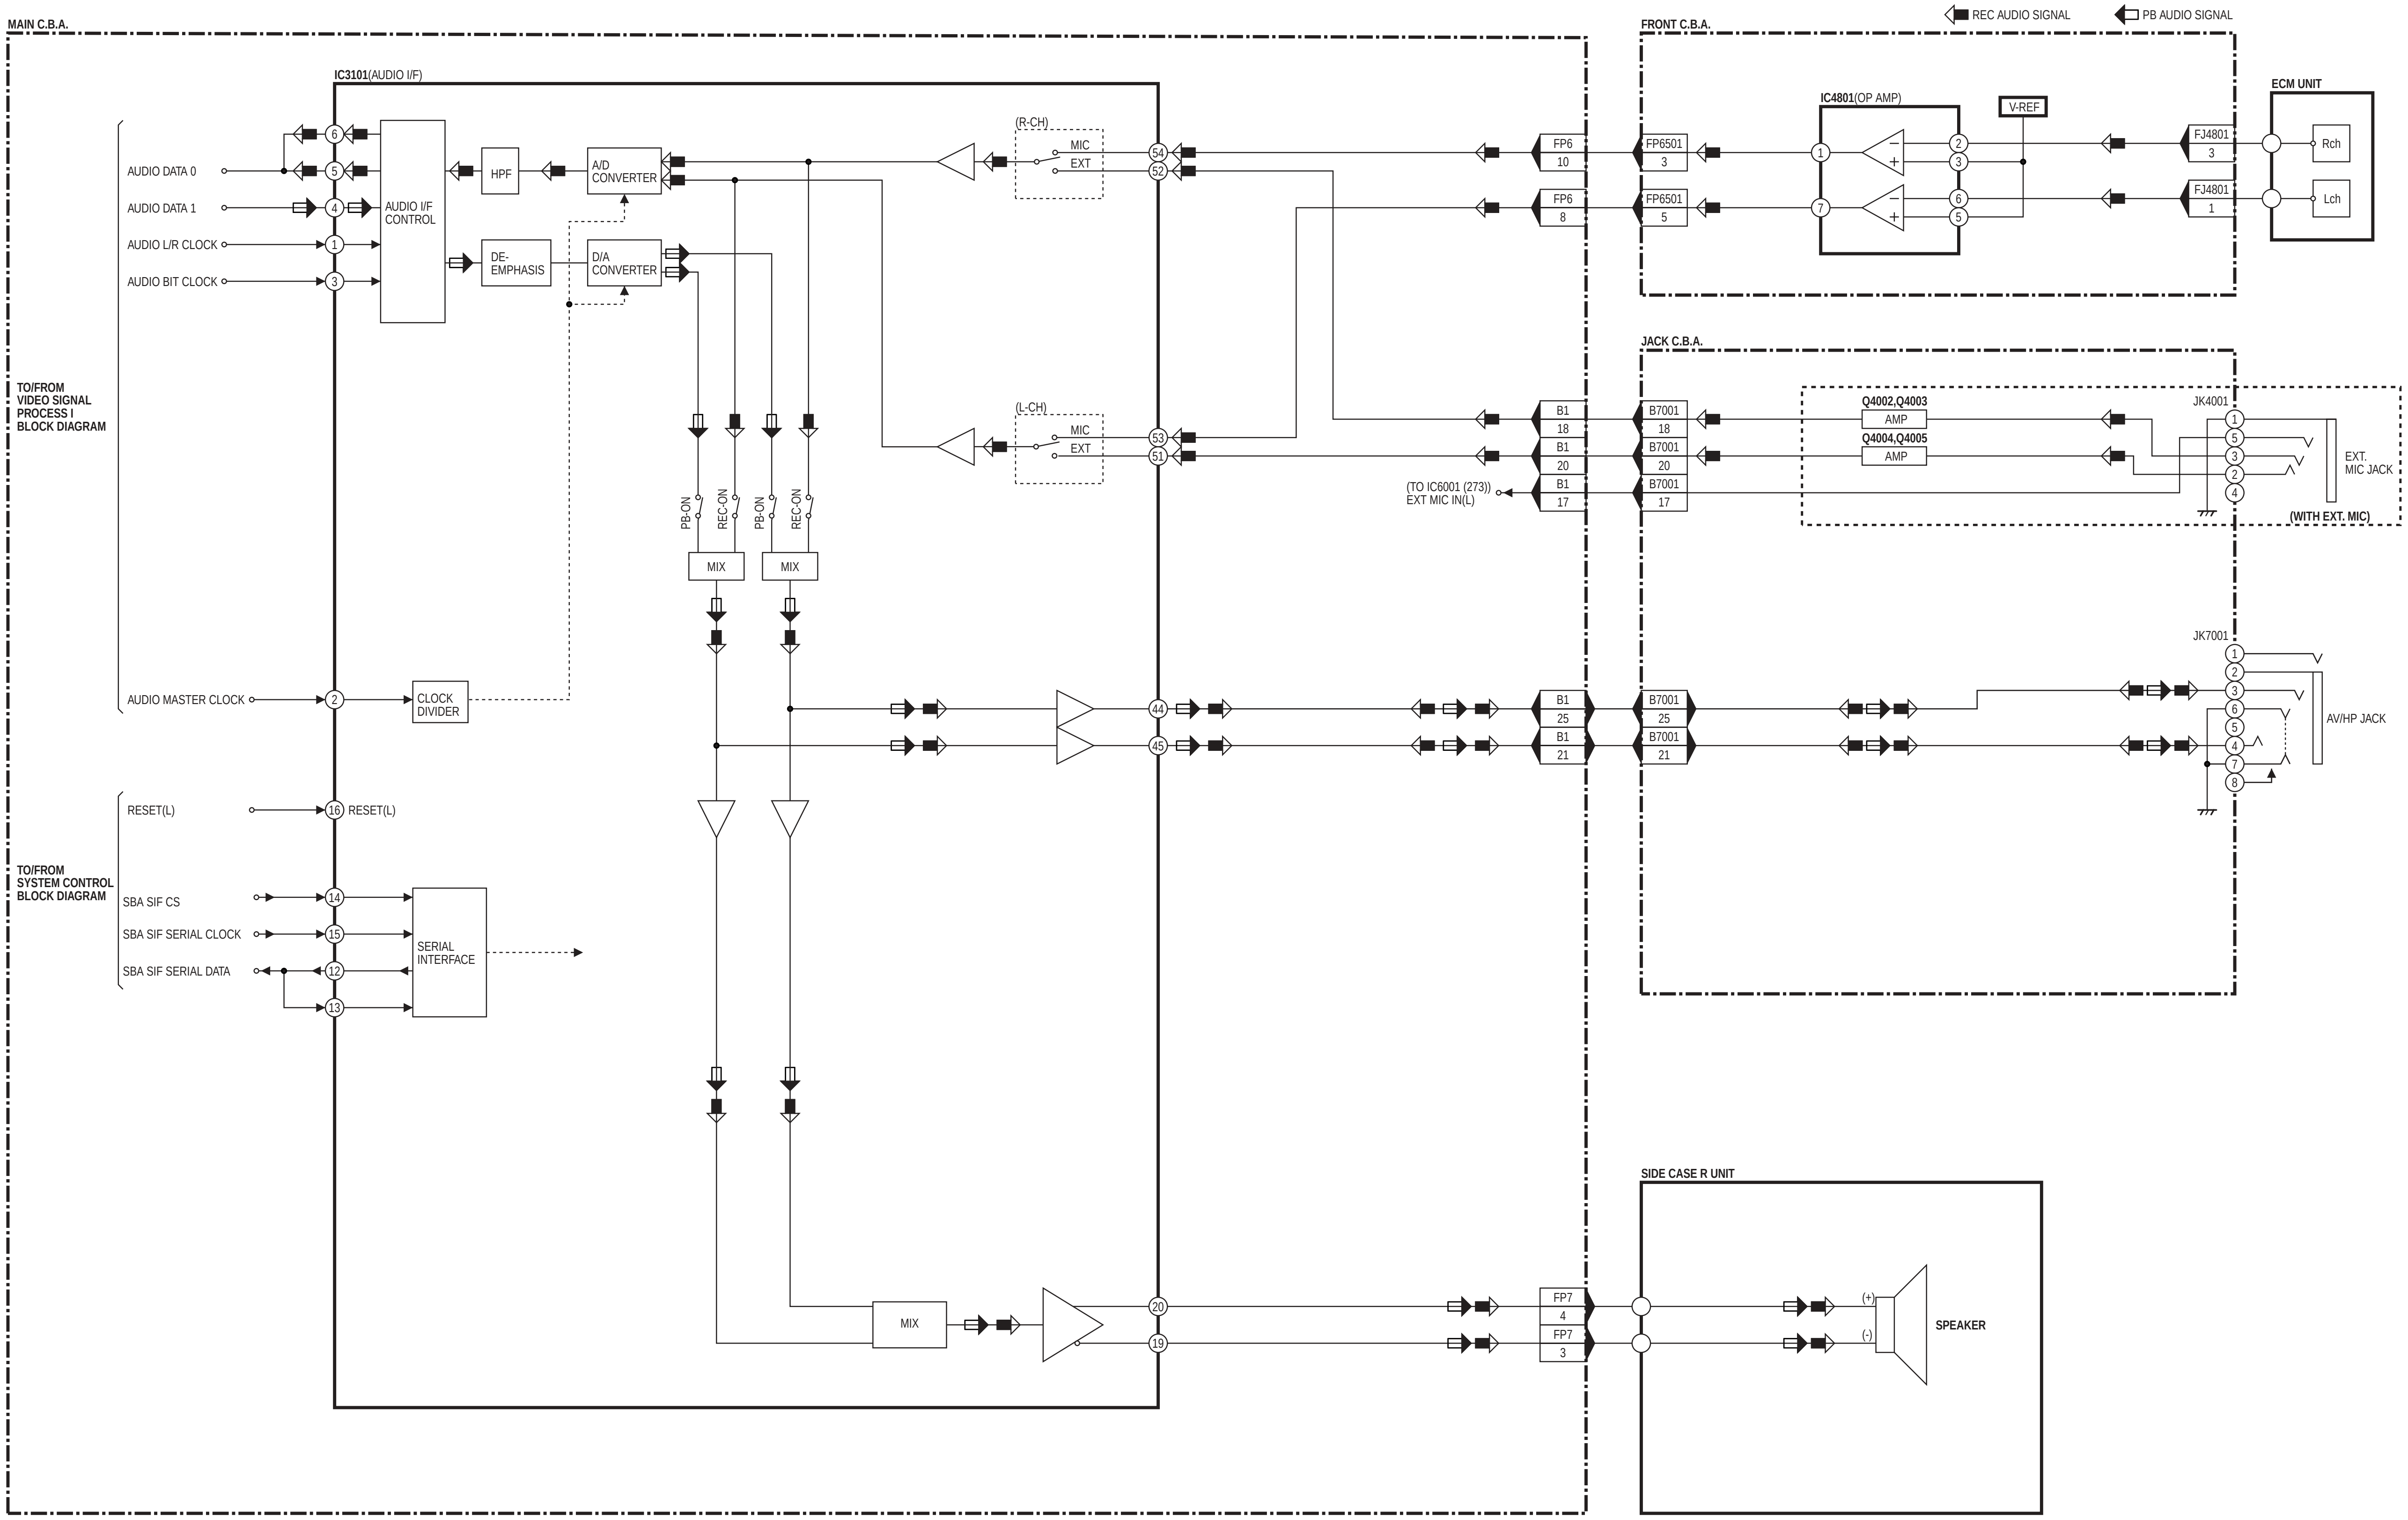
REC AUDIO SIGNAL
PB AUDIO SIGNAL
MAIN C.B.A.
IC3101(AUDIO I/F)
FRONT C.B.A.
IC4801(OP AMP)
V-REF
ECM UNIT
FJ4801
Rch
Lch
FP6
FP6501
AUDIO DATA 0
AUDIO DATA 1
AUDIO L/R CLOCK
AUDIO BIT CLOCK
AUDIO I/F CONTROL
HPF
A/D CONVERTER
DE-EMPHASIS
D/A CONVERTER
(R-CH)
MIC
EXT
(L-CH)
TO/FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
JACK C.B.A.
B1
B7001
Q4002,Q4003
AMP
Q4004,Q4005
JK4001
EXT. MIC JACK
(WITH EXT. MIC)
(TO IC6001 (273)) EXT MIC IN(L)
PB-ON
REC-ON
MIX
JK7001
AV/HP JACK
AUDIO MASTER CLOCK
CLOCK DIVIDER
RESET(L)
TO/FROM SYSTEM CONTROL BLOCK DIAGRAM
SBA SIF CS
SBA SIF SERIAL CLOCK
SBA SIF SERIAL DATA
SERIAL INTERFACE
SIDE CASE R UNIT
FP7
(+)
(-)
SPEAKER

AUDIO SIGNAL PROCESS BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

SYSTEM CONTROL BLOCK DIAGRAM

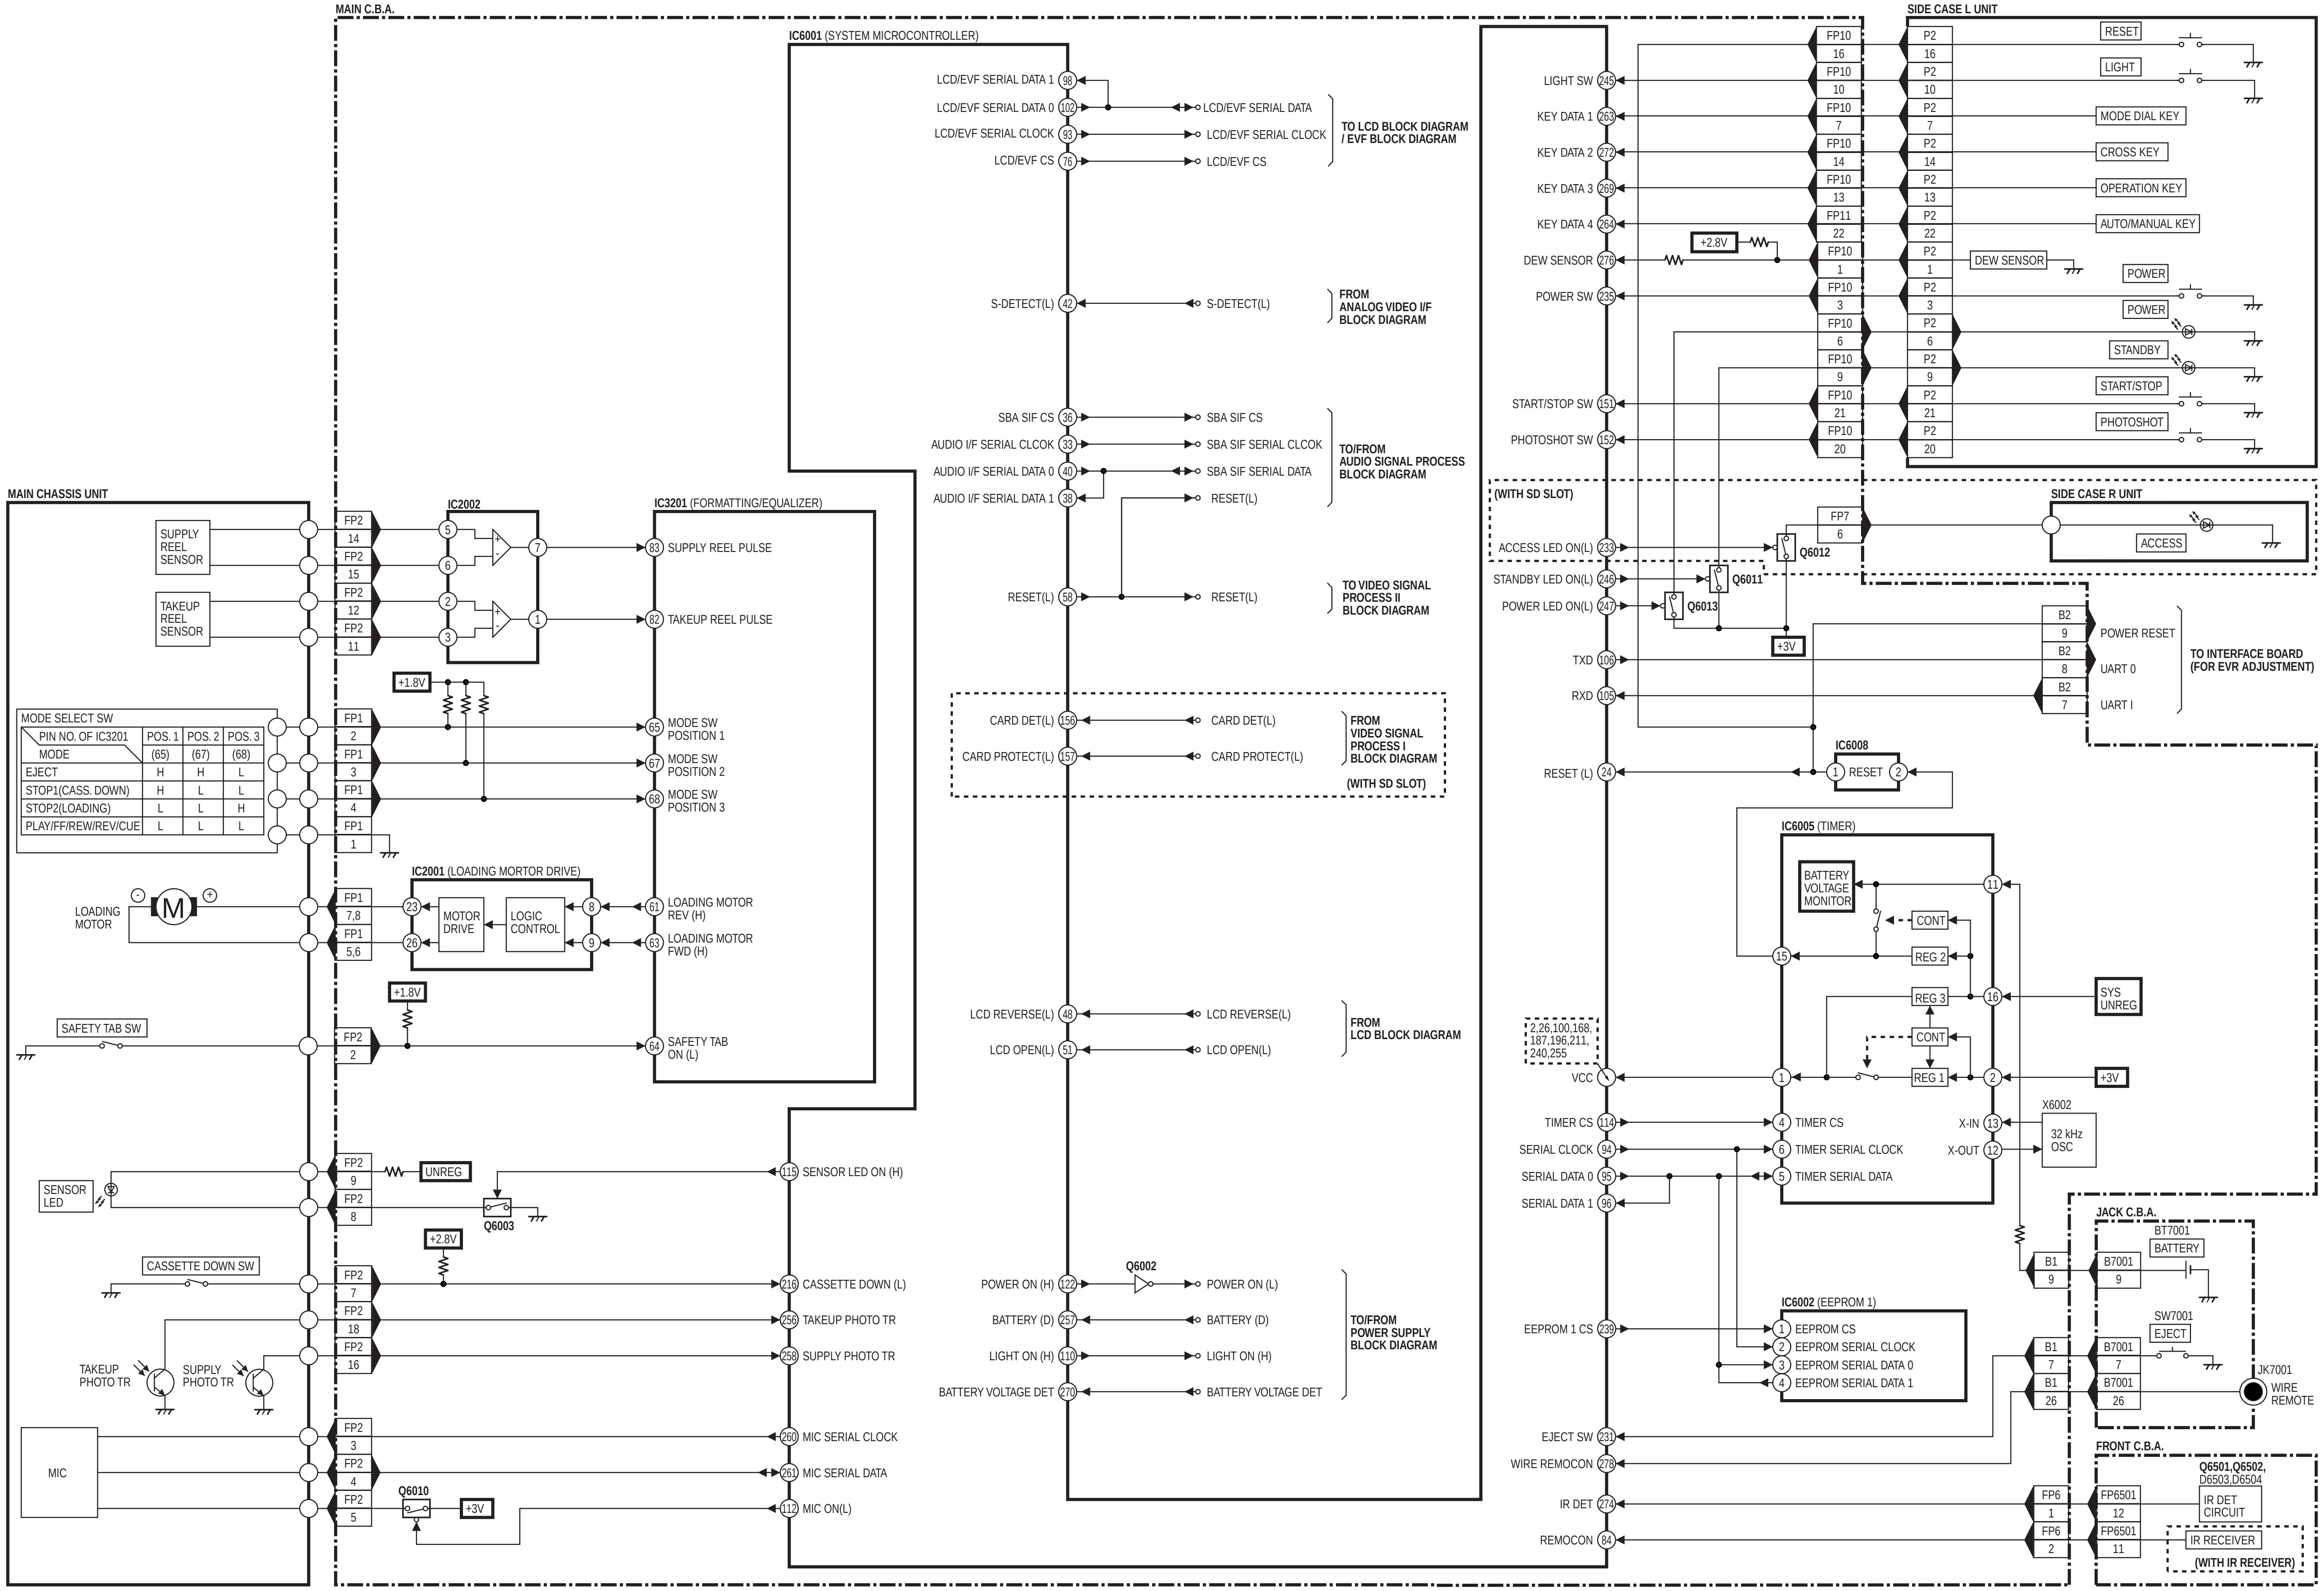
MAIN C.B.A.
MAIN CHASSIS UNIT
SIDE CASE L UNIT
SIDE CASE R UNIT
(WITH SD SLOT)
JACK C.B.A.
FRONT C.B.A.
IC6001 (SYSTEM MICROCONTROLLER)
LCD/EVF SERIAL DATA 1 98
LCD/EVF SERIAL DATA 0 102
LCD/EVF SERIAL CLOCK 93
LCD/EVF CS 76
LCD/EVF SERIAL DATA
LCD/EVF SERIAL CLOCK
LCD/EVF CS
TO LCD BLOCK DIAGRAM / EVF BLOCK DIAGRAM
S-DETECT(L) 42
S-DETECT(L)
FROM ANALOG VIDEO I/F BLOCK DIAGRAM
SBA SIF CS 36
AUDIO I/F SERIAL CLCOK 33
AUDIO I/F SERIAL DATA 0 40
AUDIO I/F SERIAL DATA 1 38
SBA SIF CS
SBA SIF SERIAL CLCOK
SBA SIF SERIAL DATA
RESET(L)
TO/FROM AUDIO SIGNAL PROCESS BLOCK DIAGRAM
RESET(L) 58
RESET(L)
TO VIDEO SIGNAL PROCESS II BLOCK DIAGRAM
CARD DET(L) 156
CARD PROTECT(L) 157
CARD DET(L)
CARD PROTECT(L)
FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
(WITH SD SLOT)
LCD REVERSE(L) 48
LCD OPEN(L) 51
LCD REVERSE(L)
LCD OPEN(L)
FROM LCD BLOCK DIAGRAM
POWER ON (H) 122
BATTERY (D) 257
LIGHT ON (H) 110
BATTERY VOLTAGE DET 270
Q6002
POWER ON (L)
BATTERY (D)
LIGHT ON (H)
BATTERY VOLTAGE DET
TO/FROM POWER SUPPLY BLOCK DIAGRAM
SUPPLY REEL SENSOR
TAKEUP REEL SENSOR
FP2 14
FP2 15
FP2 12
FP2 11
IC2002
5 6 7 2 3 1
IC3201 (FORMATTING/EQUALIZER)
83 SUPPLY REEL PULSE
82 TAKEUP REEL PULSE
+1.8V
FP1 2
FP1 3
FP1 4
FP1 1
65 MODE SW POSITION 1
67 MODE SW POSITION 2
68 MODE SW POSITION 3
MODE SELECT SW
LOADING MOTOR
M
- +
FP1 7,8
FP1 5,6
IC2001 (LOADING MORTOR DRIVE)
23 26 MOTOR DRIVE
LOGIC CONTROL 8 9
61 LOADING MOTOR REV (H)
63 LOADING MOTOR FWD (H)
+1.8V
SAFETY TAB SW
FP2 2
64 SAFETY TAB ON (L)
SENSOR LED
FP2 9
FP2 8
UNREG
Q6003
115 SENSOR LED ON (H)
CASSETTE DOWN SW
+2.8V
FP2 7
FP2 18
FP2 16
TAKEUP PHOTO TR
SUPPLY PHOTO TR
216 CASSETTE DOWN (L)
256 TAKEUP PHOTO TR
258 SUPPLY PHOTO TR
MIC
FP2 3
FP2 4
FP2 5
Q6010
+3V
260 MIC SERIAL CLOCK
261 MIC SERIAL DATA
112 MIC ON(L)
LIGHT SW 245
KEY DATA 1 263
KEY DATA 2 272
KEY DATA 3 269
KEY DATA 4 264
DEW SENSOR 276
POWER SW 235
START/STOP SW 151
PHOTOSHOT SW 152
+2.8V
FP10 16
FP10 10
FP10 7
FP10 14
FP10 13
FP11 22
FP10 1
FP10 3
FP10 6
FP10 9
FP10 21
FP10 20
P2 16
P2 10
P2 7
P2 14
P2 13
P2 22
P2 1
P2 3
P2 6
P2 9
P2 21
P2 20
RESET
LIGHT
MODE DIAL KEY
CROSS KEY
OPERATION KEY
AUTO/MANUAL KEY
DEW SENSOR
POWER
POWER
STANDBY
START/STOP
PHOTOSHOT
FP7 6
ACCESS
ACCESS LED ON(L) 233
STANDBY LED ON(L) 246
POWER LED ON(L) 247
Q6012
Q6011
Q6013
+3V
B2 9
B2 8
B2 7
POWER RESET
UART 0
UART I
TO INTERFACE BOARD (FOR EVR ADJUSTMENT)
TXD 106
RXD 105
IC6008
RESET (L) 24
1 RESET 2
IC6005 (TIMER)
BATTERY VOLTAGE MONITOR
CONT
REG 2
REG 3
CONT
REG 1
11 15 16 1 2
SYS UNREG
+3V
2,26,100,168, 187,196,211, 240,255
VCC
TIMER CS 114
SERIAL CLOCK 94
SERIAL DATA 0 95
SERIAL DATA 1 96
4 TIMER CS
6 TIMER SERIAL CLOCK
5 TIMER SERIAL DATA
X-IN 13
X-OUT 12
X6002
32 kHz OSC
IC6002 (EEPROM 1)
EEPROM 1 CS 239
1 EEPROM CS
2 EEPROM SERIAL CLOCK
3 EEPROM SERIAL DATA 0
4 EEPROM SERIAL DATA 1
B1 9
B1 7
B1 26
B7001 9
B7001 7
B7001 26
BT7001
BATTERY
SW7001
EJECT
JK7001
WIRE REMOTE
EJECT SW 231
WIRE REMOCON 278
IR DET 274
REMOCON 84
FP6 1
FP6 2
FP6501 12
FP6501 11
Q6501,Q6502, D6503,D6504
IR DET CIRCUIT
IR RECEIVER
(WITH IR RECEIVER)

PIN NO. OF IC3201 / MODE	POS. 1 (65)	POS. 2 (67)	POS. 3 (68)
EJECT	H	H	L
STOP1(CASS. DOWN)	H	L	L
STOP2(LOADING)	L	L	H
PLAY/FF/REW/REV/CUE	L	L	L

SYSTEM CONTROL BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

SERVO BLOCK DIAGRAM

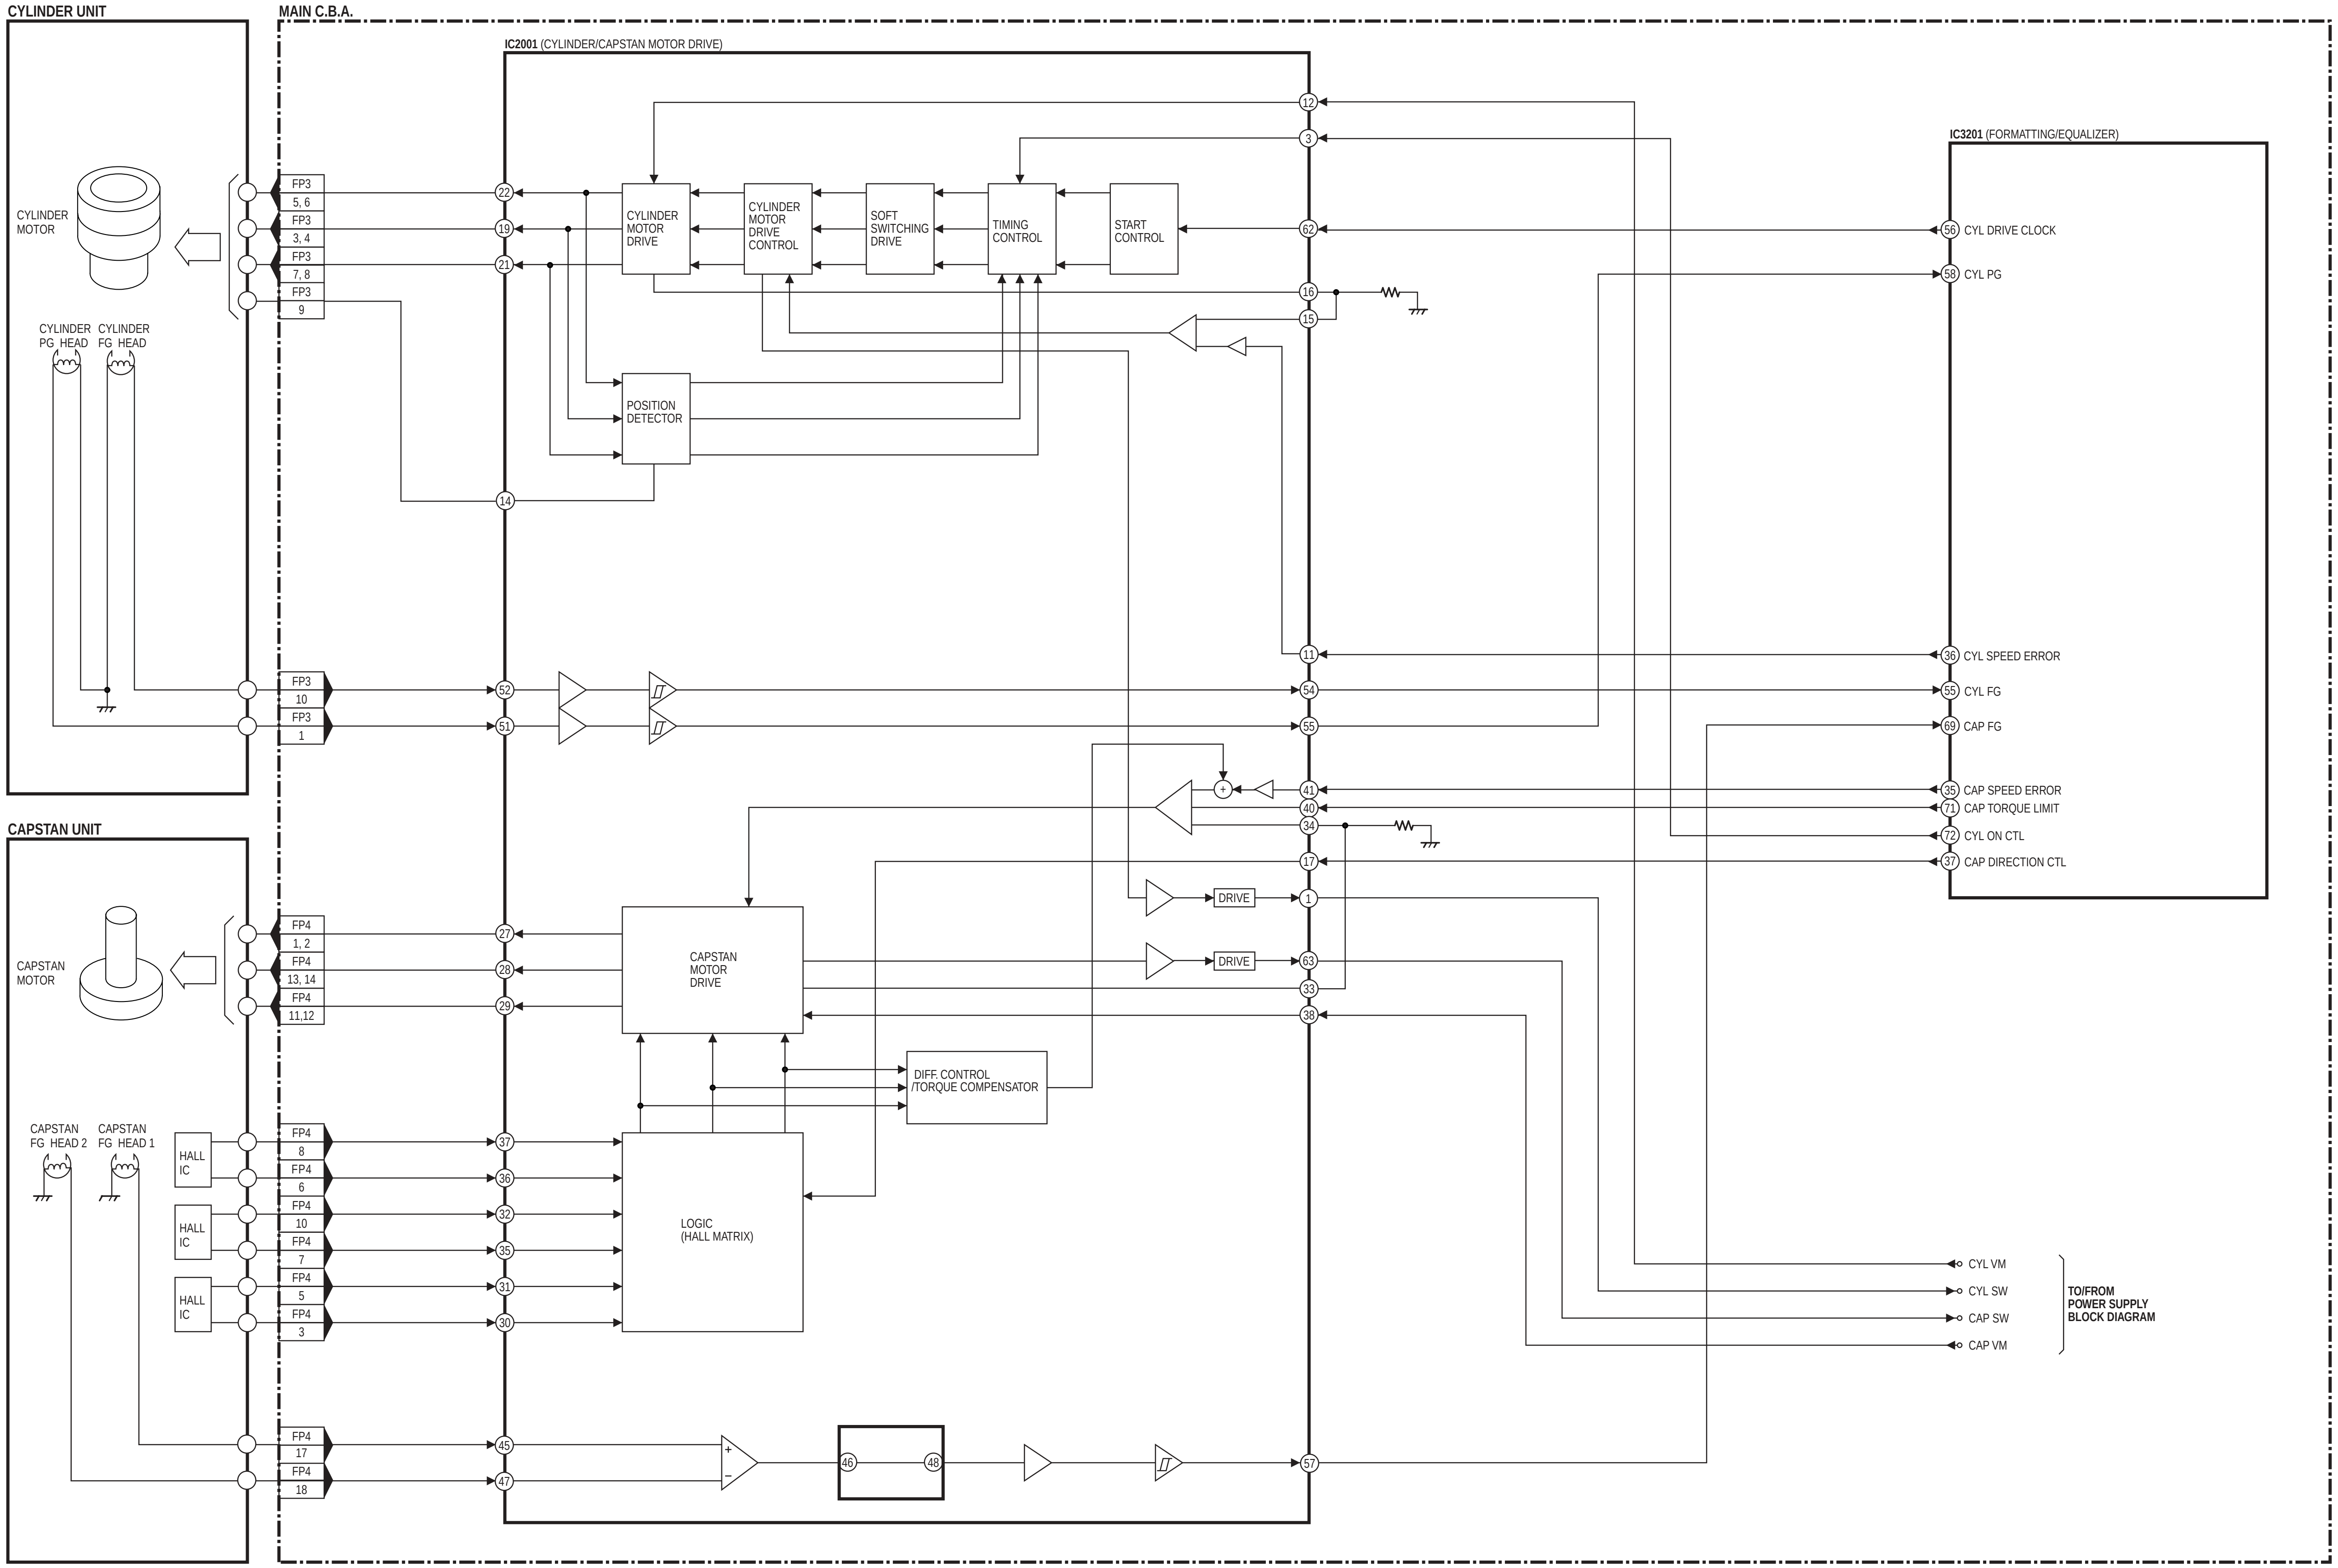
CYLINDER UNIT
MAIN C.B.A.
IC2001 (CYLINDER/CAPSTAN MOTOR DRIVE)
IC3201 (FORMATTING/EQUALIZER)
CYLINDER MOTOR
CYLINDER PG HEAD
CYLINDER FG HEAD
FP3 5, 6
FP3 3, 4
FP3 7, 8
FP3 9
FP3 10
FP3 1
CYLINDER MOTOR DRIVE
CYLINDER MOTOR DRIVE CONTROL
SOFT SWITCHING DRIVE
TIMING CONTROL
START CONTROL
POSITION DETECTOR
CYL DRIVE CLOCK
CYL PG
CYL SPEED ERROR
CYL FG
CAP FG
CAP SPEED ERROR
CAP TORQUE LIMIT
CYL ON CTL
CAP DIRECTION CTL
CAPSTAN UNIT
CAPSTAN MOTOR
FP4 1, 2
FP4 13, 14
FP4 11,12
CAPSTAN MOTOR DRIVE
DRIVE
DRIVE
DIFF. CONTROL /TORQUE COMPENSATOR
CAPSTAN FG HEAD 2
CAPSTAN FG HEAD 1
HALL IC
HALL IC
HALL IC
FP4 8
FP4 6
FP4 10
FP4 7
FP4 5
FP4 3
LOGIC (HALL MATRIX)
CYL VM
CYL SW
CAP SW
CAP VM
TO/FROM POWER SUPPLY BLOCK DIAGRAM
FP4 17
FP4 18
12
3
22
19
21
62
16
15
14
11
52
51
54
55
41
40
34
17
1
27
28
29
63
33
38
37
36
32
35
31
30
45
47
46
48
57
56
58
36
55
69
35
71
72
37

SERVO BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

AF BLOCK DIAGRAM

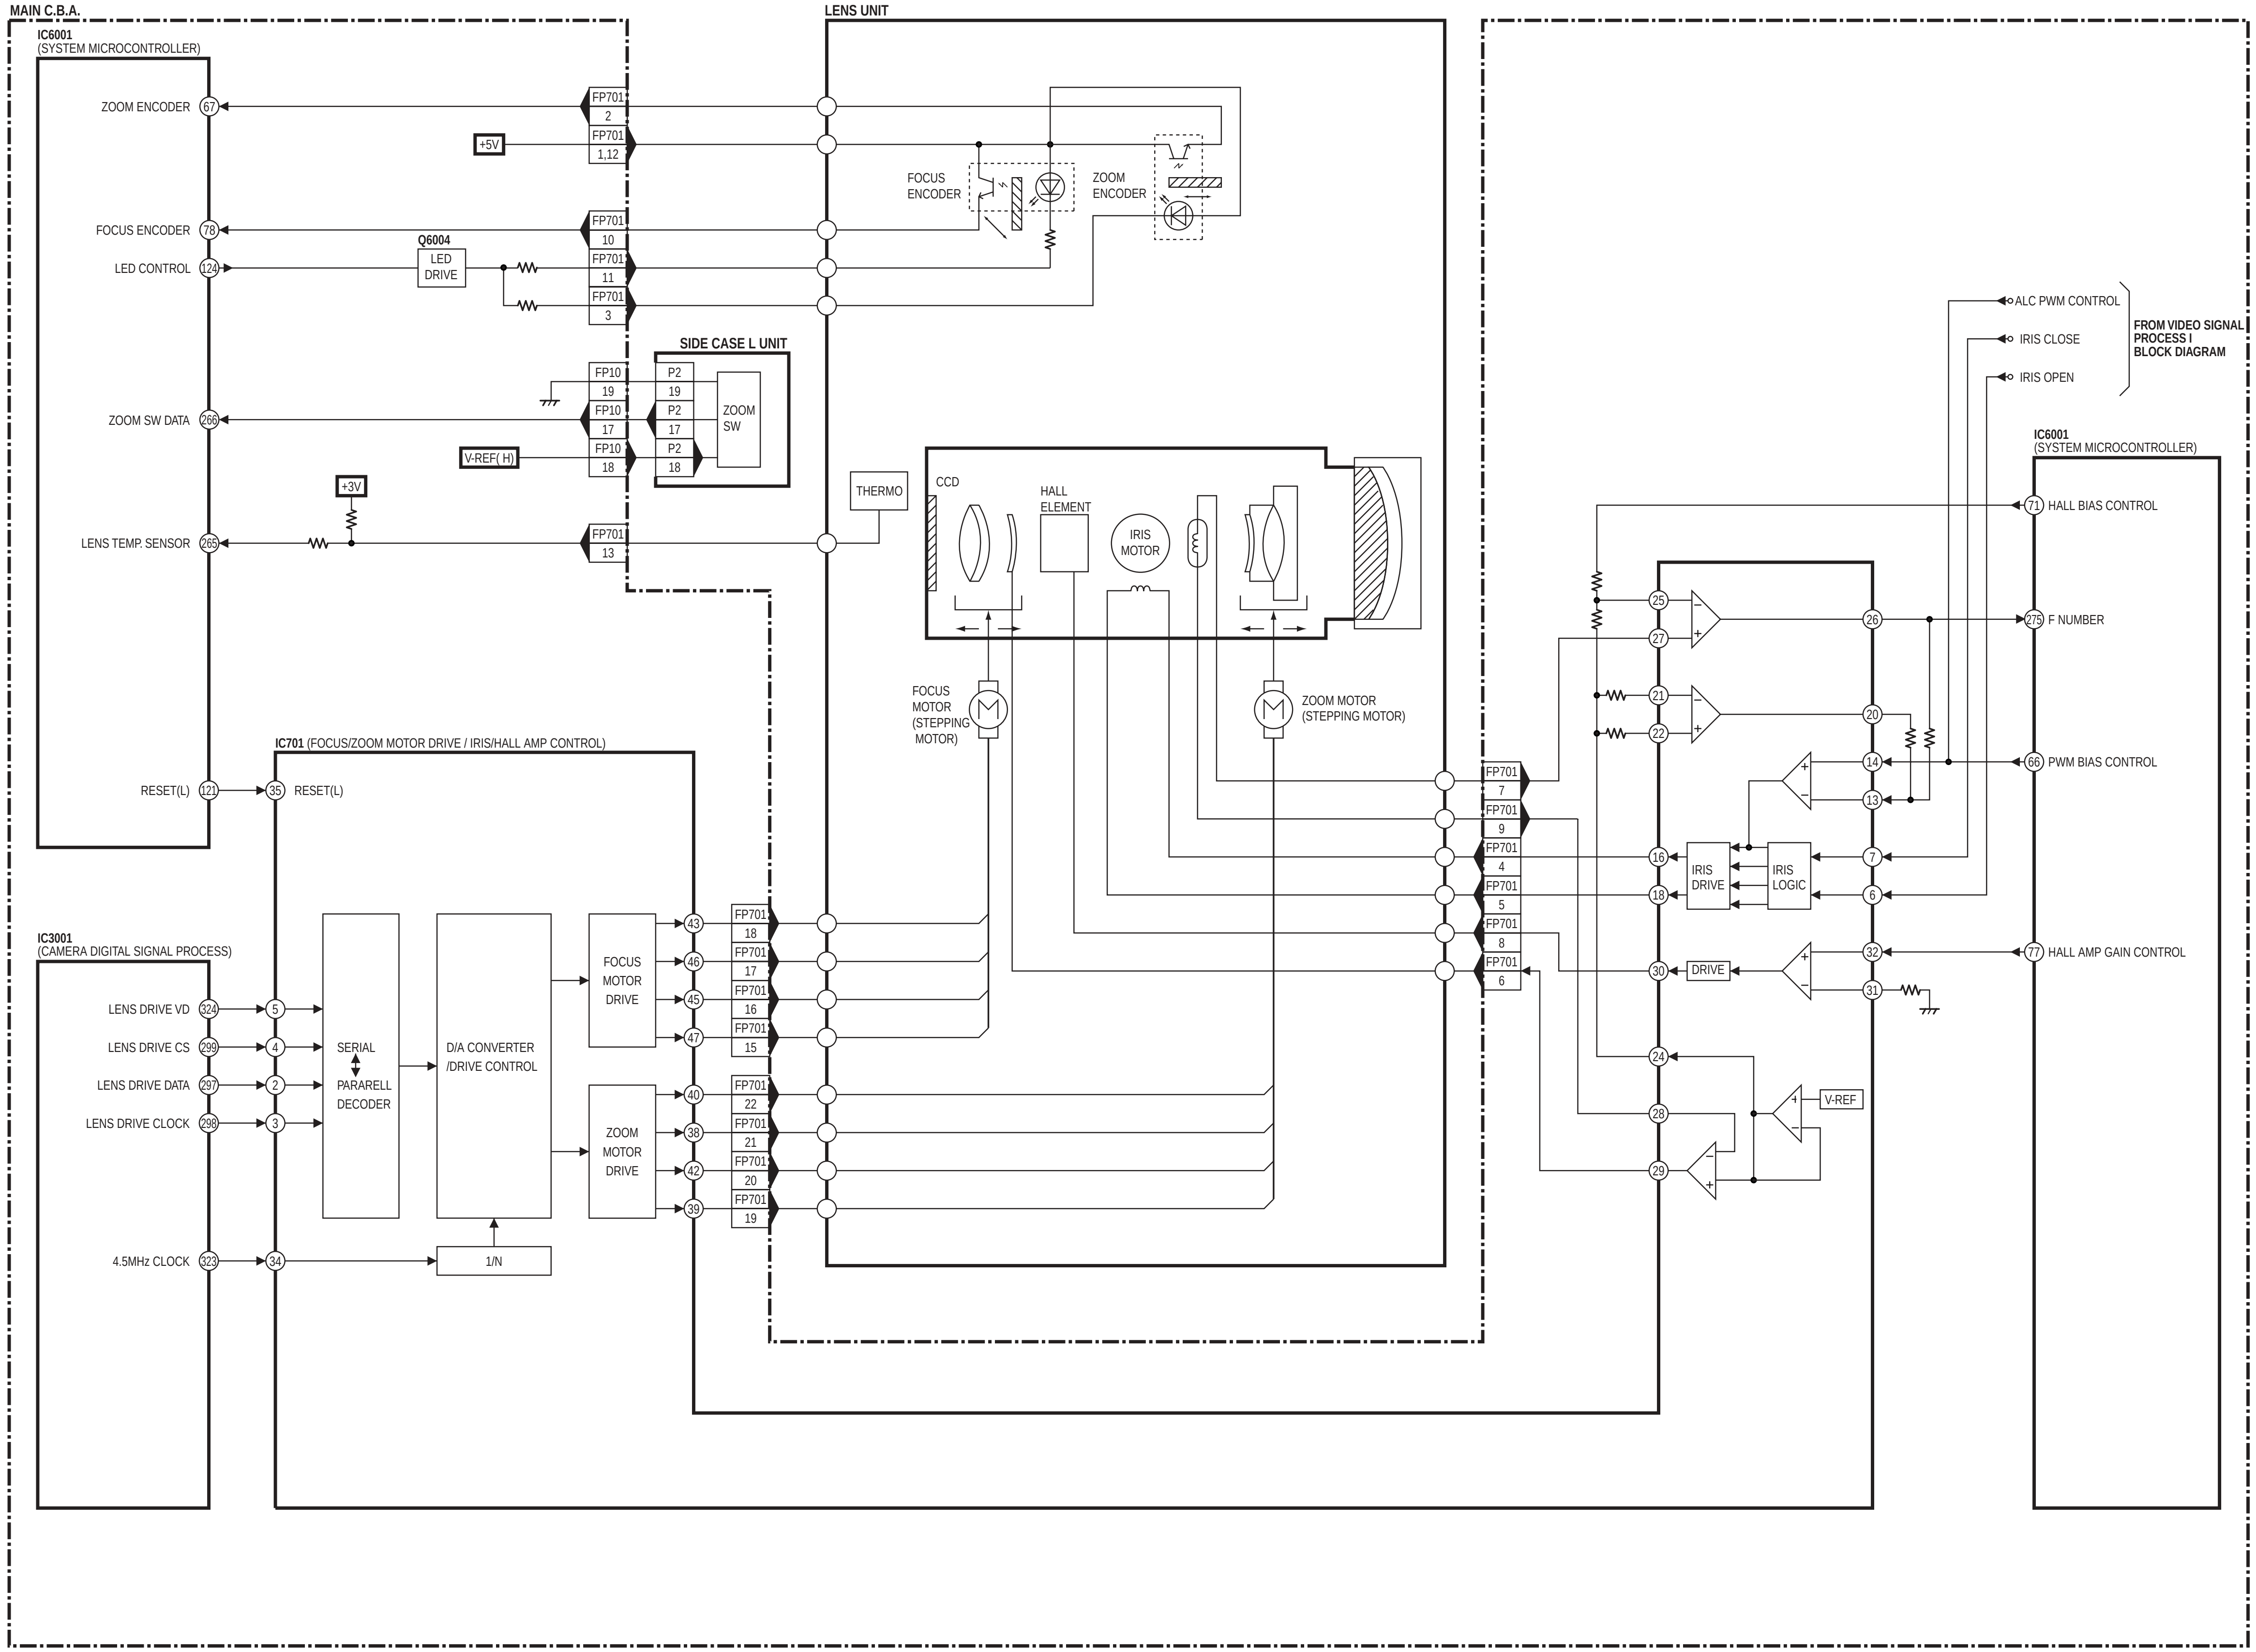
MAIN C.B.A.
IC6001
(SYSTEM MICROCONTROLLER)
ZOOM ENCODER 67
FOCUS ENCODER 78
LED CONTROL 124
ZOOM SW DATA 266
LENS TEMP. SENSOR 265
RESET(L) 121
+5V
Q6004
LED DRIVE
+3V
V-REF(H)
FP701 2
FP701 1,12
FP701 10
FP701 11
FP701 3
FP701 13
FP10 19
FP10 17
FP10 18
SIDE CASE L UNIT
P2 19
P2 17
P2 18
ZOOM SW
LENS UNIT
FOCUS ENCODER
ZOOM ENCODER
THERMO
CCD
HALL ELEMENT
IRIS MOTOR
FOCUS MOTOR (STEPPING MOTOR)
ZOOM MOTOR (STEPPING MOTOR)
IC701 (FOCUS/ZOOM MOTOR DRIVE / IRIS/HALL AMP CONTROL)
35 RESET(L)
IC3001
(CAMERA DIGITAL SIGNAL PROCESS)
LENS DRIVE VD 324
LENS DRIVE CS 299
LENS DRIVE DATA 297
LENS DRIVE CLOCK 298
4.5MHz CLOCK 323
5
4
2
3
34
SERIAL PARARELL DECODER
D/A CONVERTER /DRIVE CONTROL
1/N
FOCUS MOTOR DRIVE
ZOOM MOTOR DRIVE
43 FP701 18
46 FP701 17
45 FP701 16
47 FP701 15
40 FP701 22
38 FP701 21
42 FP701 20
39 FP701 19
FP701 7
FP701 9
FP701 4
FP701 5
FP701 8
FP701 6
ALC PWM CONTROL
IRIS CLOSE
IRIS OPEN
FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
IC6001
(SYSTEM MICROCONTROLLER)
71 HALL BIAS CONTROL
275 F NUMBER
66 PWM BIAS CONTROL
77 HALL AMP GAIN CONTROL
25
27
26
21
22
20
14
13
16
18
7
6
IRIS DRIVE
IRIS LOGIC
30
DRIVE
32
31
24
28
29
V-REF

AF BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

LCD DRIVE BLOCK DIAGRAM

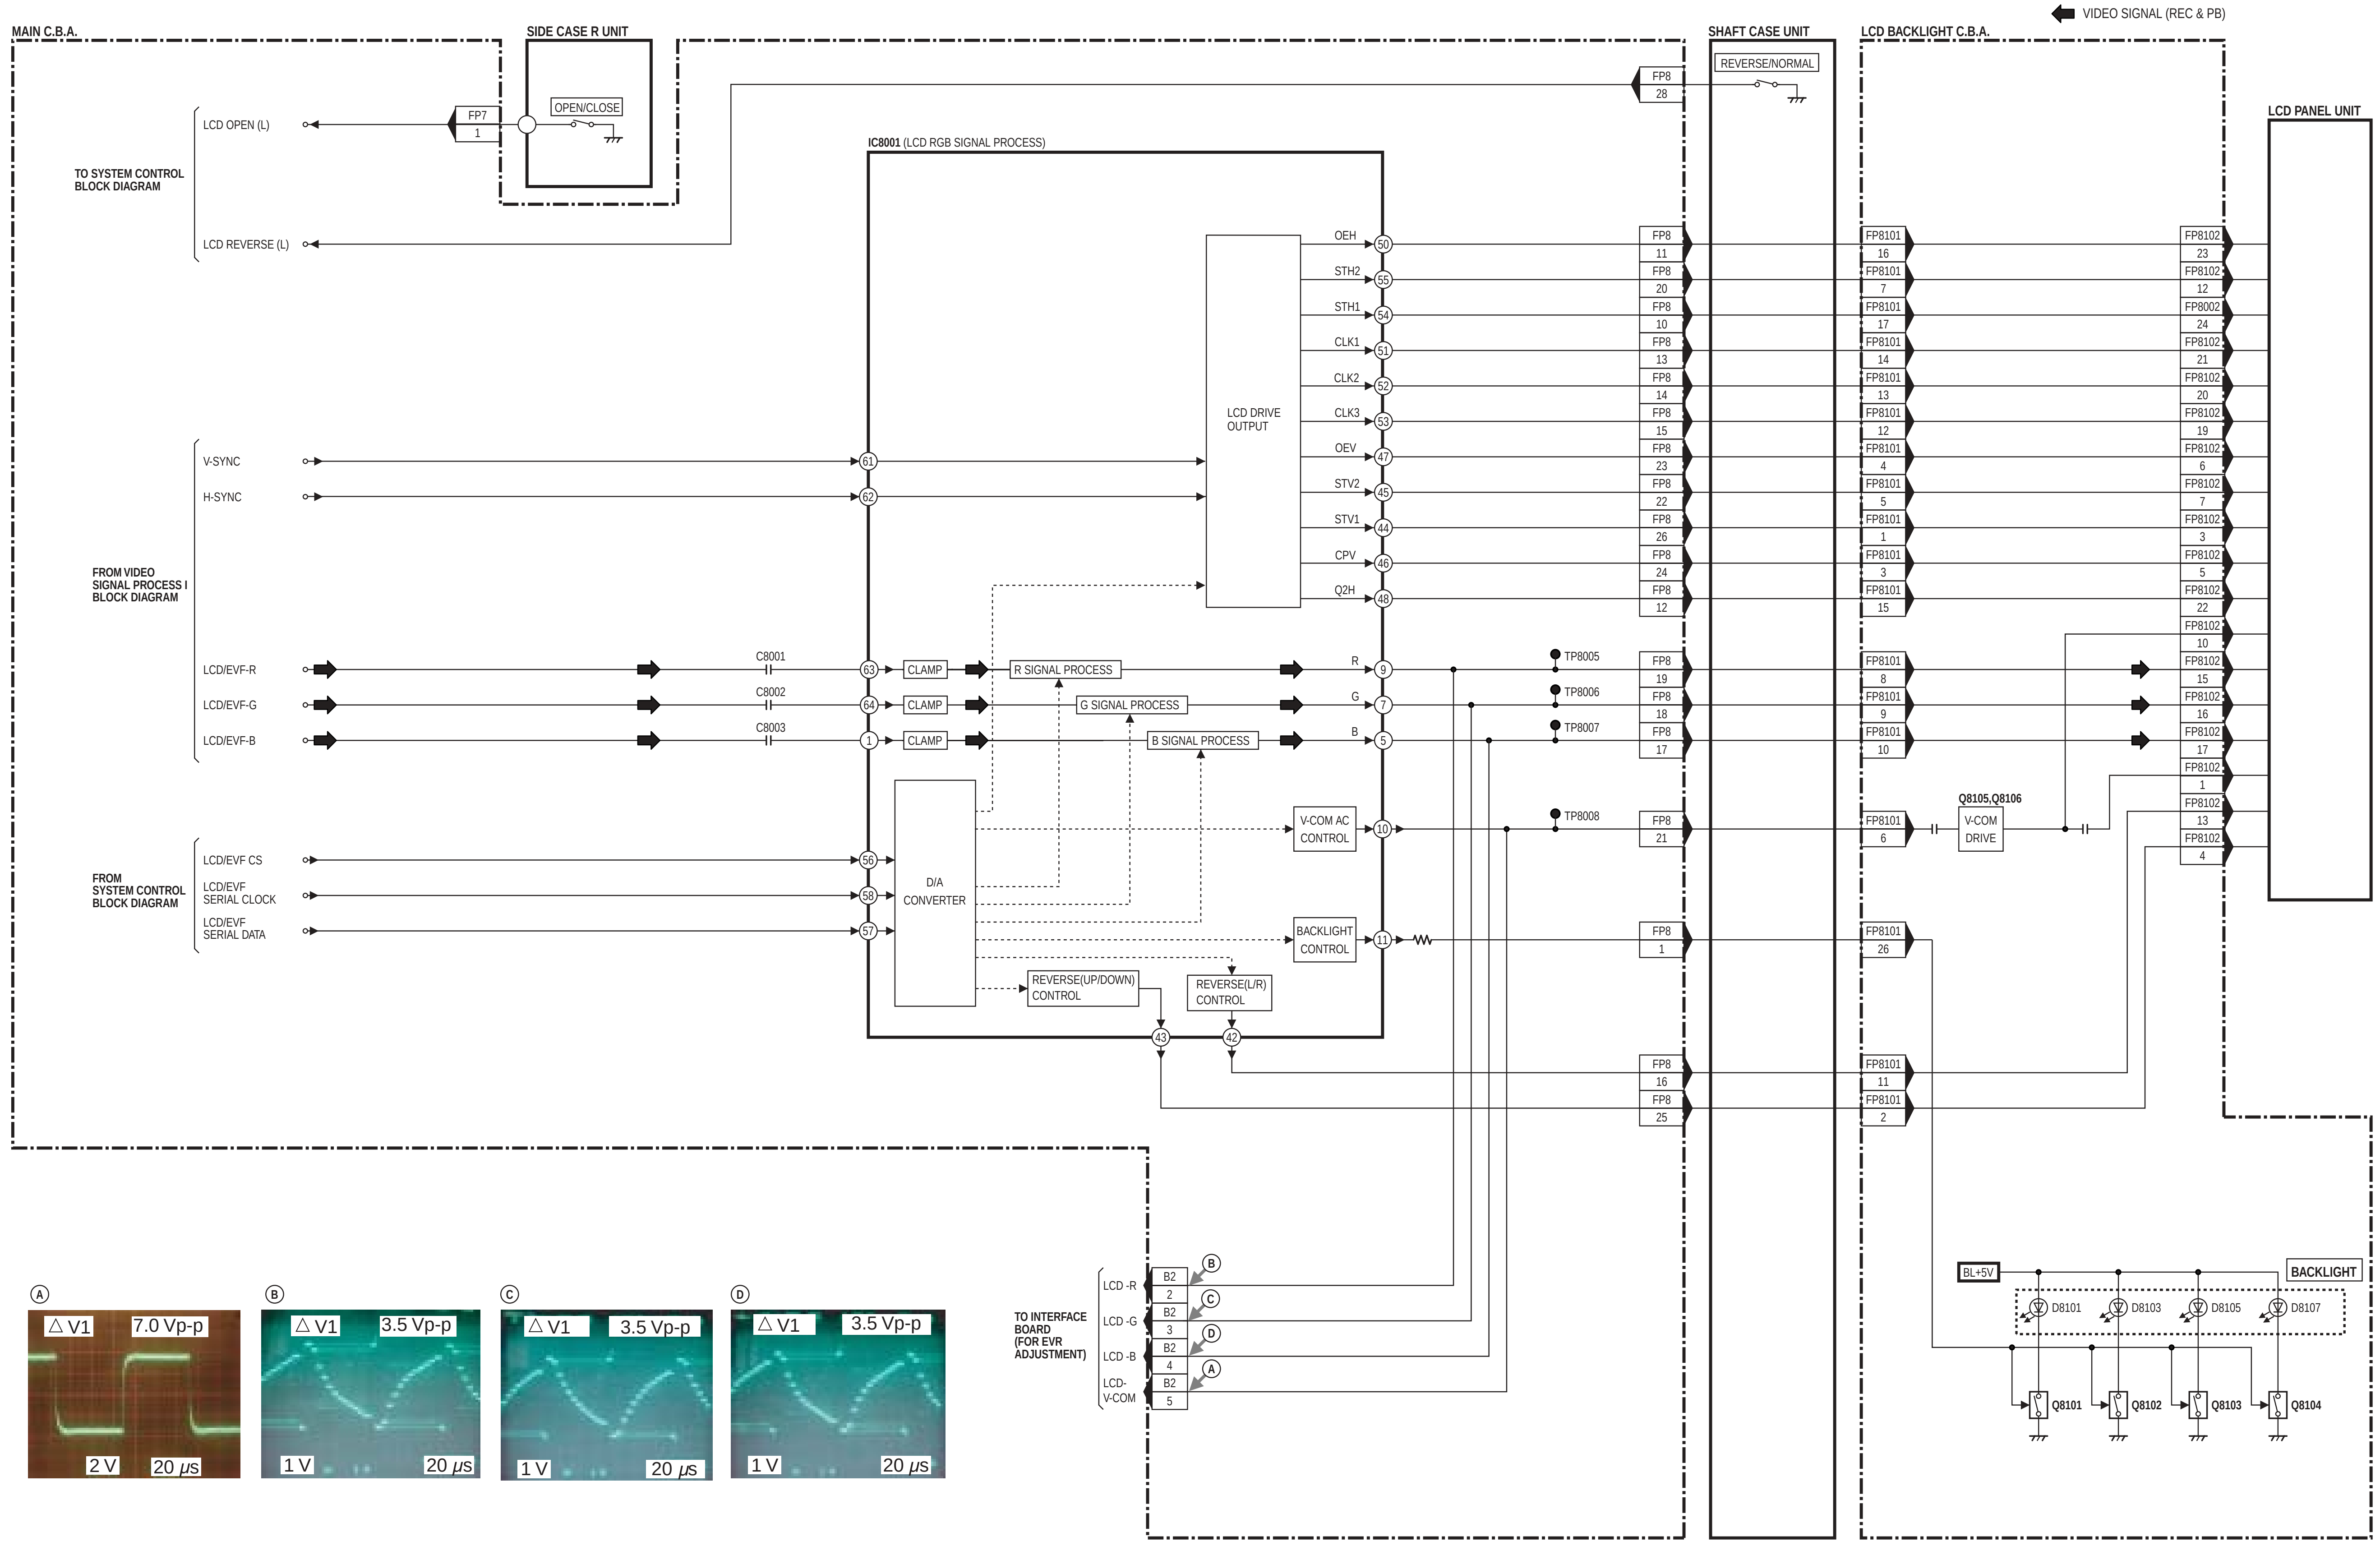

VIDEO SIGNAL (REC & PB)
MAIN C.B.A.
SIDE CASE R UNIT
SHAFT CASE UNIT
LCD BACKLIGHT C.B.A.
LCD PANEL UNIT
OPEN/CLOSE
REVERSE/NORMAL
FP7 1
FP8 28
TO SYSTEM CONTROL BLOCK DIAGRAM
LCD OPEN (L)
LCD REVERSE (L)
IC8001 (LCD RGB SIGNAL PROCESS)
LCD DRIVE OUTPUT
OEH
STH2
STH1
CLK1
CLK2
CLK3
OEV
STV2
STV1
CPV
Q2H
FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
V-SYNC
H-SYNC
LCD/EVF-R
LCD/EVF-G
LCD/EVF-B
C8001
C8002
C8003
CLAMP
R SIGNAL PROCESS
G SIGNAL PROCESS
B SIGNAL PROCESS
R
G
B
TP8005
TP8006
TP8007
TP8008
FROM SYSTEM CONTROL BLOCK DIAGRAM
LCD/EVF CS
LCD/EVF SERIAL CLOCK
LCD/EVF SERIAL DATA
D/A CONVERTER
V-COM AC CONTROL
BACKLIGHT CONTROL
REVERSE(UP/DOWN) CONTROL
REVERSE(L/R) CONTROL
Q8105,Q8106
V-COM DRIVE
FP8
FP8101
FP8102
FP8002
TO INTERFACE BOARD (FOR EVR ADJUSTMENT)
LCD -R
LCD -G
LCD -B
LCD-V-COM
B2
BL+5V
BACKLIGHT
D8101
D8103
D8105
D8107
Q8101
Q8102
Q8103
Q8104
A
△V1 7.0 Vp-p
2 V 20 μs
B
△V1 3.5 Vp-p
1 V 20 μs
C
△V1 3.5 Vp-p
1 V 20 μs
D
△V1 3.5 Vp-p
1 V 20 μs

LCD DRIVE BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

EVF BLOCK DIAGRAM (Models: NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB, NV-GS25GC/GN, NV-GS28GK)

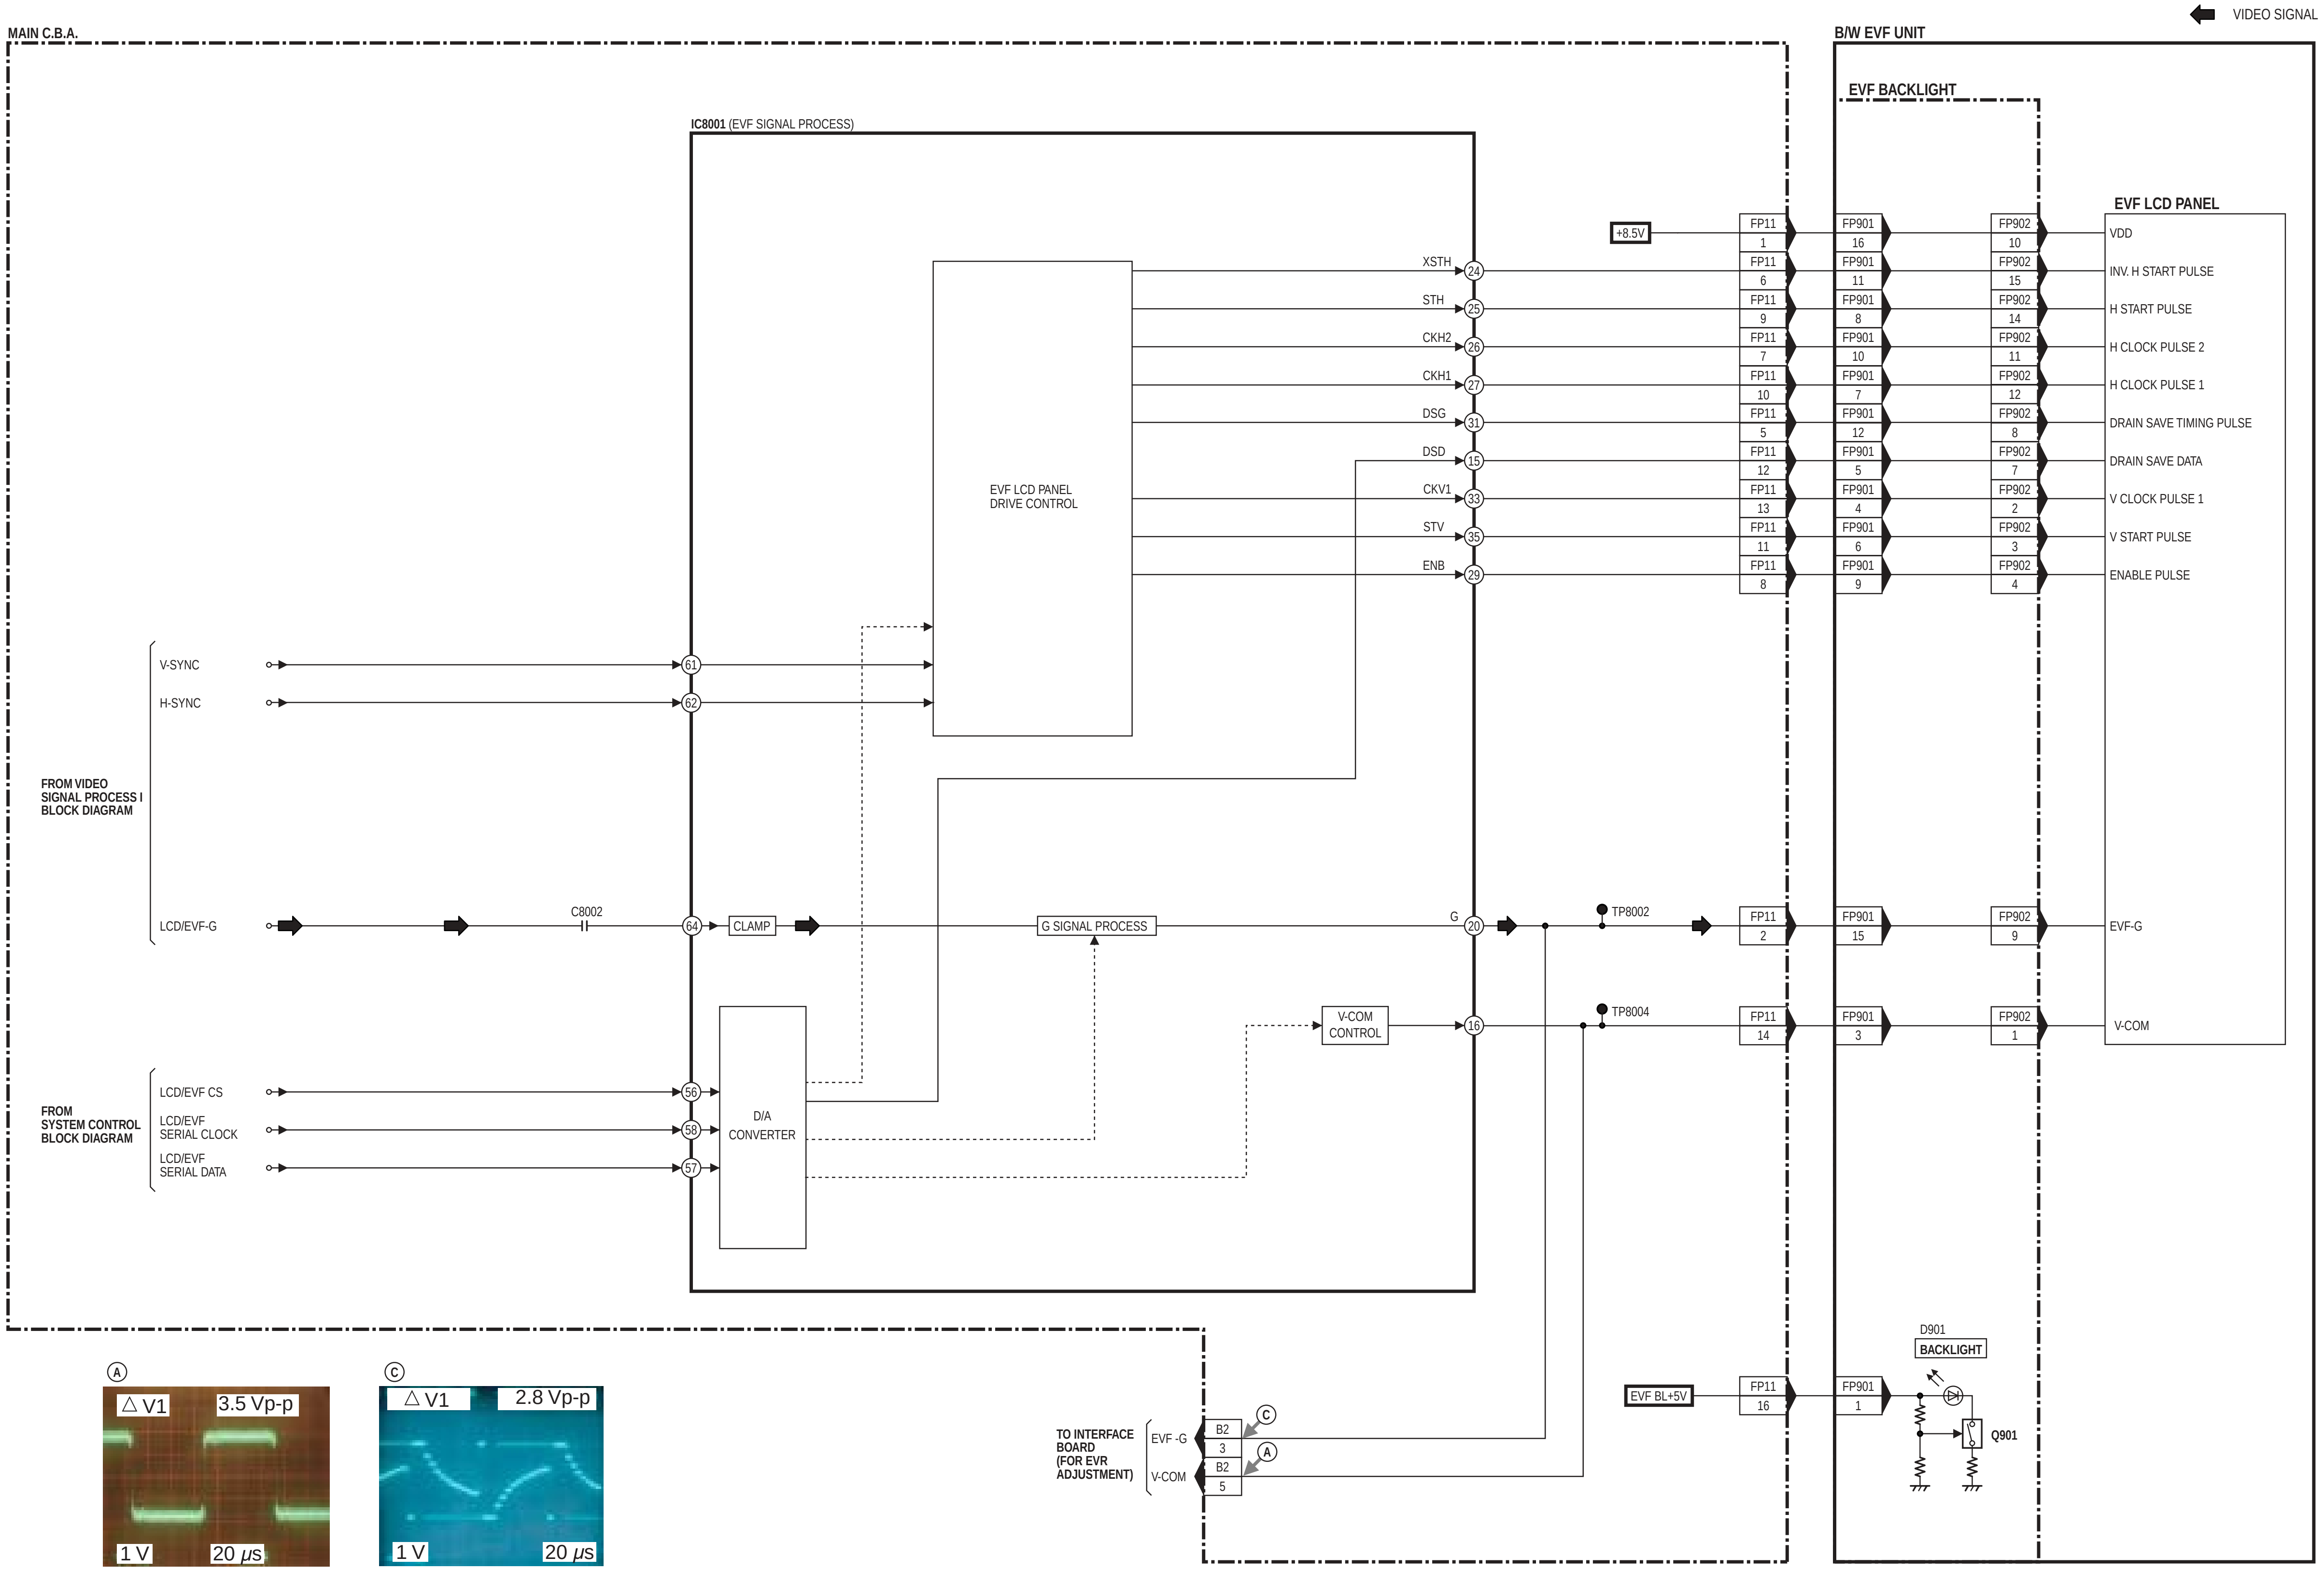
VIDEO SIGNAL
MAIN C.B.A.
B/W EVF UNIT
EVF BACKLIGHT
IC8001 (EVF SIGNAL PROCESS)
EVF LCD PANEL DRIVE CONTROL
XSTH 24
STH 25
CKH2 26
CKH1 27
DSG 31
DSD 15
CKV1 33
STV 35
ENB 29
+8.5V
FP11 1 / FP901 16 / FP902 10
FP11 6 / FP901 11 / FP902 15
FP11 9 / FP901 8 / FP902 14
FP11 7 / FP901 10 / FP902 11
FP11 10 / FP901 7 / FP902 12
FP11 5 / FP901 12 / FP902 8
FP11 12 / FP901 5 / FP902 7
FP11 13 / FP901 4 / FP902 2
FP11 11 / FP901 6 / FP902 3
FP11 8 / FP901 9 / FP902 4
EVF LCD PANEL
VDD
INV. H START PULSE
H START PULSE
H CLOCK PULSE 2
H CLOCK PULSE 1
DRAIN SAVE TIMING PULSE
DRAIN SAVE DATA
V CLOCK PULSE 1
V START PULSE
ENABLE PULSE
FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
V-SYNC 61
H-SYNC 62
LCD/EVF-G
C8002
64 CLAMP
G SIGNAL PROCESS
G 20
TP8002
FP11 2 / FP901 15 / FP902 9
EVF-G
V-COM CONTROL 16
TP8004
FP11 14 / FP901 3 / FP902 1
V-COM
FROM SYSTEM CONTROL BLOCK DIAGRAM
LCD/EVF CS 56
LCD/EVF SERIAL CLOCK 58
LCD/EVF SERIAL DATA 57
D/A CONVERTER
D901
BACKLIGHT
EVF BL+5V
FP11 16 / FP901 1
Q901
TO INTERFACE BOARD (FOR EVR ADJUSTMENT)
EVF -G
V-COM
B2 3
B2 5
C
A
A
△V1 3.5 Vp-p
1 V 20 μs
C
△V1 2.8 Vp-p
1 V 20 μs

EVF BLOCK DIAGRAM (Models: NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK)

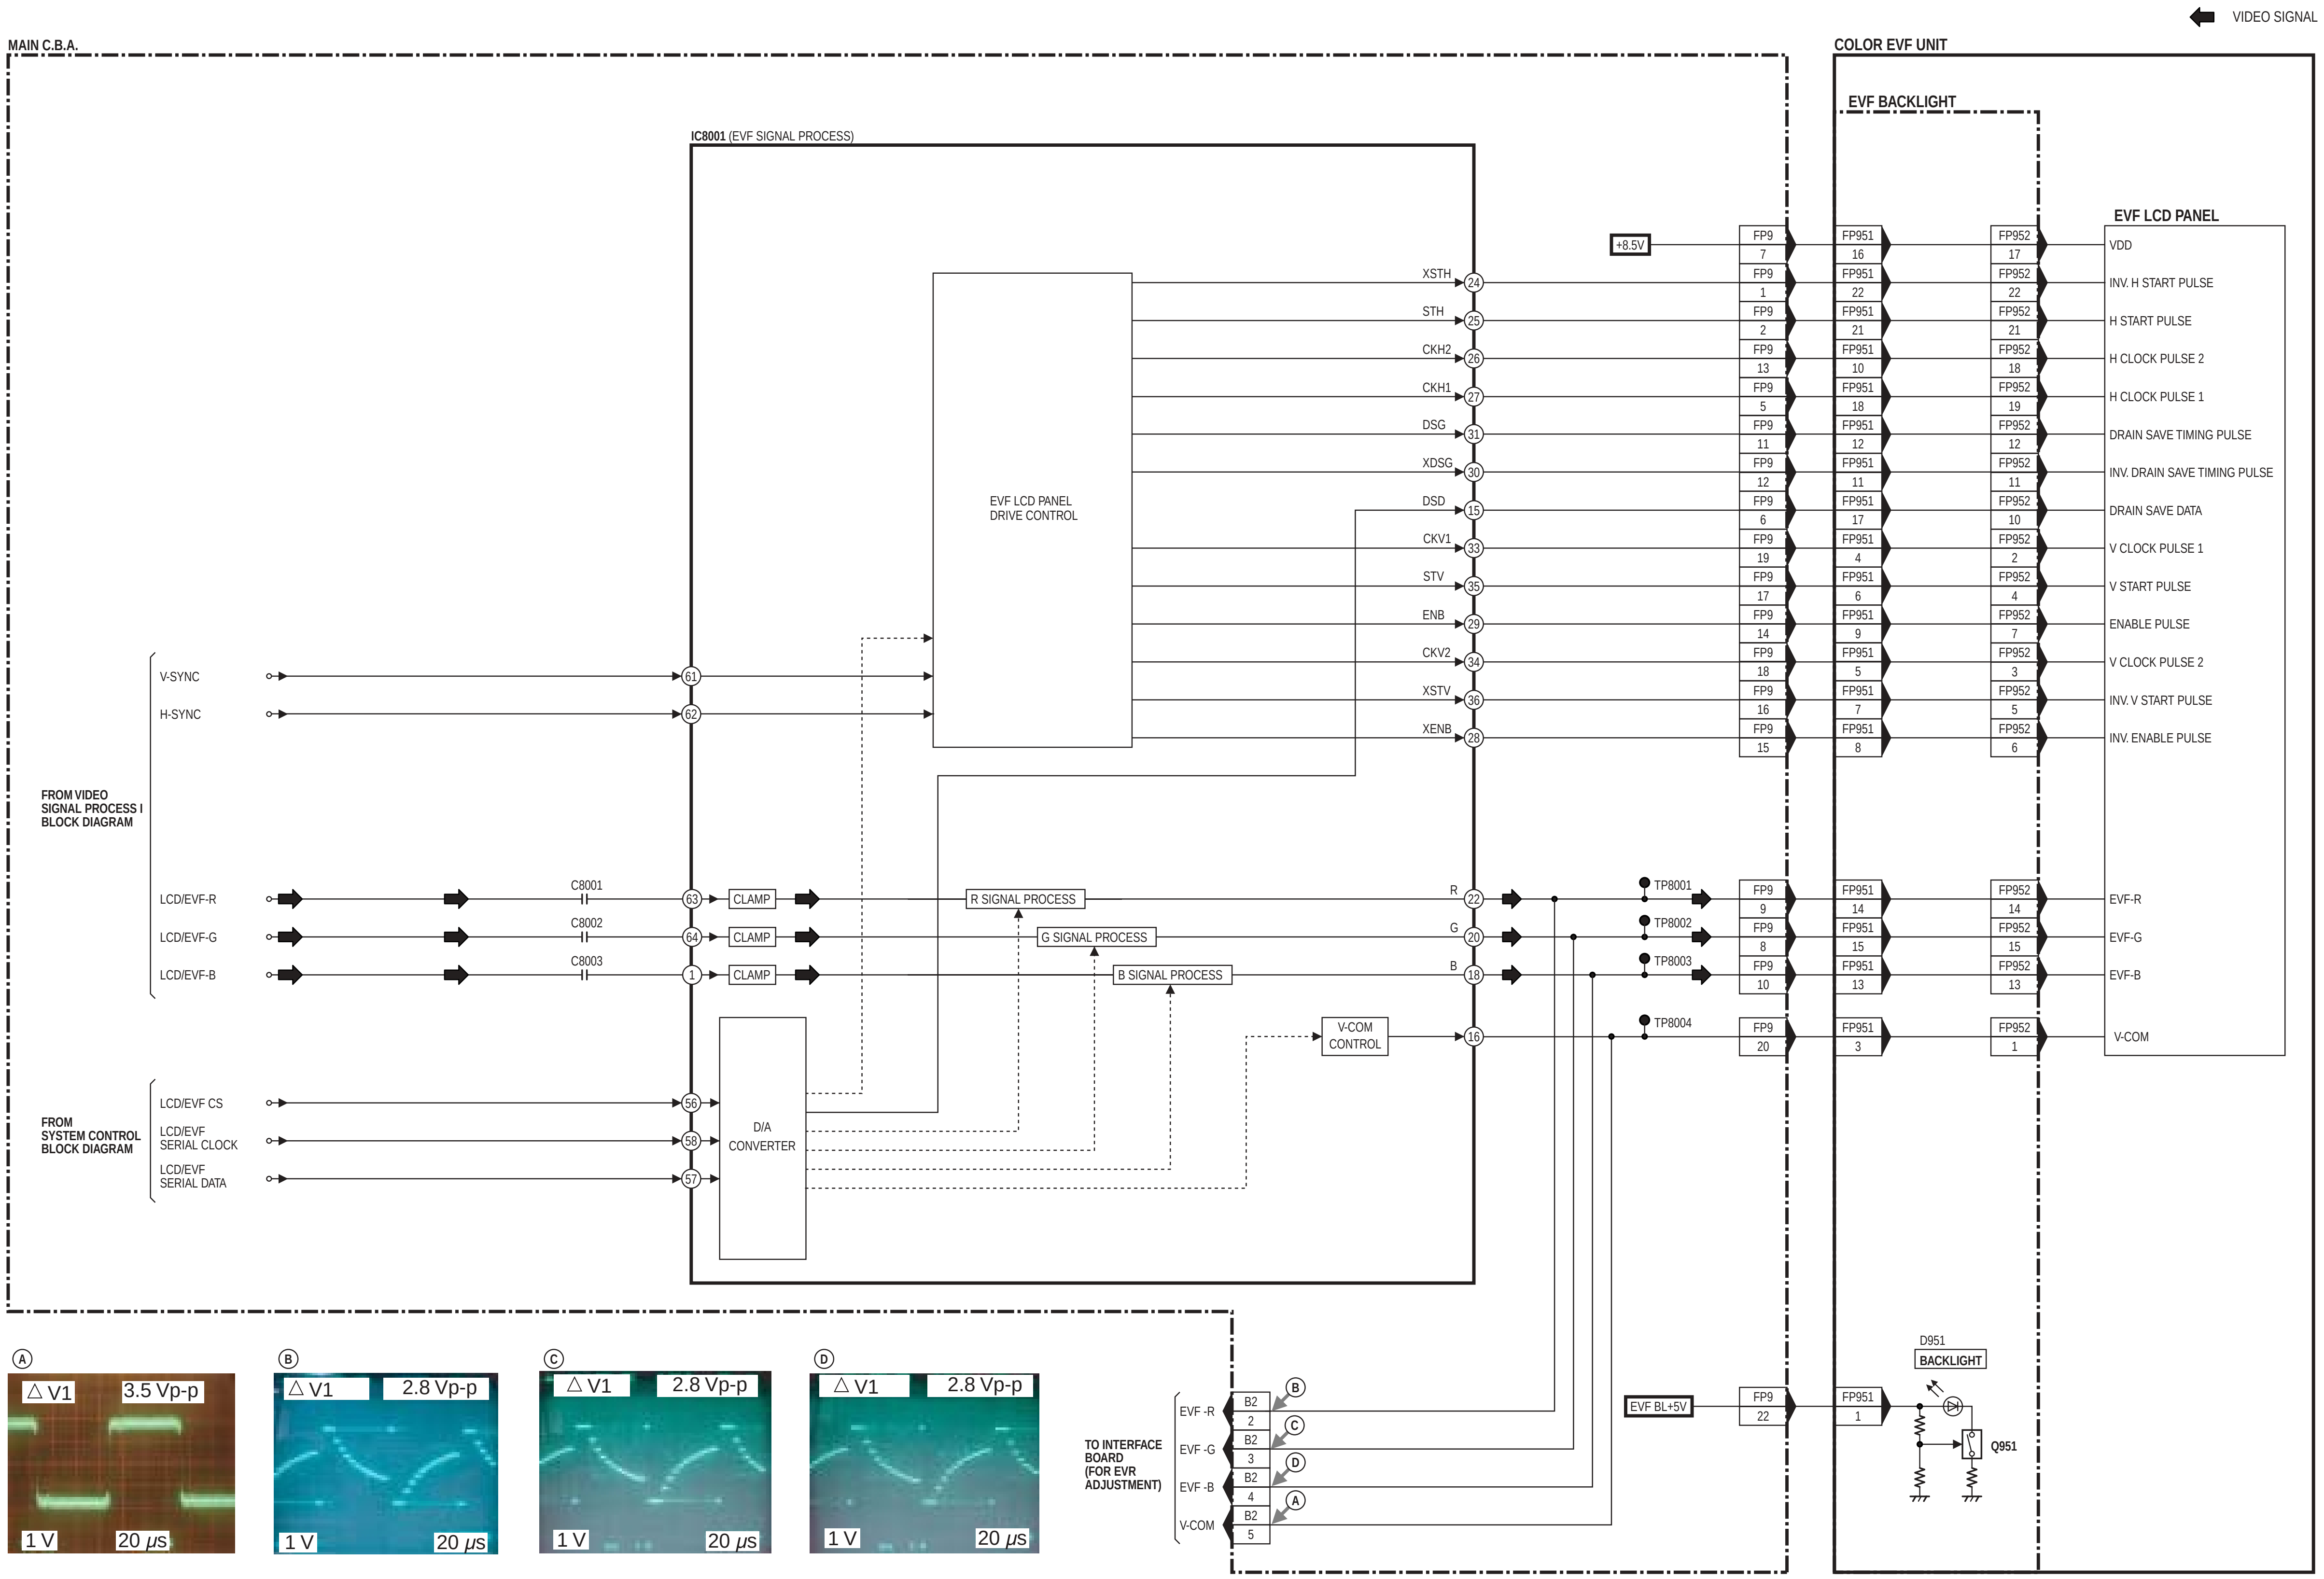
VIDEO SIGNAL
MAIN C.B.A.
COLOR EVF UNIT
EVF BACKLIGHT
EVF LCD PANEL
IC8001 (EVF SIGNAL PROCESS)
EVF LCD PANEL DRIVE CONTROL
+8.5V
XSTH 24
STH 25
CKH2 26
CKH1 27
DSG 31
XDSG 30
DSD 15
CKV1 33
STV 35
ENB 29
CKV2 34
XSTV 36
XENB 28
FP9 7 / FP951 16 / FP952 17 VDD
FP9 1 / FP951 22 / FP952 22 INV. H START PULSE
FP9 2 / FP951 21 / FP952 21 H START PULSE
FP9 13 / FP951 10 / FP952 18 H CLOCK PULSE 2
FP9 5 / FP951 18 / FP952 19 H CLOCK PULSE 1
FP9 11 / FP951 12 / FP952 12 DRAIN SAVE TIMING PULSE
FP9 12 / FP951 11 / FP952 11 INV. DRAIN SAVE TIMING PULSE
FP9 6 / FP951 17 / FP952 10 DRAIN SAVE DATA
FP9 19 / FP951 4 / FP952 2 V CLOCK PULSE 1
FP9 17 / FP951 6 / FP952 4 V START PULSE
FP9 14 / FP951 9 / FP952 7 ENABLE PULSE
FP9 18 / FP951 5 / FP952 3 V CLOCK PULSE 2
FP9 16 / FP951 7 / FP952 5 INV. V START PULSE
FP9 15 / FP951 8 / FP952 6 INV. ENABLE PULSE
V-SYNC 61
H-SYNC 62
FROM VIDEO SIGNAL PROCESS I BLOCK DIAGRAM
LCD/EVF-R
LCD/EVF-G
LCD/EVF-B
C8001
C8002
C8003
63 CLAMP
64 CLAMP
1 CLAMP
R SIGNAL PROCESS
G SIGNAL PROCESS
B SIGNAL PROCESS
R 22
G 20
B 18
TP8001
TP8002
TP8003
TP8004
FP9 9 / FP951 14 / FP952 14 EVF-R
FP9 8 / FP951 15 / FP952 15 EVF-G
FP9 10 / FP951 13 / FP952 13 EVF-B
V-COM CONTROL 16
FP9 20 / FP951 3 / FP952 1 V-COM
FROM SYSTEM CONTROL BLOCK DIAGRAM
LCD/EVF CS 56
LCD/EVF SERIAL CLOCK 58
LCD/EVF SERIAL DATA 57
D/A CONVERTER
TO INTERFACE BOARD (FOR EVR ADJUSTMENT)
EVF -R B2 2 Ⓑ
EVF -G B2 3 Ⓒ
EVF -B B2 4 Ⓓ
V-COM B2 5 Ⓐ
EVF BL+5V
FP9 22 / FP951 1
D951 BACKLIGHT
Q951
Ⓐ △V1 3.5 Vp-p 1 V 20 μs
Ⓑ △V1 2.8 Vp-p 1 V 20 μs
Ⓒ △V1 2.8 Vp-p 1 V 20 μs
Ⓓ △V1 2.8 Vp-p 1 V 20 μs

POWER SUPPLY BLOCK DIAGRAM

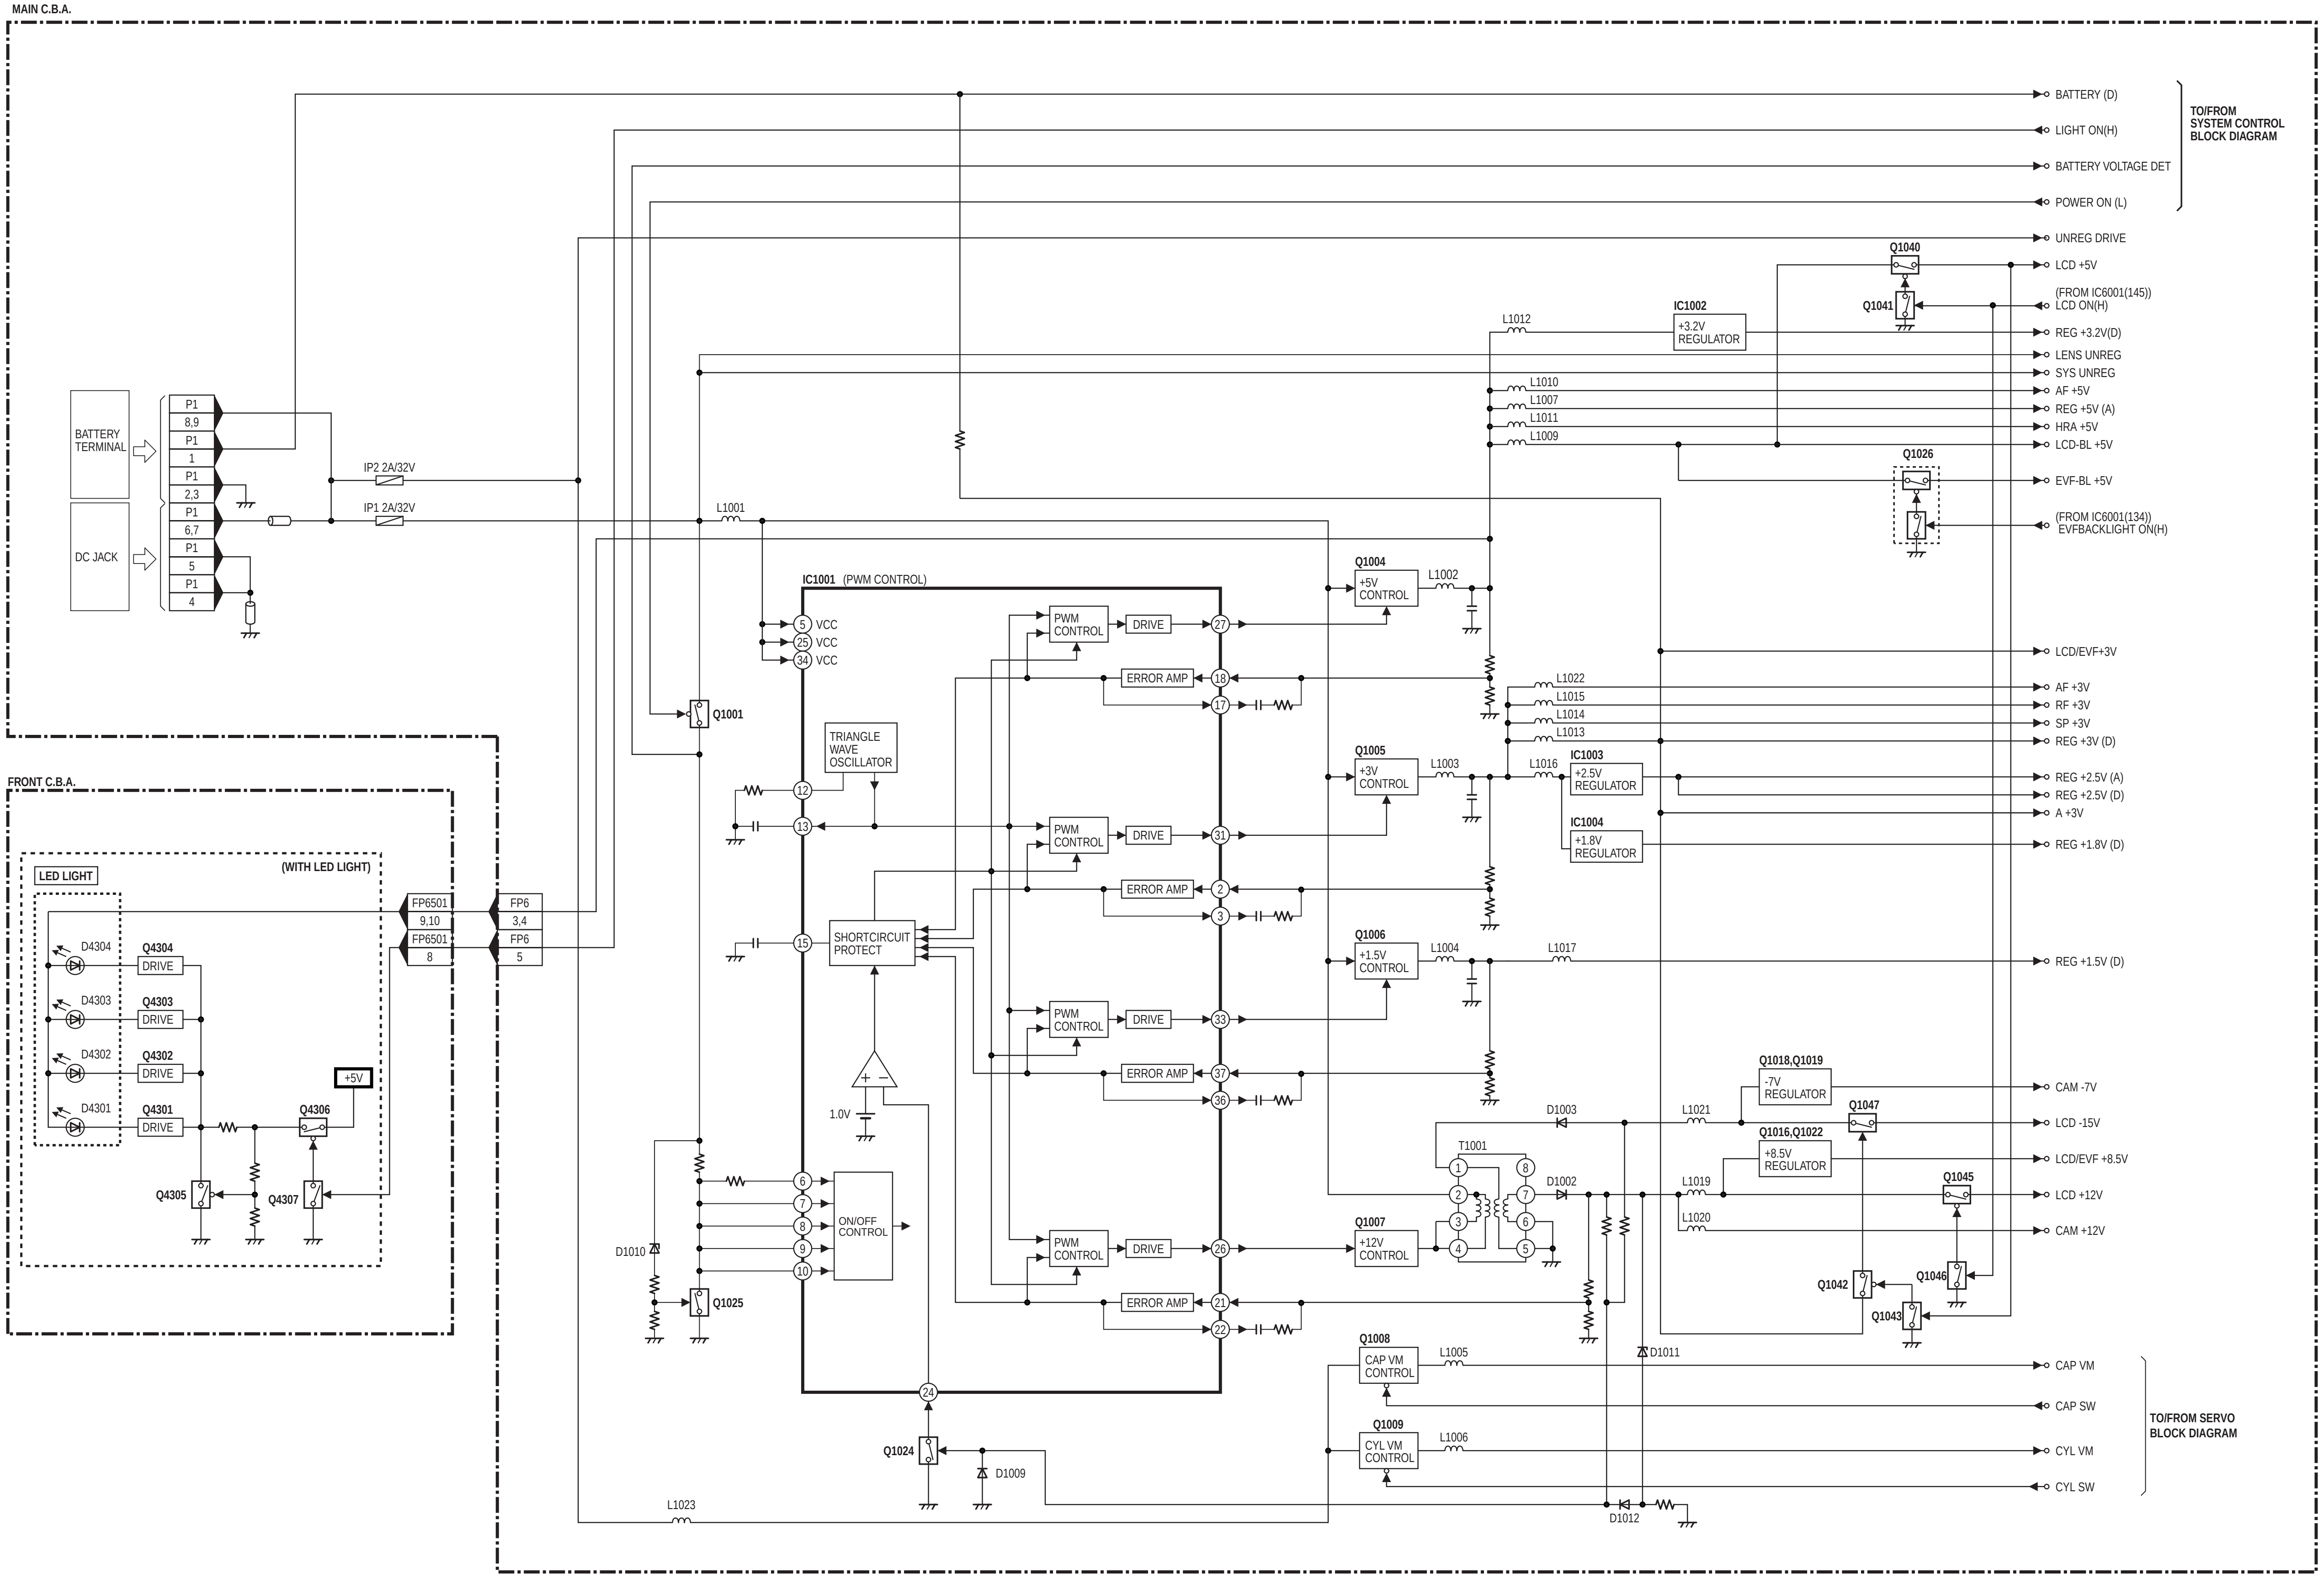
MAIN C.B.A.
FRONT C.B.A.
BATTERY TERMINAL
DC JACK
P1
8,9
P1
1
P1
2,3
P1
6,7
P1
5
P1
4
IP2 2A/32V
IP1 2A/32V
L1001
IC1001 (PWM CONTROL)
VCC
VCC
VCC
TRIANGLE WAVE OSCILLATOR
SHORTCIRCUIT PROTECT
ON/OFF CONTROL
PWM CONTROL
DRIVE
ERROR AMP
1.0V
Q1001
Q1024
Q1025
D1009
D1010
L1023
LED LIGHT
(WITH LED LIGHT)
D4304
D4303
D4302
D4301
Q4304
Q4303
Q4302
Q4301
DRIVE
Q4305
Q4306
Q4307
+5V
FP6501
9,10
FP6501
8
FP6
3,4
FP6
5
Q1004
+5V CONTROL
L1002
Q1005
+3V CONTROL
L1003
Q1006
+1.5V CONTROL
L1004
L1017
Q1007
+12V CONTROL
T1001
D1002
D1003
Q1008
CAP VM CONTROL
L1005
Q1009
CYL VM CONTROL
L1006
D1011
D1012
L1012
L1010
L1007
L1011
L1009
IC1002
+3.2V REGULATOR
L1022
L1015
L1014
L1013
L1016
IC1003
+2.5V REGULATOR
IC1004
+1.8V REGULATOR
Q1018,Q1019
-7V REGULATOR
Q1016,Q1022
+8.5V REGULATOR
L1021
L1019
L1020
Q1040
Q1041
Q1026
Q1042
Q1043
Q1045
Q1046
Q1047
BATTERY (D)
LIGHT ON(H)
BATTERY VOLTAGE DET
POWER ON (L)
TO/FROM SYSTEM CONTROL BLOCK DIAGRAM
UNREG DRIVE
LCD +5V
(FROM IC6001(145))
LCD ON(H)
REG +3.2V(D)
LENS UNREG
SYS UNREG
AF +5V
REG +5V (A)
HRA +5V
LCD-BL +5V
EVF-BL +5V
(FROM IC6001(134))
EVFBACKLIGHT ON(H)
LCD/EVF+3V
AF +3V
RF +3V
SP +3V
REG +3V (D)
REG +2.5V (A)
REG +2.5V (D)
A +3V
REG +1.8V (D)
REG +1.5V (D)
CAM -7V
LCD -15V
LCD/EVF +8.5V
LCD +12V
CAM +12V
CAP VM
CAP SW
CYL VM
CYL SW
TO/FROM SERVO BLOCK DIAGRAM

POWER SUPPLY BLOCK DIAGRAM
NV-GS6EE/GC, NV-GS17EG/EF/E/EP/EB, NV-GS18E, NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK, NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK

13 EXPLODED VIEWS

13.1. MAIN PARTS SECTION

❶ MAIN PARTS SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⁞⁚⁞ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

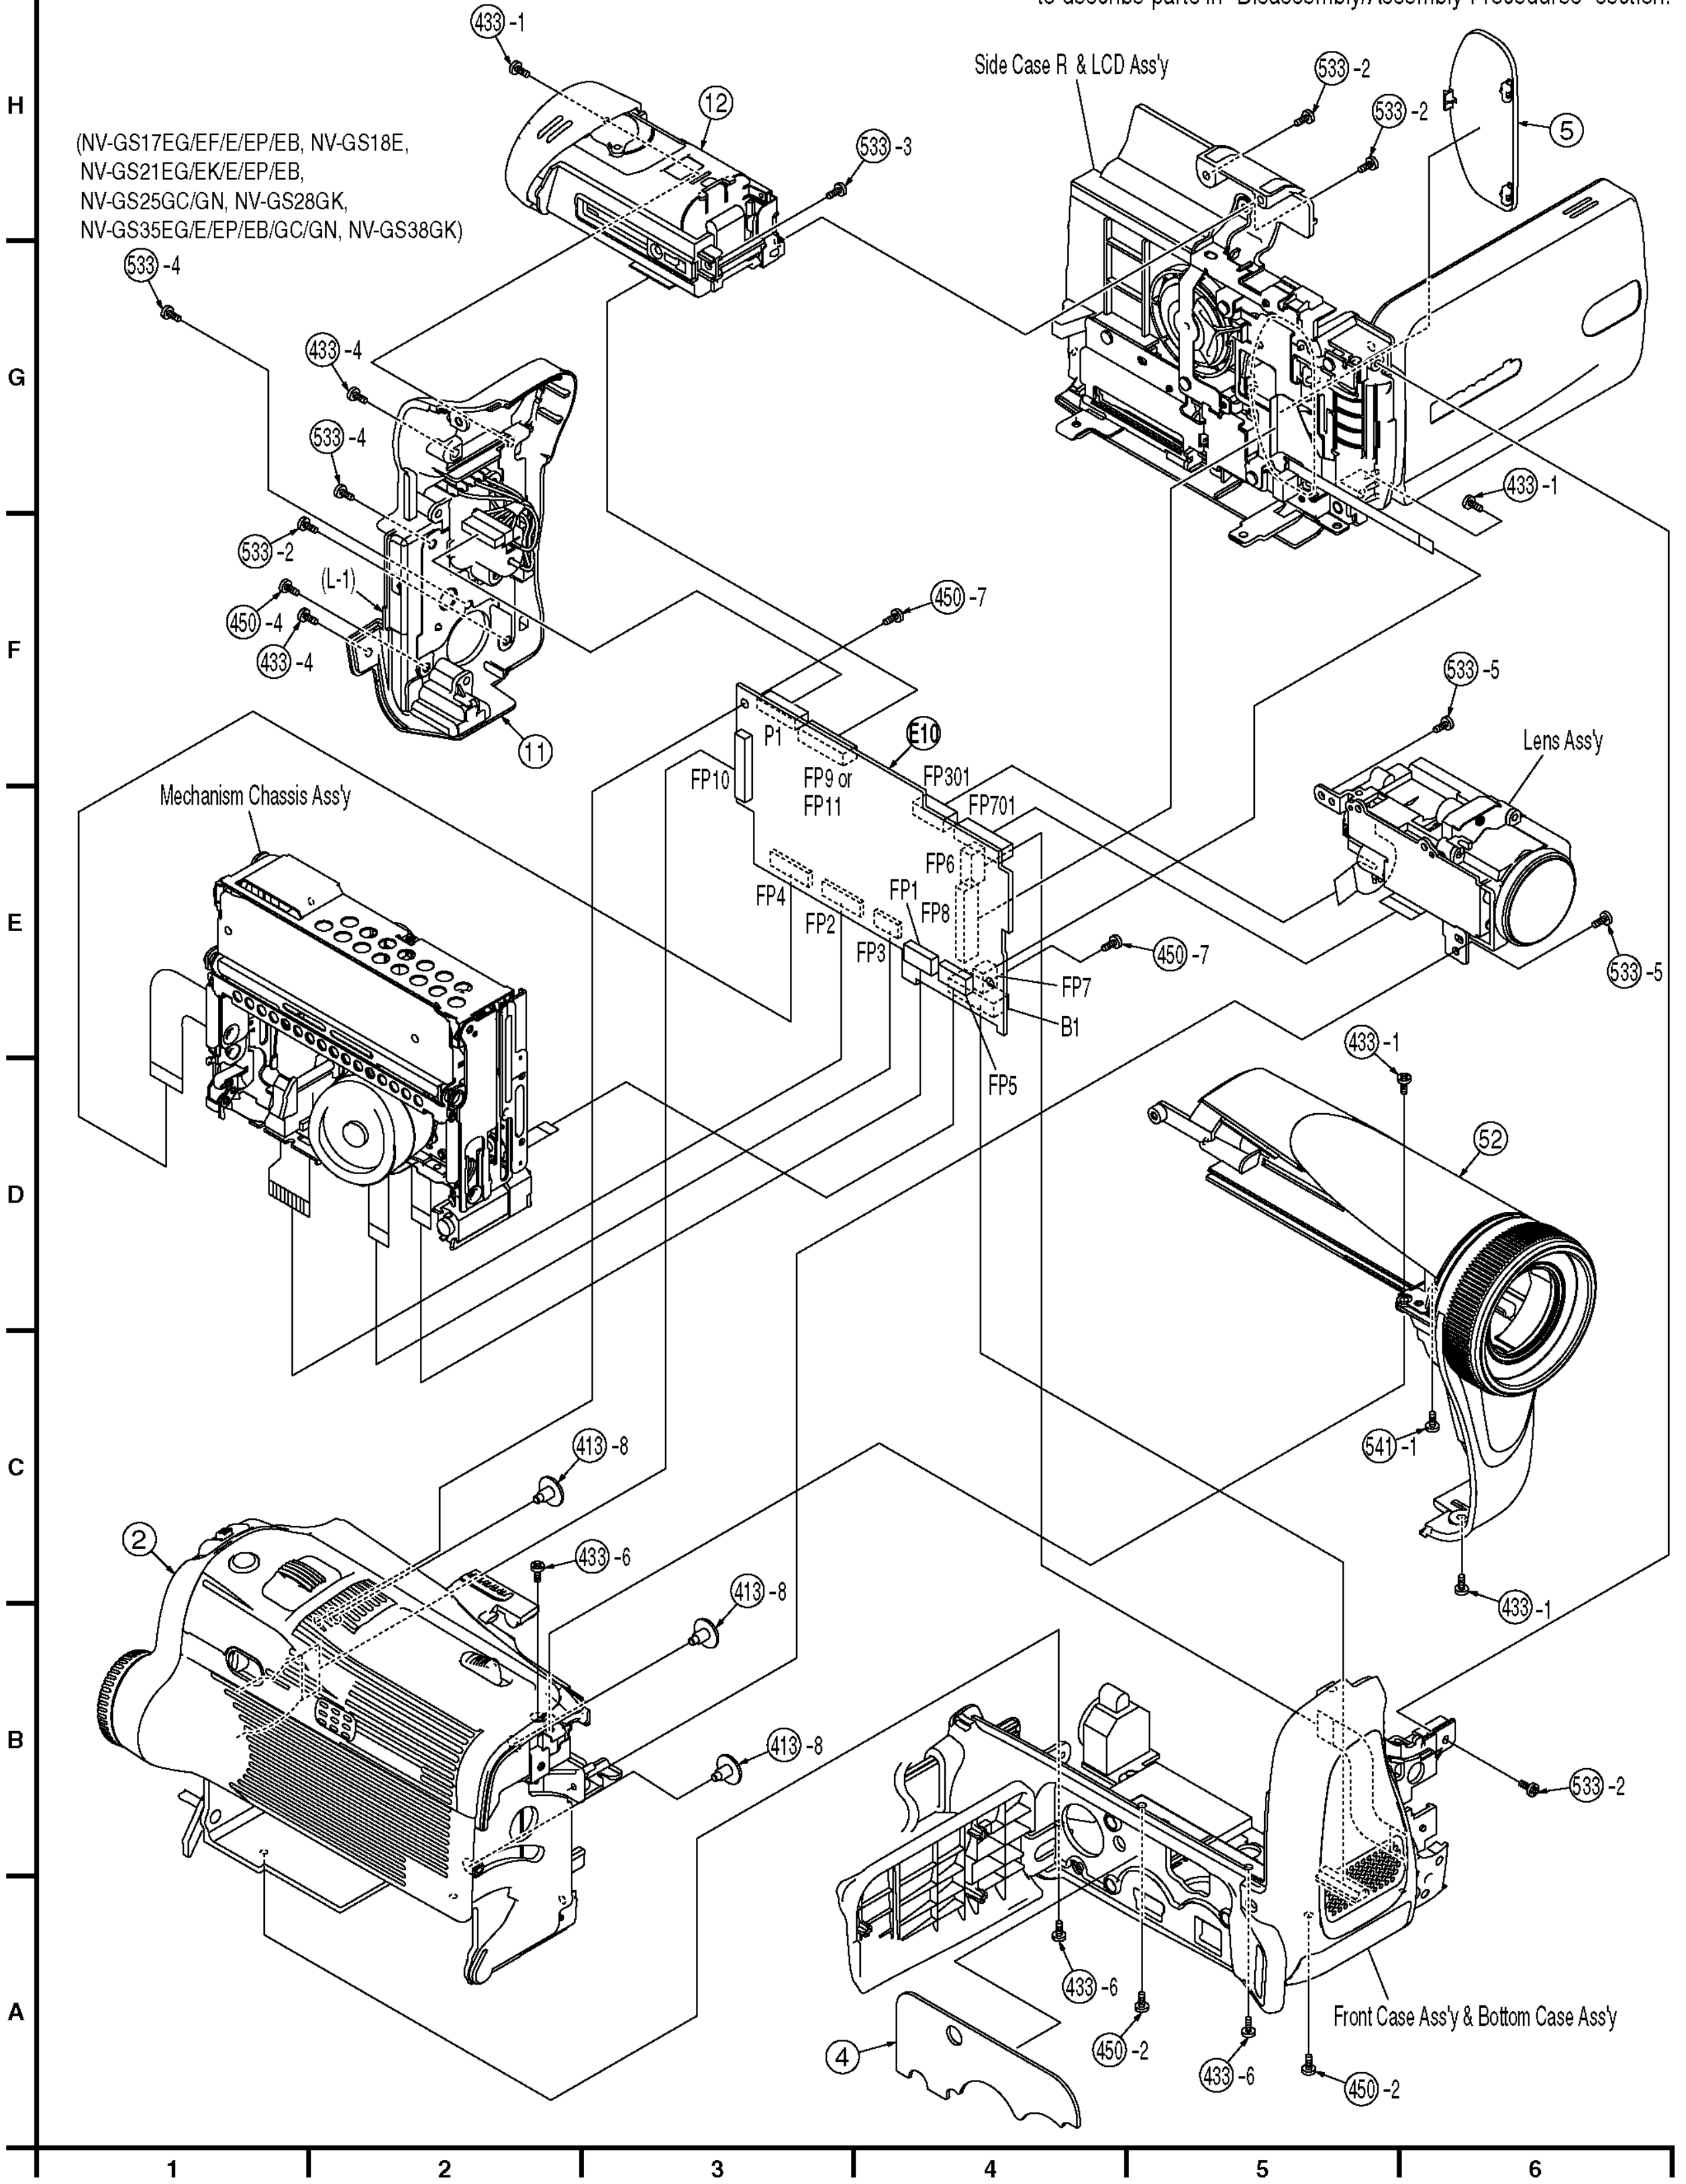
H
G
F
E
D
C
B
A
1
2
3
4
5
6
433 -1
12
533 -3
(NV-GS17EG/EF/E/EP/EB, NV-GS18E,
NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK)
533 -4
433 -4
533 -4
533 -2
(L-1)
450 -4
433 -4
11
Side Case R & LCD Ass'y
533 -2
533 -2
5
433 -1
450 -7
E10
P1
FP10
FP9 or
FP11
FP301
FP701
FP6
FP4
FP2
FP1
FP8
FP3
450 -7
FP7
B1
FP5
533 -5
Lens Ass'y
533 -5
Mechanism Chassis Ass'y
433 -1
52
541 -1
433 -1
413 -8
2
433 -6
413 -8
413 -8
533 -2
4
433 -6
450 -2
433 -6
450 -2
Front Case Ass'y & Bottom Case Ass'y

13.2. FRONT AND BOTTOM CASE SECTION

❷ FRONT AND BOTTOM CASE SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⁝⁝ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

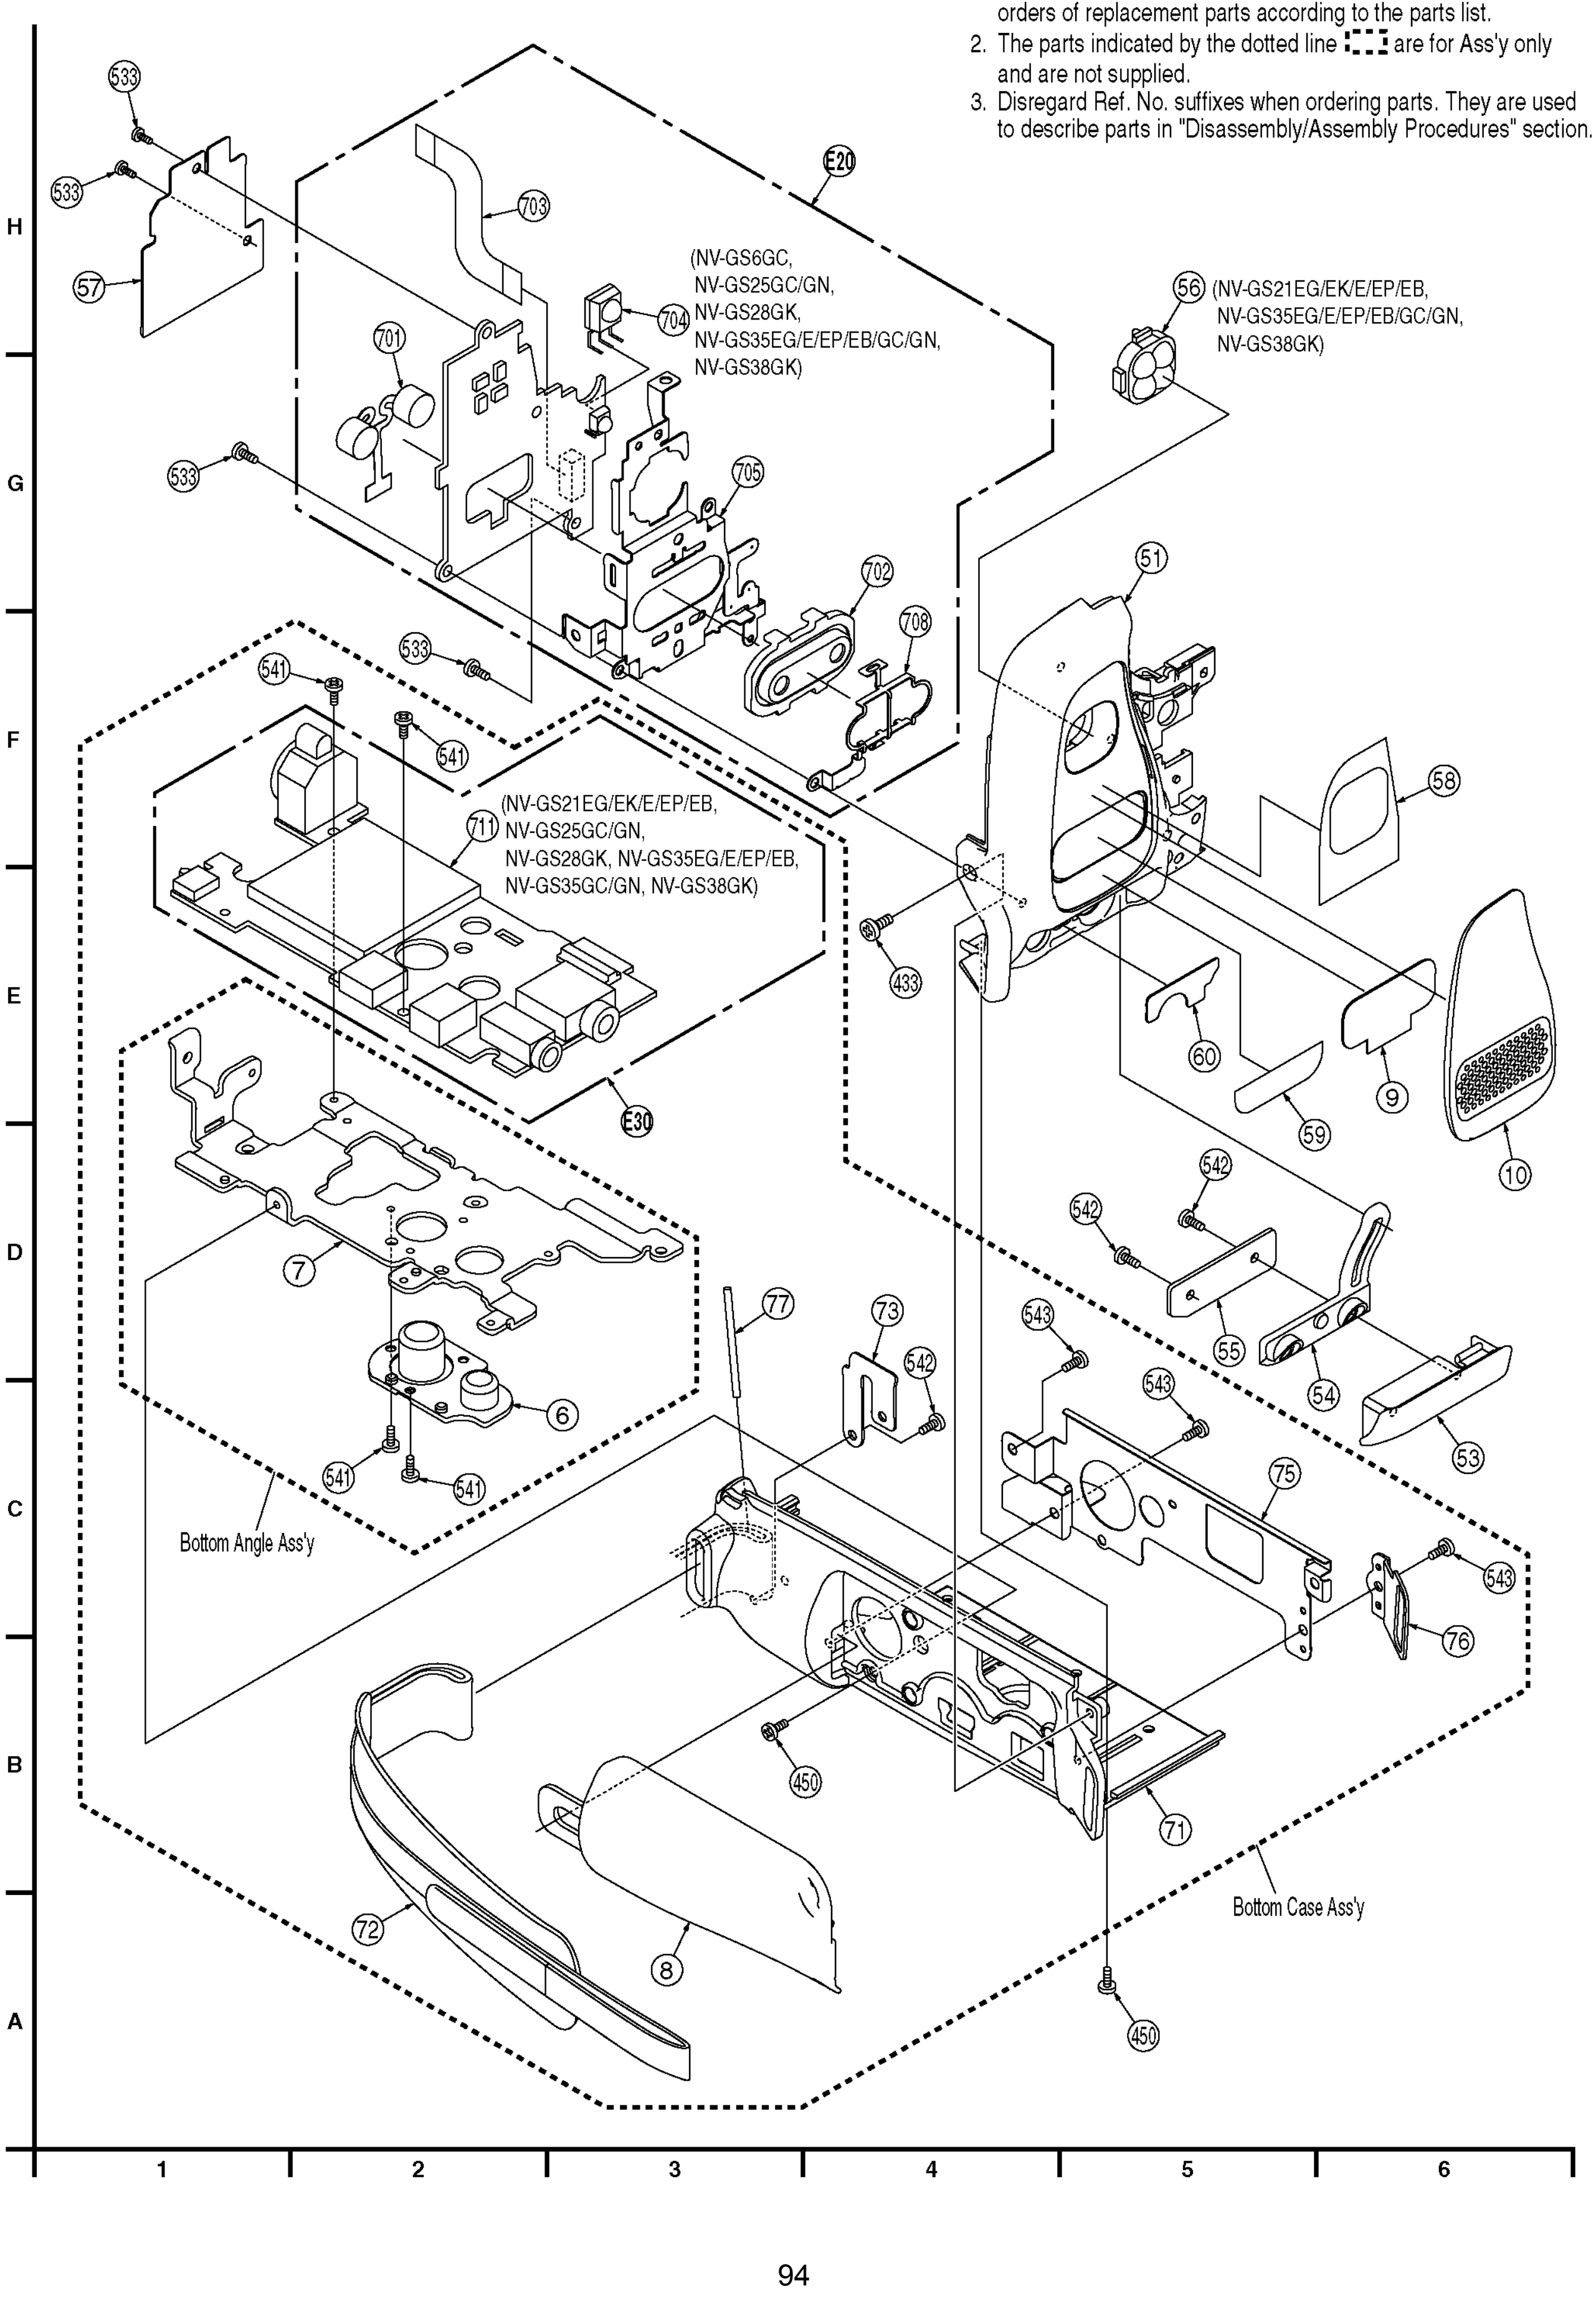
533
533
57
533
703
E20
(NV-GS6GC,
NV-GS25GC/GN,
NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN,
NV-GS38GK)
704
701
705
56
(NV-GS21EG/EK/E/EP/EB,
NV-GS35EG/E/EP/EB/GC/GN,
NV-GS38GK)
51
702
708
533
541
541
711
(NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN,
NV-GS28GK, NV-GS35EG/E/EP/EB,
NV-GS35GC/GN, NV-GS38GK)
58
433
60
9
59
10
E30
542
542
55
54
53
7
6
541
541
Bottom Angle Ass'y
77
73
542
543
543
75
543
76
450
71
72
8
Bottom Case Ass'y
450
H
G
F
E
D
C
B
A
1
2
3
4
5
6

13.3. SIDE CASE R AND LCD SECTION

❸ SIDE CASE R AND LCD SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⁝⁚⁝ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

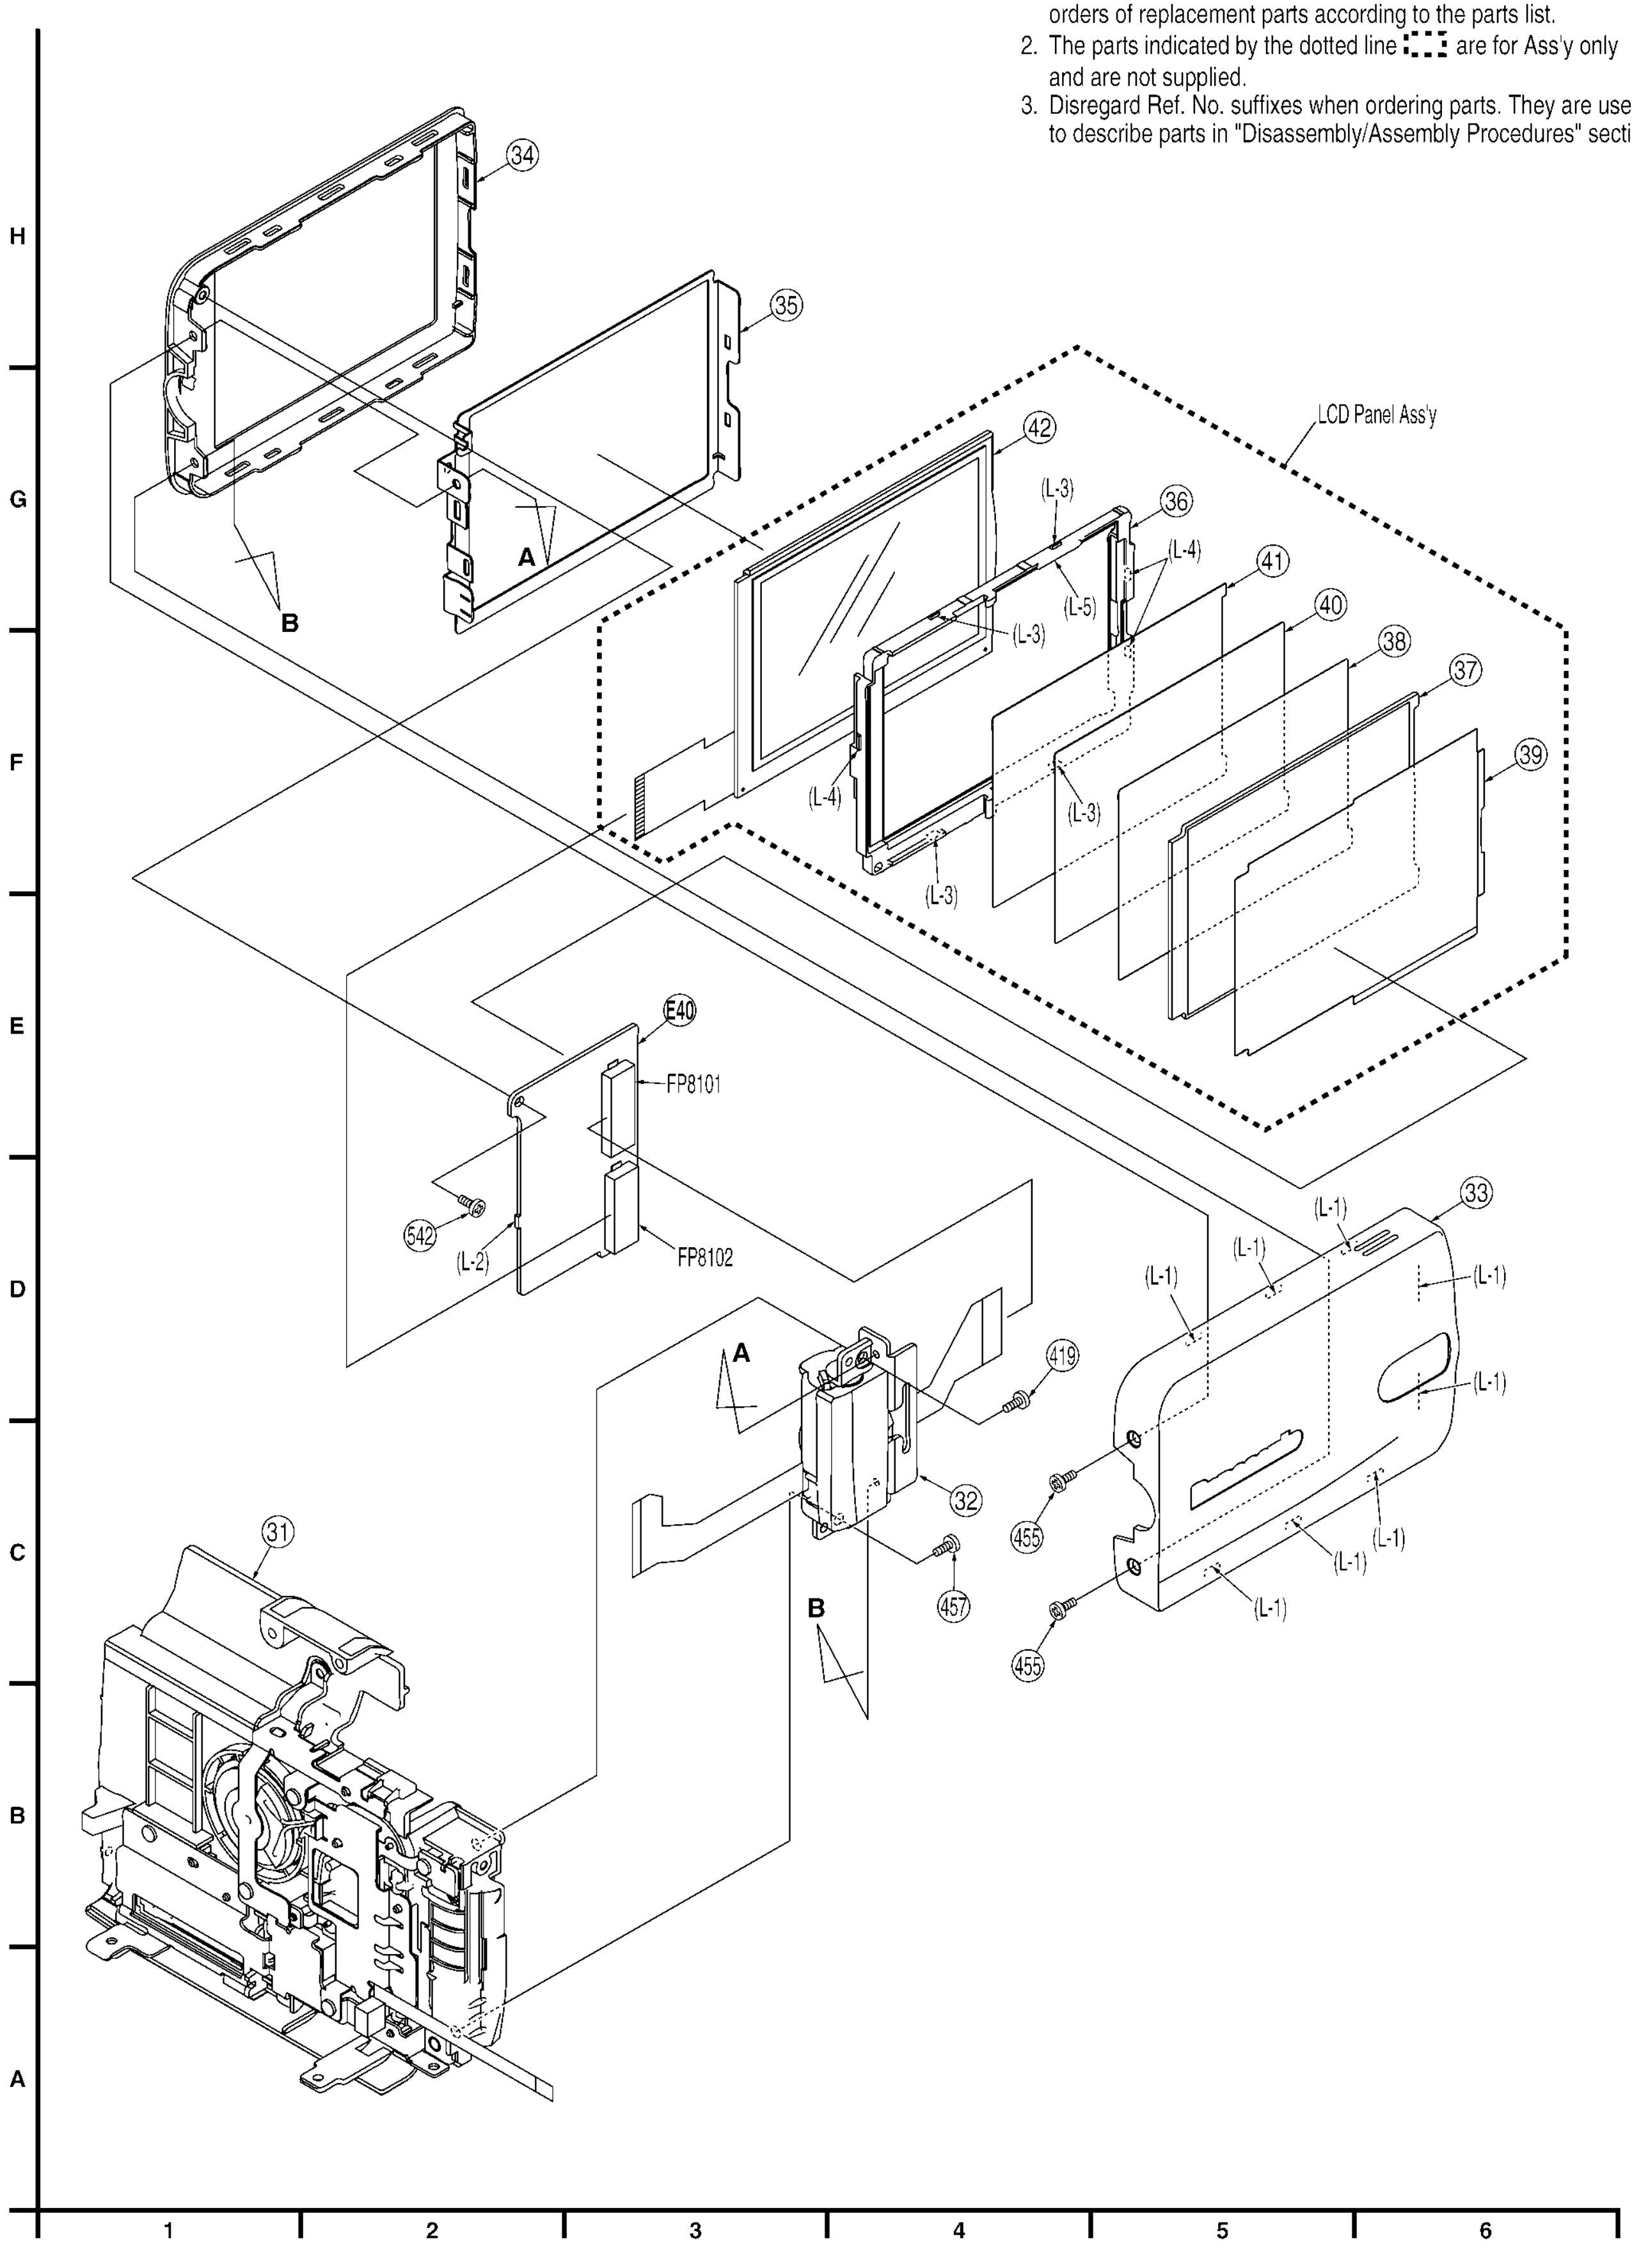
H
G
F
E
D
C
B
A
1
2
3
4
5
6
34
35
LCD Panel Ass'y
42
(L-3)
36
(L-4)
(L-5)
41
(L-3)
40
38
37
39
A
B
(L-4)
(L-3)
(L-3)
E40
FP8101
542
(L-2)
FP8102
(L-1)
33
(L-1)
(L-1)
(L-1)
(L-1)
A
419
32
455
(L-1)
(L-1)
(L-1)
457
455
B
31

13.4. CCD AND LENS SECTION

❹ CCD AND LENS SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⁞⁞ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

LUBRICATION POINTS
When the marked parts are replaced, apply the recommended lubricants or adhesive for better maintenance of the unit.

Mark	Kind of Lubricant	Availability	Part Number
□□□	Grease	Available from Factroy	LSUQ0050

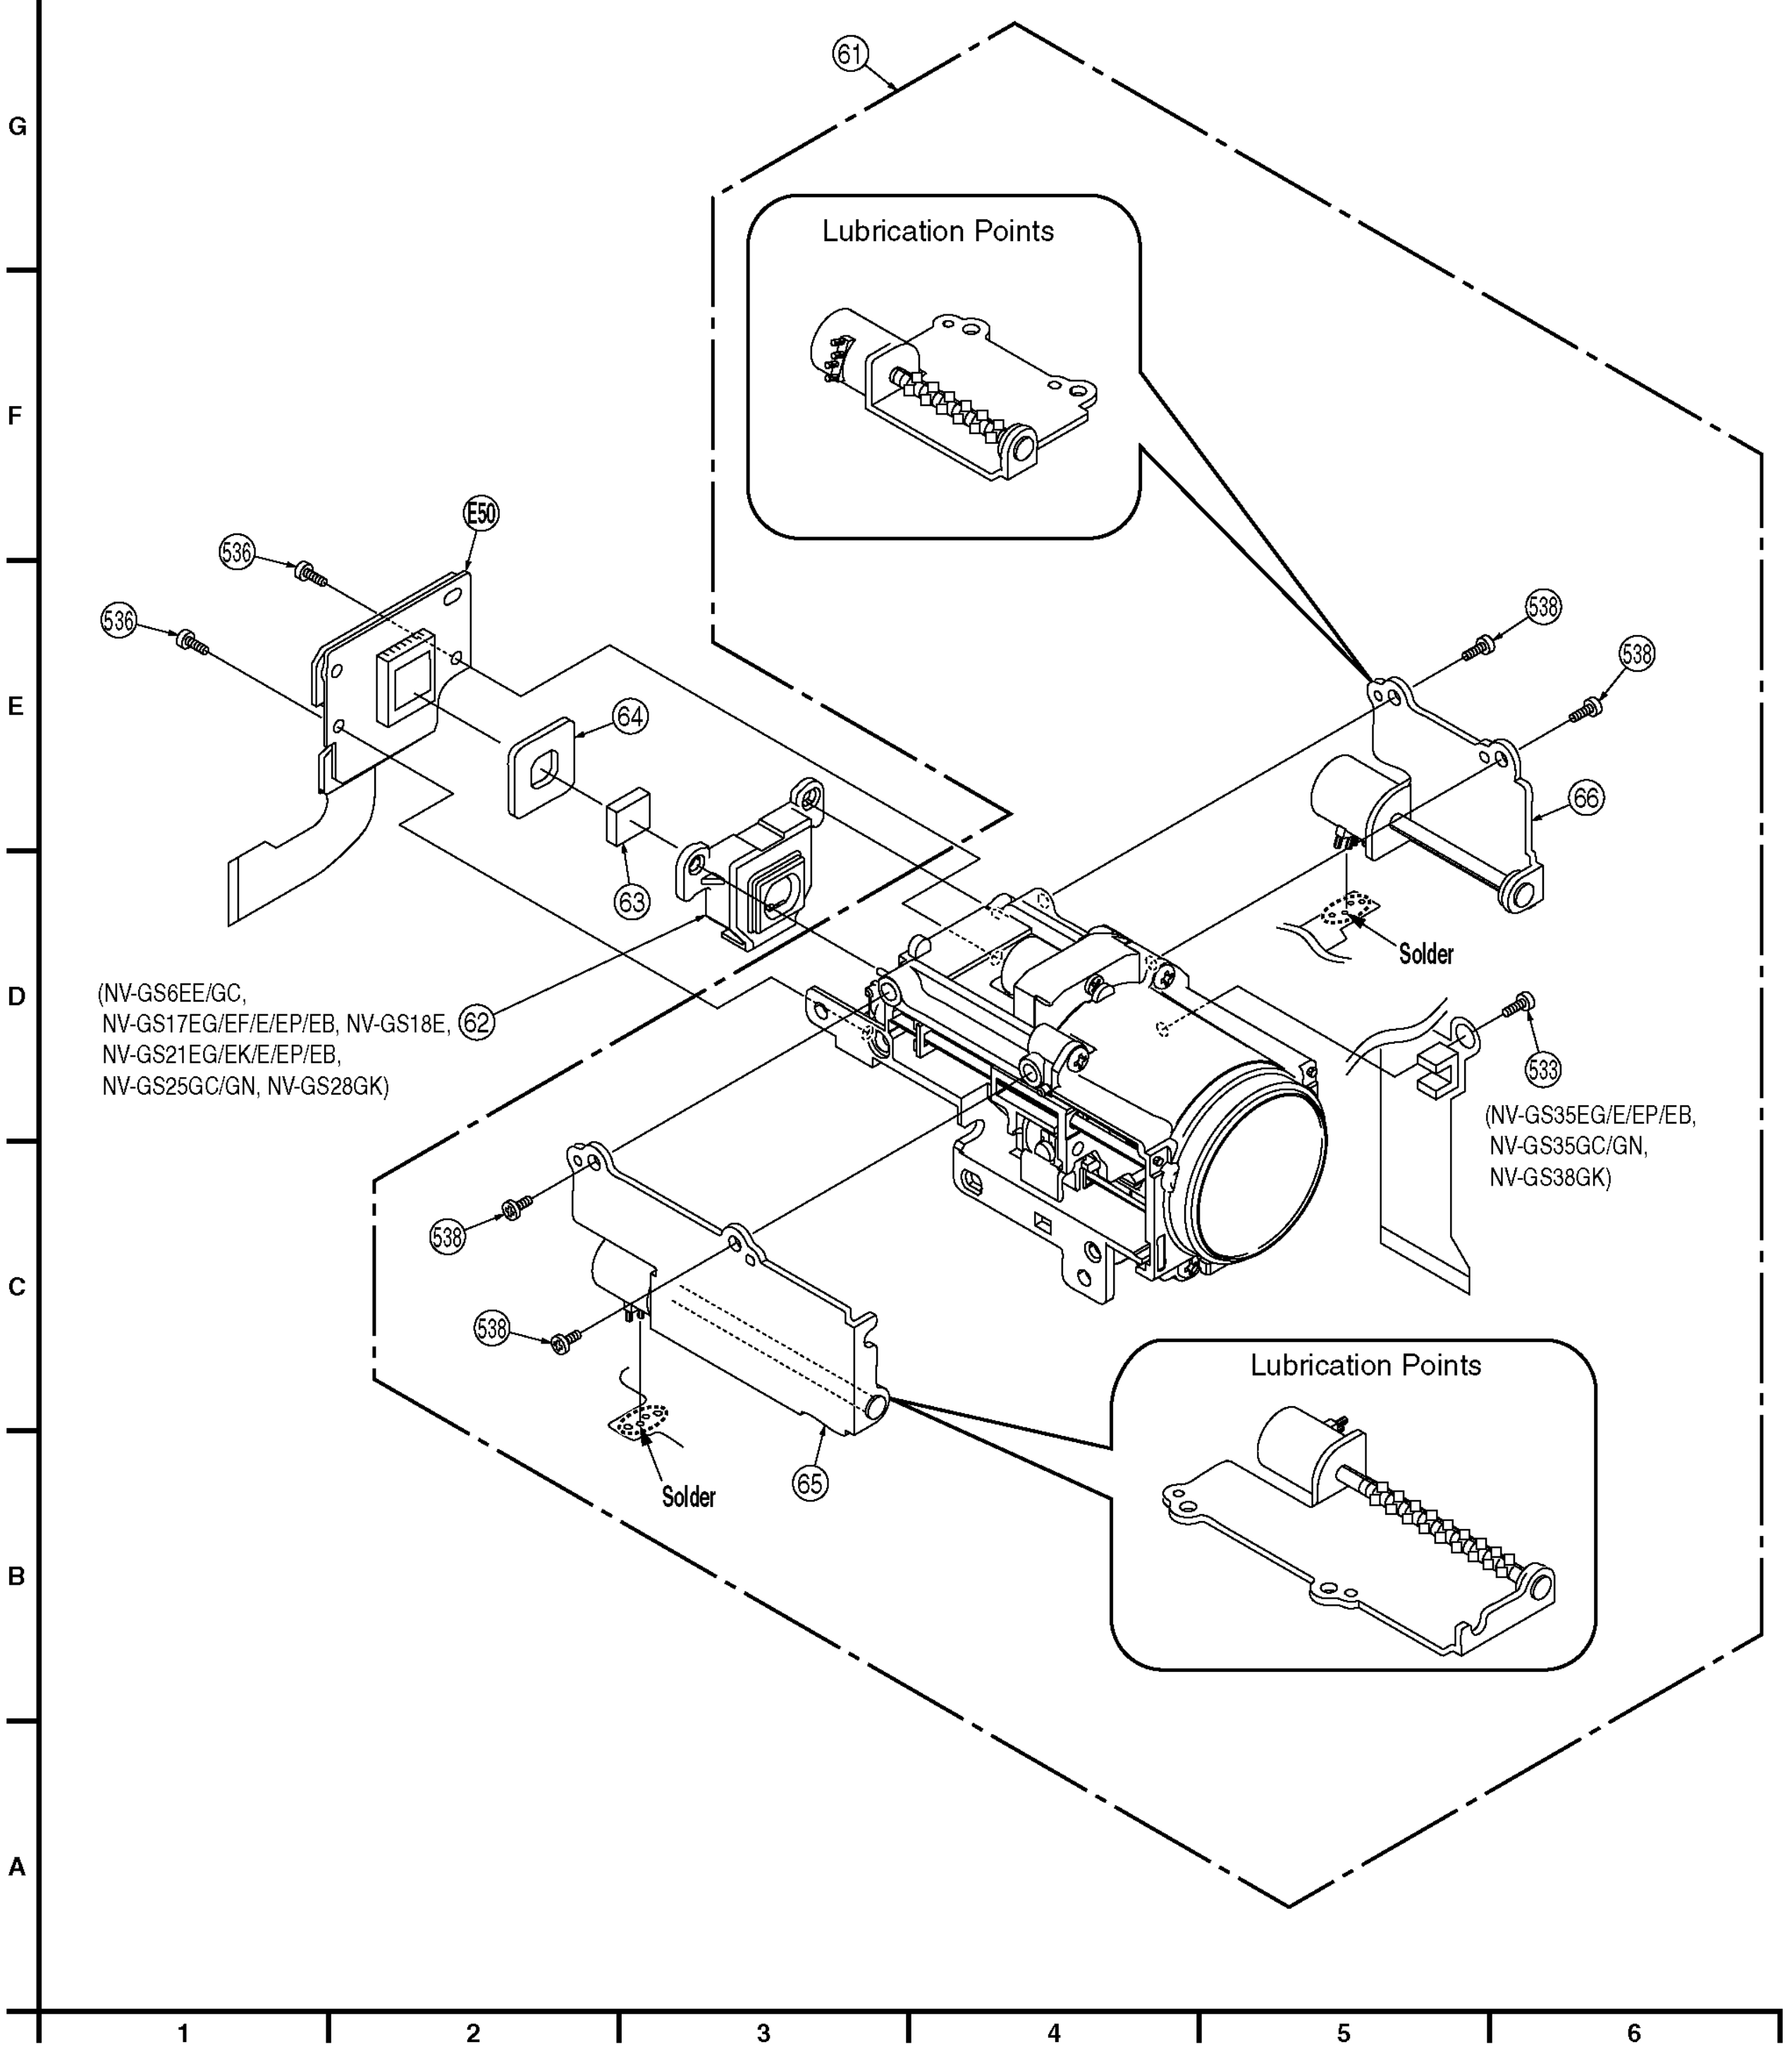
H
G
F
E
D
C
B
A
1
2
3
4
5
6
61
Lubrication Points
E50
536
536
64
63
62
(NV-GS6EE/GC,
NV-GS17EG/EF/E/EP/EB, NV-GS18E,
NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK)
538
538
66
Solder
533
(NV-GS35EG/E/EP/EB,
NV-GS35GC/GN,
NV-GS38GK)
538
538
Solder
65
Lubrication Points

13.5. EVF SECTION

❺ EVF SECTION

Note:

1. Parts with no Ref. No. in "EXPLODED VIEW" are not supplied. And some Ref. No. will be skipped. Be sure to make your orders of replacement parts according to the parts list.
2. The parts indicated by the dotted line ⁞⁚⁞ are for Ass'y only and are not supplied.
3. Disregard Ref. No. suffixes when ordering parts. They are used to describe parts in "Disassembly/Assembly Procedures" section.

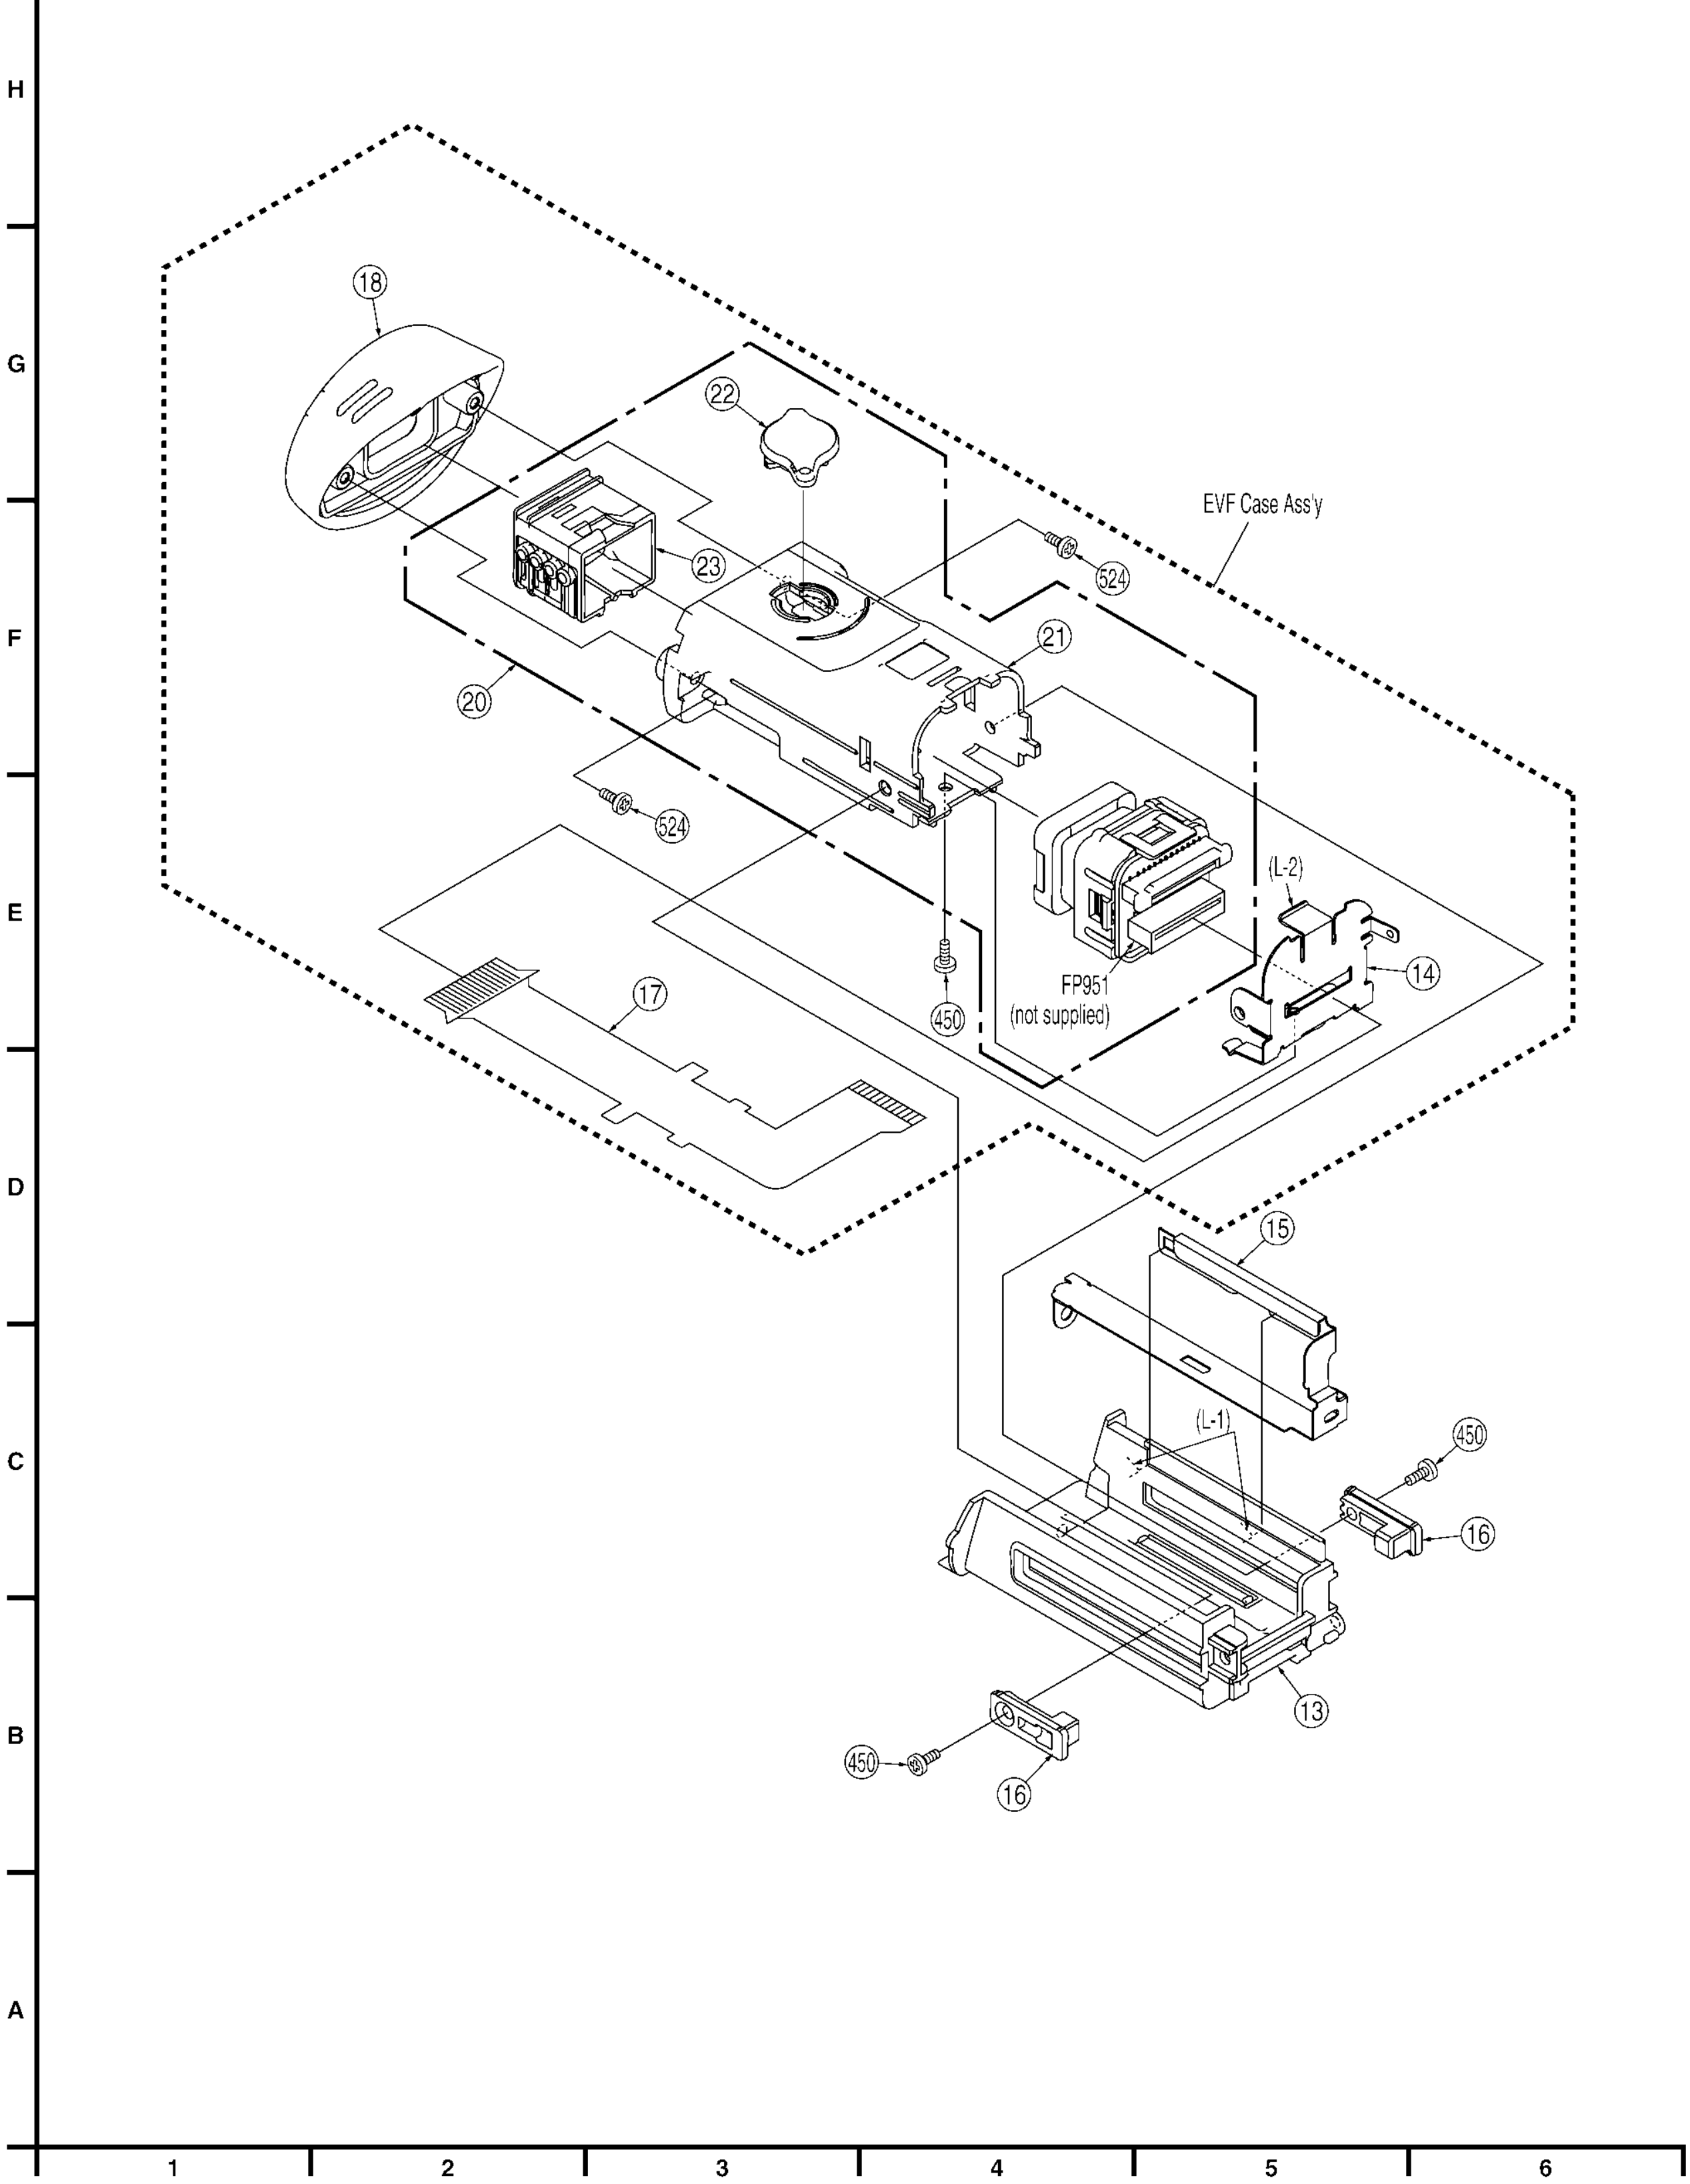
H
G
F
E
D
C
B
A
⑱
㉒
㉓
⑳
㉑
524
EVF Case Ass'y
524
⑰
450
FP951
(not supplied)
(L-2)
⑭
⑮
(L-1)
450
⑯
⑬
450
⑯
1
2
3
4
5
6

13.6. MECHANISM SECTION

❻ MECHANISM SECTION

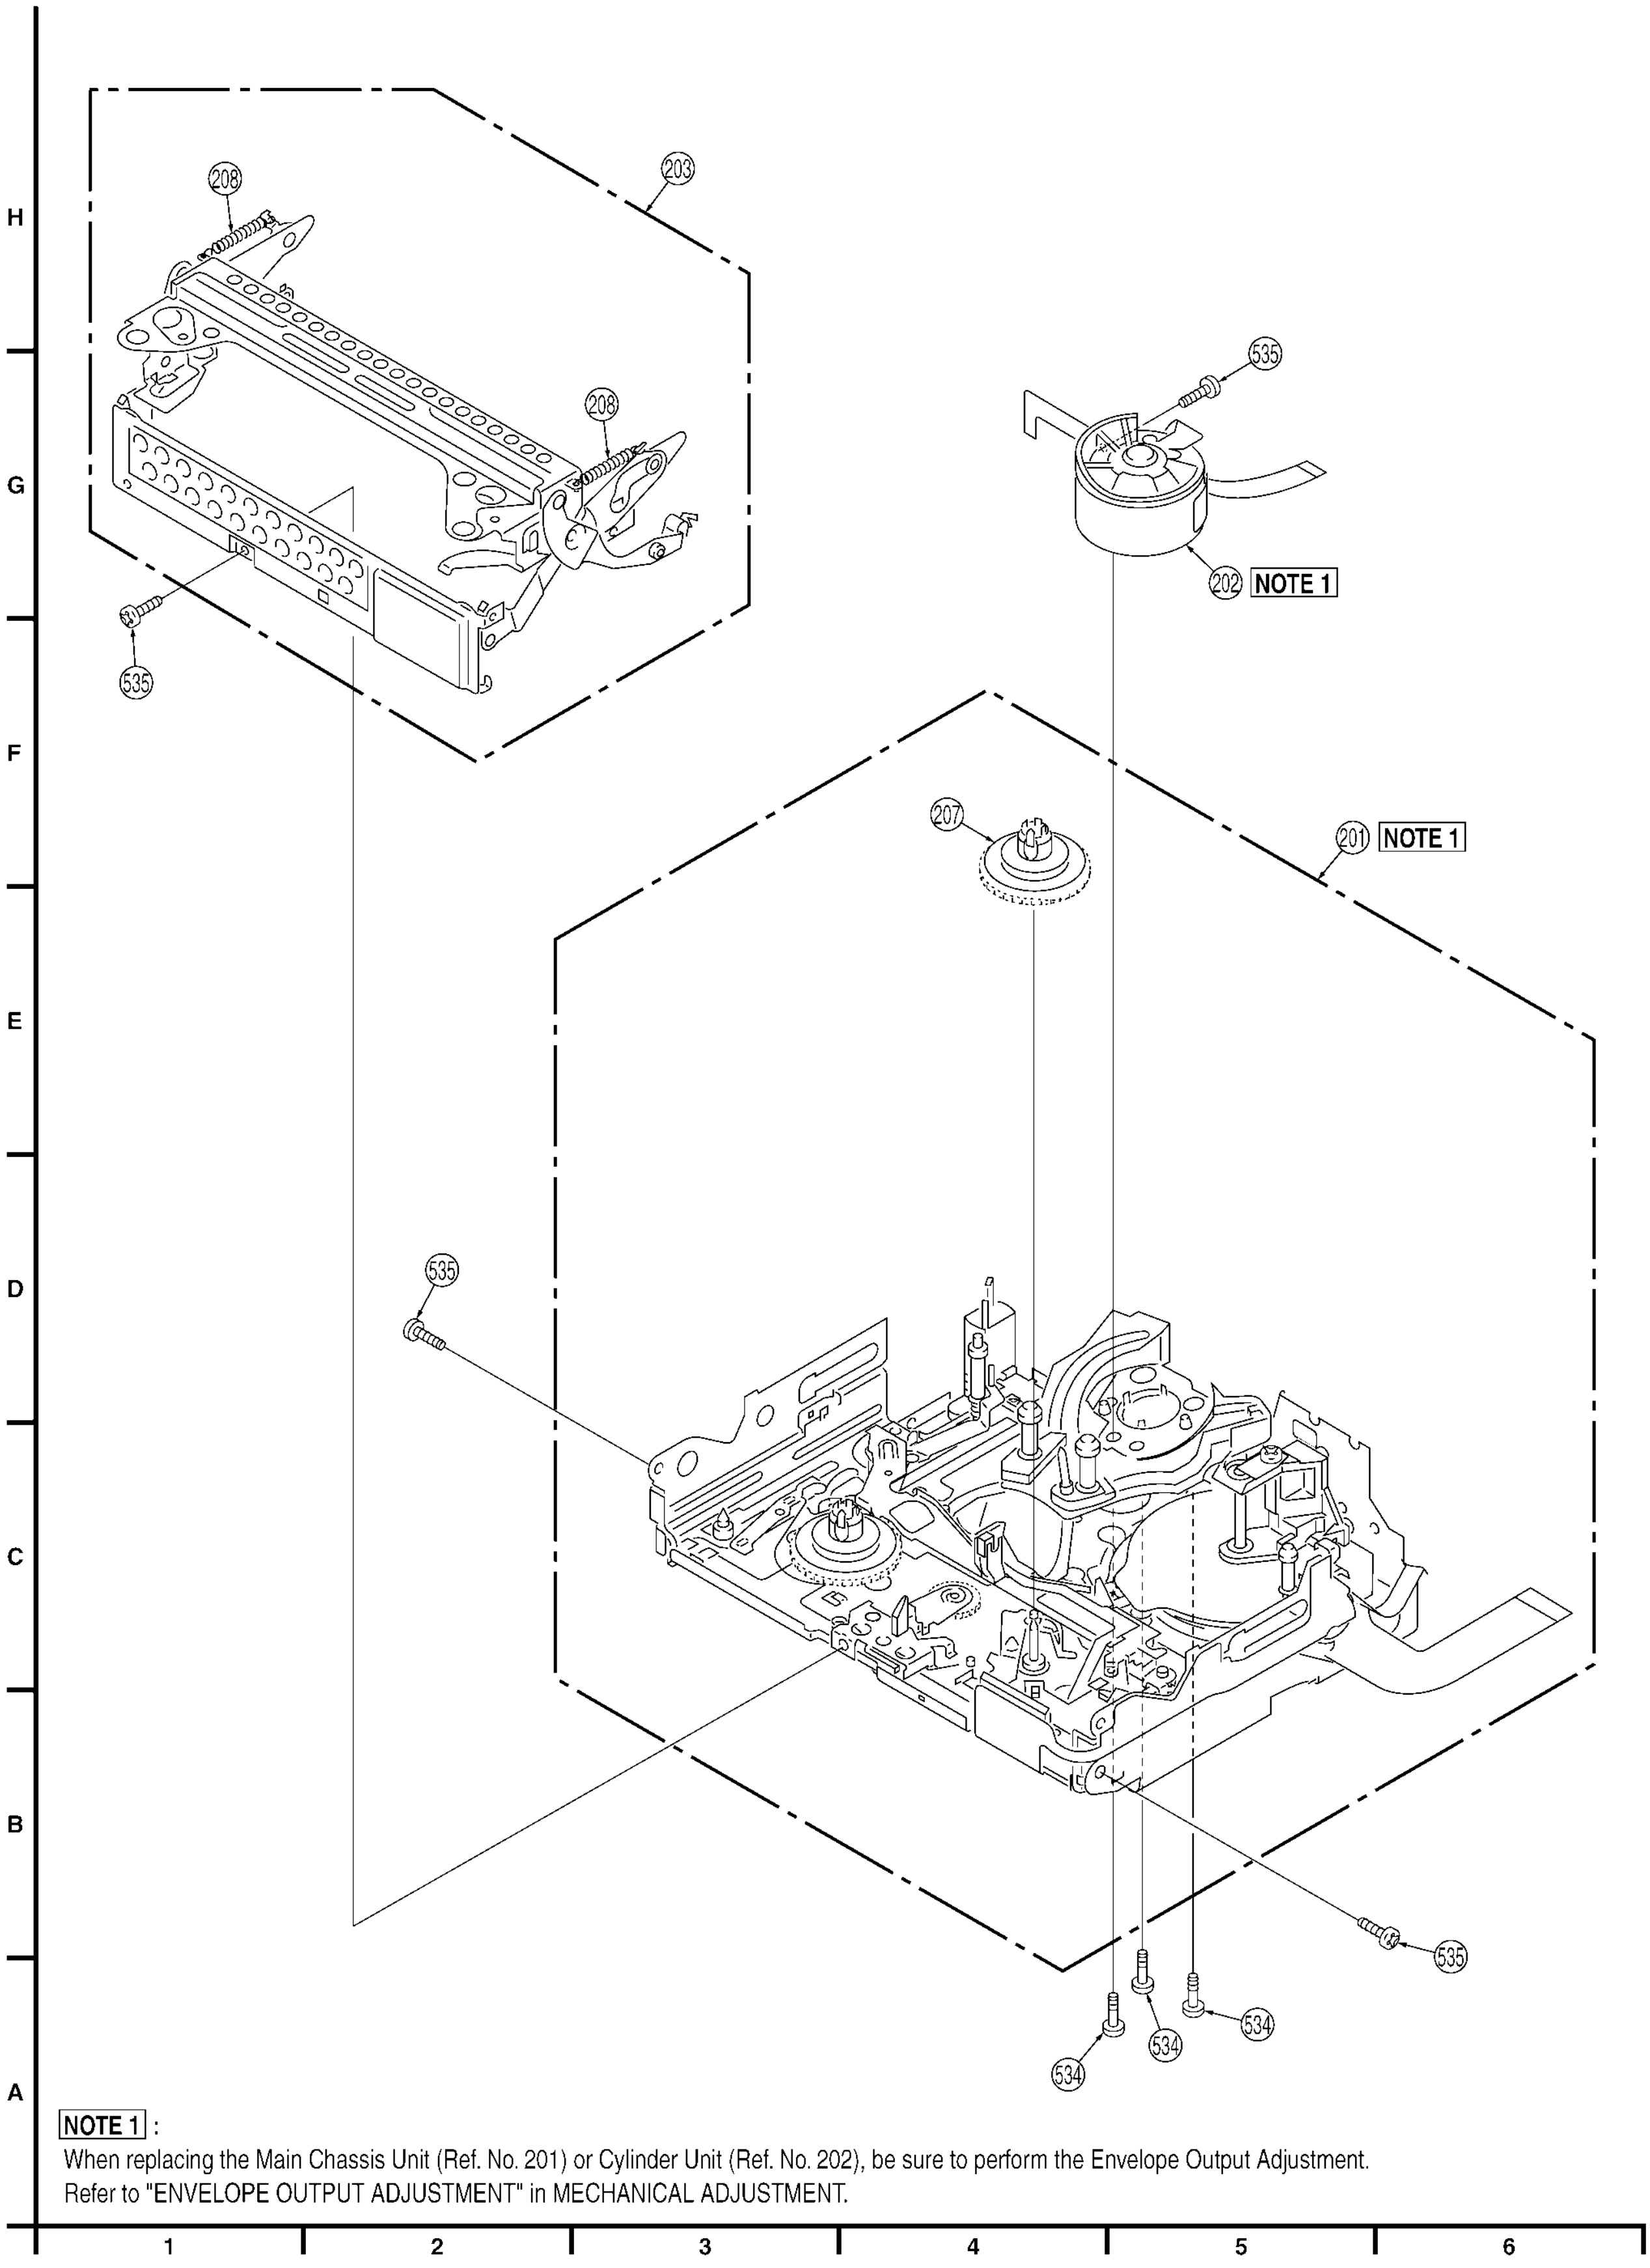
208
203
H
208
G
535
202 NOTE 1
535
F
207
201 NOTE 1
E
D
535
C
B
535
534
534
534
A
1
2
3
4
5
6

NOTE 1 :
When replacing the Main Chassis Unit (Ref. No. 201) or Cylinder Unit (Ref. No. 202), be sure to perform the Envelope Output Adjustment.
Refer to "ENVELOPE OUTPUT ADJUSTMENT" in MECHANICAL ADJUSTMENT.

13.7. PACKING PARTS AND ACCESSORIES SECTION

❼ PACKING PARTS AND ACCESSORIES SECTION

IMPORTANT SAFTY NOTICE:

COMPONENTS IDENTIFIED BY THE SIGN ⚠ HAVE SPECIAL CHARACTERISTICS IMPORTANT FOR SAFETY. WHEN REPLACING ANY OF THESE COMPONENTS, USE ONLY THE SPECIFIED PARTS.

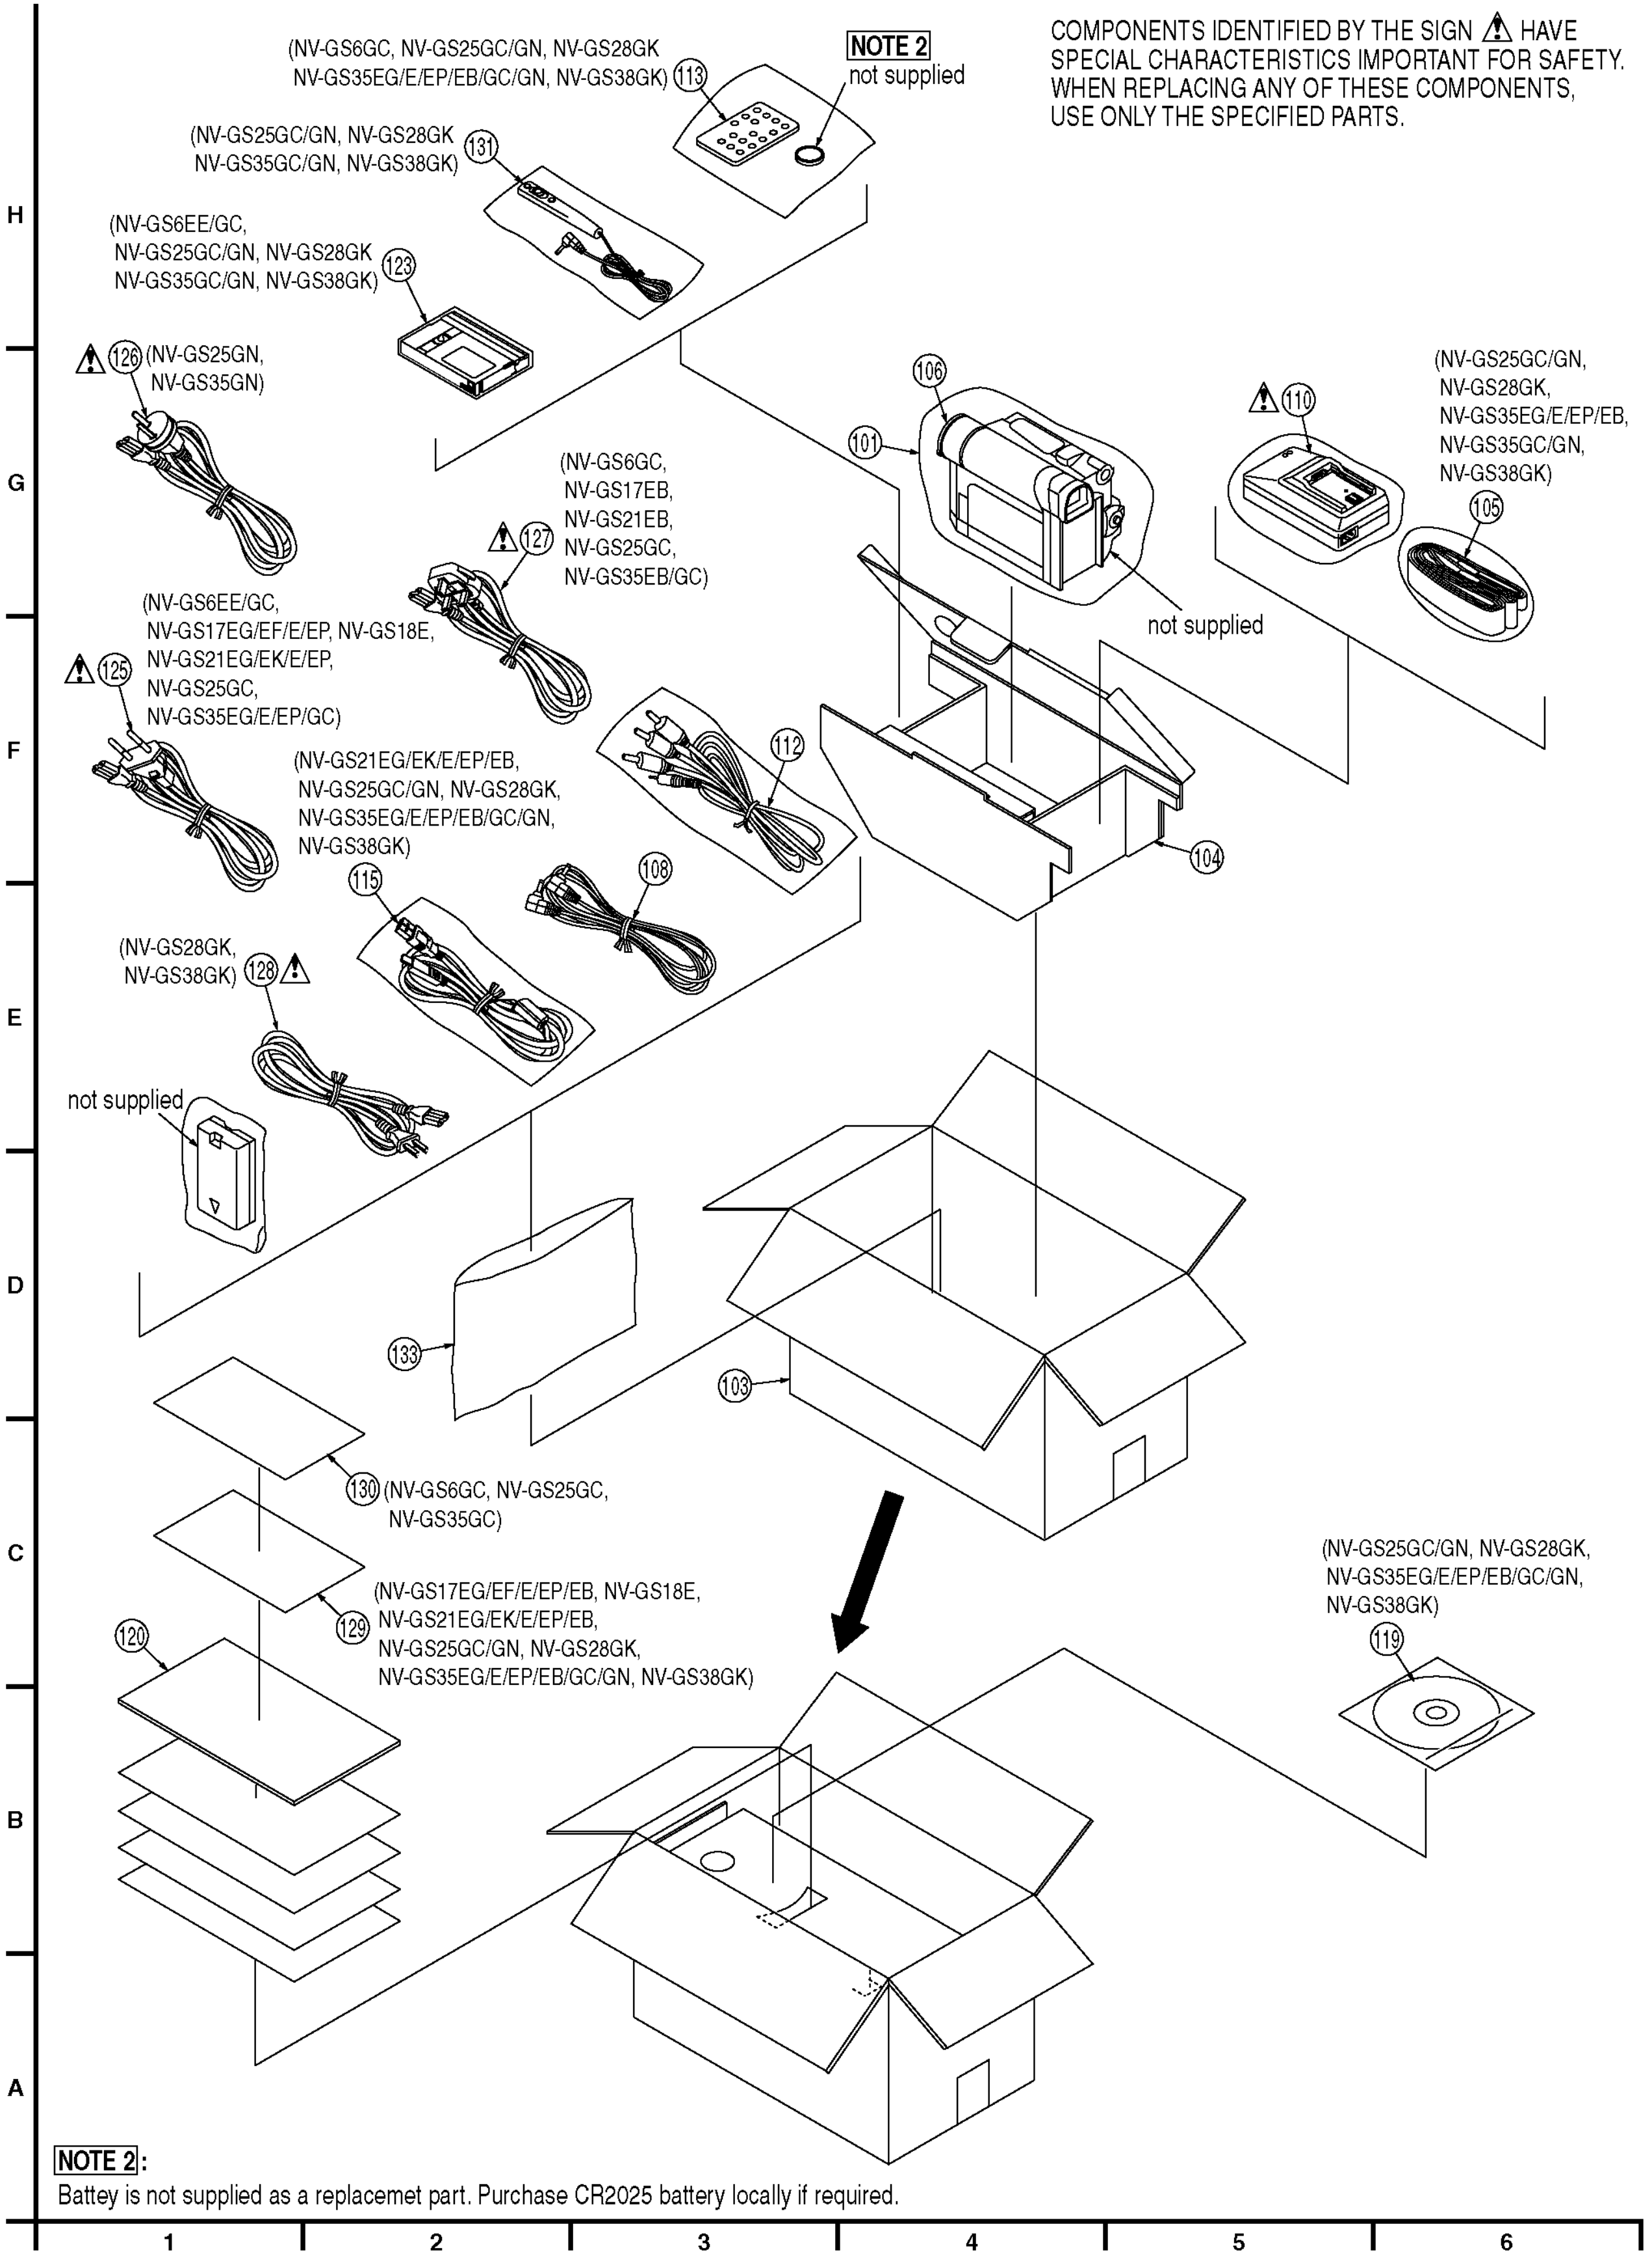
(NV-GS6GC, NV-GS25GC/GN, NV-GS28GK
NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK) 113
NOTE 2
not supplied
(NV-GS25GC/GN, NV-GS28GK
NV-GS35GC/GN, NV-GS38GK) 131
(NV-GS6EE/GC,
NV-GS25GC/GN, NV-GS28GK
NV-GS35GC/GN, NV-GS38GK) 123
⚠ 126 (NV-GS25GN,
NV-GS35GN)
106
101
⚠ 110
(NV-GS25GC/GN,
NV-GS28GK,
NV-GS35EG/E/EP/EB,
NV-GS35GC/GN,
NV-GS38GK)
105
(NV-GS6GC,
NV-GS17EB,
NV-GS21EB,
NV-GS25GC,
NV-GS35EB/GC)
⚠ 127
not supplied
(NV-GS6EE/GC,
NV-GS17EG/EF/E/EP, NV-GS18E,
NV-GS21EG/EK/E/EP,
NV-GS25GC,
NV-GS35EG/E/EP/GC)
⚠ 125
112
(NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN,
NV-GS38GK)
115
108
104
(NV-GS28GK,
NV-GS38GK) 128 ⚠
not supplied
133
103
130 (NV-GS6GC, NV-GS25GC,
NV-GS35GC)
(NV-GS25GC/GN, NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN,
NV-GS38GK)
119
(NV-GS17EG/EF/E/EP/EB, NV-GS18E,
129 NV-GS21EG/EK/E/EP/EB,
NV-GS25GC/GN, NV-GS28GK,
NV-GS35EG/E/EP/EB/GC/GN, NV-GS38GK)
120
H
G
F
E
D
C
B
A
1
2
3
4
5
6

NOTE 2:
Battey is not supplied as a replacemet part. Purchase CR2025 battery locally if required.

14 REPLACEMENT PARTS LISTS

BEFORE REPLACING PARTS, READ THE FOLLOWING:

1. Use only original replacement parts:

   To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list.

2. **IMPORTANT SAFETY NOTICE**

   Components identified by the sign ⚠ have special characteristics important for safety. When replacing any of these components, use only the specified parts.

3. Definition of Parts supplier:

   a. Parts with mark "SPC" in the Remarks column are supplied from Spare Parts Center of Panasonic AVC Company.

   b. Parts without mark in the Remarks column are supplied from MKE.

4. Parts whose Ref. Nos. are the same are interchangeable as replacement parts. Any of these parts may be ordered and used as a replacement part.

5. Model Number Indication:

   Model numbers are indicated in the Remarks column without "NV-GS."

6. Unless otherwise specified;

   All resistors are in Ω, K = 1,000 Ω, M = 1,000 kΩ.

7. Abbreviation

   RTL: Retention Time Limited

   This indicates that the retention time is limited for this item. After the discontinuation of this item in production, it will no longer be available.

   NR: Non Repairable Board Ass´y

   MGF CHIP: Metal Glaze Film Chip

   C CHIP: Ceramic Chip

   COMPLX CMP: Complex Component

   W FLMPRF: Wirewound Flameproof

   C.B.A.: Circuit Board Assembly

   P.C.B.: Printed Circuit Board

   E.S.D.: Electrostatically Sensitive Devices

   CSP: Chip Size Package

8. AC Adaptor replacement note:

   AC Adaptor used on these movie camera is VSK0651A or VSK0651B.

   However, DE-974HA is supplied as a replacement part for VSK0651A. Also, DE-974GA is supplied for VSK0651B.This AC Adaptor is supplied only as a unit.

14.1. MECHANICAL REPLACEMENT PARTS LIST

Definition of Parts supplier:

1. **Parts with mark "SPC" in the Remarks column are supplied from Spare Parts Center of Panasonic AVC Company.**
2. **Parts without mark in the Remarks column are supplied from MKE.**

Notes:

Supply of CD-ROM, in accordance with license protection, is allowable as replacement parts only for customers who accidentally damaged or lost their own.

MECHANICAL REPLACEMENT PARTS

Ref. No.	Part No.	Part Name & Description	Remarks
2	LSYK1499	CASSETTE COVER UNIT	6EE/GC,17EG/EF/E/EP/EB,18E
2	LSYK1496	CASSETTE COVER UNIT	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
2	LSYK1497	CASSETTE COVER UNIT	25GC/GN,28GK
4	LSQL1827	POST COVER	
5	LSKF0608	EVR COVER	
6	LSHN0019	TRIPOD	
6	LSHN0020	TRIPOD	
7	LSMA0795	BOTTOM ANGLE	
8	LSKF0610	L COVER	
9	LSMF0371	MIC SHEET	
10	LSGF0535	LIGHT PROTECTOR	6EE/GC
10	LSGF0533	LIGHT PROTECTOR	17EG/EF/E/EP/EB,18E,25GC/GN,28GK
10	LSGF0534	LIGHT PROTECTOR	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
11	LSYK1504	REAR CASE UNIT	6EE/GC
11	LSYK1505	REAR CASE UNIT	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
12	LSYK1506	EVF UNIT	RTL 6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
12	LSYK1507	EVF UNIT	RTL 35EG/E/EP/EB/GC/GN,38GK

Ref. No.	Part No.	Part Name & Description	Remarks
13	LSKM1107	EVF BASE FRAME	
14	LSMA0721	EVF SPRING	
15	LSSC0759	EVF EARTH PLATE	
16	LSMD0799	EVF SLIDE PIECE	
17	LSJB8306	EVF FLEXIBLE PRINTED CIRCUIT	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
17	LSJB8305	EVF FLEXIBLE PRINTED CIRCUIT	35EG/E/EP/EB/GC/GN,38GK
18	LSGQ0140	EYE CAP	
20	LSYK1532	EVF CASE 1 UNIT,ABS RESIN	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
20	LSYK1533	EVF CASE 1 UNIT,ABS RESIN	35EG/E/EP/EB/GC/GN,38GK
21	LSKM1024	EVF CASE,ABS RESIN	
22	LSGT0068	EYE SIGHT LEVER	
23	LSYK1415	EVF LENS UNIT	
31	LSYK1501	SIDE CASE R UNIT,ABS RESIN	6EE/GC,17EG/EF/E/EP/EB,18E
31	LSYK1502	SIDE CASE R UNIT,ABS RESIN	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
32	LSXY0763	SHAFT CASE UNIT,ABS RESIN	
33	LSYK1582	LCD CASE A UNIT,ABS RESIN	6EE/GC
33	LSYK1523	LCD CASE A UNIT,ABS RESIN	17EG/EF/E/EP/EB
33	LSYK1587	LCD CASE A UNIT,ABS RESIN	18E
33	LSYK1524	LCD CASE A UNIT,ABS RESIN	21EG/EK/E/EP/EB
33	LSYK1527	LCD CASE A UNIT,ABS RESIN	25GC/GN
33	LSYK1554	LCD CASE A UNIT,ABS RESIN	28GK
33	LSYK1526	LCD CASE A UNIT,ABS RESIN	35EG/E/EP/EB/GC/GN
33	LSYK1541	LCD CASE A UNIT,ABS RESIN	38GK
34	LSKM1086	LCD CASE B,ABS RESIN	
35	LSXY0765	LCD SHIELD CASE UNIT	
36	LSXY0766	PANEL HOLDER UNIT	
37	LSGL0422	LEAD LIGHT PANEL	
38	LSGL0404	DIFFUSION SHEET	
39	LSGL0423	REFLECT SHEET	
40	LSGL0406	BEF SHEET	
41	LSGL0421	BEF SHEET A	
42	L5BDDYH00014	LIQUID CRYSTAL DISPLAY PANEL	
51	LSKM1111	FRONT CASE,ABS RESIN	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB
51	LSKM1112	FRONT CASE,ABS RESIN	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
52	LSYK1584	TOP UNIT	6EE/GC
52	LSYK1558	TOP UNIT	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
52	LSYK1556	TOP UNIT	35EG/E/EP/EB/GC/GN,38GK
53	LSKF0609	FRONT JACK COVER	
54	LSMD0814	FRONT COVER HINGE	
55	LSMF0370	FRONT HINGE COVER PIECE	
56	LSFL0200	FOUR EYES LENS	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
57	LSGQ0138	LIGHT SHIELD SHEET	
58	LSMZ0397	MIC BOTH SIDE TAPE A	
59	LSMZ0398	MIC BOTH SIDE TAPE B	
60	LSQL1830	FRONT JACK LABEL	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB
60	LSQL1821	FRONT JACK LABEL	25GC/GN,28GK,35GC/GN,38GK
60	LSQL1816	FRONT JACK LABEL	35EG/E/EP/EB
61	LSXN0034	LENS UNIT	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
61	LSXN0035	LENS UNIT	35EG/E/EP/EB/GC/GN,38GK
62	LSDW0058-K	FILTER HOLDER	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
63	VDL1390-B	OPTICAL LOW PASS FILTER	
64	VMX3282	FILTER RUBBER	
65	L6HA66NB0001	ZOOM MOTOR UNIT	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
65	L6HA66NB0003	ZOOM MOTOR UNIT	35EG/E/EP/EB/GC/GN,38GK
66	L6HA66NB0002	FOCUS MOTOR UNIT	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
66	L6HA66NB0004	FOCUS MOTOR UNIT	35EG/E/EP/EB/GC/GN,38GK
71	LSKM1106	L-BOTTOM CASE,ABS RESIN	
72	LSGQ0139	HAND STRAP	
73	LSMA0793	STRAP ANGLE R	

Ref. No.	Part No.	Part Name & Description	Remarks
75	LSSC0757	L EARTH PLATE	
76	LSMA0794	STRAP ANGLE F	
77	LSGQ0149	STRAP SHAFT	
101	VPF1129	POLY BAG	
103	LSPG1980	PACKING CASE,PAPER	6EE
103	LSPG1981	PACKING CASE,PAPER	6GC
103	LSPG1914	PACKING CASE,PAPER	17EG/EF/E/EP/EB
103	LSPG1993	PACKING CASE,PAPER	18E
103	LSPG1908	PACKING CASE,PAPER	21EG/EK/E/EP/EB
103	LSPG1910	PACKING CASE,PAPER	25GC/GN
103	LSPG1912	PACKING CASE,PAPER	28GK
103	LSPG1899	PACKING CASE,PAPER	35EG/E/EP/EB
103	LSPG1901	PACKING CASE,PAPER	35GC/GN
103	LSPG1903	PACKING CASE,PAPER	38GK
104	LSTG1302	DVC PACKING	
105	VFC3506-1A	SHOULDER STRAP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
106	LSYF0552	LENS CAP UNIT	
108	K2GJ2DC00011	DC CABLE W/PLUG	
110	DE-974GA	AC ADAPTOR UNIT	⚠ 6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,35EG/E/EP/EB/GC/GN
110	DE-974HA	AC ADAPTOR UNIT	⚠ 28GK,38GK
112	K2KC4CB00020	AUDIO VIDEO CABLE W/PLUG	
113	N2QAEC000012	INFRARED REMOTE CONTROL UNIT	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
115	K1HA05CD0010	USB CABLE W/PLUG	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
119	VFF0264-A	CD-ROM	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
120	LSQT0944-A	INSTRUCTION BOOK	6EE
120	LSQT0945-A	INSTRUCTION BOOK	6GC
120	LSQT0889-B	INSTRUCTION BOOK	17EG,21EG/EK,35EG
120	LSQT0890-B	INSTRUCTION BOOK	17E,21E,35E
120	LSQT0958-B	INSTRUCTION BOOK	17EF
120	LSQT0910-A	INSTRUCTION BOOK	17EP,21EP,35EP
120	LSQT0891-A	INSTRUCTION BOOK	17EB,21EB,35EB
120	LSQT0955-A	INSTRUCTION BOOK	18E
120	LSQT0892-B	INSTRUCTION BOOK	25GC,35GC
120	LSQT0918-B	INSTRUCTION BOOK	25GC,35GC
120	LSQT0893-A	INSTRUCTION BOOK	25GN,35GN

Ref. No.	Part No.	Part Name & Description	Remarks
120	LSQT0894-A	INSTRUCTION BOOK	28GK,38GK
123	VFK1451	CLEANING CASSETTE	6EE/GC,25GC/GN,28GK,35GC/GN,38GK
125	K2CR2DA00004	AC CORD W/PLUG	⚠ 6EE/GC,17EG/EF/E/EP,18E,21EG/EK/E/EP,25GC,35EG/E/EP/GC
126	K2CJ2DA00011	AC CORD W/PLUG	⚠ 25GN,35GN
127	VJA0940	AC CORD W/PLUG	⚠ 6GC,17EB,21EB,25GC,35EB/GC
128	K2CA2CA00020	AC CORD W/PLUG	⚠ 28GK,38GK
129	VQT0N39	INSTRUCTION BOOK FOR PC CONNECTION	17EG/EF,21EG/EK,35EG
129	VQT0N42	INSTRUCTION BOOK FOR PC CONNECTION	17E,18E,21E,35E
129	VQT0P90	INSTRUCTION BOOK FOR PC CONNECTION	17EP,21EP,35EP
129	VQT0N44	INSTRUCTION BOOK FOR PC CONNECTION	17EB,21EB,25GN,35EB/GN
129	VQT0N48	INSTRUCTION BOOK FOR PC CONNECTION	25GC,35GC
129	VQT0P34	INSTRUCTION BOOK FOR PC CONNECTION	28GK,38GK
130	VQT0N49	INSTRUCTION BOOK FOR PC CONNECTION	6GC,25GC,35GC
131	N2QCAD000002	UNIVERSAL REMOTE CONTROLLER	25GC/GN,28GK,35GC/GN,38GK
133	LSPF0107	POLY BAG	
201	VXA8014	MAIN CHASSIS UNIT	
202	VEG1663-M	CYLINDER UNIT	
203	VXA7932-1B	CASSETTE UP UNIT	SPC
207	VXR0403	T-REEL MOTOR	SPC
208	VMB3766	CASSETTE UP SPRING	SPC
413	LSHD0051	SCREW,STEEL	
419	XQN2+BJ5FN	TAPPING SCREW,STEEL	
433	XQN16+BJ6FN	SCREW,STEEL	
450	XQN16+B4FN	SCREW,STEEL	
455	XQN16+B3FN	SCREW,STEEL	
457	XQN2+B5FN	SCREW,STEEL	
524	XQN16+BJ4FNK	SCREW,STEEL	
533	XQN16+BJ4FN	SCREW,STEEL	
534	VHD1757	CYLINDER SET SCREW,STEEL	
535	XQN14+B2FN	SCREW,STEEL	
536	XQN16+AJ4FN	SCREW,STEEL	
538	XQN14+BJ4FN	SCREW,STEEL	
541	XQN16+B2FN	SCREW,STEEL	
542	LSHD0106	SPECIAL SCREW,STEEL	
543	XQN16+BJ4FJK	SCREW,STEEL	
701	LSEK0628	ELECTRIC CODENSER MICROPHONE UNIT	
702	LSMG0136	MIC DAMPER	
703	LSJB8304	FRONT FLEXIBLE PRINTED CIRCUIT	
704	B3RAB0000024	INFRARED RECEIVER	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

Ref. No.	Part No.	Part Name & Description	Remarks
705	LSSC0753	FRONT EARTH PLATE A	
708	LSSC0754	MIC SHIELD CASE	
711	K1NA09E00063	SD UNIT	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
E10	LSEP8295U1	MAIN C.B.A.	RTL 6EE/GC
E10	LSEP8295P1	MAIN C.B.A.	RTL 17EG/EF/E/EP/EB,18E,21EG/E/EP/EB
E10	LSEP8295T1	MAIN C.B.A.	RTL 21EK
E10	LSEP8295Q1	MAIN C.B.A.	RTL 25GC/GN,28GK
E10	LSEP8295R1	MAIN C.B.A.	RTL 35EG/E/EP/EB
E10	LSEP8295S1	MAIN C.B.A.	RTL 35GC/GN,38GK
E20	LSEP8296A1	FRONT C.B.A.	RTL 6EE,17EG/EF/E/EP/EB,18E
E20	LSEP8296C1	FRONT C.B.A.	RTL 6GC,25GC/GN,28GK
E20	LSEP8296B1	FRONT C.B.A.	RTL 21EG/EK/E/EP/EB
E20	LSEP8296D1	FRONT C.B.A.	RTL 35EG/E/EP/EB/GC/GN,38GK
E30	LSEP8297T1	JACK C.B.A.	RTL 6EE
E30	LSEP8297D1	JACK C.B.A.	RTL 6GC
E30	LSEP8297P1	JACK C.B.A.	RTL 17EG/EF/E/EP/EB,18E
E30	LSEP8297Q1	JACK C.B.A.	RTL 21EG/EK/E/EP/EB
E30	LSEP8297R1	JACK C.B.A.	RTL 25GC/GN,35EG/E/EP/EB/GC/GN
E30	LSEP8297S1	JACK C.B.A.	RTL 28GK,38GK
E40	LSEP8298P1	LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A. NR	
E50	LSEQ0751	CCD C.B.A. NR	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
E50	LSEQ0753	CCD C.B.A. NR	35EG/E/EP/EB/GC/GN,38GK

SERVICE FIXTURES AND TOOLS

Ref. No.	Part No.	Part Name & Description	Remarks
	VFM3110EDS	COLOR BAR STANDARD TAPE	SPC
	VFK1451	DVC HEAD CLEANING TAPE	SPC
	LSVQ0028	PLIER FOR NON ZIF CONNECTOR	
	LSUQ0050	GREASE	
	LSUA0019	EXTENSION CABLE 8P	
	LSUA0016	EXTENSION CABLE 10P	
	VUVS0007	EXTENSION CABLE 12P	
	VFKW0124A	EXTENSION CABLE 14P	
	LSUA0017	EXTENSION CABLE 18P	
	VUVS0012	EXTENSION CABLE 22P	
	VFK1164LBX1	LIGHT BOX	SPC
	VFK1164TCM02	INFINITY LENS (WITH FOCUS CHART)	SPC
	VFK1164TAR58	ATTACHMENT RING (58mm)	SPC
	VFK1164TAR55	ATTACHMENT RING (55mm)	SPC
	VFK1164TAR52	ATTACHMENT RING (52mm)	SPC
	VFK1164TAR49	ATTACHMENT RING (49mm)	SPC
	VFK1164TAR46	ATTACHMENT RING (46mm)	SPC
	VFK1164TAR43	ATTACHMENT RING (43mm)	SPC
	VFK1164TAR37	ATTACHMENT RING (37mm)	SPC
	VFK1164TAR3A	ATTACHMENT RING (30.5mm)	SPC
	VFK1164TAR27	ATTACHMENT RING (27mm)	SPC
	VFK1164TFCT2	COLOR CONVERSION FILTER (C14)	SPC
	VFK1395	232C (M3) I/F CABLE	SPC
	VFK1899	POST HEIGHT ADJUSTMENT FIXTURE	SPC
	VJA0941	DC OUTPUT CABLE	SPC
	VFK1164TFWC2	WHITE CHART	SPC
	VFK1164TFCB2	COLOR BAR CHART	SPC
	VFK1164TFGS2	GRAY SCALE CHART	SPC
	VFK1308E	MEASURING BOARD FOR ELECTRICAL ADJUSTMENT	SPC
	VFK1898	CONNECTION ADAPTOR	SPC
	VFK1897	EVR CONNECTOR BOARD	SPC
	VFK1309	EVR CONNECTOR BOARD	SPC
	VFK1317	30PIN FLAT CABLE	SPC

14.2. ELECTRICAL REPLACEMENT PARTS LIST

Definition of Parts supplier:

1. **All parts are supplied from MKE.**

PRINTED CIRCUIT BOARD ASSEMBLY

Ref. No.	Part No.	Part Name & Description	Remarks
E10	LSEP8295U1	MAIN C.B.A.	E.S.D. RTL 6EE/GC
E10	LSEP8295P1	MAIN C.B.A.	E.S.D. RTL 17EG/EF/E/EP/EB,18E,21EG/E/EP/EB
E10	LSEP8295T1	MAIN C.B.A.	E.S.D. RTL 21EK
E10	LSEP8295Q1	MAIN C.B.A.	E.S.D. RTL 25GC/GN,28GK
E10	LSEP8295R1	MAIN C.B.A.	E.S.D. RTL 35EG/E/EP/EB
E10	LSEP8295S1	MAIN C.B.A.	E.S.D. RTL 35GC/GN,38GK
E20	LSEP8296A1	FRONT C.B.A.	RTL 6EE,17EG/EF/E/EP/EB,18E

Ref. No.	Part No.	Part Name & Description	Remarks
E20	LSEP8296C1	FRONT C.B.A.	RTL 6GC,25GC/GN,28GK
E20	LSEP8296B1	FRONT C.B.A.	RTL 21EG/EK/E/EP/EB
E20	LSEP8296D1	FRONT C.B.A.	RTL 35EG/E/EP/EB/GC/GN,38GK
E30	LSEP8297T1	JACK C.B.A.	RTL 6EE
E30	LSEP8297D1	JACK C.B.A.	RTL 6GC
E30	LSEP8297P1	JACK C.B.A.	RTL 17EG/EF/E/EP/EB,18E
E30	LSEP8297Q1	JACK C.B.A.	RTL 21EG/EK/E/EP/EB
E30	LSEP8297R1	JACK C.B.A.	RTL 25GC/GN,35EG/E/EP/EB/GC/GN
E30	LSEP8297S1	JACK C.B.A.	RTL 28GK,38GK
E40	LSEP8298P1	LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A. NR	
E50	LSEQ0751	CCD C.B.A. NR	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
E50	LSEQ0753	CCD C.B.A. NR	35EG/E/EP/EB/GC/GN,38GK

14.2.1. MAIN C.B.A.

FPC CONNECTORS

Ref. No.	Part No.	Part Name & Description	Remarks
FP1	K1MN08BA0089	CONNECTOR 8P	
FP2	K1MN18BA0117	CONNECTOR 18P	
FP3	K1MN10BA0075	CONNECTOR 10P	
FP4	K1MN18BA0117	CONNECTOR 18P	
FP5	K1MN08BA0088	CONNECTOR 8P	
FP6	K1MN12A00075	CONNECTOR 12P	
FP7	K1MN06A00065	CONNECTOR 6P	
FP8	K1MN30AA0018	CONNECTOR 30P	
FP9	K1MN22A00065	CONNECTOR 22P	35EG/E/EP/EB/GC/GN,38GK
FP10	K1MN22BA0063	CONNECTOR 22P	
FP11	K1MN16A00077	CONNECTOR 16P	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK
FP301	K1MN14A00088	CONNECTOR 14P	
FP701	K1MN22A00065	CONNECTOR 22P	

14.2.2. FRONT C.B.A.

INTEGRATED CIRCUITS

Ref. No.	Part No.	Part Name & Description	Remarks
IC4801	C0ABBB000262	IC, LINEAR	
or IC4801	C0ABBB000105	IC, LINEAR	

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q4301	2SD1819ARL	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4302	2SD1819ARL	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4303	2SD1819ARL	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4304	2SD1819ARL	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4305	2SB1218ARL	TRANSISTOR SI PNP CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4306	UNR9112J08	TRANSISTOR SI PNP CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
or Q4306	B1GDCFLL0019	TRANSISTOR SI PNP CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
or Q4306	B1GDCFLL0020	TRANSISTOR SI PNP CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4307	UNR9213J08	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
or Q4307	B1GBCFNN0029	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
or Q4307	B1GBCFNN0030	TRANSISTOR SI NPN CHIP	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
Q4801	2SD2216J08	TRANSISTOR SI NPN CHIP	
or Q4801	B1ABCF000104	TRANSISTOR SI NPN CHIP	
Q6501	2SD10300SL	TRANSISTOR SI NPN CHIP	
Q6502	2SD2216J08	TRANSISTOR SI NPN CHIP	
or Q6502	B1ABCF000104	TRANSISTOR SI NPN CHIP	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D4301	B3AFB0000056	LIGHT EMITTING DIODE	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
D4302	B3AFB0000056	LIGHT EMITTING DIODE	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
D4303	B3AFB0000056	LIGHT EMITTING DIODE	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
D4304	B3AFB0000056	LIGHT EMITTING DIODE	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
D6503	MA3S132D0L	DIODE SI CHIP	
D6504	B3GA00000041	LIGHT EMITTING DIODE	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R4301	D0HB470ZA003	MGF CHIP 1/16W 47	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4302	D0HB470ZA003	MGF CHIP 1/16W 47	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4303	D0HB470ZA003	MGF CHIP 1/16W 47	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4304	D0HB470ZA003	MGF CHIP 1/16W 47	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4305	D0HB222ZA002	MGF CHIP 1/16W 2.2K	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4306	D0HB333ZA002	MGF CHIP 1/16W 33K	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4307	D0HB822ZA002	MGF CHIP 1/16W 8.2K	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
R4802	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R4803	ERJ3GEYJ223V	MGF CHIP 1/16W 22K	
R4804	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R4805	ERJ3GEYJ124V	MGF CHIP 1/16W 120K	
R4806	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R4807	D0HB392ZA002	MGF CHIP 1/16W 3.9K	
R4808	ERJ3GEYJ124V	MGF CHIP 1/16W 120K	
R4809	ERJ3GEYJ333V	MGF CHIP 1/16W 33K	
R4810	D0HB392ZA002	MGF CHIP 1/16W 3.9K	

Ref. No.	Part No.	Part Name & Description	Remarks
R6501	ERJ3GEYJ560V	MGF CHIP 1/16W 56	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6502	ERJ3GEYJ683V	MGF CHIP 1/16W 68K	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6503	ERJ3GEYJ104V	MGF CHIP 1/16W 100K	
R6504	ERJ3GEYJ106V	MGF CHIP 1/16W 10M	
R6505	ERJ3GEYJ225V	MGF CHIP 1/16W 2.2M	
R6506	ERJ3GEYJ334V	MGF CHIP 1/16W 330K	
R6507	ERJ3GEYJ182V	MGF CHIP 1/16W 1.8K	
R6508	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	
R6509	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C4301	F1H1A105A025	C CHIP 10V 1UF	21EG/EK/E/EP/EB,35EG/E/EP/EB/GC/GN,38GK
C4801	F1H1A105A025	C CHIP 10V 1UF	
C4802	F1H1A105A025	C CHIP 10V 1UF	
C4803	F3F1C475A001	TANTALUM CHIP 16V 4.7UF	
C4804	ECJ1VB1H822K	C CHIP 50V 8200PF	
C4805	ECJ1VB1C273K	C CHIP 16V 0.027UF	
C4806	ECJ1VB1C273K	C CHIP 16V 0.027UF	
C4808	ECJ1VB1C273K	C CHIP 16V 0.027UF	
C4809	ECJ1VB1H822K	C CHIP 50V 8200PF	
C4810	ECJ1VB1C273K	C CHIP 16V 0.027UF	
C4812	F3F0J226A032	TANTALUM CHIP 6.3V 22UF	
C6501	F3F0J106A032	TANTALUM CHIP 6.3V 10UF	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6502	F1H1C104A008	C CHIP 16V 0.1UF	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6503	ECJ1VB0J474K	C CHIP 6.3V 0.47UF	
C6504	F1H1C104A041	C CHIP 16V 0.1UF	

FPC CONNECTORS

Ref. No.	Part No.	Part Name & Description	Remarks
FP6501	K1MN12A00075	CONNECTOR 12P	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
701	LSEK0628	ELECTRIC CODENSER MICROPHONE UNIT	
702	LSMG0136	MIC DAMPER	
703	LSJB8304	FRONT FLEXIBLE PRINTED CIRCUIT	
704	B3RAB0000024	INFRARED RECEIVER	6GC,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
705	LSSC0753	FRONT EARTH PLATE A	
708	LSSC0754	MIC SHIELD CASE	

14.2.3. JACK C.B.A.

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q4001	2SD2216J08	TRANSISTOR SI NPN CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
or Q4001	B1ABCF000104	TRANSISTOR SI NPN CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
Q4002	2SB1462J08	TRANSISTOR SI PNP CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
or Q4002	B1ADCF000072	TRANSISTOR SI PNP CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
Q4003	2SD2216J08	TRANSISTOR SI NPN CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
or Q4003	B1ABCF000104	TRANSISTOR SI NPN CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
Q4004	2SB1462J08	TRANSISTOR SI PNP CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
or Q4004	B1ADCF000072	TRANSISTOR SI PNP CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
Q4005	2SD2216J08	TRANSISTOR SI NPN CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
or Q4005	B1ABCF000104	TRANSISTOR SI NPN CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D4001	B0BC6R200019	DIODE ZENER CHIP 6.2V	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
D7001	D4ED1120A005	SURGE ABSORBER	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
D7008	MAZM068H0L	DIODE ZENER CHIP 6.8V	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R4001	ERJ3GEYJ222V	MGF CHIP 1/16W 2.2K +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4002	ERJ3GEYJ562V	MGF CHIP 1/16W 5.6K +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4003	ERJ3GEYJ151V	MGF CHIP 1/16W 150 +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4004	ERJ3GEYJ122V	MGF CHIP 1/16W 1.2K +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4005	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4006	D0HB154ZA002	MGF CHIP 150K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4007	D0HB563ZA002	MGF CHIP 1/16W 56K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4008	ERJ3GEYJ471V	MGF CHIP 1/16W 470	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4009	ERJ3GEYJ562V	MGF CHIP 1/16W 5.6K +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4010	ERJ3GEYJ151V	MGF CHIP 1/16W 150 +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4011	ERJ3GEYJ122V	MGF CHIP 1/16W 1.2K +-5%	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4012	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

Ref. No.	Part No.	Part Name & Description	Remarks
R4013	D0HB154ZA002	MGF CHIP 150K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4014	D0HB563ZA002	MGF CHIP 1/16W 56K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4015	ERJ3GEYJ471V	MGF CHIP 1/16W 470	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4016	ERJ3GEY0R00V	MGF CHIP 1/16W 0	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R4017	ERJ3GEYJ102V	MGF CHIP 1/16W 1K	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6301	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6302	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6303	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6304	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6305	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6306	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6307	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6308	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6309	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6310	ERJ3GEYJ472V	MGF CHIP 1/16W 4.7K	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6311	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6312	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6313	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6314	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6315	ERJ3GEYJ220V	MGF CHIP 1/16W 22 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R6316	ERJ3GEYJ101V	MGF CHIP 1/16W 100 +-5%	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R7001	ERJ3GEYJ562V	MGF CHIP 1/16W 5.6K +-5%	6EE,17EG/EF/E/EP/EB,18E
R7001	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	21EG/EK/E/EP/EB
R7001	ERJ3GEYJ183V	MGF CHIP 1/16W 18K	25GC/GN,35EG/E/EP/EB/GC/GN
R7001	ERJ3GEYJ473V	MGF CHIP 1/16W 47K	28GK,38GK

Ref. No.	Part No.	Part Name & Description	Remarks
R7002	ERJ3GEYJ331V	MGF CHIP 1/16W 330 +-5%	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
R7004	ERJ3GEY0R00V	MGF CHIP 1/16W 0	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB
R7005	ERJ3GEY0R00V	MGF CHIP 1/16W 0	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB
R7006	ERJ3GEYJ122V	MGF CHIP 1/16W 1.2K +-5%	
R7007	ERJ3GEY0R00V	MGF CHIP 1/16W 0	6EE/GC,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C4001	ECJ1VB1H103K	C CHIP 50V 0.01UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4002	F3F0J226A032	TANTALUM CHIP 6.3V 22UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4003	F1H1A105A025	C CHIP 10V 1UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4004	F3F0G226A030	TANTALUM CHIP 4V 220UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4006	F1H1A105A025	C CHIP 10V 1UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4007	F1H1H332A219	C CHIP 50V 3300PF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4008	F1H1A105A025	C CHIP 10V 1UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4009	F3F0G226A030	TANTALUM CHIP 4V 220UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4011	F1H1A105A025	C CHIP 10V 1UF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C4012	F1H1H332A219	C CHIP 50V 3300PF	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6301	F3F0J226A032	TANTALUM CHIP 6.3V 22UF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6302	F1H1C104A041	C CHIP 16V 0.1UF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6303	F1H1C104A041	C CHIP 16V 0.1UF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6304	ECJ1VC1H050C	C CHIP 50V 5PF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6305	ECJ1VC1H050C	C CHIP 50V 5PF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6306	ECJ1VC1H050C	C CHIP 50V 5PF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6307	ECJ1VC1H050C	C CHIP 50V 5PF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C6308	ECJ1VC1H050C	C CHIP 50V 5PF	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
C7001	F1H1H472A219	C CHIP 50V 4700PF	
C7002	F1H1H472A219	C CHIP 50V 4700PF	
C7005	F1H1A105A025	C CHIP 10V 1UF	

FILTERS

Ref. No.	Part No.	Part Name & Description	Remarks
FL7001	J0MAB0000116	COIL OTHER FILTERS FOR EM	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
FL7002	J0MAB0000116	COIL OTHER FILTERS FOR EM	
FL7003	J0MAB0000116	COIL OTHER FILTERS FOR EM	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L4001	J0JBC0000036	FERRITE CORE	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
L4002	J0JBC0000036	FERRITE CORE	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
L6301	G1C100M00010	COIL CHIP 10UH	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
L6302	ERJ3GEY0R00X	MGF CHIP 1/16W 0	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
L7001	J0JBC0000027	FERRITE BEAD CHIP	
L7002	J0JBC0000027	FERRITE BEAD CHIP	
L7003	J0JBC0000027	FERRITE BEAD CHIP	
L7004	J0JBC0000027	FERRITE BEAD CHIP	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
L7008	J0JBC0000027	FERRITE BEAD CHIP	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
L7009	J0JBC0000027	FERRITE BEAD CHIP	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

PIN HEADERS

Ref. No.	Part No.	Part Name & Description	Remarks
B7001	K1KB40AA0021	BOARD TO BOARD 40P	

SWITCHES

Ref. No.	Part No.	Part Name & Description	Remarks
SW7001	ESE22MH22	SWITCH	

JACKS

Ref. No.	Part No.	Part Name & Description	Remarks
JK4001	K2HC104E0009	MIC JACK SOCKET	25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK
JK7001	K2HC107B0004	A/V JACK SOCKET	6EE,17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,35EG/E/EP/EB/GC/GN
JK7001	K2HC107B0003	A/V JACK SOCKET	6GC,28GK,38GK
JK7002	K2YZ04000021	MINI DV JACK SOCKET	
JK7003	K2HZ105E0009	USB MINI JACK SOCKET	
JK7004	K2YZ06000022	S-VIDEO JACK SOCKET	17EG/EF/E/EP/EB,18E,21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

BATTERY

Ref. No.	Part No.	Part Name & Description	Remarks
BT7001	ML-621S/F9DE	BATTERY	

MISCELLANEOUS

Ref. No.	Part No.	Part Name & Description	Remarks
711	K1NA09E00063	SD UNIT	21EG/EK/E/EP/EB,25GC/GN,28GK,35EG/E/EP/EB/GC/GN,38GK

14.2.4. LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A. NR

TRANSISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
Q8101	2SD1819ARL	TRANSISTOR SI NPN CHIP	
Q8102	2SD1819ARL	TRANSISTOR SI NPN CHIP	
Q8103	2SD1819ARL	TRANSISTOR SI NPN CHIP	
Q8104	2SD1819ARL	TRANSISTOR SI NPN CHIP	
Q8105	XP0450100L	TRANSISTOR COMPLX CMP SI NPN CHIP	
Q8106	XP0440100L	TRANSISTOR COMPLX CMP SI PNP CHIP	

DIODES

Ref. No.	Part No.	Part Name & Description	Remarks
D8101	LSEP8298P1	LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A.	
D8103	LSEP8298P1	LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A.	
D8105	LSEP8298P1	LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A.	
D8107	LSEP8298P1	LIQUID CRYSTAL DISPLAY BACKLIGHT C.B.A.	
D8109	MA2S728008	DIODE SI CHIP	
or D8109	B0JCDD000002	DIODE SI CHIP	
or D8109	MA2S72800L	DIODE SI CHIP	
D8110	MA2S728008	DIODE SI CHIP	

Ref. No.	Part No.	Part Name & Description	Remarks
or D8110	B0JCDD000002	DIODE SI CHIP	
or D8110	MA2S72800L	DIODE SI CHIP	

RESISTORS

Ref. No.	Part No.	Part Name & Description	Remarks
R8101	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8102	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8103	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8104	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8105	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8106	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8107	ERJ3GEY0R00V	MGF CHIP 1/16W 0	
R8108	D0HB470ZA003	MGF CHIP 1/16W 47	
R8109	D0HB470ZA003	MGF CHIP 1/16W 47	
R8110	D0HB470ZA003	MGF CHIP 1/16W 47	
R8111	D0HB470ZA003	MGF CHIP 1/16W 47	
R8112	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8113	ERJ3GEYJ103V	MGF CHIP 1/16W 10K	
R8114	ERA3YKD104V	MGF CHIP 1/16W 100K	
R8115	ERA3YED123V	MGF CHIP 1/16W 12K	
R8116	ERA3YKD184V	MGF CHIP 1/16W 180K	
R8117	ERJ3GEYJ393V	MGF CHIP 1/16W 39K	
R8118	ERJ3GEYJ393V	MGF CHIP 1/16W 39K	
R8119	ERJ3GEYJ153V	MGF CHIP 1/16W 15K	
R8120	ERJ3GEYJ113V	MGF CHIP 1/16W 11K	

CAPACITORS

Ref. No.	Part No.	Part Name & Description	Remarks
C8101	ECJ1VC1H471J	C CHIP 50V 470PF	
C8102	ECJ1VC1H471J	C CHIP 50V 470PF	
C8103	ECJ1VC1H471J	C CHIP 50V 470PF	
C8104	ECJ2YF1C225Z	C CHIP 16V 2.2UF	
C8105	ECJ2YF1C225Z	C CHIP 16V 2.2UF	
C8106	F1H1C104A041	C CHIP 16V 0.1UF	
C8107	ECJ3YB1C475K	C CHIP 16V 4.7UF	
C8108	F1J1C1050011	C CHIP 16V 1UF	
C8109	F1J1C1050011	C CHIP 16V 1UF	
C8110	F1J1C1050011	C CHIP 16V 1UF	

COILS

Ref. No.	Part No.	Part Name & Description	Remarks
L8101	G1C100M00010	COIL CHIP 10UH	
L8102	G1C100M00010	COIL CHIP 10UH	
L8103	G1C100M00010	COIL CHIP 10UH	
L8104	G1C100M00010	COIL CHIP 10UH	

FPC CONNECTORS

Ref. No.	Part No.	Part Name & Description	Remarks
FP8101	K1MN26BA0059	CONNECTOR 26P	
FP8102	K1MN24BA0059	CONNECTOR 24P	